



Operation and Maintenance Manual

325 Excavator

TEL 1-UP (325)

Language: Original Instructions

Important Safety Information

Most accidents that involve product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards, including human factors that can affect safety. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you verify that you are authorized to perform this work, and have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "DANGER", "WARNING" or "CAUTION". The Safety Alert "WARNING" label is shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning explains the hazard and can be either written or pictorially presented.

A non-exhaustive list of operations that may cause product damage are identified by "NOTICE" labels on the product and in this publication.

Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this publication and on the product are, therefore, not all inclusive. You must not use this product in any manner different from that considered by this manual without first satisfying yourself that you have considered all safety rules and precautions applicable to the operation of the product in the location of use, including site-specific rules and precautions applicable to the worksite. If a tool, procedure, work method or operating technique that is not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that you are authorized to perform this work, and that the product will not be damaged or become unsafe by the operation, lubrication, maintenance or repair procedures that you intend to use.

The information, specifications, and illustrations in this publication are on the basis of information that was available at the time that the publication was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service that is given to the product. Obtain the complete and most current information before you start any job. Cat dealers have the most current information available.

NOTICE

When replacement parts are required for this product Caterpillar recommends using original Caterpillar® replacement parts.

Other parts may not meet certain original equipment specifications.

When replacement parts are installed, the machine owner/user should ensure that the machine remains in compliance with all applicable requirements.

In the United States, the maintenance, replacement, or repair of the emission control devices and systems may be performed by any repair establishment or individual of the owner's choosing.

Table of Contents

Foreword	5	Slope Operation	45
Safety Section		Equipment Lowering with Engine Stopped	46
Safety Messages	7	Sound Information and Vibration Information ..	46
Additional Messages	20	Operator Station	49
General Hazard Information	26	Guards (Operator Protection)	49
Crushing Prevention and Cutting Prevention..	29	Product Information Section	
Burn Prevention	29	General Information	51
Fire Prevention and Explosion Prevention	30	Identification Information	121
Fire Safety	34	Operation Section	
Fire Extinguisher Location	34	Before Operation	127
Track Information	34	Machine Operation	130
High Pressure Fuel Lines	35	Engine Starting	216
Electrical Storm Injury Prevention	35	Operation	220
Before Starting Engine	35	Operating Techniques	226
Visibility Information	36	Parking	263
Restricted Visibility	36	Transportation Information	266
Engine Starting	39	Towing Information	272
Before Operation	39	Engine Starting (Alternate Methods)	275
Work Tools	39	Maintenance Section	
Assist and E-Fence	40	Maintenance Access	278
Operation	41	Lubricant Viscosities and Refill Capacities ...	280
Engine Stopping	44	Maintenance Support	290
Lifting Objects	44	Maintenance Interval Schedule	296
Demolition	44	Warranty Section	
Parking	45	Warranty Information	379
		Reference Information Section	

Reference Materials	380

Index Section

Index.....	381

Foreword

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.



WARNING – This product can expose you to chemicals including ethylene glycol, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to:

www.P65Warnings.ca.gov

Do not ingest this chemical. Wash hands after handling to avoid incidental ingestion.



WARNING – This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information go to:

www.P65Warnings.ca.gov

Wash hands after handling components that may contain lead.

Literature Information

This manual should be stored in the operator's compartment in the literature holder or seat back literature storage area.

This manual contains safety information, operation instructions, transportation information, lubrication information, and maintenance information.

Some photographs or illustrations in this publication show details or attachments that can be different from your machine. Guards and covers might have been removed for illustrative purposes.

Continuing improvement and advancement of product design might have caused changes to your machine which are not included in this publication. Read, study, and keep this manual with the machine.

Whenever a question arises regarding your machine, or this publication, please consult your Cat dealer for the latest available information.

Safety

The safety section lists basic safety precautions. In addition, this section identifies the text and locations of warning signs and labels used on the machine.

Read and understand the basic precautions listed in the safety section before operating or performing lubrication, maintenance, and repair on this machine.

Operation

The operation section is a reference for the new operator and a refresher for the experienced operator. This section includes a discussion of gauges, switches, machine controls, attachment controls, transportation, and towing information.

Photographs and illustrations guide the operator through correct procedures of checking, starting, operating, and stopping the machine.

Operating techniques outlined in this publication are basic. Skill and techniques develop as the operator gains knowledge of the machine and its capabilities.

Maintenance

The maintenance section is a guide to equipment care. The Maintenance Interval Schedule (MIS) lists the items to be maintained at a specific service interval. Items without specific intervals are listed under the "When Required" service interval. The Maintenance Interval Schedule lists the page number for the step-by-step instructions required to accomplish the scheduled maintenance. Use the Maintenance Interval Schedule as an index or "one safe source" for all maintenance procedures.

Maintenance Intervals

Use the service hour meter to determine servicing intervals. Calendar intervals shown (daily, weekly, monthly, etc.) can be used instead of service hour meter intervals if the calendar intervals provide more convenient servicing schedules and approximate the indicated service hour meter reading. Perform the recommended service at the interval that occurs first.

Under severe, dusty, or wet operating conditions, more frequent lubrication than is specified in the maintenance intervals chart might be necessary.

Perform service on items at multiples of the original requirement. For example, at every 500 service hours or 3 months, also service those items listed under every 250 service hours or monthly and every 10 service hours or daily.

Certified Engine Maintenance

Proper maintenance and repair are essential to keep the engine and machine systems operating correctly. As the heavy-duty off-road diesel engine owner, you are responsible for the performance of the required maintenance listed in the Owner Manual, Operation and Maintenance Manual, and Service Manual.

It is prohibited for any person engaged in the business of repairing, servicing, selling, leasing, or trading engines or machines to remove, alter, or to render inoperative, any emission-related device or element of design installed on or in an engine or machine that is in compliance with all applicable regulations of the intended country to which it has been shipped. Certain elements of the machine and engine such as the exhaust system, fuel system, electrical system, intake air system, and cooling system may be emission-related and should not be altered unless approved by Caterpillar.

Machine Capacity

Additional attachments or modifications may exceed machine design capacity which can adversely affect performance characteristics. Included would be stability and system certifications such as brakes, steering, and rollover protective structures (ROPS). Contact your Cat dealer for further information.

Product Identification Number

Effective First Quarter 2001 the Product Identification Number (PIN) has changed from 8 to 17 characters. To provide uniform equipment identification, construction equipment manufacturers are moving to comply with the latest version of the product identification numbering standard. Non-road machine PINs are defined by ISO 10261. The new PIN format will apply to all machines and generator sets. The PIN plates and frame marking will display the 17 character PIN. The new format will look like the following:

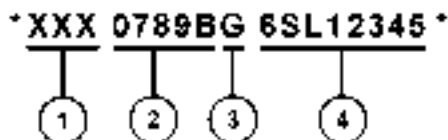


Illustration 1

g03891925

Where:

1. World Manufacturing Code (characters 1-3)

2. Machine Descriptor (characters 4-8)

3. Check Character (character 9)

4. Machine Indicator Section (MIS) or Product Sequence Number (characters 10-17). These were previously referred to as the Serial Number.

Machines and generator sets produced before First Quarter 2001 will maintain their 8 character PIN format.

Components such as engines, transmissions, axles, and work tools will continue to use an 8 character Serial Number (S/N).

Safety Section

i07952312

Safety Messages

SMCS Code: 7000; 7405

There are several specific safety messages on this machine. The exact location of the hazards and the description of the hazards are reviewed in this section. Please become familiarized with all safety messages.

Make sure that all the safety messages are legible. Clean the safety messages or replace the safety messages if you cannot read the words. Replace the illustrations if the illustrations are not visible. When you clean the safety messages, use a cloth, water, and soap. Do not use solvent, gasoline, or other harsh chemicals to clean the safety messages. Solvents, gasoline, or harsh chemicals could loosen the adhesive that secures the safety message. Loose adhesive will allow the safety message to fall.

Replace any safety message that is damaged, or missing. If a safety message is attached to a part that is replaced, install a safety message on the replacement part. Any Cat dealer can provide new safety messages.

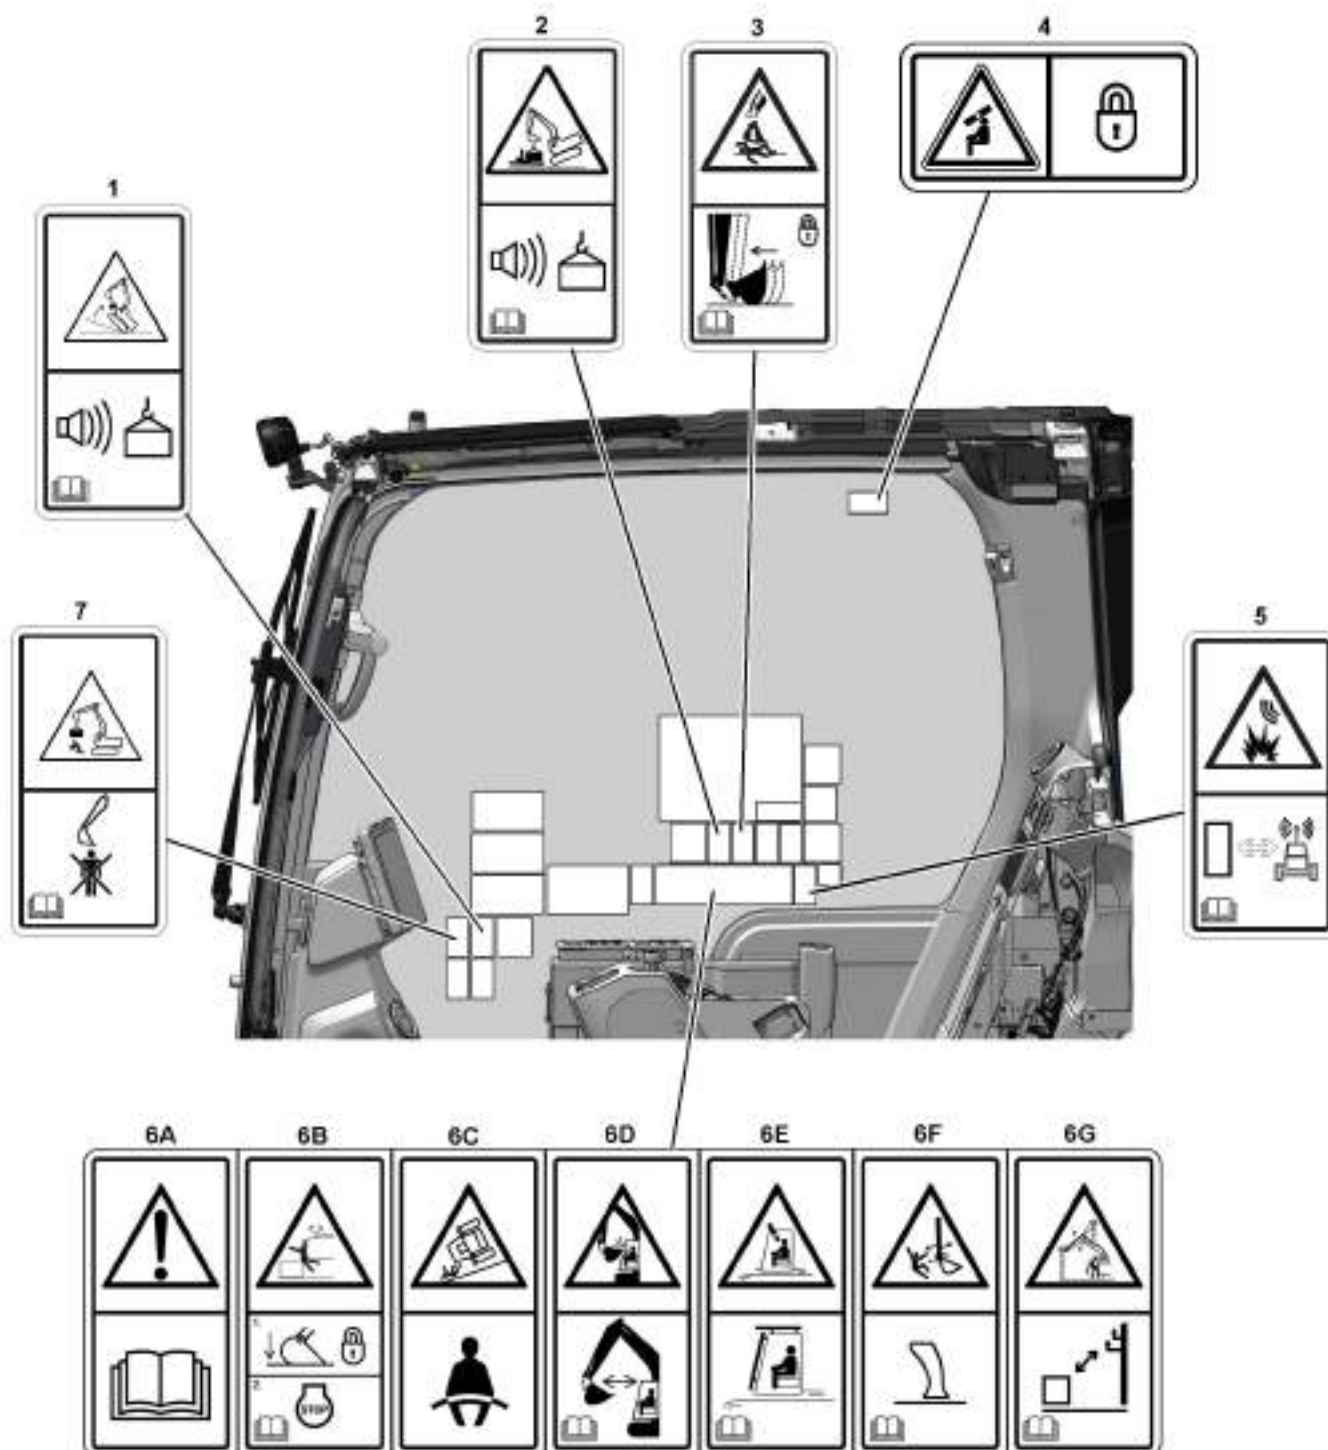


Illustration 2

g06224994

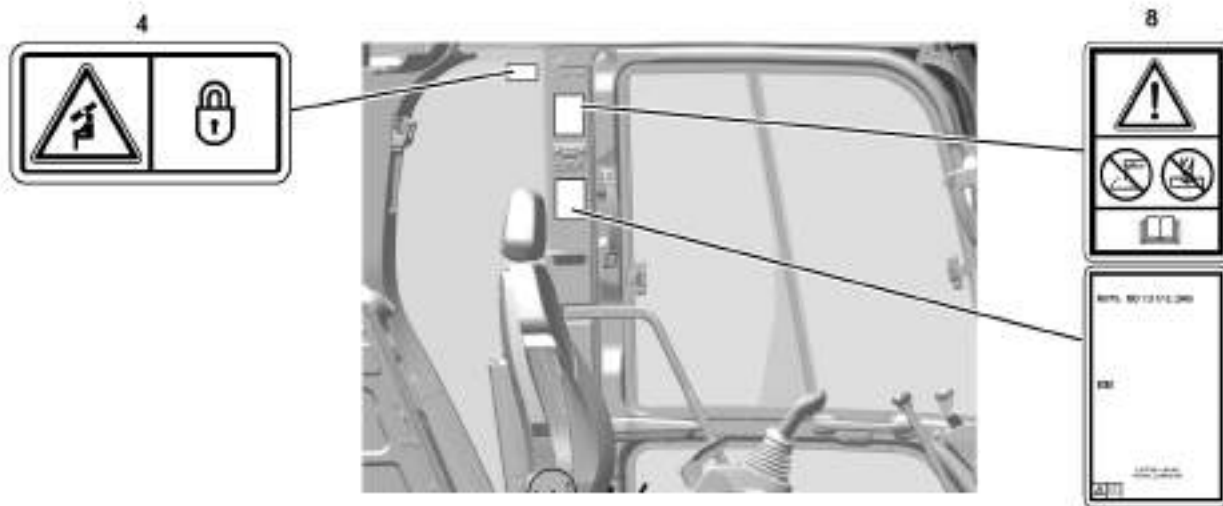


Illustration 3

g06188729

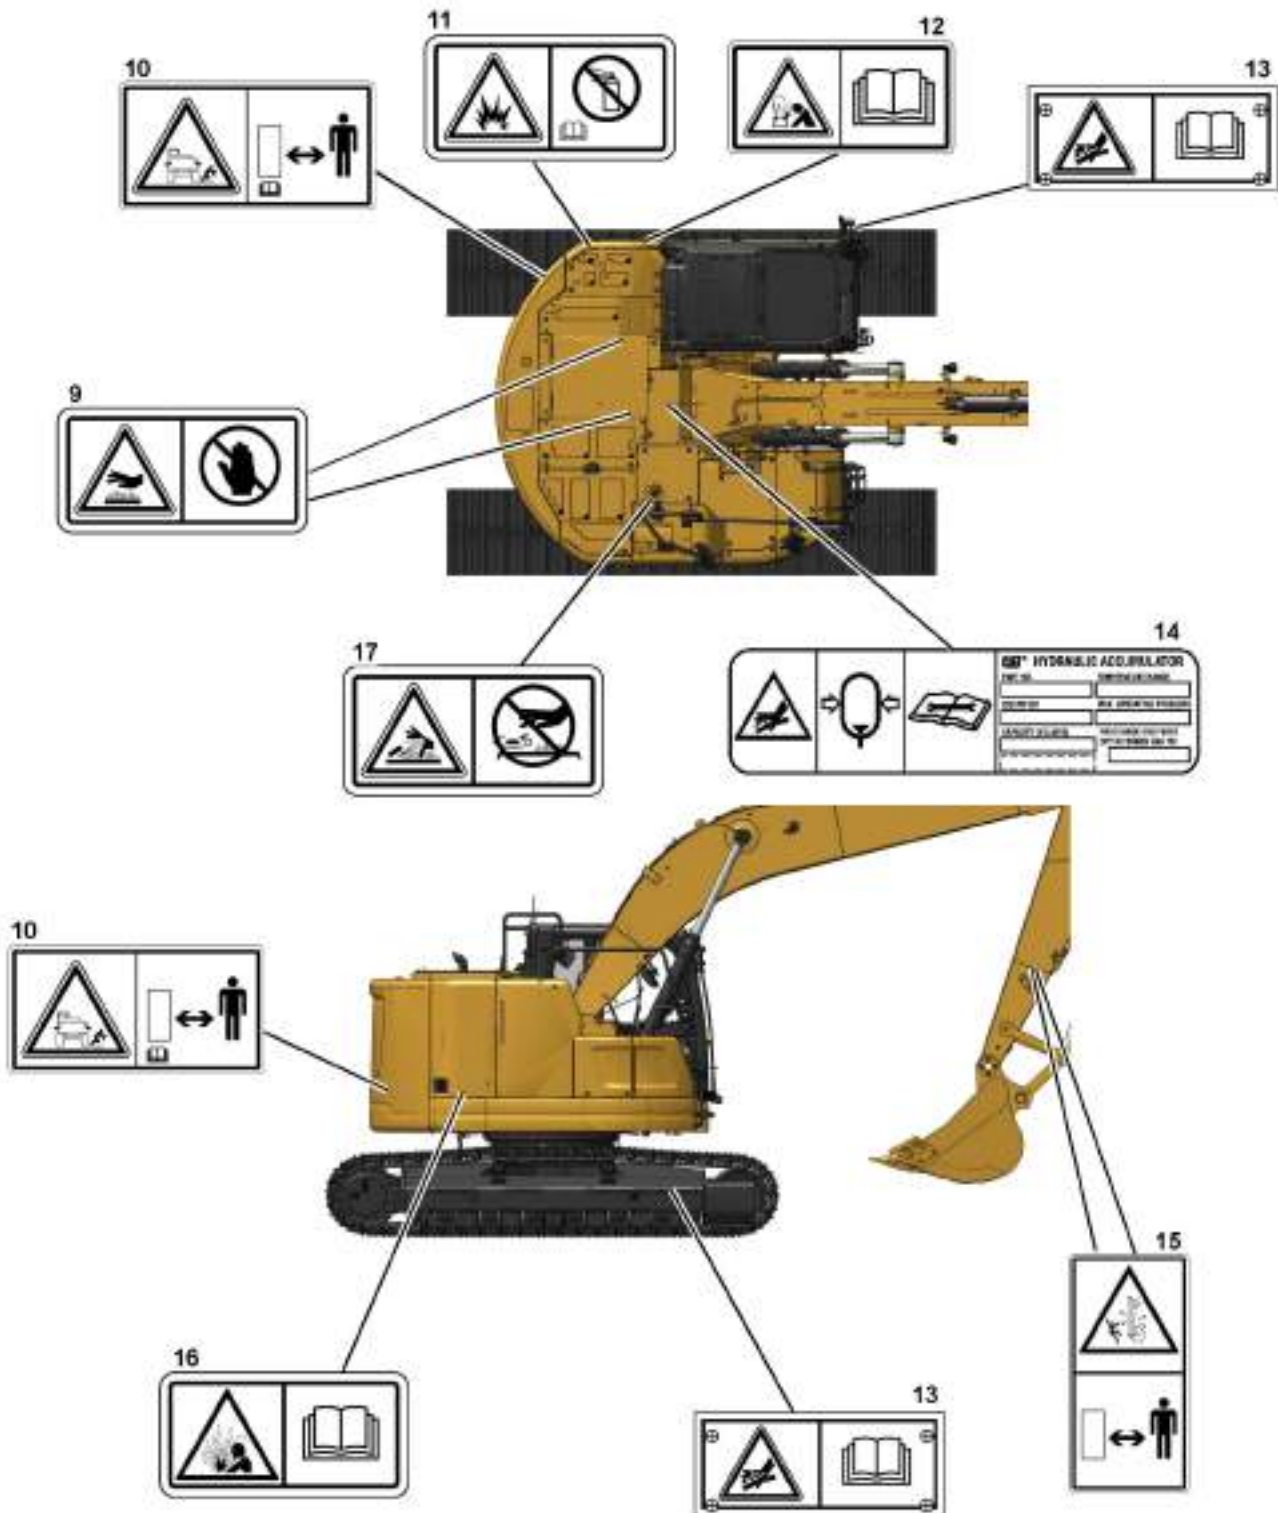


Illustration 4

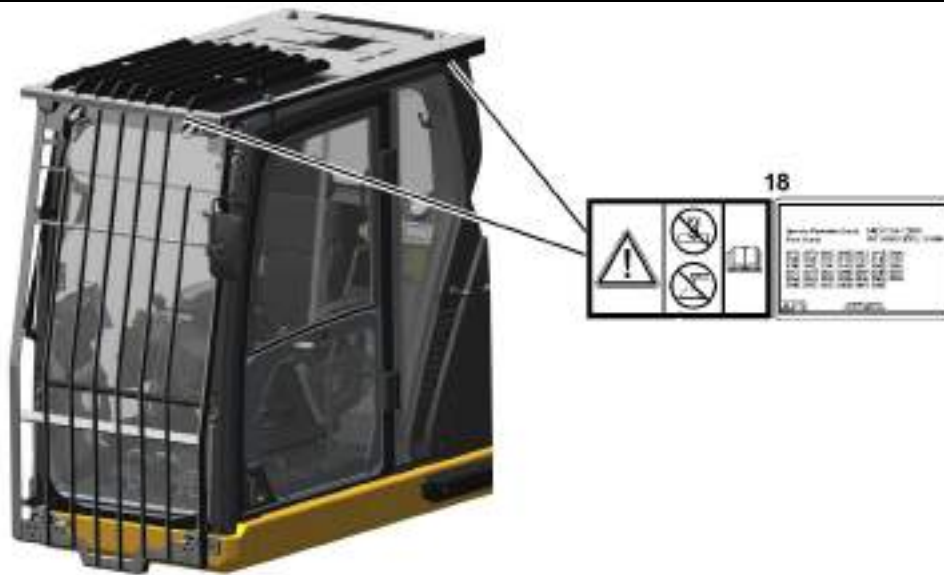


Illustration 5

g06332249

Lifting Level Warning (1)



Illustration 6

g06188532

Overload Warning Device (2)

If equipped, this safety message is located in the cab on the right side window.



Illustration 7

g06224998

WARNING

Overloading the machine could impact the machine's stability which could result in a tipover hazard. A tipover hazard could result in serious injury or death. Always activate the overload warning device before you handle or lift objects.

Refer to Operation and Maintenance Manual, "Operator Controls" for further information.

Crushing Injury (3)

If equipped, this safety message is located in the cab on the right side window.



Illustration 8

g06188540

WARNING

Crush injury. Could cause serious injury or death. Always confirm that the quick coupler is engaged onto the pins. Read the Operator's Manual.

Refer to Operation and Maintenance Manual, "Quick Coupler Operation" for further information.

Crushing Hazard (4)

These safety messages are on the left and right side cab windows.



Illustration 9

g02061339

WARNING

Personal injury can result if the window is not latched in the overhead position; ensure the auto lock is engaged.

Refer to Operation and Maintenance Manual, "Window (Front)" for further information.

Product Link (5)

If equipped, this safety message is located in the cab on the right side window.



Illustration 10

g06188657

WARNING

This machine is equipped with a Caterpillar Product Link communication device. When electric detonators are used, this communication device should be deactivated within 12 m (40 ft) of a blast site for satellite-based systems and within 3 m (10 ft) of a blast site for cellular based systems, or within the distance mandated under applicable legal requirements. Failure to do so could cause interference with blasting operations and result in serious injury or death.

In cases where the type of Product Link module cannot be identified, Caterpillar recommends that the device be disabled no less than 12 m (40 ft) from the blast perimeter.

Refer to Operation and Maintenance Manual, "Product Link" for further information.

Do Not Operate (6A)

This safety message is located in the cab on the right side window.



Illustration 11

g06188661

⚠ WARNING

Do not operate or work on this machine unless you have read and understand the instructions and warnings in the Operation and Maintenance Manual. Failure to follow the instructions or heed the warnings could result in injury or death. Contact any Caterpillar dealer for replacement manuals. Proper care is your responsibility.

Crushing Hazard (6B)

If equipped, this safety message is located in the cab on the right side window.



Illustration 12

g02282255

⚠ WARNING

Crush Hazard! A machine may move unexpectedly and without warning resulting in personal injury or death.

Before leaving the machine lower the work tool to the ground, lock operator controls, shut off the engine and remove the key.

Seat Belt (6C)

This safety message is located in the cab on the right side window.



Illustration 13

g06188642

WARNING

A seat belt should be worn at all times during machine operation to prevent serious injury or death in the event of an accident or machine overturn. Failure to wear a seat belt during machine operation may result in serious injury or death.

Crushing Hazard (6D)

This safety message is located in the cab on the right side window.



Illustration 14

g06188644

WARNING

Crushing Hazard! Certain machine front linkage combinations (boom, stick, quick coupler, work tool) may require keeping the work tool away from the cab during operation. Personal injury or death may result if the work tool contacts the cab during operation.

Crushing Hazard (6E)

This safety message is located in the cab on the right side window.



Illustration 15

g06188652

WARNING

The impact from objects that strike the front of the cab or the top of the cab could result in a crushing hazard with the potential for personal injury or death.

The front guard and the top guard should be installed on the cab for applications where the hazard of falling objects exist. Read the Operation and Maintenance Manual.

Refer to Operation and Maintenance Manual, "Guards" for further information.

Joystick Controls Alternate Patterns (6F)

If equipped, this safety message is located in the cab on the right side window.



Illustration 16

g06188665

WARNING

Crush Hazard. Improper joystick setting could cause possible unexpected movement of the boom, stick, or worktool which could result in serious injury or death. Confirm that the joystick settings are properly configured before you operate the machine. Read the Operation and Maintenance Manual.

Refer to Operation and Maintenance Manual, "Joystick Controls Alternate Patterns" for further information.

Electrical Power Lines (6G)

This safety message is located in the cab.



Illustration 17

g06188667

DANGER

Electrocution Hazard! Keep the machine and attachments a safe distance from electrical power. Stay clear 3 m (10 ft) plus twice the line insulator length. Read and understand the instructions and warnings in the Operation and Maintenance Manual. Failure to follow the instructions and warnings will cause serious injury or death

Refer to Operation and Maintenance Manual, "Specifications" for further information.

Do Not Lift Over Personnel (7)

This safety message is located in the cab on the right side window.



Illustration 18

g06188697

Do not lift

Do Not Weld or Drill on ROPS (8)

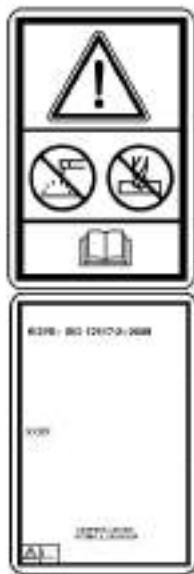


Illustration 19

g06207749

If equipped, this safety message is on the left side pillar in the cab.

WARNING

Structural damage, an overturn, modification, alteration, or improper repair, can impair this structure's protective capability thereby voiding this certification. Do not weld on or drill holes in the structure. Consult a Caterpillar dealer to determine this structure's limitations without voiding its certification.

This machine has been certified to the standards that are listed on the certification plate. The maximum mass of the machine, which includes the operator and the attachments without a payload, should not exceed the mass on the certification plate.

Refer to Operation and Maintenance Manual, "Guards (Operator Protection)" for more information.

Hot Surface (9)

This message is on the outside of the engine hood and on the inside of the engine hood.



Illustration 20

g01372256

WARNING

Engine hood and engine hood parts can be hot while engine is running or immediately after engine shutdown. Hot parts or hot components can cause burns or personal injury. Do not allow these parts to contact your skin, when engine is running or immediately after engine shutdown. Use protective clothing or protective equipment to protect your skin.

Crushing Hazard (10)

This safety message is on each side of the rear of the machine.

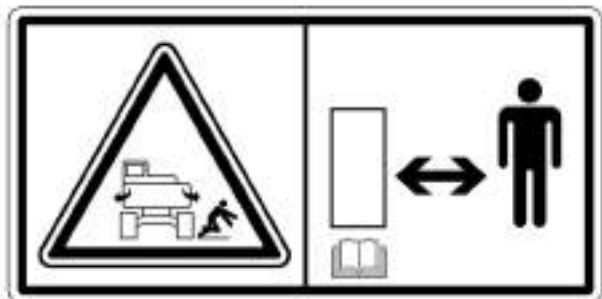


Illustration 21

g06219420



Aerosol Starting Aid (11)

This safety message is located near the precleaner. The following information is not applicable to machines that are equipped with an ether starting aid.



Illustration 22

g01372254



Refer to Operation and Maintenance Manual, "Engine Starting" for the proper starting procedure.

Jump-Start Cables (12)

This safety message is positioned on the circuit breaker panel.


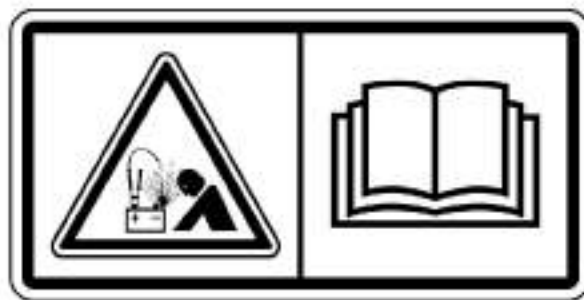


Illustration 23

g01370909

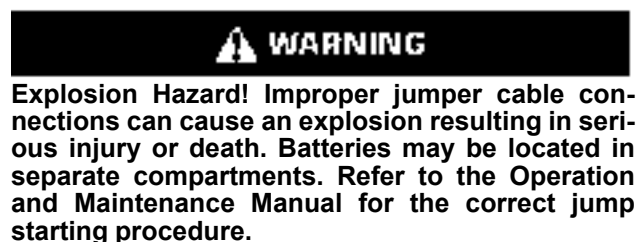

Refer to Operation and Maintenance Manual, "Engine Starting with Jump-Start Cables" for further information.

High-Pressure Cylinder (13)

This safety message is on the back of both the track adjuster covers.

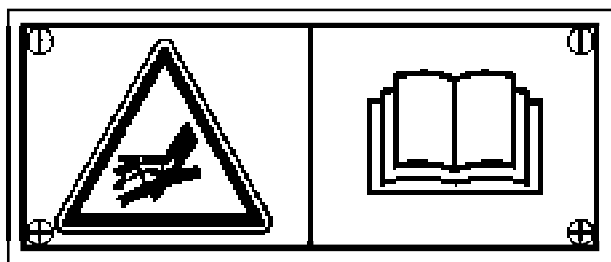


Illustration 24

g01076729

WARNING

Personal injury or death can result from grease under pressure.

Grease coming out of the relief valve under pressure can penetrate the body causing injury or death.

Do not watch the relief valve to see if grease is escaping. Watch the track or track adjustment cylinder to see if the track is being loosened.

Loosen the relief valve one turn only.

If track does not loosen, close the relief valve and contact your Cat dealer.

WARNING

Recoil system contains high-pressure nitrogen cylinder. Parts can separate with explosive force if proper care is not used during disassembly.

This action can cause serious injury or death.

Do not disassemble any part of this cylinder until you have read and understand the instructions given in the service manual. Observe the instructions given in the service manual.

High-Pressure Gas (14)

This safety message is positioned on the accumulator.

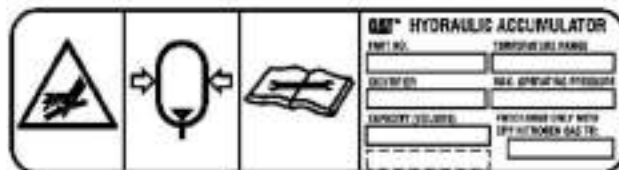


Illustration 25

g06236155

WARNING

Pressurized System!

Hydraulic accumulators contain gas and oil under high pressure. DO NOT disconnect lines or disassemble any component of a pressurized accumulator. All gas pre-charge must be removed from the accumulator as instructed by the service manual before servicing or disposing of the accumulator or any accumulator component.

Failure to follow the instructions and warnings could result in personal injury or death.

Only use dry nitrogen gas to recharge accumulators. See your Cat dealer for special equipment and detailed information for accumulator service and charging.

Refer to Operation and Maintenance Manual, "Equipment Lowering with Engine Stopped" for further information.

Crushing Hazard (15)

This safety message is on both sides of the stick.



Illustration 26

g01385579

WARNING

A crushing hazard exists when the stick and boom are in motion and when the machine is being used in object handling applications. Failure to stay clear of the stick and boom when the machine is in operation can result in personal injury or death. Stay clear of the stick and boom when the machine is in operation.

Vapor Explosion (16) (If Equipped)

If equipped, this safety message is inside the rear storage compartment on the right side, near the fuel transfer pump.



Illustration 27

g01407639

WARNING

Explosion hazard! Fuel vapors can accumulate in the refueling pump compartment and can be ignited by improper operation of the refueling pump. Failure to follow the operating instructions for the refueling pump could result in personal injury or death. Read and follow the operating instructions for the refueling pump in the Operation and Maintenance Manual.

Refer to Operation and Maintenance Manual, "Fuel Transfer Pump (Refueling)" for further information.

Relieve Hydraulic Tank Pressure (17)

This safety message is on top of the hydraulic tank.



Illustration 28

g01371640



Hot Fluid Under Pressure!

Do NOT remove pressure cap when hot. Hot oil could cause serious injury or death.

Falling Object Guard Structure (18)

If equipped, this safety message is on top of the front falling object guard structure. This safety message is also on the left side of the falling object guard structure on the top of the cab.



Illustration 29

g02428757



Structural damage, an overturn, modification, alteration, or improper repair can impair this structure's protection capability thereby voiding this certification. Do not weld on or drill holes in the structure. Consult a Caterpillar dealer to determine this structure's limitations without voiding its certification.

i07953058

Additional Messages

SMCS Code: 7000; 7405

There are several specific messages on this machine. The exact location of the messages and the description of the information are reviewed in this section. Become familiar with all messages.

Make sure that all the messages are legible. Clean the messages or replace the messages if you cannot read the words. Replace the illustrations if the illustrations are not legible. When you clean the messages, use a cloth, water, and soap. Do not use solvent, gasoline, or other harsh chemicals to clean the messages. Solvents, gasoline, or harsh chemicals could loosen the adhesive that secures the messages. Loose adhesive will allow the messages to fall.

Replace any message that is damaged, or missing. If a message is attached to a part that is replaced, install a message on the replacement part. Any Cat dealer can provide new messages.

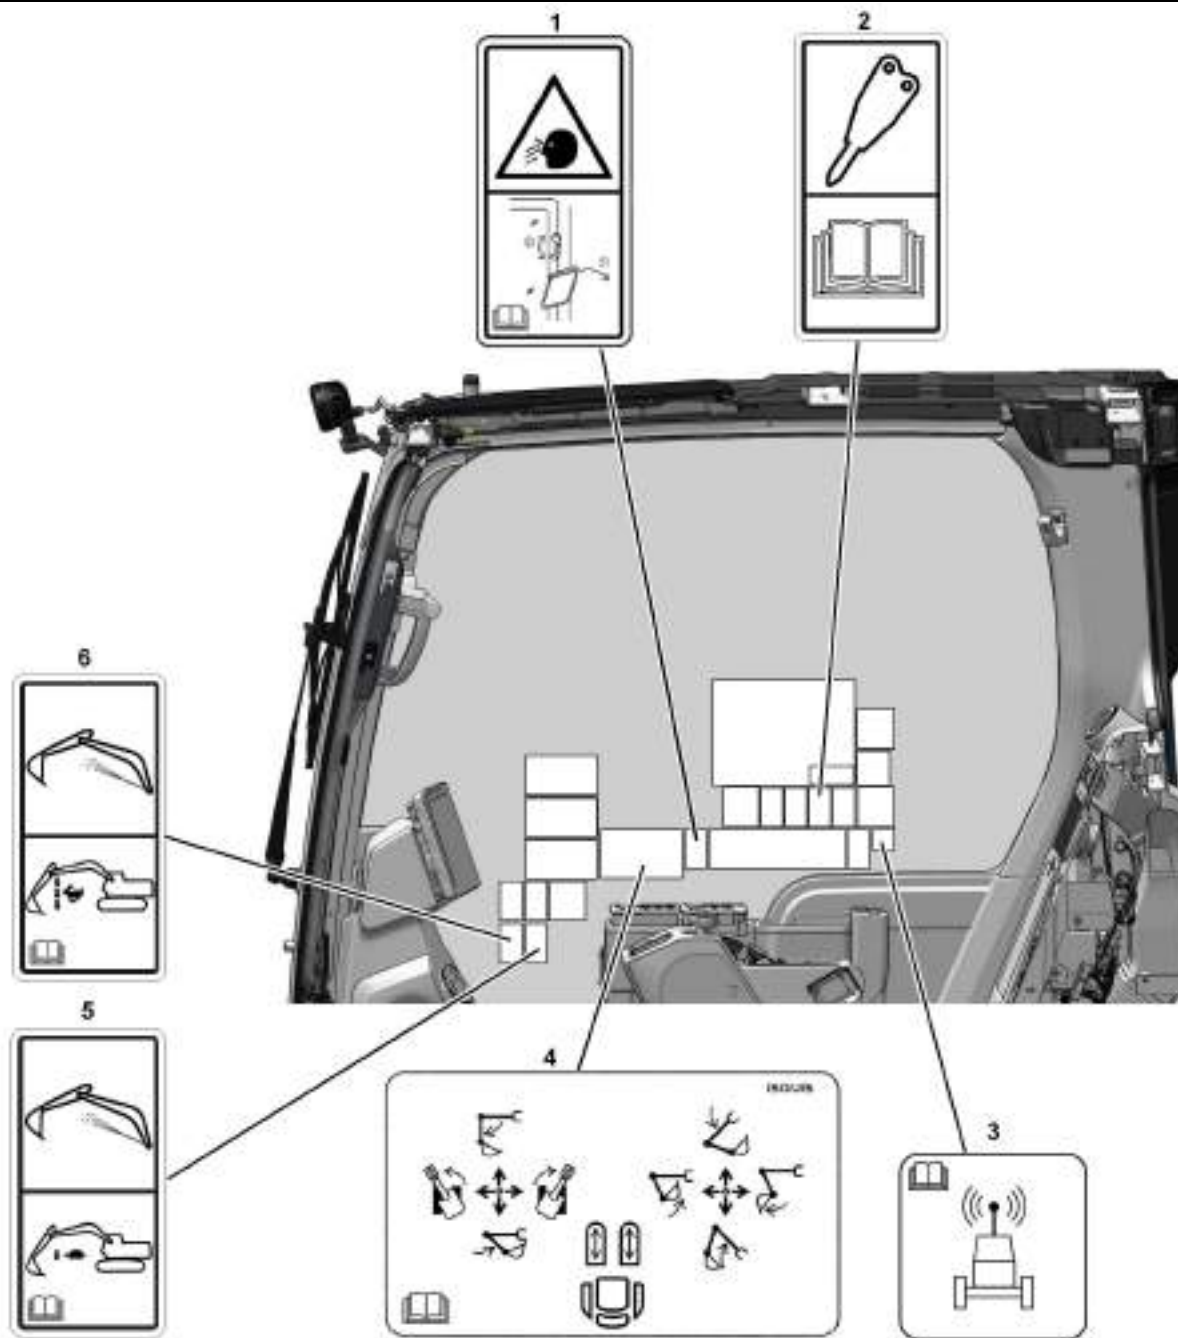


Illustration 30

g06187617

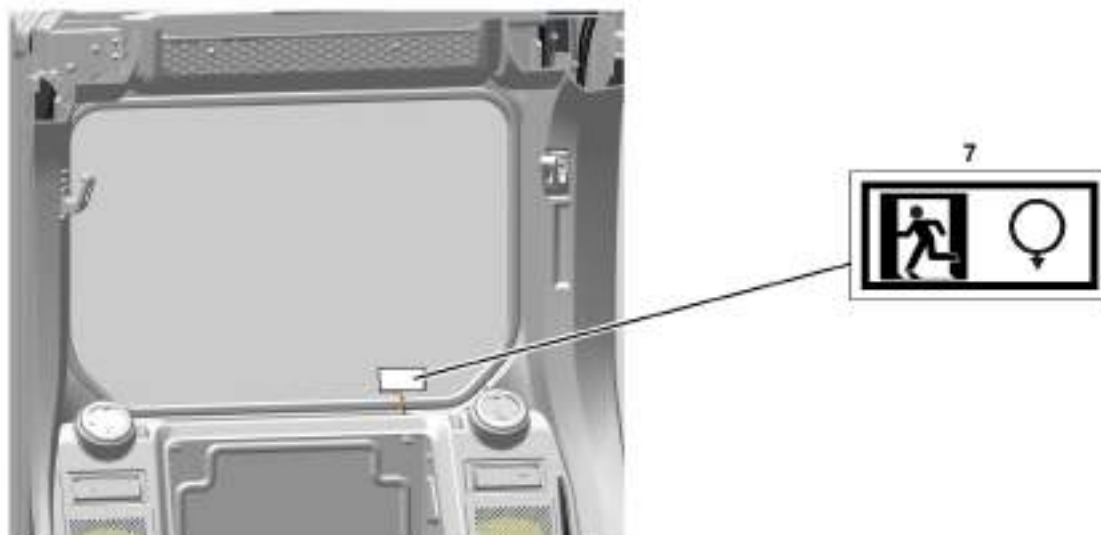


Illustration 31

g06189121

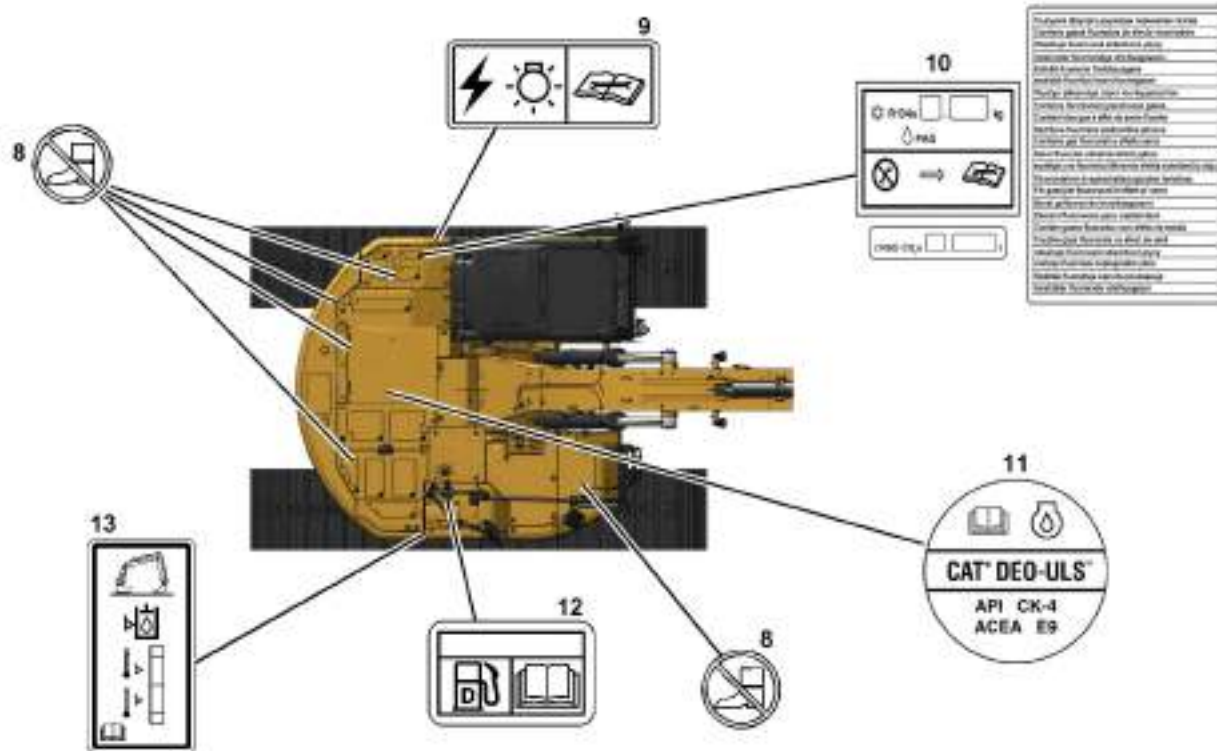


Illustration 32

g06493543

Front Window Usage (1)

For machines equipped with the Cat Grade Control monitor, the monitor must be moved downward before lifting or lowering the front window. The monitor is in the path of the window track in its normal position.



Illustration 33

g06214810

Hammer Operation(2)

This message is on the window on the right side of the cab.



Illustration 34

g06189240

See Operation and Maintenance Manual, "Hammer Operation" within Operation and Maintenance Manual, "Work Tool Control (One-Way Flow)" for instructions on hammer operation.

Also, see Operation and Maintenance Manual, "Hydraulic Hammer Control (Foot Switch)" within Operation and Maintenance Manual, "Work Tool Control (One-Way Flow)" for instructions on hammer operation.

Data Privacy (3)

Illustration 35

g01418953

The Product Link System is a satellite communication device that transmits information regarding the machine back to Caterpillar and Cat dealers and customers. All logged events and diagnostic codes that are available to the Cat Electronic Technician (ET) on the Cat data link can be sent to the satellite. Information can also be sent to the Product Link System. The information is used to improve Cat products and Cat services.

Refer to Operation and Maintenance Manual, "Product Link" for more information.

Joystick Controls Alternate Patterns (4)

If equipped, this message is on the right side window of the cab.

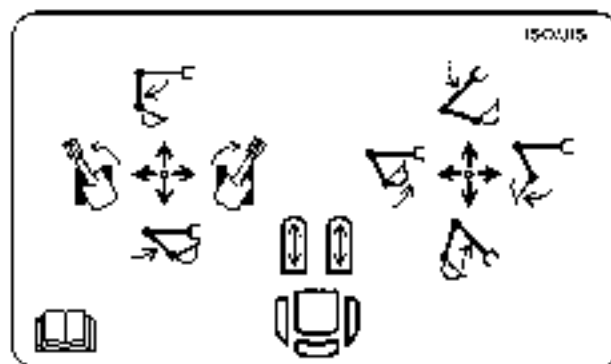


Illustration 36

g06214805

Refer to Operation and Maintenance Manual, "Joystick Controls Alternate Patterns" for further information.

Hose Burst (5)

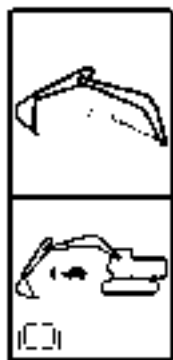


Illustration 37

g06189238

Hose Burst (6)

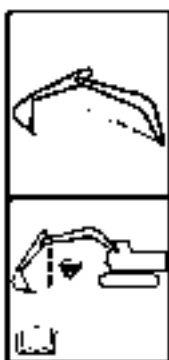


Illustration 38

g06189239

Alternate Exit (7)

If equipped, this message is on the rear window of the cab in the lower left-hand corner.



Illustration 39

g06189112

Pull the ring to pull out the seal. Push the window out of the cab and exit through the opening.

Refer to Operation and Maintenance Manual, "Alternate Exit" for further information.

No Step (8)

This message is on various places on the upper structure and covers. It is also on the engine valve cover.

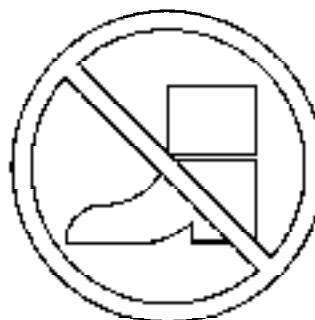


Illustration 40

g00911158

Do not step in this area.

DEF Purge Indicator Lamp (9)

This message is located behind the cab near the disconnect switch and pertains to the Diesel Exhaust Fluid (DEF) system.

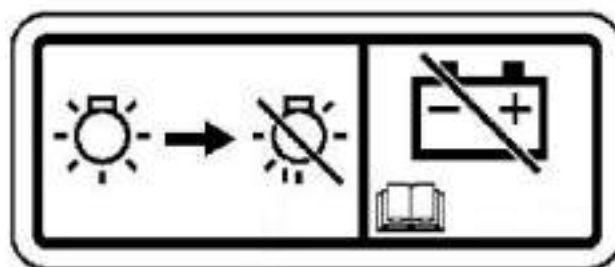


Illustration 41

g06493571

NOTICE

After the engine is shutdown apply the battery disconnect switch. Applying the battery disconnect too soon will prevent the DEF system from being purged and could cause DEF to freeze in the lines.

Air Conditioner (10)

Air Conditioner messages are positioned inside the left rear access door.

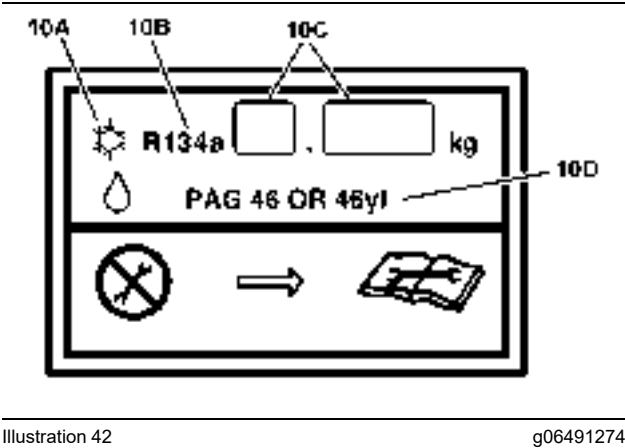


Illustration 42 g06491274

(10A) Air conditioning symbol
(10B) R134a (Refrigerant type common name)
(10C) Refrigerant quantity
(10D) PAG (polyalkylene glycol) lubricating oil part number

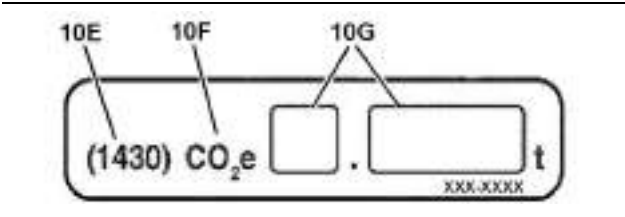


Illustration 43 g06214938

If equipped, this plate provides the below additional European Union required greenhouse gas information.

(10E) (1430) - This is the Global Warming Potential of R134a
(10F) CO₂ equivalent
(10G) The system contains 1.430 metric tonne of CO₂ equivalent

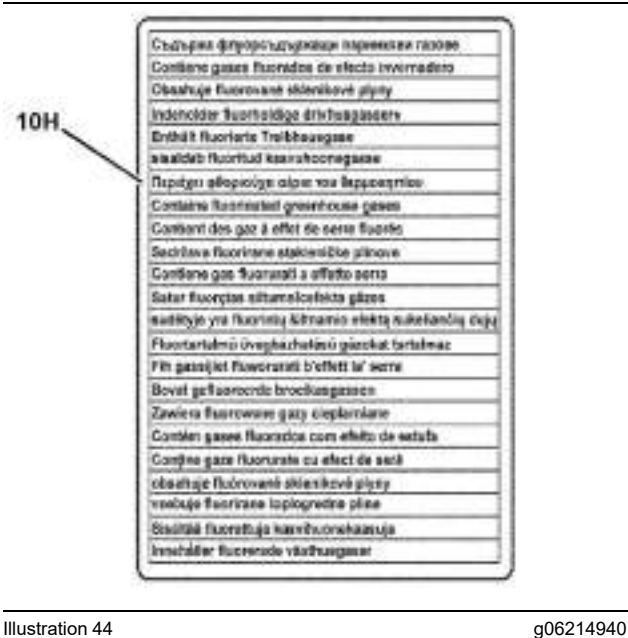


Illustration 44 g06214940

(10H) If equipped, this film provides the required language translations of the text "Contains fluorinated greenhouse gases" for the European Union greenhouse gas regulation.

The messages for the air conditioner system have the appropriate information for the following services: the air conditioner lubricant, the refrigerant charge, and the refrigerant capacity.

Engine Oil Requirements (11)

This message is on top of the engine.



Illustration 45 g06208149

Refer to Operation and Maintenance Manual, "Lubricant Viscosities".

Diesel Fuel Requirements (12)

This message is located by the fuel tank.

i07746355

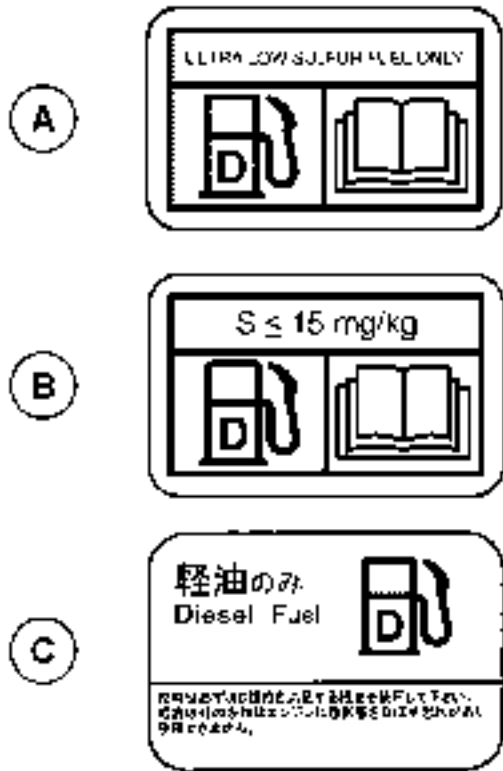


Illustration 46
(A) North America film
(B) Europe, Africa, Middle East film
(C) Japan film

Hydraulic Oil Level Check (13)

This message is located in the right access compartment next to the sight gauge for the hydraulic oil .

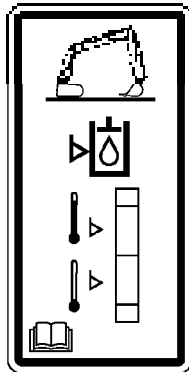


Illustration 47

Check hydraulic oil level daily. See Operation and Maintenance Manual, "Hydraulic System Oil Level - Check" for details.

General Hazard Information

SMCS Code: 7000

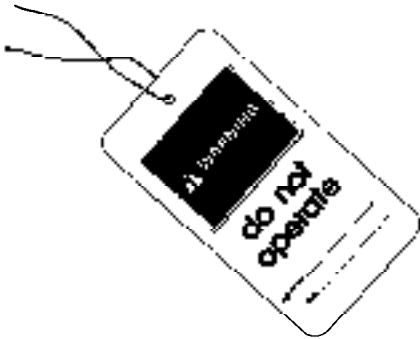


Illustration 48
Typical example

Attach a "Do Not Operate" warning tag or a similar warning tag to the start switch or to the controls. Attach the warning tag before you service the equipment or before you repair the equipment. Warning tag SEHS7332 is available from your Cat dealer.

**WARNING**

Operating the machine while distracted can result in the loss of machine control. Use extreme caution when using any device while operating the machine. Operating the machine while distracted can result in personal injury or death.

Know the width of your equipment to maintain proper clearance when you operate the equipment near fences or near boundary obstacles.

Be aware of high-voltage power lines and power cables that are buried. If the machine comes in contact with these hazards, serious injury or death may occur from electrocution.

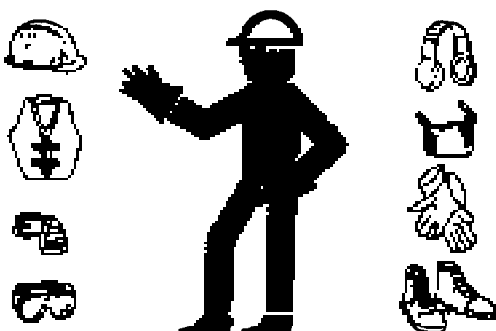


Illustration 49

g00702020

Wear a hard hat, protective glasses, and other protective equipment, as required.

Do not wear loose clothing or jewelry that can snag on controls or on other parts of the equipment.

Make sure that all protective guards and all covers are secured in place on the equipment.

Keep the equipment free from foreign material. Remove debris, oil, tools, and other items from the deck, from walkways, and from steps.

Secure all loose items such as lunch boxes, tools, and other items that are not a part of the equipment.

Know the appropriate work site hand signals and the personnel that are authorized to give the hand signals. Accept hand signals from one person only.

Do not smoke when you service an air conditioner. Also, do not smoke if refrigerant gas may be present. Inhaling the fumes that are released from a flame that contacts air conditioner refrigerant can cause bodily harm or death. Inhaling gas from air conditioner refrigerant through a lighted cigarette can cause bodily harm or death.

Never put maintenance fluids into glass containers. Drain all liquids into a suitable container.

Obey all local regulations for the disposal of liquids.

Use all cleaning solutions with care. Report all necessary repairs.

Do not allow unauthorized personnel on the equipment.

Unless you are instructed otherwise, perform maintenance with the equipment in the servicing position. Refer to Operation and Maintenance Manual for the procedure for placing the equipment in the servicing position.

When you perform maintenance above ground level, use appropriate devices such as ladders or man lift machines. If equipped, use the machine anchorage points and use approved fall arrest harnesses and lanyards.

Pressurized Air and Water

Pressurized air and/or water can cause debris and/or hot water to be blown out. The debris and/or hot water could result in personal injury.

When pressurized air and/or pressurized water is used for cleaning, wear protective clothing, protective shoes, and eye protection. Eye protection includes goggles or a protective face shield.

The maximum air pressure for cleaning purposes must be reduced to 205 kPa (30 psi) when the nozzle is deadheaded and the nozzle is used with an effective chip deflector and personal protective equipment. The maximum water pressure for cleaning purposes must be below 275 kPa (40 psi).

Avoid direct spraying of water on electrical connectors, connections, and components. When using air for cleaning, allow the machine to cool to reduce the possibility of fine debris igniting when re-deposited on hot surfaces.

Trapped Pressure

Pressure can be trapped in a hydraulic system. Releasing trapped pressure can cause sudden machine movement or attachment movement. Use caution if you disconnect hydraulic lines or fittings. High-pressure oil that is released can cause a hose to whip. High-pressure oil that is released can cause oil to spray. Fluid penetration can cause serious injury and possible death.

Fluid Penetration

Pressure can be trapped in the hydraulic circuit long after the machine has been stopped. The pressure can cause hydraulic fluid or items such as pipe plugs to escape rapidly if the pressure is not relieved correctly.

Do not remove any hydraulic components or parts until pressure has been relieved or personal injury may occur. Do not disassemble any hydraulic components or parts until pressure has been relieved or personal injury may occur. Refer to the Service Manual for any procedures that are required to relieve the hydraulic pressure.

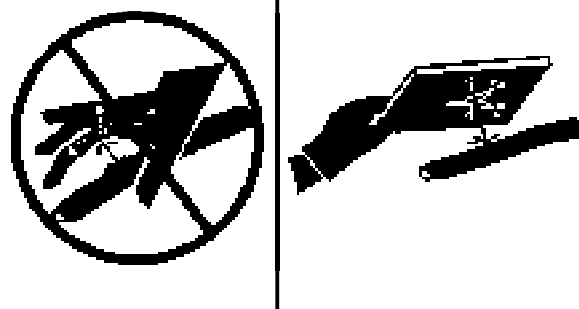


Illustration 50

g00687600

Always use a board or cardboard when you check for a leak. Leaking fluid that is under pressure can penetrate body tissue. Fluid penetration can cause serious injury and possible death. A pin hole leak can cause severe injury. If fluid is injected into your skin, you must get treatment immediately. Seek treatment from a doctor that is familiar with this type of injury.

Containing Fluid Spillage

Care must be taken in order to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the equipment. Prepare to collect the fluid with suitable containers before opening any compartment or disassembling any component that contains fluids.

Refer to Special Publication, NENG2500, "Cat dealer Service Tool Catalog" for the following items:

- Tools that are suitable for collecting fluids and equipment that is suitable for collecting fluids
- Tools that are suitable for containing fluids and equipment that is suitable for containing fluids

Obey all local regulations for the disposal of liquids.

Inhalation



Illustration 51

g02159053

Exhaust

Use caution. Exhaust fumes can be hazardous to your health. If you operate the machine in an enclosed area, adequate ventilation is necessary.

Asbestos Information

Cat equipment and replacement parts that are shipped from Caterpillar are asbestos free. Caterpillar recommends the use of only genuine Cat replacement parts. Use the following guidelines when you handle any replacement parts that contain asbestos or when you handle asbestos debris.

Use caution. Avoid inhaling dust that might be generated when you handle components that contain asbestos fibers. Inhaling this dust can be hazardous to your health. The components that may contain asbestos fibers are brake pads, brake bands, lining material, clutch plates, and some gaskets. The asbestos that is used in these components is bound in a resin or sealed in some way. Normal handling is not hazardous unless airborne dust that contains asbestos is generated.

If dust that may contain asbestos is present, there are several guidelines that should be followed:

- Never use compressed air for cleaning.
- Avoid brushing materials that contain asbestos.
- Avoid grinding materials that contain asbestos.
- Use a wet method in order to clean up asbestos materials.
- A vacuum cleaner that is equipped with a high efficiency particulate air filter (HEPA) can also be used.

- Use exhaust ventilation on permanent machining jobs.
- Wear an approved respirator if there is no other way to control the dust.
- Comply with applicable rules and regulations for the work place. In the United States, use Occupational Safety and Health Administration (OSHA) requirements. These OSHA requirements can be found in "29 CFR 1910.1001". In Japan, use the requirements found in the "Ordinance on Prevention of Health Impairment due to Asbestos" in addition to the requirements of the Industrial Safety and Health Act.
- Obey environmental regulations for the disposal of asbestos.
- Stay away from areas that might have asbestos particles in the air.

Dispose of Waste Properly

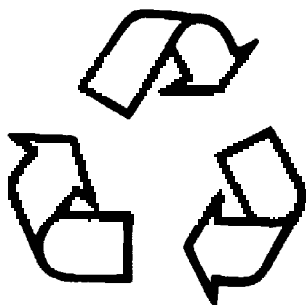


Illustration 52

g00706404

Improperly disposing of waste can threaten the environment. Potentially harmful fluids should be disposed of according to local regulations.

Always use leakproof containers when you drain fluids. Do not pour waste onto the ground, down a drain, or into any source of water.

i01359664

Crushing Prevention and Cutting Prevention

SMCS Code: 7000

Support the equipment properly before you perform any work or maintenance beneath that equipment. Do not depend on the hydraulic cylinders to hold up the equipment. Equipment can fall if a control is moved, or if a hydraulic line breaks.

Do not work beneath the cab of the machine unless the cab is properly supported.

Unless you are instructed otherwise, never attempt adjustments while the machine is moving or while the engine is running.

Never jump across the starter solenoid terminals in order to start the engine. Unexpected machine movement could result.

Whenever there are equipment control linkages the clearance in the linkage area will change with the movement of the equipment or the machine. Stay clear of areas that may have a sudden change in clearance with machine movement or equipment movement.

Stay clear of all rotating and moving parts.

If it is necessary to remove guards in order to perform maintenance, always install the guards after the maintenance is performed.

Keep objects away from moving fan blades. The fan blade will throw objects or cut objects.

Do not use a kinked wire cable or a frayed wire cable. Wear gloves when you handle wire cable.

When you strike a retainer pin with force, the retainer pin can fly out. The loose retainer pin can injure personnel. Make sure that the area is clear of people when you strike a retainer pin. To avoid injury to your eyes, wear protective glasses when you strike a retainer pin.

Chips or other debris can fly off an object when you strike the object. Make sure that no one can be injured by flying debris before striking any object.

i07746334

Burn Prevention

SMCS Code: 7000

Do not touch any part of an operating engine. Allow the engine to cool before any maintenance is performed on the engine. Relieve all pressure in the air system, in the oil system, in the lubrication system, in the fuel system, or in the cooling system before any lines, fittings, or related items are disconnected.

Coolant

When the engine is at operating temperature, the engine coolant is hot. The coolant is also under pressure. The radiator and all lines to the heaters or to the engine contain hot coolant.

Any contact with hot coolant or with steam can cause severe burns. Allow cooling system components to cool before the cooling system is drained.

Check the coolant level only after the engine has been stopped.

Ensure that the filler cap is cool before removing the filler cap. The filler cap must be cool enough to touch with a bare hand. Remove the filler cap slowly to relieve pressure.

Cooling system conditioner contains alkali. Alkali can cause personal injury. Do not allow alkali to contact the skin, the eyes, or the mouth.

Oils

Hot oil and hot components can cause personal injury. Do not allow hot oil to contact the skin. Also, do not allow hot components to contact the skin.

Remove the hydraulic tank filler cap only after the engine has been stopped. The filler cap must be cool enough to touch with a bare hand. Follow the standard procedure in this manual to remove the hydraulic tank filler cap.

Batteries

The liquid in a battery is an electrolyte. Electrolyte is an acid that can cause personal injury. Do not allow electrolyte to contact the skin or the eyes.

Do not smoke while checking the battery electrolyte levels. Batteries give off flammable fumes which can explode.

Always wear protective glasses when you work with batteries. Wash hands after touching batteries. The use of gloves is recommended.

i06179517

Fire Prevention and Explosion Prevention

SMCS Code: 7000



Illustration 53

g00704000

Regeneration

The exhaust gas temperatures during regeneration will be elevated. Follow proper fire prevention instructions and use the disable regeneration function (if equipped) when appropriate.

General

All fuels, most lubricants, and some coolant mixtures are flammable.

To minimize the risk of fire or explosion, Caterpillar recommends the following actions.

Always perform a Walk-Around Inspection, which may help you identify a fire hazard. Do not operate a machine when a fire hazard exists. Contact your Cat dealer for service.

Understand the use of the primary exit and alternative exit on the machine. Refer to Operation and Maintenance Manual, "Alternative Exit".

Do not operate a machine with a fluid leak. Repair leaks and clean up fluids before resuming machine operation. Fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire. A fire may cause personal injury or death.

Remove flammable material such as leaves, twigs, papers, trash, and so on. These items may accumulate in the engine compartment or around other hot areas and hot parts on the machine.

Keep the access doors to major machine compartments closed and access doors in working condition in order to permit the use of fire suppression equipment, in case a fire should occur.

Clean all accumulations of flammable materials such as fuel, oil, and debris from the machine.

Do not operate the machine near any flame.

Keep shields in place. Exhaust shields (if equipped) protect hot exhaust components from oil spray or fuel spray in a break in a line, in a hose, or in a seal. Exhaust shields must be installed correctly.

Do not weld or flame cut on tanks or lines that contain flammable fluids or flammable material. Empty and purge the lines and tanks. Then clean the lines and tanks with a nonflammable solvent prior to welding or flame cutting. Ensure that the components are properly grounded in order to avoid unwanted arcs.

Dust that is generated from repairing nonmetallic hoods or fenders may be flammable and/or explosive. Repair such components in a ventilated area away from open flames or sparks. Use suitable Personal Protection Equipment (PPE).

Inspect all lines and hoses for wear or deterioration. Replace damaged lines and hoses. The lines and the hoses should have adequate support and secure clamps. Tighten all connections to the recommended torque. Damage to the protective cover or insulation may provide fuel for fires.

Store fuels and lubricants in properly marked containers away from unauthorized personnel. Store oily rags and flammable materials in protective containers. Do not smoke in areas that are used for storing flammable materials.



Illustration 54

g03839130

Use caution when you are fueling a machine. Do not smoke while you are fueling a machine. Do not fuel a machine near open flames or sparks. Do not use cell phones or other electronic devices while you are refueling. Always stop the engine before fueling. Fill the fuel tank outdoors. Properly clean areas of spillage.

Avoid static electricity risk when fueling. Ultra low sulfur diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with a higher sulfur content. Avoid death or serious injury from fire or explosion. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

Never store flammable fluids in the operator compartment of the machine.

Battery and Battery Cables



Illustration 55

g03839133

Caterpillar recommends the following in order to minimize the risk of fire or an explosion related to the battery.

Do not operate a machine if battery cables or related parts show signs of wear or damage. Contact your Cat dealer for service.

Follow safe procedures for engine starting with jump-start cables. Improper jumper cable connections can cause an explosion that may result in injury. Refer to Operation and Maintenance Manual, "Engine Starting with Jump Start Cables" for specific instructions.

Do not charge a frozen battery. This may cause an explosion.

Gases from a battery can explode. Keep any open flames or sparks away from the top of a battery. Do not smoke in battery charging areas. Do not use cell phones or other electronic devices in battery charging areas.

Never check the battery charge by placing a metal object across the terminal posts. Use a voltmeter in order to check the battery charge.

Daily inspect battery cables that are in areas that are visible. Inspect cables, clips, straps, and other restraints for damage. Replace any damaged parts. Check for signs of the following, which can occur over time due to use and environmental factors:

- Fraying

- Abrasion
- Cracking
- Discoloration
- Cuts on the insulation of the cable
- Fouling
- Corroded terminals, damaged terminals, and loose terminals

Replace damaged battery cable(s) and replace any related parts. Eliminate any fouling, which may have caused insulation failure or related component damage or wear. Ensure that all components are reinstalled correctly.

An exposed wire on the battery cable may cause a short to ground if the exposed area comes into contact with a grounded surface. A battery cable short produces heat from the battery current, which may be a fire hazard.

An exposed wire on the ground cable between the battery and the disconnect switch may cause the disconnect switch to be bypassed if the exposed area comes into contact with a grounded surface. This may result in an unsafe condition for servicing the machine. Repair components or replace components before servicing the machine.

WARNING

Fire on a machine can result in personal injury or death. Exposed battery cables that come into contact with a grounded connection can result in fires. Replace cables and related parts that show signs of wear or damage. Contact your Cat dealer.

Wiring

Check electrical wires daily. If any of the following conditions exist, replace parts before you operate the machine.

- Fraying
- Signs of abrasion or wear
- Cracking
- Discoloration
- Cuts on insulation
- Other damage

Make sure that all clamps, guards, clips, and straps are reinstalled correctly. This will help to prevent vibration, rubbing against other parts, and excessive heat during machine operation.

Attaching electrical wiring to hoses and tubes that contain flammable fluids or combustible fluids should be avoided.

Consult your Cat dealer for repair or for replacement parts.

Keep wiring and electrical connections free of debris.

Lines, Tubes, and Hoses

Do not bend high-pressure lines. Do not strike high-pressure lines. Do not install any lines that are bent or damaged. Use the appropriate backup wrenches in order to tighten all connections to the recommended torque.

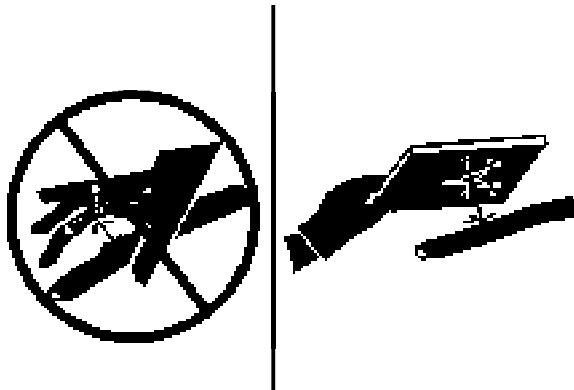


Illustration 56

g00687600

Check lines, tubes, and hoses carefully. Wear Personal Protection Equipment (PPE) in order to check for leaks. Always use a board or cardboard when you check for a leak. Leaking fluid that is under pressure can penetrate body tissue. Fluid penetration can cause serious injury and possible death. A pin hole leak can cause severe injury. If fluid is injected into your skin, you must get treatment immediately. Seek treatment from a doctor that is familiar with this type of injury.

Replace the affected parts if any of the following conditions are present:

- End fittings are damaged or leaking.
- Outer coverings are chafed or cut.
- Wires are exposed.
- Outer coverings are swelling or ballooning.
- Flexible parts of the hoses are kinked.
- Outer covers have exposed embedded armoring.
- End fittings are displaced.

Make sure that all clamps, guards, and heat shields are installed correctly. During machine operation, this will help to prevent vibration, rubbing against other parts, excessive heat, and failure of lines, tubes, and hoses.

Do not operate a machine when a fire hazard exists. Repair any lines that are corroded, loose, or damaged. Leaks may provide fuel for fires. Consult your Cat dealer for repair or for replacement parts. Use genuine Cat parts or the equivalent, for capabilities of both the pressure limit and temperature limit.

Ether

Ether (if equipped) is commonly used in cold-weather applications. Ether is flammable and poisonous.

Only use approved Ether canisters for the Ether dispensing system fitted to your machine, do not spray Ether manually into an engine, follow the correct cold engine starting procedures. Refer to the section in the Operation and Maintenance Manual with the label "Engine Starting".

WARNING

Manually spraying Ether into an engine with a Diesel Particulate Filter (DPF) may result in the accumulation of Ether in the DPF and an explosion. This in conjunction with other factors may result in an injury or death.

Use ether in ventilated areas. Do not smoke while you are replacing an ether cylinder.

Do not store ether cylinders in living areas or in the operator compartment of a machine. Do not store ether cylinders in direct sunlight or in temperatures above 49° C (120.2° F). Keep ether cylinders away from open flames or sparks.

Dispose of used ether cylinders properly. Do not puncture an ether cylinder. Keep ether cylinders away from unauthorized personnel.

Fire Extinguisher

As an additional safety measure, keep a fire extinguisher on the machine.

Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher regularly. Follow the recommendations on the instruction plate.

Consider installation of an aftermarket Fire Suppression System, if the application and working conditions warrant the installation.

i07041871

Fire Safety

SMCS Code: 7000

Note: Locate secondary exits and how to use the secondary exits before you operate the machine.

Note: Locate fire extinguishers and how to use a fire extinguisher before you operate the machine.

If you find that you are involved in a machine fire, your safety and that of others on site are the top priority. The following actions should only be performed if the actions do not present a danger or risk to you and any nearby people. Assess the risk of personal injury and move away to a safe distance as soon as you feel unsafe.

Move the machine away from nearby combustible material such as fuel/oil stations, structures, trash, mulch, and timber.

Lower any implements and turn off the engine as soon as possible. If you leave the engine running, the engine will continue to feed a fire. The fire will be fed from any damaged hoses that are attached to the engine or pumps.

If possible, turn the battery disconnect switch to the OFF position. Disconnecting the battery will remove the ignition source in the event of an electrical short. Disconnecting the battery will eliminate a second ignition source if electrical wiring is damaged by the fire, resulting in a short circuit.

Notify emergency personnel of the fire and your location.

If your machine is equipped with a fire suppression system, follow the manufacturers procedure for activating the system.

Note: Fire suppression systems need to be regularly inspected by qualified personnel. You must be trained to operate the fire suppression system.

If you are unable to do anything else, shut off the machine before exiting. By shutting off the machine, fuels will not continue to be pumped into the fire.

If the fire grows out of control, be aware of the following risks:

- Tires on wheeled machines pose a risk of explosion as tires burn. Hot shrapnel and debris can be thrown great distances in an explosion.
- Tanks, accumulators, hoses, and fittings can rupture in a fire, spraying fuels and shrapnel over a large area.

- Remember that nearly all the fluids on the machine are flammable, including coolant and oils. Additionally, plastics, rubbers, fabrics, and resins in fiberglass panels are also flammable.

i06952417

Fire Extinguisher Location

SMCS Code: 7000; 7419



Illustration 57

g06188176

Installation of a fire extinguisher is recommended. Be familiar with the operation of the fire extinguisher. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instruction plate.

The recommended location for mounting the fire extinguisher is on the upper handrail on the right side of the machine.

i01329108

Track Information

SMCS Code: 4170; 7000

Track adjusting systems use either grease or oil under high pressure to keep the track under tension.

Grease or oil under high pressure coming out of the relief valve can penetrate the body causing injury or death. Do not watch the relief valve to see if grease or oil is escaping. Watch the track or track adjustment cylinder to see if the track is being loosened.

The pins and bushings in a dry track pin joint can become very hot. It is possible to burn the fingers if there is more than brief contact with these components.

i02546320

High Pressure Fuel Lines

SMCS Code: 1000; 1274; 7000



Contact with high pressure fuel may cause fluid penetration and burn hazards. High pressure fuel spray may cause a fire hazard. Failure to follow these inspection, maintenance and service instructions may cause personal injury or death.

The high pressure fuel lines are the fuel lines that are between the high pressure fuel pump and the high pressure fuel manifold and the fuel lines that are between the fuel manifold and cylinder head. These fuel lines are different from fuel lines on other fuel systems.

This is because of the following differences:

- The high pressure fuel lines are constantly charged with high pressure.
- The internal pressures of the high pressure fuel lines are higher than other types of fuel system.
- The high pressure fuel lines are formed to shape and then strengthened by a special process.

Do not step on the high pressure fuel lines. Do not deflect the high pressure fuel lines. Do not bend or strike the high pressure fuel lines. Deformation or damage of the high pressure fuel lines may cause a point of weakness and potential failure.

Do not check the high pressure fuel lines with the engine or the starting motor in operation. After the engine has stopped allow 10 minutes to pass in order to allow the pressure to be purged before any service or repair is performed on the engine fuel lines.

Do not loosen the high pressure fuel lines in order to remove air from the fuel system. This procedure is not required.

Visually inspect the high pressure fuel lines before the engine is started. This inspection should be each day.

If you inspect the engine in operation, always use the proper inspection procedure in order to avoid a fluid penetration hazard. Refer to Operation and Maintenance Manual, "General hazard Information".

- Inspect the high pressure fuel lines for damage, deformation, a nick, a cut, a crease, or a dent.
- Do not operate the engine with a fuel leak. If there is a leak do not tighten the connection in order to stop the leak. The connection must only be tightened to the recommended torque. Refer to Disassembly and Assembly for your engine.

- If the high pressure fuel lines are torqued correctly and the high pressure fuel lines are leaking the high pressure fuel lines must be replaced.
- Ensure that all clips on the high pressure fuel lines are in place. Do not operate the engine with clips that are damaged, missing or loose.
- Do not attach any other item to the high pressure fuel lines.
- Loosened high pressure fuel lines must be replaced. Also removed high pressure fuel lines must be replaced. Refer to Disassembly and Assembly for your engine.

i01122596

Electrical Storm Injury Prevention

SMCS Code: 7000

When lightning is striking in the vicinity of the machine, the operator should never attempt the following procedures:

- Mount the machine.
- Dismount the machine.

If you are in the operator's station during an electrical storm, stay in the operator's station. If you are on the ground during an electrical storm, stay away from the vicinity of the machine.

i00771840

Before Starting Engine

SMCS Code: 1000; 7000

Start the engine only from the operator compartment. Never short across the starter terminals or across the batteries. Shorting could damage the electrical system by bypassing the engine neutral start system.

Inspect the condition of the seat belt and of the mounting hardware. Replace any parts that are worn or damaged. Regardless of appearance, replace the seat belt after three years of use. Do not use a seat belt extension on a retractable seat belt.

Adjust the seat so that full pedal travel can be achieved with the operator's back against the back of the seat.

Make sure that the machine is equipped with a lighting system that is adequate for the job conditions. Make sure that all machine lights are working properly.

Before you start the engine and before you move the machine, make sure that no one is underneath the machine, around the machine, or on the machine. Make sure that the area is free of personnel.

i07746368

Visibility Information

SMCS Code: 7000

Before you start the machine, perform a walk-around inspection in order to ensure that there are no hazards around the machine.

While the machine is in operation, constantly survey the area around the machine in order to identify potential hazards as hazards become visible around the machine.

Your machine may be equipped with visual aids. Some examples of visual aids are Closed Circuit Television (CCTV) and mirrors. Before operating the machine, ensure that the visual aids are in proper working condition and that the visual aids are clean. Adjust the visual aids using the procedures that are located in this Operation and Maintenance Manual. If equipped, the Work Area Vision System shall be adjusted according to Operation and Maintenance Manual, SEBU8157, "Work Area Vision System". If equipped, the Cat Detect Object Detection shall be adjusted according to the Operation and Maintenance Manual, "Cat Detect Object Detection" for your machine.

It may not be possible to provide direct visibility on large machines to all areas around the machine. Appropriate job site organization is required in order to minimize hazards that are caused by restricted visibility. Job site organization is a collection of rules and procedures that coordinates machines and people that work together in the same area. Examples of job site organization include the following:

- Safety instructions
- Controlled patterns of machine movement and vehicle movement
- Workers that direct safe movement of traffic
- Restricted areas
- Operator training
- Warning symbols or warning signs on machines or on vehicles
- A system of communication
- Communication between workers and operators prior to approaching the machine

Modifications of the machine configuration by the user that result in a restriction of visibility shall be evaluated.

i08033778

Restricted Visibility

SMCS Code: 7000

The size and the configuration of this machine may result in areas that cannot be seen when the operator is seated. For restricted visibility areas, an appropriate job site organization must be utilized to minimize hazards of this restricted visibility. For more information regarding job site organization refer to Operation and Maintenance Manual, "Visibility Information".

Illustrations 58 - 61 provide an approximate visual indication of the areas at ground level inside a radius of 12 m (39 ft) from the operator of significant restricted visibility for various machine configurations. Refer to the correct illustration for your machine configuration. All restricted visibility areas less than 300 mm wide may not be shown. These illustrations do not indicate areas of restricted visibility for distances outside of the shown radius. The areas of restricted visibility shown in the illustrations are with the track and work tool of the machine in the Travel position. Illustration 62 shows the position of the work tool in the travel position. The Caterpillar authorized work tool that resulted in the largest visibility restriction was used.

Illustration 58 indicates restricted visibility areas at ground level inside the shown radius from the operator without the use of visual aids that may be optional for this product in some markets.

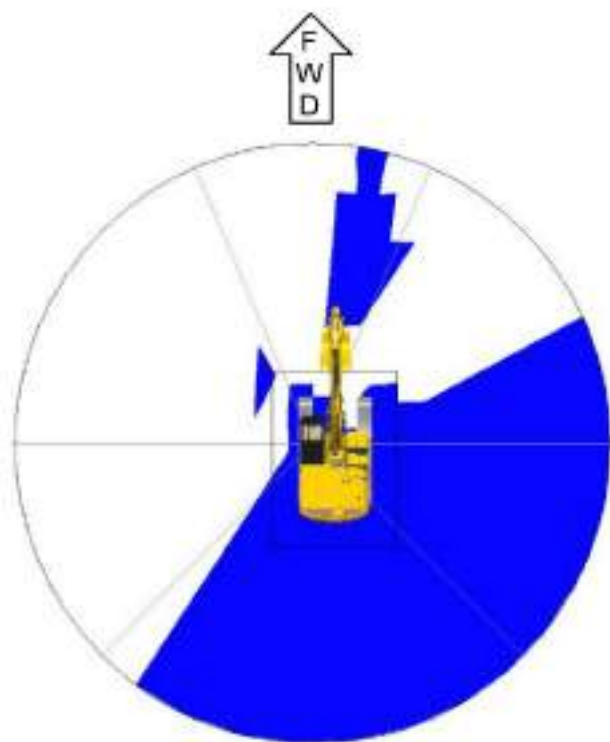


Illustration 58

g06356058

Top view of the machine, ground level visibility without use of optional visual aids

(A) 12 m (39 ft)

Note: The shaded areas indicate the approximate location of areas with significant restricted visibility.

Illustration 59 indicates restricted visibility areas at ground level inside the shown radius from the operator with the use of rear camera, right side mirror, left side mirror, and left side second mirror (if equipped).

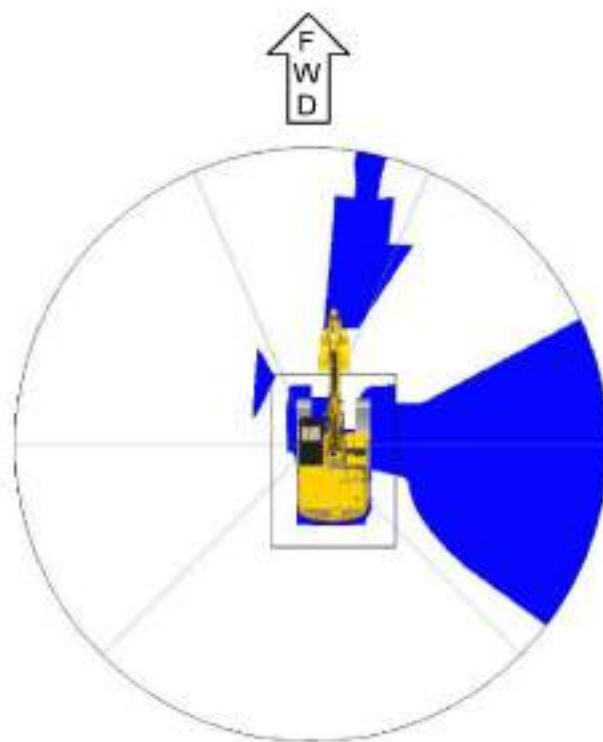


Illustration 59

g06356070

Top view of the machine, ground level visibility with rear camera, right side mirror, left side mirror, and left side second mirror (if equipped)

(A) 12 m (39 ft)

Note: The shaded areas indicate the approximate location of areas with significant restricted visibility.

Illustration 60 indicates restricted visibility areas at ground level inside the shown radius from the operator with the use of rear camera, right side camera, left side mirrors, and left side second mirror (if equipped).

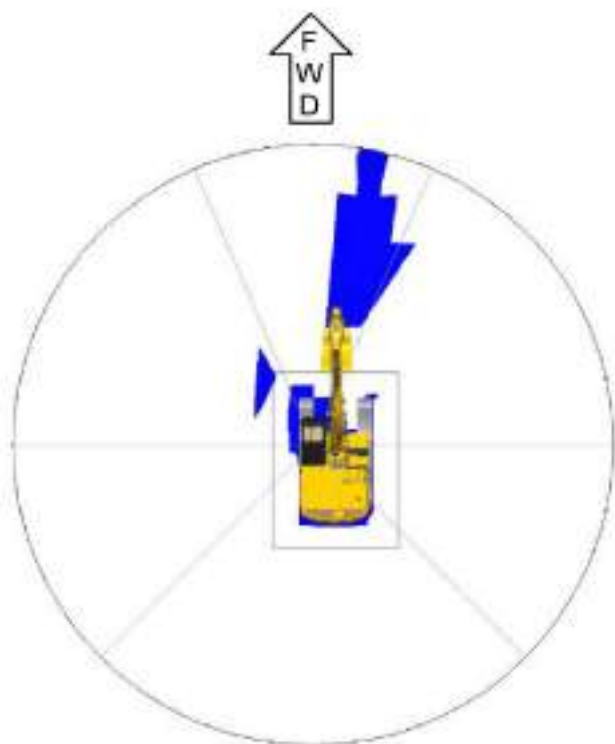


Illustration 60

g06356105

Top view of the machine, ground level visibility with rear camera, right side camera, left side mirror, and left side second mirror (if equipped).

(A) 12 m (39 ft)

Note: The shaded areas indicate the approximate location of areas with significant restricted visibility.

Illustration 61 indicates restricted visibility areas at ground level inside the shown radius from the monitor in the operator station with the use of 360 visibility.

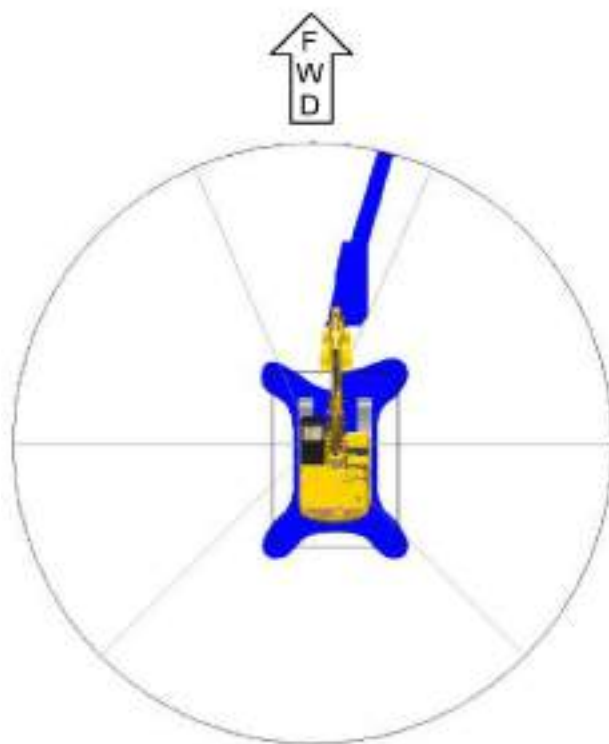


Illustration 61

g06356117

Top view of the machine with 360 visibility through the monitor

Note: The shaded areas indicate the approximate location of areas with significant restricted visibility.

Restricted visibility is measured when the front linkage of the machine is in the travel position. Illustration 62 shows the machine in the travel position.



Illustration 62

g06181081

(A) 1 m (3.0 ft) from the front of the machine to the bucket
(B) 0.5 m (1.6 ft) from ground level

i03562260

Engine Starting

SMCS Code: 1000; 7000

If a warning tag is attached to the engine start switch or to the controls, do not start the engine. Also, do not move any controls.

Make sure that you are seated before you start the engine.

Move all hydraulic controls to the HOLD position before you start the engine. Move the hydraulic lockout control to the LOCKED position. For further details on this procedure, refer to Operation and Maintenance Manual, "Operator Controls".

Diesel engine exhaust contains products of combustion which can be harmful to your health. Always run the engine in a well ventilated area. If you are in an enclosed area, vent the exhaust to the outside.

Briefly sound the horn before you start the engine.

i01340061

Before Operation

SMCS Code: 7000

Clear all personnel from the machine and from the area.

Clear all obstacles from the machine's path. Beware of hazards (wires, ditches, etc).

Be sure that all windows are clean. Secure the doors and the windows in the open position or in the shut position.

Adjust the rearview mirrors (if equipped) for the best visibility close to the machine. Make sure that the horn, the travel alarm (if equipped), and all other warning devices are working properly.

Fasten the seat belt securely.

Warm up the engine and the hydraulic oil before operating the machine.

Before moving the machine, check the position of the undercarriage. The normal travel position is with the idler wheels to the front under the cab and the drive sprockets to the rear. When the undercarriage is in the reversed position, the directional controls must be operated in opposite directions.

i04159629

Work Tools

SMCS Code: 6700

Only use work tools that are recommended by Caterpillar for use on Cat machines.

Use of work tools, including buckets, which are outside of Caterpillar's recommendations or specifications for weight, dimensions, flows, pressures, and so on, may result in less-than-optimal vehicle performance, including but not limited to reductions in production, stability, reliability, and component durability. Caterpillar recommends appropriate work tools for our machines to maximize the value our customers receive from our products. Caterpillar understands that special circumstances may lead a customer to use tools outside of our specifications. In these cases, customers must be aware that such choices can reduce vehicle performance and will affect their ability to claim warranty in the event of what a customer may perceive as a premature failure.

Work tools and work tool control systems, that are compatible with your Cat machine, are required for safe machine operation and/or reliable machine operation. If you are in doubt about the compatibility of a particular work tool with your machine, consult your Cat dealer.

Make sure that all necessary guarding is in place on the host machine and on the work tool.

Keep all windows and doors closed on the host machine. A polycarbonate shield must be used when the host machine is not equipped with windows and when a work tool could throw debris.

Do not exceed the maximum operating weight that is listed on the ROPS certification.

If your machine is equipped with an extendable stick, install the transport pin when you are using the following work tools: hydraulic hammers, augers and compactors

Always wear protective glasses. Always wear the protective equipment that is recommended in the operation manual for the work tool. Wear any other protective equipment that is required for the operating environment.

To prevent personnel from being struck by flying objects, ensure that all personnel are out of the work area.

While you are performing any maintenance, any testing, or any adjustments to the work tool stay clear of the following areas: cutting edges, pinching surfaces and crushing surfaces.

Never use the work tool for a work platform.

i07199415

Assist and E-Fence

SMCS Code: 5050

WARNING

Personal Responsibility

When the Assist System is engaged, the Assist System will control various machine functions. The Assist System is not a substitute for the personal judgment of an operator for the present work site situation or work site conditions. Failure to pay attention to work site situations or work site conditions with the Assist System engaged could result in personal injury or death. Always be aware of the work site situation and work site conditions when operating the machine with the Assist System engaged.

WARNING

Be Alert

Due to system limitations with the Assist System, warnings from the Assist System may be issued late, improperly, or not at all. Failure to respond to warnings from the Assist System with appropriate action could result in personal injury or death. Always be alert when operating a machine with the Assist System engaged and be ready to intervene to prevent an accident.

Operation Guidance

- Ground personnel should maintain a safe distance from the machine. Remain out of the swing radius/swing zone, and always check for ground personnel in the swing radius/swing zone. Do not operate with ground personnel in the swing radius/swing zone.
- When setting height or load restrictions, make sure that any work tools that are attached are in the least favorable position.
- Check for the correct operation once the restriction has been set.
- Validate proper settings both initially and periodically during machine operation.
- Do not move the (machine) quickly when close to a restriction setting.
- Do not operate the machine in a reckless manner.
- Do not travel with the restriction set.
- Reset the load restriction if the machine is moved to a different location.
- Always check settings or reestablish desired settings after leaving the machine for any period to ensure desired performance.
- If the proper setting procedure has been followed, but the system does not appear to be functioning properly, consult your Cat dealer.

Hazard recommendations:

- Return the joysticks to the neutral position once a limit has been reached
- Operate the machine at a slow speed
- Do not travel

Lifting operations with the machine

- Ensure that Lift Mode is selected during lifting operations
- Operate the machine at a safe speed
- Take special care when traveling with a load attached

- Do not operate the machine in a reckless manner

i07889511

Operation

SMCS Code: 7000

Machine Operating Temperature Range

The machine must function satisfactorily in the anticipated ambient temperature limits that are encountered during operation. The standard machine configuration is intended for use within an ambient temperature range of -18 °C (0 °F) to 43 °C (109 °F). Special configurations for different ambient temperatures may be available. Consult your Cat dealer for additional information on special configurations of your machine.

Limiting Conditions and Criteria

Limiting conditions are immediate issues with this machine that must be addressed prior to continuing operation.

The Operation and Maintenance Manual, Safety Section describes limiting condition criteria for replacing items such as safety messages, seat belt and mounting hardware, lines, tubes, hoses, battery cables and related parts, electrical wires, and repairing any fluid leak.

The Operation and Maintenance Manual, Maintenance Interval Schedule describes limiting condition criteria that require repair or replacement for items (if equipped) such as alarms, horns, braking system, steering system, and rollover protective structures.

The Operation and Maintenance Manual, Monitoring System (if equipped) provides information on limiting condition criteria, including a Warning Category 3 that requires immediate shutdown of the engine.

Critical Failures

The following table provides summary information on several limiting conditions found in this Operation and Maintenance Manual. The table provides criteria and required action for the limiting conditions listed. Each System or Component in this table, together with the respective limiting condition, describes a potential critical failure that must be addressed. Not addressing limiting conditions with required actions may, in conjunction with other factors or circumstances, result in a risk of personal injury or death. If an accident occurs, notify emergency personnel and provide location and description of accident.

Safety Section
Operation

Table 1

System or Component Name	Limiting Condition	Criteria for Action	Required Action
Line, tubes, and hoses	End fittings are damaged or leaking. Outer coverings are chafed or cut. Wires are exposed. Outer coverings are swelling or ballooning. Flexible parts of the hoses are kinked. Outer covers have exposed embedded armoring. End fittings are displaced.	Visible corrosion, loose, or damaged lines, tubes, or hoses. Visible fluid leaks.	Immediately repair any lines, tubes, or hoses that are corroded, loose, or damaged. Immediately repair any leaks as these may provide fuel for fires.
Electrical Wiring	Signs of fraying, abrasion, cracking, discoloration, cuts on the insulation	Visible damage to electrical wiring	Immediately replace damaged wiring
Battery cable(s)	Signs of fraying, abrasion, cracking, discoloration, cuts on the insulation of the cable, fouling, corroded terminals, damaged terminals, and loose terminals	Visible damage to battery cable(s)	Immediately replace damaged battery cables
Operator Protective Structure	Structures that are bent, cracked, or loose. Loose, missing, or damaged bolts.	Visible damage to structure. Loose, missing, or damaged bolts.	Do not operate machine with damaged structure or loose, missing, or damaged bolts. Contact your Cat dealer for inspection and repair or replacement options.
Seat Belt	Worn or damaged seat belt or mounting hardware	Visible wear or damage	Immediately replace parts that are worn or damaged.
Seat Belt	Age of seat belt	Three years after date of installation	Replace seat belt three years after date of installation
Safety Messages	Appearance of safety message	Damage to safety messages making them illegible	Replace the illustrations if illegible.
Audible Warning Device(s) (if equipped)	Sound level of audible warning	Reduced or no audible warning present	Immediately repair or replace audible warning devices not working properly.
Camera(s) (if equipped)	Dirt or debris on camera lens	Dirt or debris obstructing camera view	Clean camera before operating machine.
Cab Windows (if equipped)	Dirt, debris, or damaged windows	Dirt or debris obstructing operator visibility. Any damaged windows.	Clean windows before operating machine. Repair or replace damaged windows before operating machine.
Mirrors (if equipped)	Dirt, debris, or damaged mirror	Dirt or debris obstructing operator visibility. Any damaged mirrors.	Clean mirrors before operating machine. Repair or replace damaged mirrors before operating machine.
Braking System	Inadequate braking performance	System does not pass Braking System - Test(s) included in Maintenance Section or in the Testing and Adjusting Manual	Contact your Cat dealer to inspect and, if necessary, repair the brake system.
Cooling System	The coolant temperature is too high.	Monitoring System displays Warning Category 3	Stop the engine immediately. Check the coolant level and check the radiator for debris. Refer to Operation and Maintenance Manual, Cooling System Coolant Level - Check. Check the fan drive belts for the water pump. Refer to Operation and Maintenance Manual, Belts - Inspect/Adjust/ Replace. Make any necessary repairs.
Engine Oil System	A problem has been detected with the engine oil pressure.	Monitoring System displays Warning Category 3	If the warning stays on during low idle, stop the engine and check the engine oil level. Perform any necessary repairs as soon as possible.
Engine system	An engine fault has been detected by the engine ECM.	Monitoring System displays Warning Category 3	Stop the engine immediately. Contact your Cat dealer for service.
Fuel System	A problem has been detected with the fuel system.	Monitoring System displays Warning Category 3	Stop the engine. Determine the cause of the fault and perform any necessary repairs.
Hydraulic Oil System	The hydraulic oil temperature is too high.	Monitoring System displays Warning Category 3	Stop the engine immediately. Check the hydraulic oil level and check the hydraulic oil cooler for debris. Perform any necessary repairs as soon as possible.

(continued)

(Table 1, contd)

System or Component Name	Limiting Condition	Criteria for Action	Required Action
Steering System	A problem has been detected with the steering system. (If equipped with steering system monitoring.)	Monitoring System displays Warning Category 3	Move machine to a safe location and stop the engine immediately. Contact your Cat dealer to inspect and, if necessary, repair the steering system.
Overall Machine	Machine service is required.	Monitoring System displays Warning Category 3	Stop the engine immediately. Contact your Cat dealer for service.

Machine Operation

Only operate the machine while you are in a seat. The seat belt must be fastened while you operate the machine. Only operate the controls while the engine is running.

Check for proper operation of all controls and of all protective devices while you operate the machine slowly in an open area.

When the machine is moving watch the clearance of the boom. Uneven ground can cause the boom to move in all directions.

Make sure that no personnel will be endangered before you move the machine. Do not allow riders on the machine unless the machine has an additional seat with a seat belt.

Report any machine damage that was noted during machine operation. Make any necessary repairs.

Never use the work tool for a work platform.

Hold attachments approximately 40 cm (15 inches) above ground level while you drive the machine. Do not drive the machine close to an overhang, to the edge of a cliff, or to the edge of an excavation.

If the machine begins to sideslip on a grade, immediately dump the load and turn the machine downhill.

Be careful to avoid any ground condition which could cause the machine to tip. Tipping can occur when you work on hills, on banks, or on slopes. Tipping can also occur when you cross ditches, ridges, or other unexpected obstructions.

When possible, operate the machine up slopes and down slopes with the final drive sprockets facing down the slope. Avoid operating the machine across the slope. Place the heaviest end of the machine uphill when you are working on an incline.

Keep the machine under control. Do not overload the machine beyond capacity.

Avoid changing the direction of travel on a slope. Changing the direction of travel on a slope could result in tipping or side slipping of the machine.

Bring the load close to the machine before traveling any distances.

Bring the load close to the machine before swinging the load.

Lifting capacity decreases as the load is moved further from the machine.

Make sure that the towing eyes and the towing devices are adequate for your needs.

Only connect trailing equipment to a drawbar or to a hitch.

Never straddle a wire cable. Never allow other personnel to straddle a wire cable.

When you maneuver in order to connect the equipment, make sure that no personnel are between the machine and trailing equipment. Block up the hitch of the trailing equipment in order to align the equipment with the drawbar.

Check the local regulations, state codes, and/or directives of the job site for a specific minimum distance from obstacles.

Before you operate the machine, check with local utilities for the locations of underground pipes and for the locations of buried cables.

Know the maximum dimensions of your machine.

Watch the load at all times.

Do not operate the machine without the counterweight. The machine can tip when the boom is over the side.

The clamshell, the grapple, or the magnet can swing in all directions. Move the joysticks in a continuous motion. Failure to move the joysticks in a continuous motion can cause the clamshell, the grapple, or the magnet to swing into the cab or into a person in the work area. This will result in personal injury.

Certain machine front linkage combinations (boom, stick, quick coupler, work tool) can allow the work tool to contact the machine undercarriage, swing frame, boom, boom hydraulic cylinder and or the cab. Be aware of the position of the work tool while you operate the machine.

Shut down the machine until damaged or non-functioning visibility aid(s) is repaired (if applicable) or until appropriate job site organization is used to minimize hazards that are caused by any resulting restricted visibility.

Machine Operation when the Machine is not Completely Assembled



Illustration 63

g02202544

Attach the tag to the controls of the machine. When the tag is attached to the controls, operate the machine as described below.

If the machine needs to be operated without the boom, stick, and/or counterweight being installed, the machine should be operated slowly on flat, stable ground or pavement by qualified operators. Avoid any machine operations which could affect machine stability, including the swing function. The ROPS structural certification depends on the support of the boom, stick, and counterweight in the event of a machine tip over or a machine rollover incident.

i06299648

Engine Stopping

SMCS Code: 1000; 7000

Do not stop the engine immediately after the machine has been operated under load. Stopping the engine immediately can cause overheating and accelerated wear of engine components.

After the machine is parked and the parking brake is engaged, allow the engine to run at low idle for 5 minutes before shutdown. Running the engine allows hot areas of the engine to cool gradually.

i06304391

Lifting Objects

SMCS Code: 7000

There may be local regulations and/or government regulations that govern the use of machines which lift heavy objects. Obey all local and government regulations.

If this machine is used to lift objects within an area that is controlled by the European Directive "2006/42/EC", the machine must be equipped with a boom lowering control valve, a stick lowering control valve, and an overload warning device.

If this machine is used to lift objects within Japan, Japanese regulations require the machine to be equipped with a shovel crane configuration.

Contact your Cat dealer for additional information

i07749631

Demolition

SMCS Code: 6700

There maybe local regulations and/or government regulations that govern the use of machines which are designed and used as demolition machinery.

Note: Obey all local and government regulations.

Demolition machinery is designed for demolishing by pushing or pulling, or fragmenting. Demolition is done by crushing or shearing, buildings and/or other civil engineering structures and component parts and/or separating the resultant debris.

If this machine is used for demolition within an area that is controlled by the European Directive 2006/42/EC, the machine must be equipped with:

- Rollover Protective Structure (ROPS, not required for demolition excavators)
- Boom Lowering Control Valve (BLCV) / Stick Lowering Control Valve (SLCV)
- Top Guard / Front Guard
- Bottom / Motor / Swivel Guard
- EN 356 class P5A front window glass
- If a roof window is used to provide visibility to the working area, then roof window shall be equipped with motorized windscreen wipers and washers.

Demolition applications may generate flying debris. Ensure that there are no personnel in the area around the machine where flying debris may travel.

Demolition applications may generate airborne dust that can be hazardous to your health. If you operate the machine in a dust generating applications, use appropriate safeguarding or adequate ventilation to minimize risk.

i07867441

Parking

SMCS Code: 7000

The hydraulic system controls remain pressurized if the accumulator is charged. This condition is true even when the engine is not running. The hydraulic control system pressure should decrease in a short time (approximately 1 minute). While the hydraulic controls maintain a charge, the hydraulic work tools and machine controls remain functional.

There can be residual pressure within the hydraulic system even when the accumulator is empty. Refer to this Operation and Maintenance Manual, "System Pressure Release" before any service is performed to the hydraulic system.

Machine movement that is sudden and unexpected will occur if any of the controls are moved. Machine movement that is sudden and unexpected, can cause personal injury or death.

Always move the hydraulic lockout control to the LOCKED position before you shut off the engine or immediately after the engine stops running.

Park the machine on a hard, level surface. If you must park the machine on a grade, chock the tracks of the machine.



Illustration 64

g06368370

Place the machine in the servicing position.

Note: Make sure that all work tools are in the recommended servicing position before servicing the machine.

Stop the engine.

Turn the engine start switch to the OFF position.

Turn the battery disconnect switch to the OFF position, if you do not intend on operating the machine for an extended period. This will prevent drainage of the battery. A battery short circuit, any current draw from certain components, and vandalism can cause drainage of the battery.

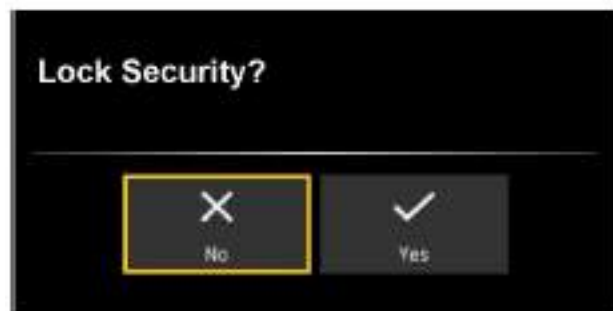


Illustration 65

g06217247

Note: Do not turn off the battery disconnect switch until 5 seconds have elapsed after turning the engine start switch to the OFF position. Do not turn off the battery disconnect switch while the "Lock Security?" screen is displayed on the monitor. Both conditions would prevent the Diesel Exhaust Fluid (DEF) system from being purged and could cause the fluid to freeze in the lines.

Install barriers or lighting as required to prevent interference in road traffic.

Select places free of danger by flooding and other water damage.

i07746366

Slope Operation

SMCS Code: 7000

Machines that are operating safely in various applications depend on these criteria: the machine model, configuration, machine maintenance, operating speed of the machine, conditions of the terrain, fluid levels, and tire inflation pressures. The most important criteria are the skill and judgment of the operator.

A well trained operator that follows the instructions in the Operation and Maintenance Manual has the greatest impact on stability. Operator training provides a person with the following abilities: observation of working and environmental conditions, feel for the machine, identification of potential hazards and operating the machine safely by making appropriate decisions.

When you work on side hills and when you work on slopes, consider the following important points:

Speed of travel – At higher speeds, forces of inertia tend to make the machine less stable.

Roughness of terrain or surface – The machine may be less stable with uneven terrain.

Direction of travel – Avoid operating the machine across the slope. When possible, operate the machine up the slopes and operate the machine down the slopes. Place the heaviest end of the machine uphill when you are working on an incline.

Mounted equipment – Balance of the machine may be impeded by the following components: equipment that is mounted on the machine, machine configuration, weights, and counterweights.

Nature of surface – Ground that has been newly filled with earth may collapse from the weight of the machine.

Surface material – Rocks and moisture of the surface material may drastically affect the machine's traction and machine's stability. Rocky surfaces may promote side slipping of the machine.

Slippage due to excessive loads – This may cause downhill tracks or downhill tires to dig into the ground, which will increase the angle of the machine.

Width of tracks or tires – Narrower tracks or narrower tires further increase the digging into the ground which causes the machine to be less stable.

Implements attached to the drawbar – This may decrease the weight on the uphill tracks. This may also decrease the weight on the uphill tires. The decreased weight will cause the machine to be less stable.

Height of the working load of the machine – When the working loads are in higher positions, the stability of the machine is reduced.

Operated equipment – Be aware of performance features of the equipment in operation and the effects on machine stability.

Operating techniques – Keep all attachments or pulled loads low to the ground for optimum stability.

Machine systems have limitations on slopes – Slopes can affect the proper function and operation of the various machine systems. These machine systems are needed for machine control.

Note: Operators with lots of experience and proper equipment for specific applications are also required. Safe operation on steep slopes may also require special machine maintenance. Refer to Lubricant Viscosities and Refill Capacities in this manual for the proper fluid level requirements and intended machine use. Fluids must be at the correct levels to ensure that systems will operate properly on a slope.

i08229294

Equipment Lowering with Engine Stopped

SMCS Code: 7000-II

Before lowering any equipment with the engine stopped, clear the area around the equipment of all personnel. The procedure to use will vary with the type of equipment to be lowered. Keep in mind most systems use a high pressure fluid or air to raise or lower equipment. The procedure will cause high pressure air, hydraulic, or some other media to be released in order to lower the equipment. Wear appropriate personal protective equipment and follow the established procedure in the Operation and Maintenance Manual, "Equipment Lowering with Engine Stopped" in the Operation Section of the manual.

i07953159

Sound Information and Vibration Information

SMCS Code: 7000

Sound Level Information

The declared dynamic operator sound pressure level is 70 dB(A) when "ISO 6396: 2008" is used to measure the value for an enclosed cab. The measurement was conducted at 70% of the maximum engine cooling fan speed. The sound level may vary at different engine cooling fan speeds. The measurement was conducted with the cab doors and the cab windows closed. The cab was properly installed and maintained.

The declared sound levels listed above include both measurement uncertainty and uncertainty due to production variation.

Hearing protection may be needed when the machine is operated with an open operator station for extended periods or in a noisy environment. Hearing protection may be needed when the machine is operated with a cab that is not properly maintained, or when the doors and windows are open for extended periods or in a noisy environment.

Sound Level Information for Machines in European Union Countries and in Countries that Adopt the “EU Directives”

The declared exterior sound power level (L_{WA}) is 97 dB(A) when the value is measured according to the dynamic test procedures and conditions that are specified in “ISO 6395:2008”. The measurement was conducted at 70% of the maximum engine cooling fan speed. The sound level may vary at different engine cooling fan speeds.

The declared dynamic operator sound pressure level is 70 dB(A) when “ISO 6396: 2008” is used to measure the value for an enclosed cab. The measurement was conducted at 70% of the maximum engine cooling fan speed. The sound level may vary at different engine cooling fan speeds. The measurement was conducted with the cab doors and the cab windows closed. The cab was properly installed and maintained.

The declared sound levels listed above include both measurement uncertainty and uncertainty due to production variation.

Sound Level Information for Machines in Eurasian Economic Union Countries

The declared dynamic operator sound pressure level is 70 dB(A) when “ISO 6396: 2008” is used to measure the value for an enclosed cab. The measurement was conducted at 70% of the maximum engine cooling fan speed. The sound level may vary at different engine cooling fan speeds. The measurement was conducted with the cab doors and the cab windows closed. The cab was properly installed and maintained.

The declared exterior sound power level (L_{WA}) is 97 dB(A) when the value is measured according to the dynamic test procedures and conditions that are specified in “ISO 6395:2008”. The measurement was conducted at 70% of the maximum engine cooling fan speed. The sound level may vary at different engine cooling fan speeds.

The declared sound levels listed above include both measurement uncertainty and uncertainty due to production variation.

“The European Union Physical Agents (Vibration) Directive 2002/44/EC”

Vibration Data for Track Type Excavator

Information Concerning Hand/Arm Vibration Level

When the machine is operated according to the intended use, the hand/arm vibration of this machine is below 2.5 meter per second squared.

Information Concerning Whole Body Vibration Level

This section provides vibration data and a method for estimating the vibration level for track type excavators.

Note: Vibration levels are influenced by many different parameters. Many items are listed below.

- Operator training, behavior, mode, and stress
- Job site organization, preparation, environment, weather, and material
- Machine type, quality of the seat, quality of the suspension system, attachments, and condition of the equipment

It is not possible to get precise vibration levels for this machine. The expected vibration levels can be estimated with the information in Table 2 to calculate the daily vibration exposure. A simple evaluation of the machine application can be used.

Estimate the vibration levels for the three vibration directions. For typical operating conditions, use the average vibration levels as the estimated level. With an experienced operator and smooth terrain, subtract the Scenario Factors from the average vibration level to obtain the estimated vibration level. For aggressive operations and severe terrain, add the Scenario Factors to the average vibration level to obtain the estimated vibration level.

Note: All vibration levels are in meter per second squared.

Table 2

"ISO Reference Table A - Equivalent vibration levels of whole body vibration emission for earthmoving equipment."							
Machine Type	Typical Operating Activity	Vibration Levels			Scenario Factors		
		X axis	Y axis	Z axis	X axis	Y axis	Z axis
Track Type Excavators	excavating	0.44	0.27	0.30	0.24	0.16	0.17
	hydraulic breaker application	0.53	0.31	0.55	0.30	0.18	0.28
	mining application	0.65	0.42	0.61	0.21	0.15	0.32
	transfer	0.48	0.32	0.79	0.19	0.20	0.23

Note: Refer to "ISO/TR 25398 Mechanical Vibration - Guideline for the assessment of exposure to whole body vibration of ride on operated earthmoving machines" for more information about vibration. This publication uses data that is measured by international institutes, organizations, and manufacturers. This document provides information about the whole body exposure of operators of earthmoving equipment. Refer to Operation and Maintenance Manual, SEBU8257, "The European Union Physical Agents (Vibration) Directive 2002/44/EC" for more information about machine vibration levels.

The Caterpillar suspension seat meets the criteria of "ISO 7096". This represents vertical vibration level under severe operating conditions.

Guidelines for Reducing Vibration Levels on Earthmoving Equipment

Properly adjust machines. Properly maintain machines. Operate machines smoothly. Maintain the conditions of the terrain. The following guidelines can help reduce the whole body vibration level:

1. Use the right type and size of machine, equipment, and attachments.
2. Maintain machines according to the manufacturer recommendations.
 - a. Tire pressures
 - b. Brake and steering systems
 - c. Controls, hydraulic system, and linkages
3. Keep the terrain in good condition.
 - a. Remove any large rocks or obstacles.
 - b. Fill any ditches and holes.
 - c. Provide machines and schedule time to maintain the conditions of the terrain.
4. Use a seat that meets "ISO 7096". Keep the seat maintained and adjusted.
 - a. Adjust the seat and suspension for the weight and the size of the operator.

- b. Inspect and maintain the seat suspension and adjustment mechanisms.

5. Perform the following operations smoothly.

- a. Steer
- b. Brake
- c. Accelerate.
- d. Shift the gears.

6. Move the attachments smoothly.

7. Adjust the machine speed and the route to minimize the vibration level.

- a. Drive around obstacles and rough terrain.
- b. Slow down when it is necessary to go over rough terrain.

8. Minimize vibrations for a long work cycle or a long travel distance.

- a. Use machines that are equipped with suspension systems.
- b. Use the ride control system on track type excavators.
- c. If no ride control system is available, reduce speed to prevent bounce.
- d. Haul the machines between workplaces.

9. Less operator comfort may be caused by other risk factors. The following guidelines can be effective to provide better operator comfort:

- a. Adjust the seat and adjust the controls to achieve good posture.
- b. Adjust the mirrors to minimize twisted posture.
- c. Provide breaks to reduce long periods of sitting.
- d. Avoid jumping from the cab.
- e. Minimize repeated handling of loads and lifting of loads.

- f. Minimize any shocks and impacts during sports and leisure activities.

i07746359

Sources

The vibration information and the calculation procedure are based on "ISO/TR 25398 Mechanical Vibration - Guideline for the assessment of exposure to whole body vibration of ride on operated earthmoving machines". Harmonized data is measured by international institutes, organizations, and manufacturers.

This literature provides information about assessing the whole body vibration exposure of operators of earthmoving equipment. The method is based on measured vibration emission under real working conditions for all machines.

You should check the original directive. This document summarizes part of the content of the applicable law. This document is not meant to substitute the original sources. Other parts of these documents are based on information from the United Kingdom Health and Safety Executive.

Refer to Operation and Maintenance Manual, SEBU8257, "The European Union Physical Agents (Vibration) Directive 2002/44/EC" for more information about vibration.

Consult your local Caterpillar dealer for more information about machine features that minimize vibration levels. Consult your local Caterpillar dealer about safe machine operation.

Use the following web site to find your local dealer:

Caterpillar, Inc.
www.cat.com

i07746362

Operator Station

SMCS Code: 7300; 7301; 7325

Any modifications to the inside of the operator station should not project into the operator space or into the space for the companion seat (if equipped). The addition of a radio, fire extinguisher, and other equipment must be installed so that the defined operator space and the space for the companion seat (if equipped) is maintained. Any item that is brought into the cab should not project into the defined operator space or the space for the companion seat (if equipped). A lunch box or other loose items must be secured. Objects must not pose an impact hazard in rough terrain or in the event of a rollover.

Guards (Operator Protection)

SMCS Code: 7000; 7150

There are different types of guards that are used to protect the operator. The machine and the machine application determine the type of guard that should be used.

A daily inspection of the guards is required in order to check for structures that are bent, cracked, or loose. Never operate a machine with a damaged structure.

The operator becomes exposed to a hazardous situation if the machine is used improperly or if poor operating techniques are used. This situation can occur even though a machine is equipped with an appropriate protective guard. Follow the established operating procedures that are recommended for your machine.

Rollover Protective Structure (ROPS), Falling Object Protective Structure (FOPS) or Tip Over Protection Structure (TOPS)

The ROPS/FOPS Structure (if equipped) on your machine is specifically designed, tested and certified for that machine. Any alteration or any modification to the ROPS/FOPS Structure could weaken the structure. This places the operator into an unprotected environment. Modifications or attachments that cause the machine to exceed the weight that is stamped on the certification plate also place the operator into an unprotected environment. Excessive weight may inhibit the brake performance, the steering performance and the ROPS. The protection that is offered by the ROPS/FOPS Structure will be impaired if the ROPS/FOPS Structure has structural damage. Damage to the structure can be caused by an overturn, a falling object, a collision, etc.

Do not mount items (fire extinguishers, first aid kits, work lights, etc) by welding brackets to the ROPS/FOPS Structure or by drilling holes in the ROPS/FOPS Structure. Welding brackets or drilling holes in the ROPS/FOPS Structures can weaken the structures. Consult your Cat dealer for mounting guidelines.

The Tip Over Protection Structure (TOPS) is another type of guard that is used on mini hydraulic excavators. This structure protects the operator in the event of a tipover. The same guidelines for the inspection, the maintenance and the modification of the ROPS/FOPS Structure are required for the Tip Over Protection Structure.

Other Guards (If Equipped)

Protection from flying objects and/or falling objects is required for special applications. Logging applications and demolition applications are two examples that require special protection.

A front guard needs to be installed when a work tool that creates flying objects is used. Mesh front guards that are approved by Caterpillar or polycarbonate front guards that are approved by Caterpillar are available for machines with a cab or an open canopy. On machines that are equipped with cabs, the windows should also be closed. Safety glasses are recommended when flying hazards exist for machines with cabs and machines with open canopies.

If the work material extends above the cab, top guards and front guards should be used. Typical examples of this type of application are listed below:

- Demolition applications
- Rock quarries
- Forestry products

Additional guards may be required for specific applications or work tools. The Operation and Maintenance Manual for your machine or your work tool will provide specific requirements for the guards. Refer to Operation Maintenance manual, "Demolition" for additional information. Consult your Cat dealer for additional information.

Product Information
Section

General Information

i07105852

Regulatory Information
(Japan)

SMCS Code: 7000

Qualifications for Machine
Operation

The following qualifications are required for the operation of this machine:

Excavation and Loading

Completion of the construction machines (for land leveling, hauling, loading, and excavation) operation skill training course. (Qualification by the Industrial Safety and Health Act)

Demolition

Completion of the construction machines (for demolition) operation skill training course. (Qualification by the Industrial Safety and Health Act)

Mining Jobs

Certification by the Director General or Deputy Director General of Bureau of Mine Safety after completion of the safety training course. (Qualification by the Mine Safety Act)

Crane Slinging for the Bucket with a Hook

Completion of the special slinging training for the crane for loads weighing less than 1 ton. (Qualification by the Industrial Safety and Health Act)

Trailer Transportation

In principle, this machine should be transported by a trailer. Select the appropriate trailer regarding the machine weight and measurements shown in the major specifications in the specification part of this manual. Be aware machine weight and transportation measurements differ depending on the various types of attachments.

- In the event heavy items are to be transported, observe the related laws. These laws include Road Traffic Law, Road Laws, Road Transportation Vehicle Laws, and Vehicle Restriction Laws.

- Conduct prior investigation of the road width, ground clearance of road/railway bridges, weight restrictions etc. of the planned transportation route, to confirm the viability of the transportation execution.

Load

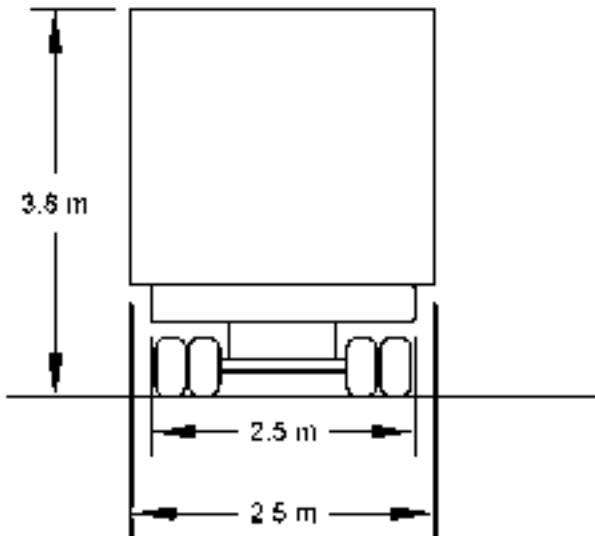


Illustration 66

g02698738

- Not more than 3.8 m (12 ft 6 inch)
- Not more than 2.5 m (8 ft 2 inch)(Safety Standard)
- Not more than 2.5 m (8 ft 2 inch) (Vehicle Restriction Laws)
- Items that protrude out are not allowed. (Government ordinance for Road Traffic Laws)

Transportation weight and measurements are restricted by the Vehicle Restriction Laws. If the actual weight/measurements exceed the limitation figures, you must submit the restriction relaxation request to the pertinent governmental agencies. For details, consult your Cat dealer.

Table 3

Total Length	Not more than 12 m (39 ft 4 inch)
Total Width (A)	Not more than 2.5 m (8 ft 2 inch)

(continued)

(Table 3, contd)

Total Height (B)	Not more than 3.8 m (12 ft 6 inch) when loaded on the trailer.
Total Weight	20 to 25 ton (depending on road, axle, and vehicle length)

Operation of Construction Equipment and the Governing Laws and Regulations

NOTICE

Various laws and regulations, including Industrial Safety and Health Act, are enforced to ensure prevention of injuries on and around construction equipment and safe and comfortable operation of equipment. Be sure to obey them.

NOTICE

The notices regarding machine operation, inspection, maintenance, and safety contained in this manual are applicable only to cases in which the machine is used for the specified jobs. It is impossible for this kind of manual to cover every kind of operation. Therefore, the content of this manual does not necessarily explain all possible cases. Be sure to pay careful attention also to the items not covered by this manual and confirm the safety before starting jobs to prevent human injury and machine damage accidents.

Qualification of Operators

Operation of construction equipment is limited to persons who have any of the following licenses by law.

Note: Employers will face imprisonment up to a maximum of 6 months or a fine of up to a maximum of five hundred thousand yen if they let unqualified personnel operate equipment. Unqualified operators will also be fined up to a maximum of five hundred thousand yen.

- One who completed an operating skill course for vehicle-type construction equipment at a registered training institution.
- One who passed the construction equipment and technologies license examination (Type 1-3) defined by the Construction Industry Law.
- One who completed an operating training course for construction equipment defined by the Vocational Training Law.

- One who took a special training (rules and skills) at a registered training institution to operate equipment weighing less than 3 tons.
- With an auto-drivers license, an operator does not need to complete an operating skill course for construction equipment to operate equipment on the roads that apply to the rules of the Road Traffic Act. However, the operator needs to complete the course to engage in snow clearing or excavating on the roads.
- The operator must be qualified under the Mine Safety Act to operate construction equipment in a mine.

Acquisition of the Qualifications

The company offers training courses for construction machine operation, in addition to other skills. For details, contact the company's dealer in your area.

Regarding machine operation qualifications, also refer to the laws related to the construction machines shown at the end of this manual.

Subsidy System

Small-to-medium-sized construction business companies are eligible to receive a subsidy for a part of training fees and wages when they have their employees attend a training course to improve skills.

Operation of Construction Equipment and the Governing Laws and Regulations

NOTICE

Information about operating skill course for vehicle-type construction equipment (for ground leveling, transporting, loading, excavating).

Industrial Safety and Health Act requires operators of construction equipment weight 3 tons and over to acquire a certificate of completion of an operating skill course. Registered with and authorized by the respective directors general of the regional labor bureaus, we offer operating skill courses for vehicle-type construction equipment and special trainings.

Request for Periodical Self-Inspection

Rules of Periodical Self-Inspection

The employer shall, as provided for by the Ordinance of the Ministry of Health, Labor and Welfare, conduct self-inspection periodically. The employer shall keep the records of the results in respect to construction equipment such as tractor shovels and power shovels, etc., specified by Cabinet Order. (from Article 45, Industrial Safe and Health Act)

Ordinance on Industrial Safety and Hygiene

Periodical self-inspections Article 167

(1) The employer shall, as regards a vehicle type construction machine, carry out self-inspections for the following matters periodically once every period within a year. However, this shall not apply to the non-use period of a vehicle type construction machine, which is not used for a period exceeding 1 year.

(2) The employer shall, as regards a vehicle type construction machine set forth in the proviso of the proceeding paragraph, carry out self-inspection for abnormalities in each part of a construction machine before resuming the operation.

Periodical self-inspections Article 168

(1) The employer shall, as regards a vehicle type construction machine, carry out self-inspections for the following matters periodically once every period within a month. However, this shall not apply to the non-use period of a vehicle type construction machine, which is not used for a period exceeding one month:

- (i) Abnormalities in a brake, a clutch, a controlling device, and working devices.
- (ii) Damage in a wire, rope, and a chain
- (iii) Damage in a bucket, a dipper, etc.

(2) The employer shall, as regards to the vehicle type construction machine set forth in the proviso of the preceding paragraph, carry out self-inspection for the matters listed in each item of the same paragraph before resuming the operation.

Record of Periodical Self-Inspections Article 169

The employer shall, when having carried out the self-inspections set forth in the preceding two Articles, record the results and retain the records for 3 years.

Specified Self-Inspection Article 169-2

The specified self-inspection pertaining to the vehicle type construction machine shall be the self-inspection (prescribed by Article 167) and carried out by qualified personnel. The employer shall, when having carried out the specified self-inspection pertaining to a vehicle type construction machine, affix an inspection sticker stating the month and year when the said specified self-inspection was carried out at a readily visible location of the said machine.

- Caterpillar Japan has a supporting program for self-inspection as a registered inspection agency. Qualified personnel and inspection equipment are available to help customers who do not conduct internal inspections or do not have time to conduct the specified self-inspections. Contact a Cat dealer near you for details.
- Maintenance and inspection record book for a record-saving purpose can be purchased at Caterpillar Japan.
- Penalty: Employer who fails to carry out self-inspections and to record the results will face a fine of up to five hundred thousand yen.

Checkup before Commencing the Work Article 170

The employer shall, when carrying out the work using a vehicle type construction machine, check functions of a brake and a clutch before commencing the work for the day.

Other Rules

Besides qualification for operating equipment and self inspections, the following obligations are set forth in the Industrial Safety and Health Act:

- To conduct health and safety training for new recruits and shop foremen.
- To appoint the operation leader or supervisor, and establish health and safety management system.
- To inform employees of a chain of command at the worksite, communication and signal rules, traveling route of equipment, speed limits, signs of restricted areas, etc. for securing safety in the workplace.

The Industrial Safety and Health Act further also set obligations related to mechanical structures and rental activities of equipment.

Safety comes before anything else. Establish a workplace where no injuries occur by observing the governing laws and by referring to this manual, specifically the descriptions on safety.

Construction Equipment and Environmental Laws

Prohibition of Emissions and Obligations to Recover Fluorocarbons

Law Concerning the Recovery and Destruction of Fluorocarbons (Enforcement date: April 1, 2015)

Being emitted into the atmosphere, Fluorocarbons, used as refrigerants of air conditioning, destroy the ozone layer and accelerate the global warming as a cause of environmental destruction. Follow the instructions below required by law when handling air conditioners to protect the global environment.

1. 1. Do not arbitrarily emit the encapsulated refrigerant installed on the product into the atmosphere.
2. 2. Recover the encapsulated refrigerant when disposing of the product.

Note: Violators of the law will face a maximum one-year imprisonment or a fine up to a maximum of five hundred thousand yen.

When you need to fill, recover a refrigerant or dispose of a product with an encapsulated refrigerant installed, please ask a filling-recovery operator registered with the government of the local prefecture as "class-1 filling-recovery operator." And carry out the simple inspection of air conditioner and keep the record.

Class-1 Specified products sold after October 1, 2015 shall have the label inside of the cab showing the type and quantity of refrigerant, GWP (Global Warming Potential), and precautions for use. (Refer to the fluorocarbon label in the OMM safety section)

Standard Certificate of Transfer

Dear Customers

Japan Construction Equipment Manufacturers Association

Standard Certificate of Transfer

Issued by the Japan Construction Equipment Manufacturers Association

Standard Certificate of Transfer issued by the Japan Construction Equipment Manufacturers Association proves the ownership of your equipment. Request us to issue the certificate as a proof of transfer of ownership.

Commercial transactions of construction equipment are generally made on a long-term installment plan basis with a special provision of reservation of ownership that the seller retains the ownership of the sold equipment until the buyer completely pays off the installments.

Ownership of some construction equipment can be proved with a vehicle inspection certificate, but the certificate is not issued for most of the equipment. Therefore, the buyer will need to present a third party with a proof of ownership of the sold equipment.

Japan Construction Equipment Manufacturers Association launched a system of standard certificate of transfer in 1971 to normalize trading in construction equipment and establishes a business practice relating to transfer of ownership. Customers are kindly requested to understand the intent of the system and request your seller to issue a certificate of transfer.

1. About the standard certificate of transfer

- a. Japan Construction Equipment Manufacturers Association (hereinafter referred to as CEMA) sets the rules and form of standard certificate of transfer (hereinafter referred to as certificate of transfer), and members of the CEMA issue the certificate of transfer. A certificate of transfer proves the ownership of equipment.

2. Purpose of issuance

- a. A certificate of transfer will be issued for the purpose of clarifying the ownership of equipment and preventing misconduct such as trades of stolen equipment or fraud.

3. Issuer

- a. A certificate of transfer will be issued by a distributor (Primary transferer) who sells new construction equipment and is authorized by the CEMA.

4. Eligibility

- a. A certificate of transfer will be issued for the equipment, which is sold by CEMA-member distributors and defined as construction equipment by the CEMA

5. Issuance

- a. A certificate of transfer will be issued and directly given to a buyer upon the buyer's request when he/she buys eligible equipment from an issuer.
- b. A certificate of transfer may not be issued for the equipment, which was sold as new merchandise more than 10 years ago.
- c. A certificate of transfer is not permitted to substitute a vehicle inspection certificate.

6. Prohibition of reissuance

- a. Certificate of transfer should be safely stored as it will not be reissued under any circumstances.

7. In case a certificate description runs out of space
- Discretionary page/s to the certificate will be valid with a tally seal of the issuer at the joint of two pages.

Contact CEMA-member companies or distributors for more details of the system.

Industrial Safety and Health Act

Article 164 (Extracted) of Industrial Safety and Health Act (Restriction on use Other Than Main Application)

Article 164

Business Operator must not use construction machineries of vehicle type for applications other than main application of the applicable construction machineries of vehicle type such as: lifting cargos by hydraulic excavator or lifting/lowering workers using the clamshell.

[2] The previous clause will not be applied for any of the following cases:

- In performing cargo lifting, any one of the following may be applicable.
 - Cannot be avoided due to the nature of the work or necessary in view of performing work in safe.
 - When working with attachments installed for metals of hook or shackle etc or other devices for lifting application applicable to any one of the following as implements for boom or bucket etc
 - Enough strength is retained bearable for loads to be applied.
 - Load lifted up is not feared to be dropped from the applicable instrument used, due to provided locking device is in use or etc.
 - Load not feared of disengaging from the implement.
- In performing work other than cargo lifting, nothing is feared to do harm to the workers.

[3] The business operator must take the following measures, in performing cargo lifting work applicable to Items 1a and 1b of Step 1 above. To prevent any danger of workers from contact with lifted cargo, drop of lifted cargo or turnover or falling down of construction machineries of vehicle type.

- Designate one person who issues a sign as well as setting up fixed signs related to cargo lifting work, and follow his signs.
- Perform work on a flat ground.
- Keep any worker away from any place where is feared to cause any danger to worker due to contact with a cargo or drop of lifted cargo.

[4] Do not perform any work applying load exceeding the allowed rated max load specified according to structure or materials of the applicable construction machineries of the vehicle type.

[5] In using wire rope in slinging device, use wire rope applicable to every item of the followings.

- Safety coefficient is 6 or more. (The safety coefficient here must be the same as specified in Article 213 item 2 in Safety Rules on Crane Works (Article 34 in Ordinance of Ministry of Labor, 1972) etc. Hereinafter called as "Crane Rules")
- Among wire rope 1 strands, numbers of cut strands (other than filler) are less than 10%.
- Reduction of diameter is 7% or less than nominal diameter.
- Free from kinking.
- Free from badly collapse and corrosion.

[6] In using lifting chain as slinging device, the chain is applicable to every item of the followings.

- Safety coefficient is 5 or more.
- Elongation is 5% or less than the length when the applicable lifting chain was fabricated.
- Reduction of diameter of the cross section of link is 10% or less than diameter of cross section of the applicable link when the applicable lifting chain was manufactured.
- Free from cracks.

[7] In using those other than wire rope and lifting chain as slinging device, they must be free from bad damage and corrosion.

i08298697

Specifications

SMCS Code: 7000

Intended Use

The intended use of this machine is for excavating with a bucket or working with approved work tools. The machine should be operated with the undercarriage in a stationary position since the upper structure is normally capable of 360 degree swing with mounted equipment. This machine can be used in object handling applications that are within the lift capacity of the machine. When this machine is used in object handling applications, ensure that the machine is properly configured and operated properly. Obey any local governmental regulations and regional governmental regulations. Only lift objects from approved lifting points and with approved lifting devices.

Expected Life

The expected life, defined as total machine hours, of this machine is dependent upon many factors including the machine owner's desire to rebuild the machine back to factory specifications. The expected life interval of this machine is 8,000 service hours. The expected life interval corresponds to the service hours to engine overhaul. Service hours to engine overhaul may vary based on overall machine duty cycle. At the expected life interval, remove the machine from operation and consult your Cat dealer for inspect, repair, rebuild, install remanufactured, install new components, or disposal options and to establish a new expected life interval. If a decision is made to remove this machine from service, refer to Operation and Maintenance Manual, "Decommissioning and Disposal".

The following items are required to obtain an economical expected life of this machine:

- Perform regular preventive maintenance procedures as described in the Operation and Maintenance Manual.
- Perform machine inspections as described in the Operation and Maintenance Manual and correct any problems discovered.
- Perform system testing as described in the Operation and Maintenance Manual and correct any problems discovered.
- Ensure that machine application conditions comply with Caterpillar's recommendations.

- Ensure that the operating weight does not exceed limits set by manufacturer.
- Ensure that all frame cracks are identified, inspected, and repaired to prevent further development.

Application/Configuration Restrictions

WARNING

If using work tools totaling in weight over 29723 kg (65528 lb) with the 8300 kg (18298 lb) counterweight, the total machine mass will exceed the ROPS certification which could result in personal injury or death. Consult your Cat dealer for allowable attachments with this machine configuration.

The maximum travel operating slope for machine lubrication is 35 degrees

The operator station is ROPS certified up to a mass of 36100 kg (79587 lb) per ISO 12117-2:2008.

Specification Data

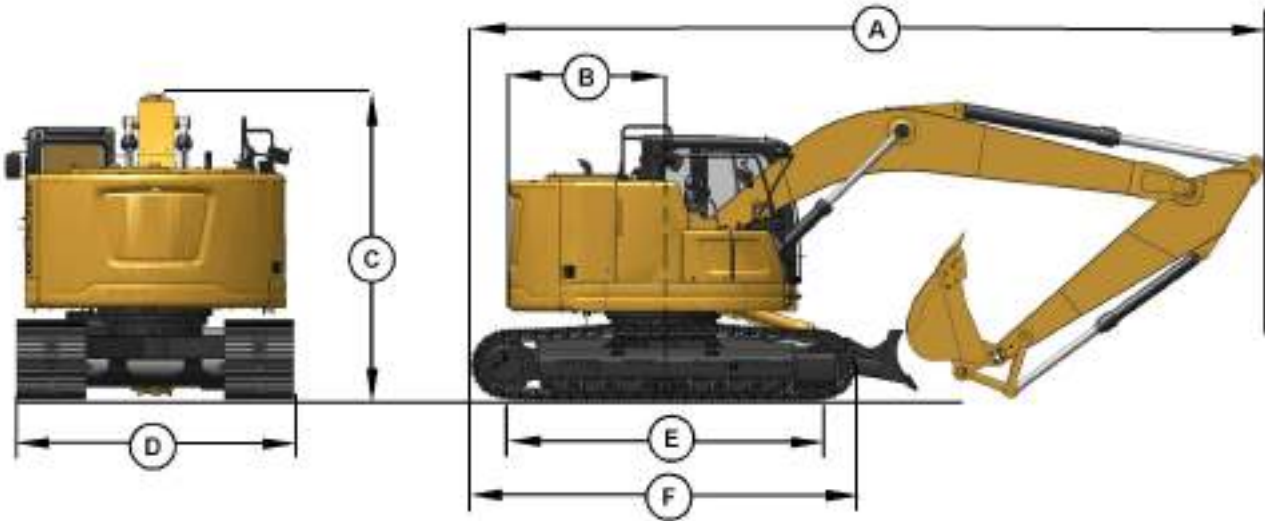


Illustration 67

g06580244

Table 4

325 Specifications		
Boom	Mass Boom 5200 mm (17 ft)	Short Reach Boom 4250 mm (13 ft 11 inch)
Stick	2400 mm (7 ft 10 in)	3175 mm (10 ft 5 inch)
Bucket	0.80 m³ (1.05 yd³)	0.90 m³ (1.17 yd³)
Track Shoe Width	600 mm (2 ft)	
Counterweight	4900 kg (10800 lb)	
Approximate Weight	24900 kg (54895 lb)	25200 kg (55556 lb)
Overall Length (A)	8539 mm (28 ft)	
Swing Radius (B)	1780 mm (5 ft 10 in)	
Overall Height(C)	3318 mm (10 ft 10 in)	
Overall Width (D) ⁽¹⁾	2987 mm (9 ft 8 in)	
Length to Centers of Rollers (E)	3646 mm (11 ft 11 in)	
Length of Track (F)	4455 mm (14 ft 7 in)	

⁽¹⁾ Including tack shoe width of 600 mm (2 ft)

Working Ranges

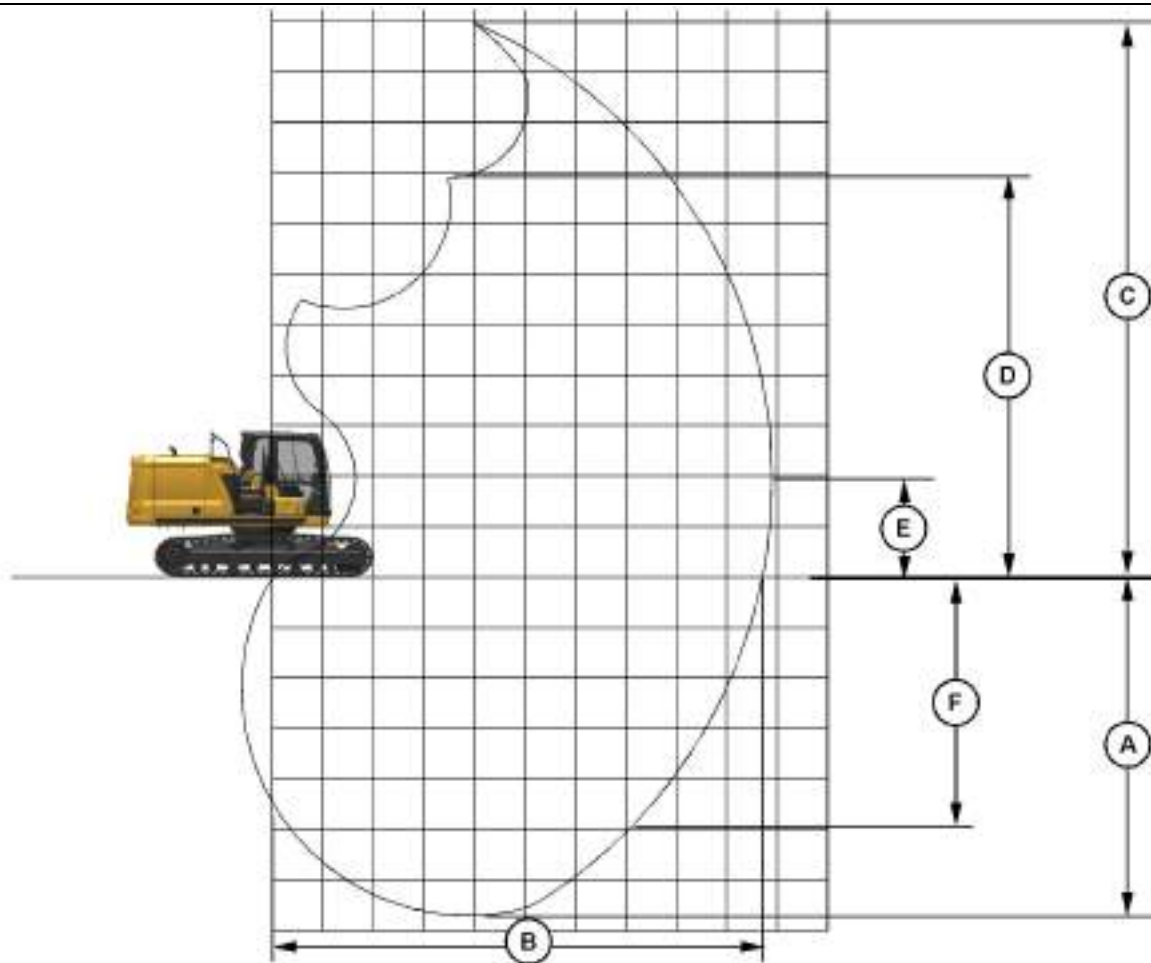


Illustration 68
Reach Boom

g06580965

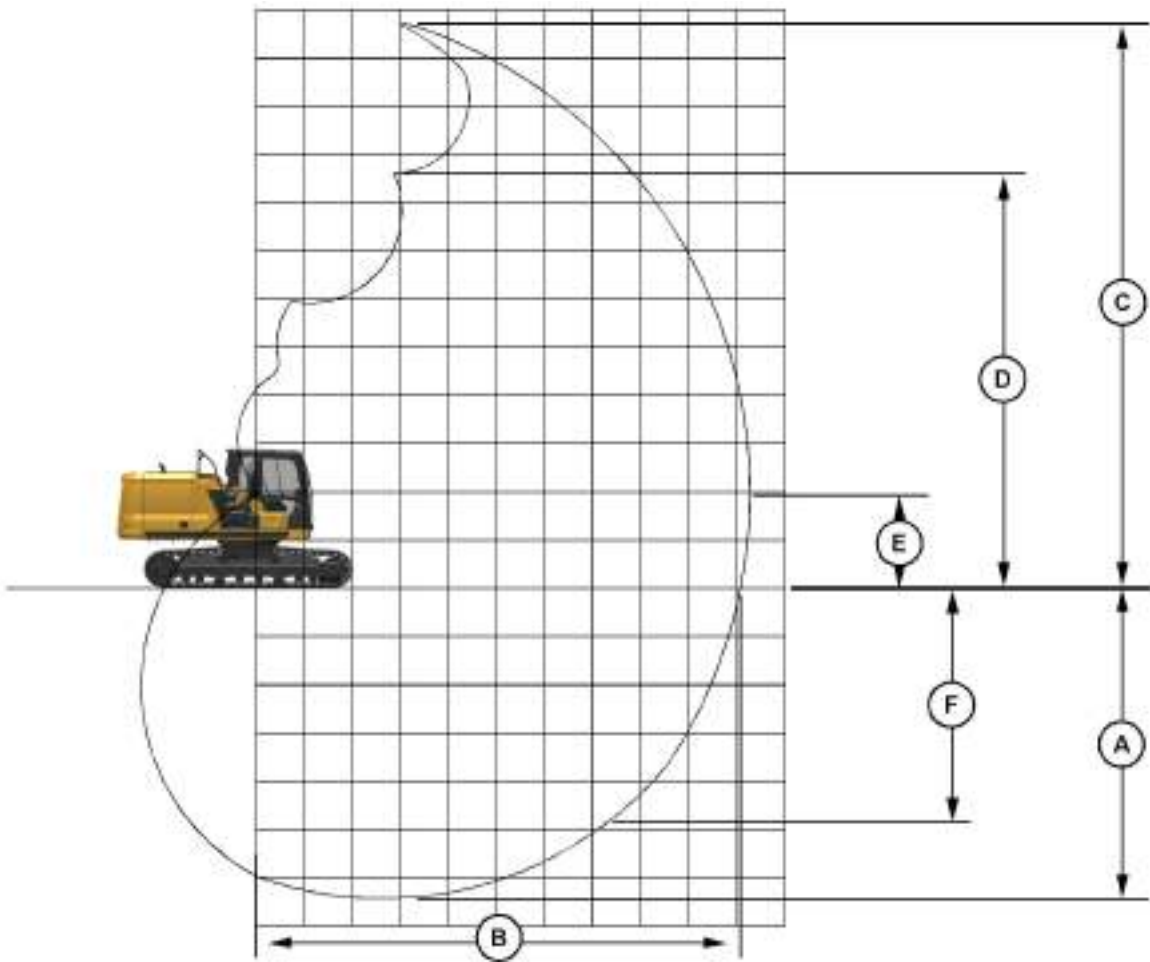


Illustration 69

g06580955

Variable Boom (VAB)

Table 5

325	
Boom	Mass Boom
Stick	Mass 2387 mm (7 ft 10 in)
Maximum Digging Depth (A)	5600 mm 18 ft 4 in
Maximum Reach at Ground Level (B)	8760 mm 28 ft 9 in
Maximum Cutting Height (C)	8910 mm 29 ft 2 in
Maximum Loading Height (D)	5940 mm 19 ft 6 in
Minimum Loading Height (E)	2940 mm 9 ft 8 in
Maximum Digging Depth (Vertical Wall) (F)	4820 mm 15 ft 10 in
Bucket Tip (Radius)	1577 mm 2 ft

i07956793

Boom/Stick/Bucket Combinations

SMCS Code: 6000; 6700

This machine can be equipped with a large variety of boom-stick-bucket combinations to meet the needs of various applications.

Buckets are grouped into families according to the capacity of the bucket. Generally, use a bucket with a smaller capacity when you are using a longer stick and/or a longer boom. Conversely, use a bucket with a larger capacity when you are using a shorter stick and/or a shorter boom. This rule ensures better machine stability and protection against structural machine damage.

A stick is designed to match only one specific family of buckets.

Note: The selection of a compatible boom-stick-bucket combination is a guide. Work tools, uneven ground conditions, soft ground conditions, or poor ground conditions have effects on machine performance. The operator is responsible for being aware of these effects.

Contact your Cat dealer for information on selecting the correct boom-stick-bucket combination.

The following tables show various compatible boom-stick-bucket combinations. Select an optimum combination according to the working conditions and according to the type of work that is being done.

Table 6

325 Excavator without a quick coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Utility Duty (UD)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(2)	(3)	(3)
	B	1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	758 kg (1672 lb)	100	(2)	(4)	(1)	(1)
General Duty Excavation (GDX)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(2)	(2)	(3)	(1)
		1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	792 kg (1747 lb)	100	(2)	(2)	(1)	(1)
		1400mm (56 inch)	1.14m ³ (1.49 yd ³)	858 kg (1891 lb)	100	(4)	(4)	(2)	(2)

(continued)

(Table 6, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
General Duty (GD) - EU	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	555 kg (1223 lb)	100	(2)	(2)	(2)	(2)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	626kg (1380 lb)	100	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	812kg (1789 lb)	100	(4)	(4)	(2)	(2)
		1300 mm (51 inch)	1.30m ³ (1.70yd ³)	835kg (1841 lb)	100	(5)	(5)	(4)	(4)
		1400 mm (55 inch)	1.43m ³ (1.87yd ³)	879kg (1937 lb)	100	(5)	(5)	(4)	(4)
General Duty (GD) - UK / ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	550kg (1212 lb)	100	(3)	(3)	(3)	(3)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	621kg (1368 lb)	100	(3)	(3)	(3)	(3)
		1000 mm (39 inch)	0.93m ³ (1.22 yd ³)	717kg (1580 lb)	100	(2)	(2)	(3)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	737kg (1624 lb)	100	(2)	(2)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	807kg (1778 lb)	100	(4)	(4)	(2)	(2)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	874kg (1926 lb)	100	(5)	(5)	(4)	(4)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	914kg (2014 lb)	100	(5)	(6)	(5) (5)	(5)
General Duty (GD)	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	620kg (1366 lb)	100	(3)	(3)	(3)	(3)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	717kg (1580 lb)	100	(3)	(1)	(3)	(3)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	793kg (1747 lb)	100	(2)	(2)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	848kg (1869 lb)	100	(4)	(5)	(2)	(2)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	924kg (2038 lb)	100	(5)	(5)	(4)	(4)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1002kg (2210 lb)	100	(6)	(6)	(5)	(5)
General Duty (GDC) - Wide Tip	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	617kg (1360 lb)	100	(3)	(3)	(3)	(3)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 6, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	715kg (1576 lb)	100	(3)	(1)	(3)	(3)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	791kg (1743 lb)	100	(2)	(2)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	861kg (1899 lb)	100	(4)	(5)	(2)	(2)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	938kg (2069 lb)	100	(5)	(5)	(4)	(4)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1016kg (2241 lb)	100	(6)	(6)	(5)	(5)
General Duty (GD) - SEA	B	1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(2)	(2)	(3)	(1)
		1250 mm (50 inch)	1.00m ³ (1.31 yd ³)	820kg (1808 lb)	100	(2)	(4)	(1)	(1)
General Duty Excavation (GDX) - CJL	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	686kg (1511 lb)	100	(3)	(1)	(3)	(3)
		1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	719kg (1584 lb)	100	(1)	(2)	(3)	(3)
		1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(2)	(4)	(1)	(1)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46m ³ (0.60 yd ³)	647kg (1426 lb)	100	(3)	(3)	(3)	(3)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	752kg (1658 lb)	100	(3)	(3)	(3)	(3)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	835kg (1841 lb)	100	(1)	(2)	(3)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1967 lb)	100	(4)	(4)	(1)	(2)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	855kg (1885 lb)	100	(2)	(4)	(1)	(2)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	917kg (2022 lb)	100	(4)	(5)	(2)	(4)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	928kg (2046 lb)	100	(4)	(5)	(2)	(4)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	975kg (2150 lb)	100	(5)	(5)	(4)	(4)
		1300 mm (52 inch)	1.30m ³ (1.70 yd ³)	974kg (2148 lb)	100	(5)	(5)	(4)	(4)

(continued)

(Table 6, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1350 mm (54 inch)	1.38m ³ (1.81yd ³)	1060kg (2336 lb)	100	(5)	(6)	(4)	(5)
Heavy Duty Vedge (HDV)	B	1350 mm (54 inch)	1.40m ³ (1.83yd ³)	1025kg (2260 lb)	100	(5)	(6)	(4)	(5)
Heavy Duty Excavation (HDX)	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	796kg (1755 lb)	100	(1)	(1)	(3)	(3)
		1050 mm (41 inch)	0.90m ³ (1.17 yd ³)	835kg (1841 lb)	100	(2)	(2)	(3)	(1)
Heavy Duty Excavation (HDX) - Skeleton	B	1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	855kg (1885 lb)	100	(2)	(2)	(3)	(1)
Heavy Duty (HD) - CCL	B	1050 mm (41 inch)	1.00m ³ (1.31 yd ³)	884kg (1948 lb)	100	(4)	(4)	(1)	(2)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	955kg (2105 lb)	100	(5)	(5)	(2)	(4)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1018kg (2244 lb)	100	(5)	(6)	(4)	(5)
Heavy Duty (HD) - SEA	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	901kg (1987 lb)	100	(4)	(4)	(1)	(2)
Heavy Duty (HD) - ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(3)	(3)	(3)	(3)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	737kg (1625 lb)	100	(3)	(3)	(3)	(3)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	818kg (1841 lb)	100	(1)	(2)	(3)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(4)	(4)	(1)	(2)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(4)	(5)	(2)	(4)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1036kg (2284 lb)	100	(5)	(6)	(4)	(5)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	1094kg (2412 lb)	100	(6)	(6)	(5)	(5)
Heavy Duty Power (HDP)	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(2)	(4)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(4)	(5)	(2)	(4)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 6, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Severe Duty (SD)	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	683kg (1506 lb)	90	(3)	(3)	(3)	(3)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	795kg (1753 lb)	90	(3)	(3)	(3)	(3)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	885kg (1950 lb)	90	(1)	(1)	(3)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	948kg (2091 lb)	90	(2)	(4)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1038kg (2089 lb)	90	(4)	(5)	(2)	(4)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1011kg (2229 lb)	90	(4)	(5)	(2)	(4)
Severe Duty (SD) - CCL	B	1100mm (43 inch)	1.00m ³ (1.31 yd ³)	965kg (2128 lb)	90	(2)	(4)	(1)	(1)
		1250 mm (49 inch)	1.00m ³ (1.56 yd ³)	1063kg (2343 lb)	90	(4)	(5)	(2)	(4)
Severe Duty Power (SDP)	B	900 mm (36 inch)	0.79m ³ (1.03 yd ³)	853kg (1881 lb)	90	(3)	(1)	(3)	(3)
Clean Up (CU)		1800 mm (72 inch)	1.60m ³ (2.09 yd ³)	979kg (2157 lb)	100	(6)	(6)	(5)	(5)
		2000 mm (78 inch)	1.76m ³ (2.31 yd ³)	1045kg (2303 lb)	100	(6)	(6)	(5)	(6)
Ditch Cleaning (DC)	B	1500 mm (60 inch)	1.01m ³ (1.32 yd ³)	651kg (1436 lb)	100	(2)	(2)	(1)	(1)
		1800 mm (72 inch)	1.24m ³ (1.62 yd ³)	739kg (1630 lb)	100	(4)	(4)	(2)	(2)
		2000 mm (78 inch)	1.22m ³ (1.60 yd ³)	869kg (1916 lb)	100	(4)	(5)	(2)	(4)
Ditch Cleaning Tilt (DCT)	B	1500 mm (60 inch)	0.90m ³ (1.18 yd ³)	948kg (2090 lb)	100	(2)	(4)	(1)	(1)
		1800 mm (72 inch)	1.11m ³ (1.45 yd ³)	1063kg (2344 lb)	100	(5)	(5)	(2)	(4)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1105kg (2437 lb)	100	(6)	(6)	(5)	(5)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1015kg (2238 lb)	100	(5)	(6)	(4)	(5)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1096kg (2417 lb)	100	(5)	(5)	(4)	(4)

(continued)

(Table 6, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1132kg (2496 lb)	100	(4)	(6)	(4)	(4)
Tamping	B	2200 mm (86 inch)	0.72m ³ (0.94 yd ³)	868kg (1913 lb)	100	(1)	(1)	(3)	(3)
		2200 mm (86 inch)	0.90m ³ (1.18 yd ³)	891kg (1965 lb)	100	(2)	(4)	(1)	(1)

(1) 1800 kg/m³ (3000 lb/yd³) is the maximum density of material.(2) 1500 kg/m³ (2500 lb/yd³) is the maximum density of material.(3) 2100 kg/m³ (3500 lb/yd³) is the maximum density of material.(4) 1200 kg/m³ (2000 lb/yd³) is the maximum density of material.(5) 900 kg/m³ (1500 lb/yd³) is the maximum density of material.

(6) Not Recommended

Table 7

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Utility Duty (UD)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)	(1)
	B	1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	758 kg (1672 lb)	100	(1)	(1)	(1)	(1)	(1)
General Duty Excavation (GDX)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)	(1)
		1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	792 kg (1747 lb)	100	(1)	(1)	(1)	(1)	(1)
		1400mm (56 inch)	1.14m ³ (1.49 yd ³)	858 kg (1891 lb)	100	(1)	(2)	(1)	(1)	(2)
General Duty (GD) - EU	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	555 kg (1223 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	626kg (1380 lb)	100	(1)	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 7, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	812kg (1789 lb)	100	(1)	(2)	(1)	(2)	(2)
		1300 mm (51 inch)	1.30m ³ (1.70 yd ³)	835kg (1841 lb)	100	(2)	(2)	(2)	(2)	(3)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	879kg (1937 lb)	100	(3)	(3)	(3)	(3)	(4)
General Duty (GD) - UK / ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	550kg (1212 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	621kg (1368 lb)	100	(1)	(1)	(1)	(1)	(1)
		1000 mm (39 inch)	0.93m ³ (1.22 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	737kg (1624 lb)	100	(1)	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	807kg (1778 lb)	100	(1)	(2)	(1)	(2)	(2)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	874kg (1926 lb)	100	(3)	(3)	(3)	(3)	(4)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	914kg (2014 lb)	100	(3)	(4)	(3)	(4)	(4)
General Duty (GD)	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	620kg (1366 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	793kg (1747 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	848kg (1869 lb)	100	(1)	(2)	(1)	(2)	(2)

(continued)

(Table 7, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	924kg (2038 lb)	100	(3)	(3)	(3)	(3)	(4)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1002kg (2210 lb)	100	(4)	(4)	(4)	(4)	(4)
General Duty (GDC) - Wide Tip	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	617kg (1360 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	715kg (1576 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	791kg (1743 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	861kg (1899 lb)	100	(1)	(2)	(1)	(2)	(3)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	938kg (2069 lb)	100	(3)	(3)	(3)	(3)	(4)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1016kg (2241 lb)	100	(4)	(4)	(4)	(4)	(4)
General Duty (GD) - SEA	B	1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)	(1)
		1250 mm (50 inch)	1.00m ³ (1.31 yd ³)	820kg (1808 lb)	100	(1)	(1)	(1)	(1)	(1)
General Duty Excavation (GDX) - CJL	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	686kg (1511 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	719kg (1584 lb)	100	(1)	(1)	(1)	(1)	(1)
		1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)	(1)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46m ³ (0.60 yd ³)	647kg (1426 lb)	100	(1)	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 7, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	752kg (1658 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1967 lb)	100	(1)	(1)	(1)	(1)	(2)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)	(2)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	917kg (2022 lb)	100	(2)	(2)	(2)	(2)	(3)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	928kg (2046 lb)	100	(2)	(2)	(2)	(2)	(3)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	975kg (2150 lb)	100	(2)	(2)	(2)	(2)	(3)
		1300 mm (52 inch)	1.30m ³ (1.70 yd ³)	974kg (2148 lb)	100	(3)	(3)	(2)	(3)	(3)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1060kg (2336 lb)	100	(3)	(3)	(3)	(3)	(4)
Heavy Duty V edge (HDV)	B	1350 mm (54 inch)	1.40m ³ (1.83 yd ³)	1025kg (2260 lb)	100	(3)	(3)	(3)	(3)	(4)
Heavy Duty Excavation (HDX)	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	796kg (1755 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.17 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)	(1)
Heavy Duty Excavation (HDX) - Skeleton	B	1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)	(1)
Heavy Duty (HD) - CCL	B	1050 mm (41 inch)	1.00m ³ (1.31 yd ³)	884kg (1948 lb)	100	(1)	(1)	(1)	(1)	(2)

(continued)

(Table 7, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	955kg (2105 lb)	100	(2)	(2)	(2)	(2)	(3)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1018kg (2244 lb)	100	(3)	(3)	(3)	(3)	(4)
Heavy Duty (HD) - SEA	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	901kg (1987 lb)	100	(1)	(1)	(1)	(1)	(2)
Heavy Duty (HD) - ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	737kg (1625 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	818kg (1841 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(1)	(1)	(1)	(1)	(2)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(2)	(2)	(2)	(2)	(3)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1036kg (2284 lb)	100	(3)	(3)	(3)	(3)	(4)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	1094kg (2412 lb)	100	(4)	(4)	(4)	(4)	(5)
Heavy Duty Power (HDP)	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(1)	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(2)	(2)	(2)	(2)	(3)
Severe Duty (SD)	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	683kg (1506 lb)	90	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	795kg (1753 lb)	90	(1)	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 7, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	885kg (1950 lb)	90	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	948kg (2091 lb)	90	(1)	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1038kg (2089 lb)	90	(1)	(2)	(1)	(2)	(3)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1011kg (2229 lb)	90	(1)	(2)	(1)	(2)	(3)
Severe Duty (SD) - CCL	B	1100mm (43 inch)	1.00m ³ (1.31 yd ³)	965kg (2128 lb)	90	(1)	(1)	(1)	(1)	(1)
		1250 mm (49 inch)	1.00m ³ (1.56 yd ³)	1063kg (2343 lb)	90	(2)	(2)	(1)	(2)	(3)
Severe Duty Power (SDP)	B	900 mm (36 inch)	0.79m ³ (1.03 yd ³)	853kg (1881 lb)	90	(1)	(1)	(1)	(1)	(1)
Clean Up (CU)		1800 mm (72 inch)	1.60m ³ (2.09 yd ³)	979kg (2157 lb)	100	(4)	(4)	(4)	(4)	(4)
		2000 mm (78 inch)	1.76m ³ (2.31 yd ³)	1045kg (2303 lb)	100	(4)	(4)	(4)	(4)	(5)
Ditch Cleaning (DC)	B	1500 mm (60 inch)	1.01m ³ (1.32 yd ³)	651kg (1436 lb)	100	(1)	(1)	(1)	(1)	(1)
		1800 mm (72 inch)	1.24m ³ (1.62 yd ³)	739kg (1630 lb)	100	(2)	(2)	(1)	(2)	(3)
		2000 mm (78 inch)	1.22m ³ (1.60 yd ³)	869kg (1916 lb)	100	(2)	(2)	(2)	(2)	(3)
Ditch Cleaning Tilt (DCT)	B	1500 mm (60 inch)	0.90m ³ (1.18 yd ³)	948kg (2090 lb)	100	(1)	(1)	(1)	(1)	(1)

(continued)

(Table 7, contd)

325 Excavator without a quick coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1800 mm (72 inch)	1.11m ³ (1.45 yd ³)	1063kg (2344 lb)	100	(2)	(2)	(2)	(2)	(3)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1105kg (2437 lb)	100	(3)	(4)	(3)	(3)	(4)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1015kg (2238 lb)	100	(3)	(3)	(3)	(3)	(4)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1096kg (2417 lb)	100	(3)	(3)	(2)	(3)	(4)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1132kg (2496 lb)	100	(3)	(3)	(2)	(3)	(4)
Tamping	B	2200 mm (86 inch)	0.72m ³ (0.94 yd ³)	868kg (1913 lb)	100	(1)	(1)	(1)	(1)	(1)
		2200 mm (86 inch)	0.90m ³ (1.18 yd ³)	891kg (1965 lb)	100	(1)	(1)	(1)	(1)	(1)

(1) 2100 kg/m³ (3500 lb/yd³) is the maximum density of material.(2) 1800 kg/m³ (3000 lb/yd³) is the maximum density of material.(3) 1500 kg/m³ 2500 lb/yd³) is the maximum density of material.(4) 1200 kg/m³ 2000 lb/yd³) is the maximum density of material.(5) 900 kg/m³ 1500 lb/yd³) is the maximum density of material.

Table 8

325 Excavator without a quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
Utility Duty (UD)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)
	B	1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	758 kg (1672 lb)	100	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 8, contd)

325 Excavator without a quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
General Duty Excavation (GDX)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)
		1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	792 kg (1747 lb)	100	(1)	(1)	(1)	(1)
		1400mm (56 inch)	1.14m ³ (1.49 yd ³)	858 kg (1891 lb)	100	(1)	(1)	(1)	(1)
General Duty (GD) - EU	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	555 kg (1223 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	626kg (1380 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	812kg (1789 lb)	100	(1)	(1)	(1)	(1)
		1300 mm (51 inch)	1.30m ³ (1.70yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)
		1400 mm (55 inch)	1.43m ³ (1.87yd ³)	879kg (1937 lb)	100	(1)	(2)	(1)	(1)
General Duty (GD) - UK / ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	550kg (1212 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	621kg (1368 lb)	100	(1)	(1)	(1)	(1)
		1000 mm (39 inch)	0.93m ³ (1.22 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	737kg (1624 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	807kg (1778 lb)	100	(1)	(1)	(1)	(1)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	874kg (1926 lb)	100	(1)	(2)	(1)	(1)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	914kg (2014 lb)	100	(2)	(2)	(2)	(2)
General Duty (GD)	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	620kg (1366 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	793kg (1747 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	848kg (1869 lb)	100	(1)	(1)	(1)	(1)

(continued)

(Table 8, contd)

325 Excavator without a quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	924kg (2038 lb)	100	(1)	(1)	(1)	(1)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1002kg (2210 lb)	100	(2)	(3)	(2)	(2)
General Duty (GDC) - Wide Tip	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	617kg (1360 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	715kg (1576 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	791kg (1743 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	861kg (1899 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	938kg (2069 lb)	100	(1)	(1)	(1)	(1)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1016kg (2241 lb)	100	(2)	(3)	(2)	(3)
General Duty (GD) - SEA	B	1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)
		1250 mm (50 inch)	1.00m ³ (1.31 yd ³)	820kg (1808 lb)	100	(1)	(1)	(1)	(1)
General Duty Excavation (GDX) - CJL	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	686kg (1511 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	719kg (1584 lb)	100	(1)	(1)	(1)	(1)
		1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46m ³ (0.60 yd ³)	647kg (1426 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	752kg (1658 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1967 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	917kg (2022 lb)	100	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 8, contd)

325 Excavator without a quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	928kg (2046lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	975kg (2150 lb)	100	(1)	(1)	(1)	(1)
		1300 mm (52 inch)	1.30m ³ (1.70 yd ³)	974kg (2148 lb)	100	(1)	(1)	(1)	(1)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1060kg (2336 lb)	100	(2)	(2)	(1)	(2)
Heavy Duty V edge (HDV)	B	1350 mm (54 inch)	1.40m ³ (1.83 yd ³)	1025kg (2260 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty Excavation (HDX)	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	796kg (1755 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.17 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty Excavation (HDX) - Skeleton	B	1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD) - CCL	B	1050 mm (41 inch)	1.00m ³ (1.31 yd ³)	884kg (1948 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	955kg (2105 lb)	100	(1)	(1)	(1)	(1)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1018kg (2244 lb)	100	(1)	(2)	(1)	(2)
Heavy Duty (HD) - SEA	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	901kg (1987 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD) - ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	737kg (1625 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	818kg (1841 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(1)	(1)	(1)	(1)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1036kg (2284 lb)	100	(2)	(2)	(1)	(2)

(continued)

(Table 8, contd)

325 Excavator without a quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	1094kg (2412 lb)	100	(3)	(3)	(2)	(3)
Heavy Duty Power (HDP)	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(1)	(1)	(1)	(1)
Severe Duty (SD)	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	683kg (1506 lb)	90	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	795kg (1753 lb)	90	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	885kg (1950 lb)	90	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	948kg (2091 lb)	90	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1038kg (2089 lb)	90	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1011kg (2229 lb)	90	(1)	(1)	(1)	(1)
Severe Duty (SD) - CCL	B	1100mm (43 inch)	1.00m ³ (1.31 yd ³)	965kg (2128 lb)	90	(1)	(1)	(1)	(1)
		1250 mm (49 inch)	1.00m ³ (1.56 yd ³)	1063kg (2343 lb)	90	(1)	(1)	(1)	(1)
Severe Duty Power (SDP)	B	900 mm (36 inch)	0.79m ³ (1.03 yd ³)	853kg (1881 lb)	90	(1)	(1)	(1)	(1)
Clean Up (CU)		1800 mm (72 inch)	1.60m ³ (2.09 yd ³)	979kg (2157 lb)	100	(2)	(3)	(2)	(2)
		2000 mm (78 inch)	1.76m ³ (2.31 yd ³)	1045kg (2303 lb)	100	(3)	(3)	(3)	(3)
Ditch Cleaning (DC)	B	1500 mm (60 inch)	1.01m ³ (1.32 yd ³)	651kg (1436 lb)	100	(1)	(1)	(1)	(1)
		1800 mm (72 inch)	1.24m ³ (1.62 yd ³)	739kg (1630 lb)	100	(1)	(1)	(1)	(1)
		2000 mm (78 inch)	1.22m ³ (1.60 yd ³)	869kg (1916 lb)	100	(1)	(1)	(1)	(1)
Ditch Cleaning Tilt (DCT)	B	1500 mm (60 inch)	0.90m ³ (1.18 yd ³)	948kg (2090 lb)	100	(1)	(1)	(1)	(1)
		1800 mm (72 inch)	1.11m ³ (1.45 yd ³)	1063kg (2344 lb)	100	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 8, contd)

325 Excavator without a quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1105kg (2437 lb)	100	(2)	(2)	(2)	(2)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1015kg (2238 lb)	100	(2)	(2)	(1)	(2)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1096kg (2417 lb)	100	(1)	(1)	(1)	(1)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1132kg (2496 lb)	100	(1)	(1)	(1)	(1)
Tamping	B	2200 mm (86 inch)	0.72m ³ (0.94 yd ³)	868kg (1913 lb)	100	(1)	(1)	(1)	(1)
		2200 mm (86 inch)	0.90m ³ (1.18 yd ³)	891kg (1965 lb)	100	(1)	(1)	(1)	(1)

(1) 2100 kg/m³3500 lb/yd³ is the maximum density of material.

(2) 1800 kg/m³3000 lb/yd³ is the maximum density of material.

(3) 1500 kg/m³2500 lb/yd³ is the maximum density of material.

Table 9

325 Excavator with Pin Grabber Coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Utility Duty (UD)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(2)	(3)	(3)
	B	1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	758 kg (1672 lb)	100	(2)	(2)	(3)	(4)
General Duty Excavation (GDX)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	758 kg (1671 lb)	100	(4)	(2)	(3)	(3)
		1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	792 kg (1747 lb)	100	(2)	(2)	(3)	(4)
		1400mm (56 inch)	1.14m ³ (1.49 yd ³)	858 kg (1891 lb)	100	(2)	(4)	(4)	(2)
General Duty (GD) - EU	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	555 kg (1223 lb)	100	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	626kg (1380 lb)	100	(6)	(6)	(5)	(5)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	812kg (1789 lb)	100	(2)	(4)	(4)	(2)

(continued)

(Table 9, contd)

325 Excavator with Pin Grabber Coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1300 mm (51 inch)	1.30m ³ (1.70yd ³)	835kg (1841 lb)	100	(4)	(4)	(2)	(2)
		1400 mm (55 inch)	1.43m ³ (1.87yd ³)	879kg (1937 lb)	100	(4)	(4)	(2)	(2)
General Duty (GD) - UK / ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	550kg (1212 lb)	100	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	621kg (1368 lb)	100	(6)	(6)	(5)	(5)
		1000 mm (39 inch)	0.93m ³ (1.22 yd ³)	717kg (1580 lb)	100	(4)	(2)	(3)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	737kg (1624 lb)	100	(2)	(2)	(3)	(3)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	807kg (1778 lb)	100	(2)	(4)	(4)	(2)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	874kg (1926 lb)	100	(4)	(4)	(4)	(4)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	914kg (2014 lb)	100	(4)	(4)	(4)	(4)
General Duty (GD)	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	620kg (1366 lb)	100	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	717kg (1580 lb)	100	(3)	(4)	(5)	(6)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	793kg (1747 lb)	100	(2)	(2)	(3)	(4)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	848kg (1869 lb)	100	(2)	(4)	(4)	(2)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	924kg (2038 lb)	100	(4)	(4)	(2)	(2)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1002kg (2210 lb)	100	(4)	(4)	(4)	(4)
General Duty (GDC) - Wide Tip	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	617kg (1360 lb)	100	(5)	(4)	(4)	(4)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	715kg (1576 lb)	100	(3)	(4)	(4)	(6)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	791kg (1743 lb)	100	(2)	(2)	(3)	(4)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	861kg (1899 lb)	100	(2)	(4)	(4)	(2)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 9, contd)

325 Excavator with Pin Grabber Coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	938kg (2069 lb)	100	(4)	(4)	(2)	(2)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1016kg (2241 lb)	100	(4)	(4)	(4)	(4)
General Duty (GD) - SEA	B	1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(4)	(2)	(6)	(6)
		1250 mm (50 inch)	1.00m ³ (1.31 yd ³)	820kg (1808 lb)	100	(2)	(2)	(4)	(4)
General Duty Excavation (GDx) - CJL	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	686kg (1511 lb)	100	(3)	(4)	(6)	(6)
		1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	719kg (1584 lb)	100	(4)	(4)	(3)	(3)
		1150 mm (46 inch)	1.00m ³ (1.31 yd ³)	751kg (1655 lb)	100	(2)	(2)	(3)	(3)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46m ³ (0.60 yd ³)	647kg (1426 lb)	100	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	752kg (1658 lb)	100	(6)	(3)	(5)	(5)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	835kg (1841 lb)	100	(4)	(2)	(6)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1967 lb)	100	(2)	(4)	(4)	(4)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	855kg (1885 lb)	100	(2)	(2)	(4)	(4)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	917kg (2022 lb)	100	(4)	(4)	(2)	(2)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	928kg (2046 lb)	100	(4)	(4)	(2)	(2)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	975kg (2150 lb)	100	(4)	(4)	(2)	(2)
		1300 mm (52 inch)	1.30m ³ (1.70 yd ³)	974kg (2148 lb)	100	(4)	(4)	(2)	(2)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1060kg (2336 lb)	100	(4)	(4)	(4)	(4)
Heavy Duty V edge (HDV)	B	1350 mm (54 inch)	1.40m ³ (1.83 yd ³)	1025kg (2260 lb)	100	(4)	(4)	(2)	(4)
Heavy Duty Excavation (HDX)	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	796kg (1755 lb)	100	(4)	(4)	(6)	(3)

(continued)

(Table 9, contd)

325 Excavator with Pin Grabber Coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1050 mm (41 inch)	0.90m ³ (1.17 yd ³)	835kg (1841 lb)	100	(4)	(2)	(3)	(3)
Heavy Duty Excavation (HDX) - Skeleton	B	1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	855kg (1885 lb)	100	(2)	(2)	(3)	(4)
Heavy Duty (HD) - CCL	B	1050 mm (41 inch)	1.00m ³ (1.31 yd ³)	884kg (1948 lb)	100	(2)	(2)	(4)	(4)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	955kg (2105 lb)	100	(4)	(4)	(2)	(2)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1018kg (2244 lb)	100	(4)	(4)	(2)	(4)
Heavy Duty (HD) - SEA	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	901kg (1987 lb)	100	(2)	(4)	(4)	(4)
Heavy Duty (HD) - ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	737kg (1625 lb)	100	(6)	(3)	(5)	(5)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	818kg (1841 lb)	100	(4)	(4)	(6)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	872kg (1923 lb)	100	(2)	(2)	(4)	(4)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(4)	(4)	(2)	(2)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1036kg (2284 lb)	100	(4)	(4)	(2)	(4)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	1094kg (2412 lb)	100	(4)	(4)	(4)	(4)
Heavy Duty Power (HDP)	B	1050 mm (42 inch)	0.96m ³ (1.26 yd ³)	898kg (1980 lb)	100	(2)	(2)	(4)	(4)
		1200 mm (49 inch)	1.14m ³ (1.49 yd ³)	983kg (2167 lb)	100	(4)	(4)	(2)	(2)
Heavy Duty (HD) - Pin Grabber Power		600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.60m ³ (0.79 yd ³)	787kg (1735 lb)	100	(6)	(3)	(5)	(5)
		900 mm (36 inch)	0.76m ³ (1.00 yd ³)	876kg (1931 lb)	100	(4)	(4)	(6)	(3)
		1050 mm (42 inch)	0.93m ³ (1.22 yd ³)	940kg (2072 lb)	100	(2)	(2)	(4)	(4)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 9, contd)

325 Excavator with Pin Grabber Coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1200 mm (49 inch)	1.11m ³ (1.45 yd ³)	1031kg (2272 lb)	100	(4)	(4)	(2)	(2)
		1350mm (54 inch)	1.28m ³ (1.67 yd ³)	1122kg (2474 lb)	100	(4)	(4)	(2)	(4)
Severe Duty (SD)	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	683kg (1506 lb)	90	(5)	(5)	(5)	(5)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	795kg (1753 lb)	90	(6)	(3)	(5)	(5)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	885kg (1950 lb)	90	(4)	(4)	(6)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	948kg (2091 lb)	90	(2)	(2)	(3)	(4)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1038kg (2089 lb)	90	(4)	(4)	(2)	(2)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1011kg (2229 lb)	90	(4)	(4)	(2)	(2)
Severe Duty (SD) - CCL	B	1100mm (43 inch)	1.00m ³ (1.31 yd ³)	965kg (2128 lb)	90	(2)	(2)	(4)	(4)
		1250 mm (49 inch)	1.00m ³ (1.56 yd ³)	1063kg (2343 lb)	90	(4)	(4)	(2)	(2)
Severe Duty Power (SDP)	B	900 mm (36 inch)	0.79m ³ (1.03 yd ³)	853kg (1881 lb)	90	(3)	(4)	(6)	(6)
Clean Up (CU)		1800 mm (72 inch)	1.60m ³ (2.09 yd ³)	979kg (2157 lb)	100	(4)	(4)	(4)	(4)
		2000 mm (78 inch)	1.76m ³ (2.31 yd ³)	1045kg (2303 lb)	100	(4)	(4)	(4)	(4)
Ditch Cleaning (DC)	B	1500 mm (60 inch)	1.01m ³ (1.32 yd ³)	651kg (1436 lb)	100	(4)	(2)	(3)	(3)
		1800 mm (72 inch)	1.24m ³ (1.62 yd ³)	739kg (1630 lb)	100	(2)	(4)	(4)	(2)
		2000 mm (78 inch)	1.22m ³ (1.60 yd ³)	869kg (1916 lb)	100	(4)	(4)	(2)	(4)
Ditch Cleaning Tilt (DCT)	B	1500 mm (60 inch)	0.90m ³ (1.18 yd ³)	948kg (2090 lb)	100	(2)	(2)	(3)	(4)
		1800 mm (72 inch)	1.11m ³ (1.45 yd ³)	1063kg (2344 lb)	100	(4)	(4)	(2)	(2)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1105kg (2437 lb)	100	(4)	(4)	(4)	(4)

(continued)

(Table 9, contd)

325 Excavator with Pin Grabber Coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1015kg (2238 lb)	100				
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1096kg (2417 lb)	100	(4)	(4)	(2)	(4)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1132kg (2496 lb)	100	(4)	(4)	(2)	(4)
Tamping	B	2200 mm (86 inch)	0.72m ³ (0.94 yd ³)	868kg (1913 lb)	100	(4)	(4)	(6)	(6)
		2200 mm (86 inch)	0.90m ³ (1.18 yd ³)	891kg (1965 lb)	100	(2)	(2)	(3)	(4)

(1) 1200 kg/m³ (2000 lb/yd³) is the maximum density of material.(2) 900 kg/m³ (1500 lb/yd³) is the maximum density of material.(3) 1500 kg/m³ (2500 lb/yd³) is the maximum density of material.

(4) Not Recommended

(5) 2100 kg/m³ (3500 lb/yd³) is the maximum density of material.(6) 1800 kg/m³ (3000 lb/yd³) is the maximum density of material.

Table 10

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Utility Duty (UD)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)	(2)
	B	1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	758 kg (1672 lb)	100	(1)		(1)	(2)	(3)
General Duty Excavation (GDX)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)	(2)
		1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	792 kg (1747 lb)	100	(2)	(2)	(1)	(2)	(3)
		1400mm (56 inch)	1.14m ³ (1.49 yd ³)	858 kg (1891 lb)	100	(3)	(3)	(2)	(3)	(4)
General Duty (GD) - EU	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	555 kg (1223 lb)	100	(1)	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 10, contd)

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	626kg (1380 lb)	100	(1)	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	812kg (1789 lb)	100	(3)	(3)	(3)	(3)	(4)
		1300 mm (51 inch)	1.30m ³ (1.70yd ³)	835kg (1841 lb)	100	(3)	(4)	(3)	(3)	(4)
		1400 mm (55 inch)	1.43m ³ (1.87yd ³)	879kg (1937 lb)	100	(4)	(4)	(4)	(4)	(5)
General Duty (GD) - UK / ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	550kg (1212 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	621kg (1368 lb)	100	(1)	(1)	(1)	(1)	(1)
		1000 mm (39 inch)	0.93m ³ (1.22 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)	(2)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	737kg (1624 lb)	100	(1)	(2)	(1)	(2)	(3)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	807kg (1778 lb)	100	(3)	(3)	(3)	(3)	(4)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	874kg (1926 lb)	100	(4)	(4)	(4)	(4)	(5)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	914kg (2014 lb)	100	(4)	(5)	(4)	(4)	(5)
General Duty (GD)	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	620kg (1366 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	793kg (1747 lb)	100	(1)	(2)	(1)	(1)	(2)

(continued)

(Table 10, contd)

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	848kg (1869 lb)	100	(3)	(3)	(3)	(3)	(4)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	924kg (2038 lb)	100	(4)	(4)	(4)	(4)	(5)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1002kg (2210 lb)	100	(5)	(5)	(5)	(5)	(5)
General Duty (GDC) - Wide Tip	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	617kg (1360 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	715kg (1576 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	791kg (1743 lb)	100	(1)	(2)	(1)	(1)	(2)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	861kg (1899 lb)	100	(3)	(3)	(3)	(3)	(4)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	938kg (2069 lb)	100	(4)	(4)	(4)	(4)	(5)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1016kg (2241 lb)	100	(5)	(5)	(5)	(5)	(5)
General Duty (GD) - SEA	B	1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)	(2)
		1250 mm (50 inch)	1.00m ³ (1.31 yd ³)	820kg (1808 lb)	100	(2)	(2)	(1)	(2)	(3)
General Duty Excavation (GDX) - CJL	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	686kg (1511 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	719kg (1584 lb)	100	(1)	(1)	(1)	(1)	(2)
		1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)	(3)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 10, contd)

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Heavy Duty (HD)	B	600 mm (24 inch)	0.46m ³ (0.60 yd ³)	647kg (1426 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	752kg (1658 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)	(2)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1967 lb)	100	(2)	(2)	(2)	(2)	(3)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	855kg (1885 lb)	100	(2)	(2)	(2)	(2)	(3)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	917kg (2022 lb)	100	(3)	(3)	(3)	(3)	(4)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	928kg (2046 lb)	100	(3)	(3)	(3)	(3)	(4)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	975kg (2150 lb)	100	(3)	(3)	(3)	(3)	(4)
		1300 mm (52 inch)	1.30m ³ (1.70 yd ³)	974kg (2148 lb)	100	(4)	(4)	(4)	(4)	(5)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1060kg (2336 lb)	100	(4)	(4)	(4)	(4)	(5)
Heavy Duty V edge (HDV)	B	1350 mm (54 inch)	1.40m ³ (1.83 yd ³)	1025kg (2260 lb)	100	(4)	(4)	(4)	(4)	(5)
Heavy Duty Excavation (HDX)	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	796kg (1755 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.17 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)	(2)
Heavy Duty Excavation (HDX) - Skeleton	B	1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)	(2)

(continued)

(Table 10, contd)

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Heavy Duty (HD) - CCL	B	1050 mm (41 inch)	1.00m ³ (1.31 yd ³)	884kg (1948 lb)	100	(2)	(2)	(2)	(2)	(3)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	955kg (2105 lb)	100	(3)	(3)	(3)	(3)	(4)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1018kg (2244 lb)	100	(4)	(4)	(4)	(4)	(5)
Heavy Duty (HD) - SEA	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	901kg (1987 lb)	100	(2)	(2)	(2)	(2)	(3)
Heavy Duty (HD) - ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	737kg (1625 lb)	100	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	818kg (1841 lb)	100	(1)	(1)	(1)	(1)	(2)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(2)	(2)	(2)	(2)	(3)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(3)	(3)	(3)	(3)	(4)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1036kg (2284 lb)	100	(4)	(4)	(4)	(4)	(5)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	1094kg (2412 lb)	100	(5)	(5)	(5)	(5)	(6)
Heavy Duty Power (HDP)	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1804 lb)	100	(2)	(2)	(1)	(2)	(3)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	983kg (2167 lb)	100	(3)	(3)	(3)	(3)	(4)
Heavy Duty (HD) - Pin Grabber Power	B	600mm (24 inch)	0.44m ³ (0.57 yd ³)	682kg (1503 lb)	100	(1)	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 10, contd)

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		750mm (30 inch)	0.60m ³ (0.79 yd ³)	787kg (1735 lb)	100	(1)	(1)	(1)	(1)	(1)
		900mm (36 inch)	0.76m ³ (1.00 yd ³)	876kg (1931 lb)	100	(1)	(1)	(1)	(1)	(1)
		1050mm (42 inch)	0.93m ³ (1.22 yd ³)	940kg (2072lb)	100	(2)	(2)	(1)	(2)	
		1200mm (48 inch)	1.11m ³ (1.45 yd ³)	1031kg (2272lb)	100					(4)
		1350mm (54 inch)	1.28m ³ (1.67 yd ³)	1122kg (2474lb)	100	(4)	(4)	(4)	(4)	(5)
Severe Duty (SD)	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	683kg (1506 lb)	90	(1)	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	795kg (1753 lb)	90	(1)	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	885kg (1950 lb)	90	(1)	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	948kg (2091 lb)	90	(1)	(2)	(1)	(2)	(3)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1038kg (2089 lb)	90	(3)	(3)	(3)	(3)	(4)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1011kg (2229 lb)	90	(3)	(3)	(3)	(3)	(4)
Severe Duty (SD) - CCL	B	1100mm (43 inch)	1.00m ³ (1.31 yd ³)	965kg (2128 lb)	90	(1)	(2)	(1)	(2)	(3)
		1250 mm (49 inch)	1.00m ³ (1.56 yd ³)	1063kg (2343 lb)	90	(3)	(3)	(3)	(3)	(4)
Severe Duty Power (SDP)	B	900 mm (36 inch)	0.79m ³ (1.03 yd ³)	853kg (1881 lb)	90	(1)	(1)	(1)	(1)	(1)

(continued)

(Table 10, contd)

325 Excavator with Pin Grabber Coupler(4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Clean Up (CU)		1800 mm (72 inch)	1.60m ³ (2.09 yd ³)	979kg (2157 lb)	100	(5)	(5)	(4)	(5)	(5)
		2000 mm (78 inch)	1.76m ³ (2.31 yd ³)	1045kg (2303 lb)	100	(5)	(5)	(5)	(5)	(1)
Ditch Cleaning (DC)	B	1500 mm (60 inch)	1.01m ³ (1.32 yd ³)	651kg (1436 lb)	100	(1)	(1)	(1)	(1)	(2)
		1800 mm (72 inch)	1.24m ³ (1.62 yd ³)	739kg (1630 lb)	100	(3)	(3)	(3)	(3)	(4)
		2000 mm (78 inch)	1.22m ³ (1.60 yd ³)	869kg (1916 lb)	100	(3)	(3)	(3)	(3)	(4)
Ditch Cleaning Tilt (DCT)	B	1500 mm (60 inch)	0.90m ³ (1.18 yd ³)	948kg (2090 lb)	100	(1)	(2)	(1)	(2)	(3)
		1800 mm (72 inch)	1.11m ³ (1.45 yd ³)	1063kg (2344 lb)	100	(3)	(3)	(3)	(3)	(4)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1105kg (2437 lb)	100	(4)	(5)	(4)	(4)	(5)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1015kg (2238 lb)	100	(4)	(4)	(4)	(4)	(5)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1096kg (2417 lb)	100	(4)	(4)	(4)	(4)	(5)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1132kg (2496 lb)	100	(4)	(4)	(4)	(4)	(5)
Tamping	B	2200 mm (86 inch)	0.72m ³ (0.94 yd ³)	868kg (1913 lb)	100	(1)	(1)	(1)	(1)	(1)
		2200 mm (86 inch)	0.90m ³ (1.18 yd ³)	891kg (1965 lb)	100	(1)	(2)	(1)	(1)	(3)

(1) 2100 kg/m³ (3500 lb/yd³) is the maximum density of material.(2) 1800 kg/m³ (3000 lb/yd³) is the maximum density of material.(3) 1500 kg/m³ (2500 lb/yd³) is the maximum density of material.(4) 1200 kg/m³ (2000 lb/yd³) is the maximum density of material.(5) 900 kg/m³ (1500 lb/yd³) is the maximum density of material.

(6) Not Recommended

Product Information Section
Boom/Stick/Bucket Combinations

Table 11

325 Excavator with Pin Grabber Coupler (8.3m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Utility Duty (UD)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	725 kg (1599 lb)	100	(1)	(1)	(1)	(1)
	B	1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	758 kg (1672 lb)	100	(1)	(1)	(1)	(1)
General Duty Excavation (GDX)	B	1150mm (46 inch)	0.90 m ³ (1.18 yd ³)	758 kg (1671 lb)	100	(1)	(1)	(1)	(1)
		1250mm (50 inch)	1.00 m ³ (1.31 yd ³)	792 kg (1747 lb)	100	(1)	(1)	(1)	(1)
		1400mm (56 inch)	1.14m ³ (1.49 yd ³)	858 kg (1891 lb)	100	(1)	(1)	(1)	(1)
General Duty (GD) - EU	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	555 kg (1223 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	626kg (1380 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	812kg (1789 lb)	100	(1)	(1)	(1)	(1)
		1300 mm (51 inch)	1.30m ³ (1.70yd ³)	835kg (1841 lb)	100	(2)	(2)	(2)	(2)
		1400 mm (55 inch)	1.43m ³ (1.87yd ³)	879kg (1937 lb)	100	(2)	(3)	(2)	(3)
General Duty (GD) - UK / ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	550kg (1212 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	621kg (1368 lb)	100	(1)	(1)	(1)	(1)
		1000 mm (39 inch)	0.93m ³ (1.22 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	737kg (1624 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	807kg (1778 lb)	100	(1)	(1)	(1)	(1)
		1400 mm (55 inch)	1.43m ³ (1.87 yd ³)	874kg (1926 lb)	100	(2)	(3)	(2)	(3)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	914kg (2014 lb)	100	(3)	(3)	(3)	(3)
General Duty (GD)	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	620kg (1366 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	717kg (1580 lb)	100	(1)	(1)	(1)	(1)

(continued)

(Table 11, contd)

325 Excavator with Pin Grabber Coupler (8.3m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	793kg (1747 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	848kg (1869 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	924kg (2038 lb)	100	(2)	(3)	(2)	(2)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1002kg (2210 lb)	100	(3)	(4)	(3)	(3)
General Duty (GDC) - Wide Tip	B	600 mm (24 inch)	0.55m ³ (0.72 yd ³)	617kg (1360 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.75m ³ (0.98 yd ³)	715kg (1576 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.95m ³ (1.24 yd ³)	791kg (1743 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.16m ³ (1.52 yd ³)	861kg (1899 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.38m ³ (1.80 yd ³)	938kg (2069 lb)	100	(2)	(3)	(2)	(2)
		1350 mm (54 inch)	1.59m ³ (2.08 yd ³)	1016kg (2241 lb)	100	(3)	(4)	(3)	(3)
General Duty (GD) - SEA	B	1150 mm (46 inch)	0.90m ³ (1.18 yd ³)	786kg (1733 lb)	100	(1)	(1)	(1)	(1)
		1250 mm (50 inch)	1.00m ³ (1.31 yd ³)	820kg (1808 lb)	100	(1)	(1)	(1)	(1)
General Duty Excavation (GDX) - CJL	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	686kg (1511 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	719kg (1584 lb)	100	(1)	(1)	(1)	(1)
		1150 mm (46 inch)	1.00m ³ (1.31 yd ³)	751kg (1655 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46m ³ (0.60 yd ³)	647kg (1426 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	752kg (1658 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	892kg (1967 lb)	100	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 11, contd)

325 Excavator with Pin Grabber Coupler (8.3m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1050 mm (42 inch)	1.00m ³ (1.31yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	917kg (2022 lb)	100	(1)	(2)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	928kg (2046lb)	100	(1)	(2)	(1)	(1)
		1200 mm (48 inch)	1.19m ³ (1.56 yd ³)	975kg (2150 lb)	100	(1)	(2)	(1)	(2)
		1300 mm (52 inch)	1.30m ³ (1.70 yd ³)	974kg (2148 lb)	100	(2)	(2)	(2)	(2)
		1350 mm (54 inch)	1.38m ³ (1.81yd ³)	1060kg (2336 lb)	100	(3)	(3)	(3)	(3)
Heavy Duty V edge (HDV)	B	1350 mm (54 inch)	1.40m ³ (1.83yd ³)	1025kg (2260 lb)	100	(3)	(3)	(3)	(3)
Heavy Duty Excavation (HDX)	B	950 mm (37 inch)	0.80m ³ (1.05 yd ³)	796kg (1755 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (41 inch)	0.90m ³ (1.17 yd ³)	835kg (1841 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty Excavation (HDX) - Skeleton	B	1050 mm (41 inch)	0.90m ³ (1.18 yd ³)	855kg (1885 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD) - CCL	B	1050 mm (41 inch)	1.00m ³ (1.31 yd ³)	884kg (1948 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	955kg (2105 lb)	100	(1)	(2)	(1)	(2)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1018kg (2244 lb)	100	(3)	(3)	(2)	(3)
Heavy Duty (HD) - SEA	B	1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	901kg (1987 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD) - ANZ	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	737kg (1625 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	818kg (1841 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	872kg (1923 lb)	100	(1)	(1)	(1)	(1)

(continued)

(Table 11, contd)

325 Excavator with Pin Grabber Coupler (8.3m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	929kg (2048 lb)	100	(1)	(2)	(1)	(1)
		1350 mm (54 inch)	1.38m ³ (1.81 yd ³)	1036kg (2284 lb)	100	(3)	(3)	(2)	(3)
		1500 mm (60 inch)	1.58m ³ (2.06 yd ³)	1094kg (2412 lb)	100	(3)	(4)	(3)	(4)
Heavy Duty Power (HDP)	B	1050 mm (42 inch)	0.96m ³ (1.26 yd ³)	898kg (1980 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.14m ³ (1.49 yd ³)	983kg (2167 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD) - Pin Grabber Power		600 mm (24 inch)	0.46m ³ (0.61 yd ³)	635kg (1400 lb)	100	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.60m ³ (0.79 yd ³)	787kg (1735 lb)	100	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.76m ³ (1.00 yd ³)	876kg (1931 lb)	100	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	0.93m ³ (1.22 yd ³)	940kg (2072 lb)	100	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.11m ³ (1.45 yd ³)	1031kg (2272 lb)	100	(1)	(1)	(1)	(1)
		1350mm (54 inch)	1.28m ³ (1.67 yd ³)	1122kg (2474 lb)	100	(2)	(3)	(2)	(2)
Severe Duty (SD)	B	600 mm (24 inch)	0.46m ³ (0.61 yd ³)	683kg (1506 lb)	90	(1)	(1)	(1)	(1)
		750 mm (30 inch)	0.64m ³ (0.84 yd ³)	795kg (1753 lb)	90	(1)	(1)	(1)	(1)
		900 mm (36 inch)	0.81m ³ (1.06 yd ³)	885kg (1950 lb)	90	(1)	(1)	(1)	(1)
		1050 mm (42 inch)	1.00m ³ (1.31 yd ³)	948kg (2091 lb)	90	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1038kg (2089 lb)	90	(1)	(1)	(1)	(1)
		1200 mm (49 inch)	1.19m ³ (1.56 yd ³)	1011kg (2229 lb)	90	(1)	(1)	(1)	(1)
Severe Duty (SD) - CCL	B	1100mm (43 inch)	1.00m ³ (1.31 yd ³)	965kg (2128 lb)	90	(1)	(1)	(1)	(1)
		1250 mm (49 inch)	1.00m ³ (1.56 yd ³)	1063kg (2343 lb)	90	(1)	(1)	(1)	(1)

(continued)

Product Information Section
Boom/Stick/Bucket Combinations

(Table 11, contd)

325 Excavator with Pin Grabber Coupler (8.3m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
Severe Duty Power (SDP)	B	900 mm (36 inch)	0.79m ³ (1.03 yd ³)	853kg (1881 lb)	90	(1)	(1)	(1)	(1)
Clean Up (CU)		1800 mm (72 inch)	1.60m ³ (2.09 yd ³)	979kg (2157 lb)	100	(3)	(3)	(3)	(3)
		2000 mm (78 inch)	1.76m ³ (2.31 yd ³)	1045kg (2303 lb)	100	(4)	(4)	(4)	(4)
Ditch Cleaning (DC)	B	1500 mm (60 inch)	1.01m ³ (1.32 yd ³)	651kg (1436 lb)	100	(1)	(1)	(1)	(1)
		1800 mm (72 inch)	1.24m ³ (1.62 yd ³)	739kg (1630 lb)	100	(1)	(1)	(1)	(1)
		2000 mm (78 inch)	1.22m ³ (1.60 yd ³)	869kg (1916 lb)	100	(1)	(2)	(1)	(1)
Ditch Cleaning Tilt (DCT)	B	1500 mm (60 inch)	0.90m ³ (1.18 yd ³)	948kg (2090 lb)	100	(1)	(1)	(1)	(1)
		1800 mm (72 inch)	1.11m ³ (1.45 yd ³)	1063kg (2344 lb)	100	(1)	(2)	(1)	(1)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1105kg (2437 lb)	100	(3)	(3)	(3)	(3)
		1800 mm (72 inch)	1.40m ³ (1.83 yd ³)	1015kg (2238 lb)	100	(3)	(3)	(3)	(3)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1096kg (2417 lb)	100	(2)	(2)	(2)	(2)
		2000 mm (79 inch)	1.23m ³ (1.61 yd ³)	1132kg (2496 lb)	100	(2)	(2)	(2)	(2)
Tamping	B	2200 mm (86 inch)	0.72m ³ (0.94 yd ³)	868kg (1913 lb)	100	(1)	(1)	(1)	(1)
		2200 mm (86 inch)	0.90m ³ (1.18 yd ³)	891kg (1965 lb)	100	(1)	(1)	(1)	(1)

(1) 2100 kg/m³ (3500 lb/yd³) is the maximum density of material.(2) 1800 kg/m³ (3000 lb/yd³) is the maximum density of material.(3) 1500 kg/m³ (2500 lb/yd³) is the maximum density of material.(4) 1200 kg/m³ (2000 lb/yd³) is the maximum density of material.

Table 12

325 Excavator with CW40 coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
General Duty	B	900 mm (36 inch)	0.81 m ³ (1.06 yd ³)	664 kg (1463 lb)	100	(1)	(1)	(2)	(2)
		1050 mm (42 inch)	1.00 m ³ (1.31 yd ³)	711 kg (1567 lb)	100	(3)	(3)	(1)	(1)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	781 kg (1721 lb)	100	(4)	(4)	(3)	(3)
		1300 mm (51 inch)	1.30 m ³ (1.70 yd ³)	813 kg (1791 lb)	100	(4)	(5)	(3)	(4)
General Duty with Leveling Edge	B	650 mm (26 inch)	0.70 m ³ (0.92 yd ³)	567 kg (1249 lb)	100	(2)	(6)	(2)	(2)
		800 mm (31 inch)	0.68 m ³ (0.89 yd ³)	614 kg (1353 lb)	100	(2)	(6)	(2)	(2)
		1200 mm (47 inch)	1.19 m ³ (1.56 yd ³)	787 kg (1734 lb)	100	(4)	(4)	(3)	(3)
		1400 mm (55 inch)	1.43 m ³ (1.87 yd ³)	855 kg (1884 lb)	100	(5)	(5)	(4)	(4)
		1500 mm (60 inch)	1.58 m ³ (2.06 yd ³)	895 kg (1972 lb)	100	(5)	(5)	(4)	(4)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	618 kg (1363 lb)	100	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	886 kg (1953 lb)	100	(4)	(4)	(3)	(3)
		1300 mm (52 inch)	1.30 m ³ (1.71 yd ³)	944 kg (2081 lb)	100	(5)	(5)	(4)	(4)
Ditch Cleaning (DC)	B	2100 mm (83 inch)	1.29 m ³ (1.69 yd ³)	792 kg (1746 lb)	100	(4)	(4)	(3)	(3)
		2100 mm (83 inch)	1.46 m ³ (1.91 yd ³)	809 kg (1784 lb)	100	(5)	(5)	(4)	(4)
		1800 mm (72 inch)	1.50 m ³ (1.96 yd ³)	775 kg (1709 lb)	100	(5)	(5)	(4)	(4)
		1800 mm (72 inch)	1.50 m ³ (1.96 yd ³)	737 kg (1624 lb)	100	(4)	(5)	(4)	(4)
		2100 mm (83 inch)	1.76 m ³ (2.31 yd ³)	864 kg (1905 lb)	100	(5)	(5)	(4)	(5)
Ditch Cleaning Tilt (DCT)	B	2000 mm (79 inch)	1.23 m ³ (1.61 yd ³)	1161 kg (2560 lb)	100	(5)	(5)	(4)	(4)

- (1) 1500 kg/m³ (2500 lb/yd³) is the maximum density of material.
 (2) 2100 kg/m³ (3500 lb/yd³) is the maximum density of material.
 (3) 1200 kg/m³ (2000 lb/yd³) is the maximum density of material.
 (4) 900 kg/m³ (1500 lb/yd³) is the maximum density of material.
 (5) Not Recommended
 (6) 1800 kg/m³ (3000 lb/yd³) is the maximum density of material.

Product Information Section
Boom/Stick/Bucket Combinations

Table 13

325 Excavator with CW40 coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
General Duty	B	900 mm (36 inch)	0.81 m ³ (1.06 yd ³)	664 kg (1463 lb)	100	(2)	(2)	(2)	(2)	(2)
		1050 mm (42 inch)	1.00 m ³ (1.31 yd ³)	711 kg (1567 lb)	100	(2)	(2)	(2)	(2)	(6)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	781 kg (1721 lb)	100	(6)	(6)	(6)	(6)	(1)
		1300 mm (51 inch)	1.30 m ³ (1.70 yd ³)	813 kg (1791 lb)	100	(1)	(1)	(1)	(1)	(3)
General Duty with Leveling Edge	B	650 mm (26 inch)	0.70 m ³ (0.92 yd ³)	567 kg (1249 lb)	100	(2)	(2)	(2)	(2)	(2)
		800 mm (31 inch)	0.68 m ³ (0.89 yd ³)	614 kg (1353 lb)	100	(2)	(2)	(2)	(2)	(2)
		1200 mm (47 inch)	1.19 m ³ (1.56 yd ³)	787 kg (1734 lb)	100	(6)	(6)	(6)	(6)	(1)
		1400 mm (55 inch)	1.43 m ³ (1.87 yd ³)	855 kg (1884 lb)	100	(1)	(3)	(1)	(1)	(3)
		1500 mm (60 inch)	1.58 m ³ (2.06 yd ³)	895 kg (1972 lb)	100	(3)	(3)	(3)	(3)	(4)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	618 kg (1363 lb)	100	(2)	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	886 kg (1953 lb)	100	(6)	(1)	(6)	(1)	(1)
		1300 mm (52 inch)	1.30 m ³ (1.71 yd ³)	944 kg (2081 lb)	100	(1)	(1)	(1)	(1)	(3)
Ditch Cleaning (DC)	B	2100 mm (83 inch)	1.29 m ³ (1.69 yd ³)	792 kg (1746 lb)	100	(1)	(1)	(1)	(1)	(3)
		2100 mm (83 inch)	1.46 m ³ (1.91 yd ³)	809 kg (1784 lb)	100	(1)	(3)	(1)	(1)	(3)
		1800 mm (72 inch)	1.50 m ³ (1.96 yd ³)	775 kg (1709 lb)	100	(1)	(3)	(1)	(3)	(3)
		1800 mm (72 inch)	1.50 m ³ (1.96 yd ³)	737 kg (1624 lb)	100	(1)	(3)	(1)	(1)	(3)
		2100 mm (83 inch)	1.76 m ³ (2.31 yd ³)	864 kg (1905 lb)	100	(3)	(4)	(3)	(3)	(4)
Ditch Cleaning Tilt (DCT)	B	2000 mm (79 inch)	1.23 m ³ (1.61 yd ³)	1161 kg (2560 lb)	100	(1)	(3)	(1)	(3)	(3)

Table 14

325 Excavator without a CW40 quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
General Duty	B	900 mm (36 inch)	0.81 m ³ (1.06 yd ³)	793 kg (1747 lb)	100	(2)	(2)	(2)	(2)
		1050 mm (42 inch)	1.00 m ³ (1.31 yd ³)	848 kg (1869 lb)	100	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	924 kg (2038 lb)	100	(2)	(2)	(2)	(2)
		1300 mm (54 inch)	1.30 m ³ (1.70 yd ³)	1002 kg (2210 lb)	100	(2)	(2)	(2)	(2)
General Duty with Levelling Edge	B	650 mm (26 inch)	0.70 m ³ (0.92 yd ³)	567 kg (1249 lb)	100	(2)	(2)	(2)	(2)
		800 mm (31 inch)	0.68 m ³ (0.89 yd ³)	614 kg (1353 lb)	100	(2)	(2)	(2)	(2)
		1200 mm (47 inch)	1.19 m ³ (1.56 yd ³)	787 kg (1734 lb)	100	(2)	(2)	(2)	(2)
		1400 mm (55 inch)	1.43 m ³ (1.87 yd ³)	855 kg (1884 lb)	100	(6)	(6)	(6)	(6)
		1500 mm (60 inch)	1.58 m ³ (2.06 yd ³)	895 kg (1972 lb)	100	(1)	(1)	(1)	(1)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	618 kg (1363 lb)	100	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	886 kg (1953 lb)	100	(2)	(2)	(2)	(2)
		1300 mm (52 inch)	1.30 m ³ (1.71 yd ³)	944 kg (2081 lb)	100	(6)	(6)	(2)	(6)
Ditch Cleaning (DC)	B	2100 mm (83 inch)	1.29 m ³ (1.69 yd ³)	792 kg (1746 lb)	100	(2)	(2)	(2)	(2)
		2100 mm (83 inch)	1.46 m ³ (1.91 yd ³)	809 kg (1784 lb)	100	(6)	(6)	(6)	(6)
		1800 mm (72 inch)	1.50 m ³ (1.96 yd ³)	775 kg (1709 lb)	100	(6)	(6)	(6)	(6)
		1800 mm (72 inch)	1.50 m ³ (1.96 yd ³)	737 kg (1624 lb)	100	(6)	(6)	(6)	(6)
		2100 mm (83 inch)	1.76 m ³ (2.31 yd ³)	864 kg (1905 lb)	100	(1)	(1)	(1)	(1)
Ditch Cleaning Tilt (DCT)	B	2000 mm (79 inch)	1.23 m ³ (1.61 yd ³)	1161 kg (2560 lb)	100	(6)	(6)	(6)	(6)

Product Information Section
Boom/Stick/Bucket Combinations

Table 15

325 Excavator with CW40S coupler (4.9 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach	Reach HD	Reach	Reach HD
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
General Duty	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	508 kg (1119 lb)	100	(2)	(2)	(2)	(2)
		750 mm (30 inch)	0.64 m ³ (0.84 yd ³)	592 kg (1305 lb)	100	(2)	(2)	(2)	(2)
		900 mm (36 inch)	0.81 m ³ (1.06 yd ³)	661 kg (1457 lb)	100	(6)	(1)	(2)	(2)
		1300 mm (51 inch)	1.30 m ³ (1.70 yd ³)	810 kg (1785 lb)	100	(4)	(4)	(3)	(3)
		1400 mm (55 inch)	1.43 m ³ (1.87 yd ³)	845 kg (1862 lb)	100	(5)	(5)	(4)	(4)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	585 kg (1289 lb)	100	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	875 kg (1928 lb)	100	(4)	(4)	(3)	(3)
		1300 mm (52 inch)	1.30 m ³ (1.70 yd ³)	931 kg (2052 lb)	100	(4)	(5)	(3)	(4)
Ditch Cleaning (DC)	B	2000 mm (78 inch)	1.22 m ³ (1.60 yd ³)	815 kg (1797 lb)	100	(4)	(4)	(3)	(3)
		2200 mm (87 inch)	1.36 m ³ (1.78 yd ³)	880 kg (1940 lb)	100	(4)	(5)	(4)	(4)
Ditch Cleaning Tilt (DCT)	B	2000 mm (79 inch)	1.23 m ³ (1.61 yd ³)	1142 kg (2518 lb)	100	(5)	(5)	(4)	(4)

Table 16

325 Excavator with CW40S coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
General Duty	B	600 mm (24 inch)	0.46 m³ (0.61 yd³)	508 kg (1119 lb)	100	(2)	(2)	(2)	(2)	(2)
		750 mm (30 inch)	0.64 m³ (0.84 yd³)	592 kg (1305 lb)	100	(2)	(2)	(2)	(2)	(2)
		900 mm (36 inch)	0.81 m³ (1.06 yd³)	661 kg (1457 lb)	100	(2)	(2)	(2)	(2)	(2)

(continued)

(Table 16, contd)

325 Excavator with CW40S coupler (4.9 m ton counterweight)										
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	With Blade Down				
						Reach		Reach HD		VAB
						2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) HD Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick
		1300 mm (51 inch)	1.30 m ³ (1.70 yd ³)	810 kg (1785 lb)	100	(1)	(1)	(1)	(1)	(3)
		1400 mm (55 inch)	1.43 m ³ (1.87 yd ³)	845 kg (1862 lb)	100	(1)	(3)	(1)	(1)	(3)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	585 kg (1289 lb)	100	(2)	(2)	(2)	(2)	(2)
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	875 kg (1928 lb)	100	(6)	(1)	(6)	(6)	(1)
		1300 mm (52 inch)	1.30 m ³ (1.70 yd ³)	931 kg (2052 lb)	100	(1)	(1)	(1)	(1)	(3)
Ditch Cleaning (DC)	B	2000 mm (78 inch)	1.22 m ³ (1.60 yd ³)	815 kg (1797 lb)	100	(6)	(1)	(6)	(6)	(1)
		2200 mm (87 inch)	1.36 m ³ (1.78 yd ³)	880 kg (1940 lb)	100	(1)	(1)	(1)	(1)	(3)
Ditch Cleaning Tilt (DCT)	B	2000 mm (79 inch)	1.23 m ³ (1.61 yd ³)	1142 kg (2518 lb)	100	(1)	(3)	(1)	(1)	(3)

Table 17

325 Excavator without a CW40S quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
General Duty	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	508 kg (1119 lb)	100	(2)	(2)	(2)	(2)
		750 mm (30 inch)	0.64 m ³ (0.84 yd ³)	592 kg (1305 lb)	100	(2)	(2)	(2)	(2)
		900 mm (36 inch)	0.81 m ³ (1.06 yd ³)	661 kg (1457 lb)	100	(2)	(2)	(2)	(2)
		1300 mm (51 inch)	1.30 m ³ (1.70 yd ³)	810 kg (1785 lb)	100	(2)	(2)	(2)	(2)
		1400 mm (55 inch)	1.43 m ³ (1.87 yd ³)	845 kg (1862 lb)	100	(6)	(6)	(6)	(6)
Heavy Duty (HD)	B	600 mm (24 inch)	0.46 m ³ (0.61 yd ³)	618 kg (1363 lb)	100	(2)	(2)	(2)	(2)

(continued)

(Table 17, contd)

325 Excavator without a CW40S quick coupler (8.3 m ton counterweight)									
Bucket Type	Linkage	Width of Bucket	SAE Capacity of Bucket	Weight of Bucket	Fill (%)	No Blade		No Blade	
						Reach		Reach HD	
						2.9 m (9 ft 6 inch) TRS Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) Stick	2.9 m (9 ft 6 inch) HD Stick
		1200 mm (48 inch)	1.19 m ³ (1.56 yd ³)	886 kg (1953 lb)	100	(2)	(2)	(2)	(2)
		1300 mm (52 inch)	1.30 m ³ (1.70 yd ³)	944 kg (2081 lb)	100	(2)	(6)	(2)	(6)
Ditch Cleaning (DC)	B	2000 mm (78 inch)	1.22 m ³ (1.60 yd ³)	815 kg (1797 lb)	100	(2)	(2)	(2)	(2)
		2200 mm (87 inch)	1.36 m ³ (1.78 yd ³)	880 kg (1940 lb)	100	(6)	(6)	(2)	(6)
Ditch Cleaning Tilt (DCT)	B	2000 mm (79 inch)	1.23 m ³ (1.61 yd ³)	1142 kg (2518 lb)	100	(6)	(6)	(2)	(6)

i07961539

Lifting Capacities

SMCS Code: 7000

WARNING

Failure to comply to the rated load can cause possible personal injury or property damage. This includes the risk of unintended boom lowering. Review the rated load of a particular work tool before performing any operation. Make adjustments to the rated load as necessary for non-standard configurations.

There may be local regulations and/or government regulations that govern the use of excavators which lift heavy objects. Obey all local and government regulations.

Lifting capacities should be used as a guide. Work tools, uneven ground conditions, soft ground conditions, or poor ground conditions have effects on lifting capacities. The operator is responsible for being aware of these effects.

The lifting capacities are defined by "ISO 10567 2007". The lifting capacities are defined as the lower value of 75% of the static tipping capacity or 87% of the hydraulic lift capacity. Lifting capacities should be within 5% of the below values for machines with different shoes.

Note: Lifting capacities are based on a standard machine with the following conditions:

- Lift point: Stick nose without bucket

- Lubricants full
- Fuel tank full
- Steel track
- Complete cab with a 75 kg (165 lb) operator

Lifting capacities will vary with different work tools and attachments. The weight of a work tool attachment must be subtracted from the lift capacity. Consult your Cat dealer regarding the lifting capacities for specific work tools and attachments.

This machine may be equipped with various sticks. Lifting capacities may vary between the different sticks. Measure the distance on the stick between the boom hinge pin and the work tool hinge pin. This distance will inform you of the size of the stick that is equipped on the machine.

Use the lifting eye that is provided on the stick nose to lift objects. When the lifting eye is used, the connection must be made with a sling or shackle.

Note: Japan regulations require a shovel crane configuration to lift certain objects. A shovel crane has a rated load capacity, therefore, the lift capacities discussed below do not apply to a shovel crane configuration. Contact your Cat dealer for additional information.

Note: In European countries, regulations require a load sensing indicator and a boom and stick lowering control device if more than 1000 kg (2200 lb) is lifted during object handling applications. Regulations also require a load sensing indicator and a boom lowering control device if a force that is greater than 40000 N·m (29500 lb ft) is created during object handling applications. Even if the hydraulic lift capacity is capable, do not exceed a load of 1000 kg (2200 lb). Do not exceed a force of 40000 N·m (29500 lb ft) in European object handling applications.

Symbols Found in the Lifting Capacity Charts

Below are symbols that are commonly found on lifting capacity charts for track excavators.

Note: Depending on the machine configuration, some symbols may not be used.

(mm) **Measurements are provided in**
(inch) **millimeters and inches**



Lift Capacities are provided in kilograms and pounds



Load is limited by hydraulic lifting capacity rather than by a tipping load



Lift point radius



Lift point height



Lifting capacity over the front of the machine



Lifting capacity over the side of the machine



Heavy Lift ON

**Reach Boom with 2920 mm (9 ft 7 in)
Stick 8300 kg (18300 lb)
Counterweight**

[illegible]

Illustration 70

q06495049

Lift Chart Above : 325, 8300 kg (18300 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, and heavy lift OFF

(mm) (inch)	1300 51	1500 59	1700 67	1900 75	2100 83	2300 91	2500 98	2700 106	2900 114	3100 122	3300 130	3500 138	3700 146	3900 154	4100 161	4300 169	4500 177	4700 185	4900 193	5100 201	5300 209	5500 217	5700 225	5900 233	6100 241	6300 249	6500 257	6700 265	6900 273	7100 281	7300 289	7500 297	7700 305	7900 313	8100 321	8300 329	8500 337	8700 345	8900 353	9100 361	9300 369	9500 377	9700 385	9900 393	10100 401	10300 409	10500 417	10700 425	10900 433	11100 441	11300 449	11500 457	11700 465	11900 473	12100 481	12300 489	12500 497	12700 505	12900 513	13100 521	13300 529	13500 537	13700 545	13900 553	14100 561	14300 569	14500 577	14700 585	14900 593	15100 601	15300 609	15500 617	15700 625	15900 633	16100 641	16300 649	16500 657	16700 665	16900 673	17100 681	17300 689	17500 697	17700 705	17900 713	18100 721	18300 729	18500 737	18700 745	18900 753	19100 761	19300 769	19500 777	19700 785	19900 793	20100 801	20300 809	20500 817	20700 825	20900 833	21100 841	21300 849	21500 857	21700 865	21900 873	22100 881	22300 889	22500 897	22700 905	22900 913	23100 921	23300 929	23500 937	23700 945	23900 953	24100 961	24300 969	24500 977	24700 985	24900 993	25100 1001	25300 1009	25500 1017	25700 1025	25900 1033	26100 1041	26300 1049	26500 1057	26700 1065	26900 1073	27100 1081	27300 1089	27500 1097	27700 1105	27900 1113	28100 1121	28300 1129	28500 1137	28700 1145	28900 1153	29100 1161	29300 1169	29500 1177	29700 1185	29900 1193	30100 1201	30300 1209	30500 1217	30700 1225	30900 1233	31100 1241	31300 1249	31500 1257	31700 1265	31900 1273	32100 1281	32300 1289	32500 1297	32700 1305	32900 1313	33100 1321	33300 1329	33500 1337	33700 1345	33900 1353	34100 1361	34300 1369	34500 1377	34700 1385	34900 1393	35100 1401	35300 1409	35500 1417	35700 1425	35900 1433	36100 1441	36300 1449	36500 1457	36700 1465	36900 1473	37100 1481	37300 1489	37500 1497	37700 1505	37900 1513	38100 1521	38300 1529	38500 1537	38700 1545	38900 1553	39100 1561	39300 1569	39500 1577	39700 1585	39900 1593	40100 1601	40300 1609	40500 1617	40700 1625	40900 1633	41100 1641	41300 1649	41500 1657	41700 1665	41900 1673	42100 1681	42300 1689	42500 1697	42700 1705	42900 1713	43100 1721	43300 1729	43500 1737	43700 1745	43900 1753	44100 1761	44300 1769	44500 1777	44700 1785	44900 1793	45100 1801	45300 1809	45500 1817	45700 1825	45900 1833	46100 1841	46300 1849	46500 1857	46700 1865	46900 1873	47100 1881	47300 1889	47500 1897	47700 1905	47900 1913	48100 1921	48300 1929	48500 1937	48700 1945	48900 1953	49100 1961	49300 1969	49500 1977	49700 1985	49900 1993	50100 2001	50300 2009	50500 2017	50700 2025	50900 2033	51100 2041	51300 2049	51500 2057	51700 2065	51900 2073	52100 2081	52300 2089	52500 2097	52700 2105	52900 2113	53100 2121	53300 2129	53500 2137	53700 2145	53900 2153	54100 2161	5

Illustration 71

q06495076

Lift Chart Above : 325, 8300 kg (18300 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, and heavy lift OFF

(mm) (inch)	1300 51	1600 63	2000 79	2500 98	3000 118	3500 138	4000 157	4500 177	5000 197	5500 217	6000 236	6500 256	7000 276	7500 295	8000 315	8500 335	9000 354	9500 374	10000 394	10500 413	11000 433	11500 453	12000 472	12500 492	13000 512	13500 531	14000 551	14500 571	15000 590	15500 610	16000 629	16500 649	17000 669	17500 689	18000 708	18500 728	19000 748	19500 768	20000 787	20500 807	21000 827	21500 847	22000 867	22500 887	23000 906	23500 926	24000 946	24500 966	25000 986	25500 1006	26000 1025	26500 1045	27000 1065	27500 1085	28000 1105	28500 1125	29000 1144	29500 1164	30000 1184	30500 1204	31000 1224	31500 1244	32000 1264	32500 1283	33000 1303	33500 1323	34000 1343	34500 1363	35000 1383	35500 1403	36000 1423	36500 1442	37000 1462	37500 1482	38000 1502	38500 1522	39000 1542	39500 1562	40000 1582	40500 1602	41000 1622	41500 1642	42000 1662	42500 1682	43000 1702	43500 1722	44000 1742	44500 1762	45000 1782	45500 1802	46000 1822	46500 1842	47000 1862	47500 1882	48000 1902	48500 1922	49000 1942	49500 1962	50000 1982	50500 2002	51000 2022	51500 2042	52000 2062	52500 2082	53000 2102	53500 2122	54000 2142	54500 2162	55000 2182	55500 2202	56000 2222	56500 2242	57000 2262	57500 2282	58000 2302	58500 2322	59000 2342	59500 2362	60000 2382	60500 2402	61000 2422	61500 2442	62000 2462	62500 2482	63000 2502	63500 2522	64000 2542	64500 2562	65000 2582	65500 2602	66000 2622	66500 2642	67000 2662	67500 2682	68000 2702	68500 2722	69000 2742	69500 2762	70000 2782	70500 2802	71000 2822	71500 2842	72000 2862	72500 2882	73000 2902	73500 2922	74000 2942	74500 2962	75000 2982	75500 3002	76000 3022	76500 3042	77000 3062	77500 3082	78000 3102	78500 3122	79000 3142	79500 3162	80000 3182	80500 3202	81000 3222	81500 3242	82000 3262	82500 3282	83000 3302	83500 3322	84000 3342	84500 3362	85000 3382	85500 3402	86000 3422	86500 3442	87000 3462	87500 3482	88000 3502	88500 3522	89000 3542	89500 3562	90000 3582	90500 3602	91000 3622	91500 3642	92000 3662	92500 3682	93000 3702	93500 3722	94000 3742	94500 3762	95000 3782	95500 3802	96000 3822	96500 3842	97000 3862	97500 3882	98000 3902	98500 3922	99000 3942	99500 3962	100000 3982	100500 4002	101000 4022	101500 4042	102000 4062	102500 4082	103000 4102	103500 4122	104000 4142	104500 4162	105000 4182	105500 4202	106000 4222	106500 4242	107000 4262	107500 4282	108000 4302	108500 4322	109000 4342	109500 4362	110000 4382	110500 4402	111000 4422	111500 4442	112000 4462	112500 4482	113000 4502	113500 4522	114000 4542	114500 4562	115000 4582	115500 4602	116000 4622	116500 4642	117000 4662	117500 4682	118000 4702	118500 4722	119000 4742	119500 4762	120000 4782	120500 4802	121000 4822	121500 4842	122000 4862	122500 4882	123000 4902	123500 4922	124000 4942	124500 4962	125000 4982	125500 5002	126000 5022	126500 5042	127000 5062	127500 5082	128000 5102	128500 5122	129000 5142	129500 5162	130000 5182	130500 5202	131000 5222	131500 5242	132000 5262	132500 5282	133000 5302	133500 5322	134000 5342	134500 5362	135000 5382	135500 5402	136000 5422	136500 5442	137000 5462	137500 5482	138000 5502	138500 5522	139000 5542	139500 5562	140000 5582	140500 5602	141000 5622	141500 5642	142000 5662	142500 5682	143000 5702	143500 5722	144000 5742	144500 5762	145000 5782	145500 5802	146000 5822	146500 5842	147000 5862	147500 5882	148000 5902	148500 5922	149000 5942	149500 5962	150000 5982	150500 6002	151000 6022	151500 6042	152000 6062	152500 6082	153000 6102	153500 6122	154000 6142	154500 6162	155000 6182	155500 6202	156000 6222	156500 6242	157000 6262	157500 6282	158000 6302	158500 6322	159000 6342	159500 6362	160000 6382	160500 6402	161000 6422	161500 6442	162000 6462	162500 6482	163000 6502	163500 6522	164000 6542	164500 6562	165000 6582	165500 6602	166000 6622	166500 6642	167000 6662	167500 6682	168000 6702	168500 6722	169000 6742	169500 6762	170000 6782	170500 6802	171000 6822	171500 6842	172000 6862	172500 6882	173000 6902	173500 6922	174000 6942	174500 6962	175000 6982	175500 7002	176000 7022	176500 7042	177000 7062	177500 7082	178000 7102	178500 7122	179000 7142	179500 7162	180000 7182	180500 7202	181000 7222	181500 7242	182000 7262	182500 7282	183000 7302	183500 7322	184000 7342	184500 7362	185000 7382	185500 7402	186000 7422	186500 7442	187000 7462	187500 7482	188000 7502	188500 7522	189000 7542	189500 7562	190000 7582	190500 7602	191000 7622	191500 7642	192000 7662	192500 7682	193000 7702	193500 7722	194000 7742	194500 7762	195000 7782	195500 7802	196000 7822	196500 7842	197000 7862	197500 7882	198000 7902	198500 7922	199000 7942	199500 7962	200000 7982	200500 8002	201000 8022	201500 8042	202000 8062	202500 8082	203000 8102	203500 8122	204000 8142	204500 8162	205000 8182	205500 8202	206000 8222	206500 8242	207000 8262	207500 8282	208000 8302	208500 8322	209000 8342	209500 8362	210000 8382	210500 8402	211000 8422	211500 8442	212000 8462	212500 8482	213000 8502	213500 8522	214000 8542	214500 8562	215000 8582	215500 8602	216000 8622	216500 8642	217000 8662	217500 8682	218000 8702	218500 8722	219000 8742	219500 8762	220000 8782	220500 8802	221000 8822	221500 8842	222000 8862	222500 8882	223000 8902	223500 8922	224000 8942	224500 8962	225000 8982	225500 9002	226000 9022	226500 9042	227000 9062	227500 9082	228000 9102	228500 9122	229000 9142	229500 9162	230000 9182	230500 9202	231000 9222	231500 9242	232000 9262	232500 9282	233000 9302	233500 9322	234000 9342	234500 9362	235000 9382	235500 9402	236000 9422	236500 9442	237000 9462	237500 9482	238000 9502	238500 9522	239000 9542	239500 9562	240000 9582	240500 9602	241000 9622	241500 9642	242000 9662	242500 9682	243000 9702	243500 9722	244000 9742	244500 9762	245000 9782	245500 9802	246000 9822	246500 9842	247000 9862	247500 9882	248000 9902	248500 9922	249000 9942	249500 9962	250000 9982	250500 10002	251000 10022	251500 10042	252000 10062	252500 10082	253000 10102	253500 10122	254000 10142	254500 10162	255000 10182	255500 10202	256000 10222	256500 10242	257000 10262	257500 10282	258000 10302	258500 10322	259000 10342	259500 10362	260000 10382	260500 10402	261000 10422	261500 10442	262000 10462	262500 10482	263000 10502	263500 10522	264000 10542	264500 10562	265000 10582	265500 10602	266000 10622	266500 10642	267000 10662	267500 10682	268000 10702	268500 10722	269000 10742	269500 10762	270000 10782	270500 10802	271000 10822	271500 10842	272000 10862	272500 10882	273000 10902	273500 10922	274000 10942	274500 10962	275000 10982	275500 11002	276000 11022	276500 11042	277000 11062	277500 11082	278000 11102	278500 11122	279000 11142	279500 11162	280000 11182	280500 11202	281000 11222	281500 11242	282000 11262	282500 11282	283000 11302	283500 11322	284000 11342	284500 11362	285000 11382	285500 11402	286000 11422	286500 11442	287000 11462	287500 11482	288000 11502	288500 11522	289000 11542	289500 11562	290000 11582	290500 11602	291000 11622	291500 11642	292000 11662	292500 11682	293000 11702	293500 11722	294000 11742	294500 11762	295000 11782	295500 11802	296000 11822	296500 11842	297000 11862	297500 11882	298000 11902	298500 11922	299000 11942	299500 11962	300000 11982	300500 12002	301000 12022	301500 12042	302000 12062	302500 12082	303000 12102	303500 12122	304000 12142	304500 12162	305000 12182	305500 12202	306000 12222	306500 12242	307000 12262	307500 12282	308000 12302	308500 12322	309000 12342	309500 12362	310000 12382	310500 12402	311000 12422	311500 12442	312000 12462	312500 12482	313000 12502	313500 12522	314000 12542	314500 12562	315000 12582	315500 12602	316000 12622	316500 12642	317000 12662	317500 12682	318000 12702	318500 12722	319000 12742	319500 12762	320000 12782	320500 12802	321000 12822	321500 12842	322000 12862	322500 12882	323000 12902	323500 12922	324000 12942	324500 12962	325000 12982	325500 13002	326000 13022	326500 13042	327000 13062	327500 13082	328000 13102	328500 13122	329000 13142	329500 13162	330000 13182	330500 13202	331000 13222	331500 13242	332000 13262	332500 13282	333000 13302	333500 13322	334000 13342	334500 13362	335000 13382	335500 13402	336000 13422	336500 13442	337000 13462	337500 13482	338000 13502	338500 13522	339000 13542	339500 13562	340000 13582	340500 13602	341000 13622	341500 13642	342000 13662	342500 13682	343000 13702	343500 13722	344000 13742	344500 13762	345000 13782	345500 13802	346000 13822	346500 13842	347000 13862	347500 13882	348000 13902	348500 13922	349000 13942	349500 13962	350000 13982	350500 14002	351000 14022	351500 14042	352000 14062	352500 14082	353000 14102	353500 14122	354000 14142	354500 14162	355000 14182	355500 14202	356000 14222	356500 14242	357000 14262	357500 14282	358000 14302	358500 14322	359000 14342	359500 14362	360000 14382	360500 14402	361000 14422	361500 14442

Product Information Section
Lifting Capacities

(mm) (inch)	1300 51	1600 63	2000 79	2500 98	3000 118	3500 138		(mm) (inch)
								
9800							* 4000	4500
200							* 10400	1170
1900				* 5400	* 5600	* 4800	* 3800	6200
300				* 12400	* 12400	* 10800	* 8150	250
1800				* 6700	* 6900	* 5800	* 4600	1700
240				* 13200	* 13200	* 11700	* 9150	290
1600		* 8100	* 8700	* 7400	* 7800	* 6400	* 5100	8000
300		* 20150	* 20150	* 16050	* 16050	* 13850	* 1050	300
1400				* 9200	* 9500	* 7900	* 6300	8700
120				* 20500	* 19500	* 17400	* 13600	330
1300				* 10000	* 10400	* 8700	* 6900	8000
60				* 23000	* 19500	* 17000	* 13400	330
0		* 3000	* 3000	* 11000	* 11000	* 9000	* 7000	8170
0		* 60000	* 60000	* 25200	* 17700	* 15000	* 12000	330
1300	* 7100	* 7300	* 11100	* 11700	* 11400	* 8300	* 6500	3100
40	* 16300	* 16300	* 20500	* 20500	* 18000	* 14900	* 12000	300
1000	* 12000	* 12000	* 14300	* 14300	* 10200	* 8300	* 6500	8700
120	* 27350	* 27350	* 20500	* 20500	* 17700	* 14900	* 12000	270
1800				* 10000	* 11700	* 11700	* 8100	1500
100		* 22100	* 22100	* 16200	* 16200		* 13100	270

Illustration 74

g06495091

Lift Chart Above : 325, 8300 kg (18300 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, and heavy lift OFF

(mm) (inch)	1300 51	1600 63	2000 79	2500 98	3000 118	3500 138		(mm) (inch)
								
9800							* 5000	4500
200							* 11150	1170
1900				* 4200	* 4200	* 3300	* 2300	6200
300				* 13000	* 12800	* 10700	* 8150	250
1800				* 6800	* 6800	* 5400	* 4200	1700
240				* 14500	* 14500	* 12600	* 9900	290
1600		* 8800	* 9500	* 8100	* 8100	* 6700	* 5100	8000
300		* 22100	* 22100	* 17400	* 17400	* 15200	* 12000	300
1400				* 9200	* 9500	* 7900	* 6300	8700
120				* 20700	* 19500	* 17400	* 13600	330
1300				* 10000	* 10400	* 8700	* 6900	8000
60				* 23000	* 19500	* 17000	* 13400	330
0		* 3450	* 3450	* 12000	* 12000	* 9900	* 7900	8170
0		* 67000	* 67000	* 27800	* 17700	* 15000	* 12000	330
1300	* 7100	* 7100	* 11400	* 12000	* 11800	* 8300	* 6500	3100
40	* 17300	* 17300	* 20100	* 20100	* 17200	* 14900	* 12000	300
1000	* 12000	* 12000	* 14300	* 14300	* 10200	* 8300	* 6500	8700
120	* 28950	* 28950	* 20500	* 20500	* 17700	* 14900	* 12000	270
1800				* 10000	* 11700	* 11700	* 8100	1500
100		* 25100	* 25100	* 18200	* 18200		* 14050	270

Illustration 75

g06495093

Lift Chart Above : 325, 8300 kg (18300 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, and heavy lift ON

Reach Boom with 2920 mm (9 ft 7 in) Stick 4900 kg (10800 lb) Counterweight

(mm) (inch)	1300 48	1600 50	2000 79	2600 105	3500 138	4500 180	5500 218	6500 258	7500 298	8500 338	9500 378	10500 418	11500 458	12500 498	13500 538	14500 578	15500 618	16500 658	17500 698	18500 738	19500 778	20500 818	21500 858	22500 898	23500 938	24500 978	25500 1018	26500 1058	27500 1098	28500 1138	29500 1178	30500 1218	31500 1258	32500 1298	33500 1338	34500 1378	35500 1418	36500 1458	37500 1498	38500 1538	39500 1578	40500 1618	41500 1658	42500 1698	43500 1738	44500 1778	45500 1818	46500 1858	47500 1898	48500 1938	49500 1978	50500 2018	51500 2058	52500 2098	53500 2138	54500 2178	55500 2218	56500 2258	57500 2298	58500 2338	59500 2378	60500 2418	61500 2458	62500 2498	63500 2538	64500 2578	65500 2618	66500 2658	67500 2698	68500 2738	69500 2778	70500 2818	71500 2858	72500 2898	73500 2938	74500 2978	75500 3018	76500 3058	77500 3098	78500 3138	79500 3178	80500 3218	81500 3258	82500 3298	83500 3338	84500 3378	85500 3418	86500 3458	87500 3498	88500 3538	89500 3578	90500 3618	91500 3658	92500 3698	93500 3738	94500 3778	95500 3818	96500 3858	97500 3898	98500 3938	99500 3978	100500 4018	101500 4058	102500 4098	103500 4138	104500 4178	105500 4218	106500 4258	107500 4298	108500 4338	109500 4378	110500 4418	111500 4458	112500 4498	113500 4538	114500 4578	115500 4618	116500 4658	117500 4698	118500 4738	119500 4778	120500 4818	121500 4858	122500 4898	123500 4938	124500 4978	125500 5018	126500 5058	127500 5098	128500 5138	129500 5178	130500 5218	131500 5258	132500 5298	133500 5338	134500 5378	135500 5418	136500 5458	137500 5498	138500 5538	139500 5578	140500 5618	141500 5658	142500 5698	143500 5738	144500 5778	145500 5818	146500 5858	147500 5898	148500 5938	149500 5978	150500 6018	151500 6058	152500 6098	153500 6138	154500 6178	155500 6218	156500 6258	157500 6298	158500 6338	159500 6378	160500 6418	161500 6458	162500 6498	163500 6538	164500 6578	165500 6618	166500 6658	167500 6698	168500 6738	169500 6778	170500 6818	171500 6858	172500 6898	173500 6938	174500 6978	175500 7018	176500 7058	177500 7098	178500 7138	179500 7178	180500 7218	181500 7258	182500 7298	183500 7338	184500 7378	185500 7418	186500 7458	187500 7498	188500 7538	189500 7578	190500 7618	191500 7658	192500 7698	193500 7738	194500 7778	195500 7818	196500 7858	197500 7898	198500 7938	199500 7978	200500 8018	201500 8058	202500 8098	203500 8138	204500 8178	205500 8218	206500 8258	207500 8298	208500 8338	209500 8378	210500 8418	211500 8458	212500 8498	213500 8538	214500 8578	215500 8618	216500 8658	217500 8698	218500 8738	219500 8778	220500 8818	221500 8858	222500 8898	223500 8938	224500 8978	225500 9018	226500 9058	227500 9098	228500 9138	229500 9178	230500 9218	231500 9258	232500 9298	233500 9338	234500 9378	235500 9418	236500 9458	237500 9498	238500 9538	239500 9578	240500 9618	241500 9658	242500 9698	243500 9738	244500 9778	245500 9818	246500 9858	247500 9898	248500 9938	249500 9978	250500 10018	251500 10058	252500 10098	253500 10138	254500 10178	255500 10218	256500 10258	257500 10298	258500 10338	259500 10378	260500 10418	261500 10458	262500 10498	263500 10538	264500 10578	265500 10618	266500 10658	267500 10698	268500 10738	269500 10778	270500 10818	271500 10858	272500 10898	273500 10938	274500 10978	275500 11018	276500 11058	277500 11098	278500 11138	279500 11178	280500 11218	281500 11258	282500 11298	283500 11338	284500 11378	285500 11418	286500 11458	287500 11498	288500 11538	289500 11578	290500 11618	291500 11658	292500 11698	293500 11738	294500 11778	295500 11818	296500 11858	297500 11898	298500 11938	299500 11978	300500 12018	301500 12058	302500 12098	303500 12138	304500 12178	305500 12218	306500 12258	307500 12298	308500 12338	309500 12378	310500 12418	311500 12458	312500 12498	313500 12538	314500 12578	315500 12618	316500 12658	317500 12698	318500 12738	319500 12778	320500 12818	321500 12858	322500 12898	323500 12938	324500 12978	325500 13018	326500 13058	327500 13098	328500 13138	329500 13178	330500 13218	331500 13258	332500 13298	333500 13338	334500 13378	335500 13418	336500 13458	337500 13498	338500 13538	339500 13578	340500 13618	341500 13658	342500 13698	343500 13738	344500 13778	345500 13818	346500 13858	347500 13898	348500 13938	349500 13978	350500 14018	351500 14058	352500 14098	353500 14138	354500 14178	355500 14218	356500 14258	357500 14298	358500 14338	359500 14378	360500 14418	361500 14458	362500 14498	363500 14538	364500 14578	365500 14618	366500 14658	367500 14698	368500 14738	369500 14778	370500 14818	371500 14858	372500 14898	373500 14938	374500 14978	375500 15018	376500 15058	377500 15098	378500 15138	379500 15178	380500 15218	381500 15258	382500 15298	383500 15338	384500 15378	385500 15418	386500 15458	387500 15498	388500 15538	389500 15578	390500 15618	391500 15658	392500 15698	393500 15738	394500 15778	395500 15818	396500 15858	397500 15898	398500 15938	399500 15978	400500 16018	401500 16058	402500 16098	403500 16138	404500 16178	405500 16218	406500 16258	407500 16298	408500 16338	409500 16378	410500 16418	411500 16458	412500 16498	413500 16538	414500 16578	415500 16618	416500 16658	417500 16698	418500 16738	419500 16778	420500 16818	421500 16858	422500 16898	423500 16938	424500 16978	425500 17018	426500 17058	427500 17098	428500 17138	429500 17178	430500 17218	431500 17258	432500 17298	433500 17338	434500 17378	435500 17418	436500 17458	437500 17498	438500 17538	439500 17578	440500 17618	441500 17658	442500 17698	443500 17738	444500 17778	445500 17818	446500 17858	447500 17898	448500 17938	449500 17978	450500 18018	451500 18058	452500 18098	453500 18138	454500 18178	455500 18218	456500 18258	457500 18298	458500 18338	459500 18378	460500 18418	461500 18458	462500 18498	463500 18538	464500 18578	465500 18618	466500 18658	467500 18698	468500 18738	469500 18778	470500 18818	471500 18858	472500 18898	473500 18938	474500 18978	475500 19018	476500 19058	477500 19098	478500 19138	479500 19178	480500 19218	481500 19258	482500 19298	483500 19338	484500 19378	485500 19418	486500 19458	487500 19498	488500 19538	489500 19578	490500 19618	491500 19658	492500 19698	493500 19738	494500 19778	495500 19818	496500 19858	497500 19898	498500 19938	499500 19978	500500 20018	501500 20058	502500 20098	503500 20138	504500 20178	505500 20218	506500 20258	507500 20298	508500 20338	509500 20378	510500 20418	511500 20458	512500 20498	513500 20538	514500 20578	515500 20618	516500 20658	517500 20698	518500 20738	519500 20778	520500 20818	521500 20858	522500 20898	523500 20938	524500 20978	525500 21018	526500 21058	527500 21098	528500 21138	529500 21178	530500 21218	531500 21258	532500 21298	533500 21338	534500 21378	535500 21418	536500 21458	537500 21498	538500 21538	539500 21578	540500 21618	541500 21658	542500 21698	543500 21738	544500 21778	545500 21818	546500 21858	547500 21898	548500 21938	549500 21978	550500 22018	551500 22058	552500 22098	553500 22138	554500 22178	555500 22218	556500 22258	557500 22298	558500 22338	559500 22378	560500 22418	561500 22458	562500 22498	563500 22538	564500 22578	565500 22618	566500 22658	567500 22698	568500 22738	569500 22778	570500 22818	571500 22858	572500 22898	573500 22938	574500 22978	575500 23018	576500 23058	577500 23098	578500 23138	579500 23178	580500 23218	581500 23258	582500 23298	583500 23338	584500 23378	585500 23418	586500 23458	587500 23498	588500 23538	589500 23578	590500 23618	591500 23658	592500 23698	593500 23738	594500 23778	595500 23818	596500 23858	597500 23898	598500 23938	599500 23978	600500 24018	601500 24058	602500 24098	603500 24138	604500 24178	605500 24218	606500 24258	607500 24298	608500 24338	609500 24378	610500 24418	611500 24458	612500 24498	613500 24538	614500 24578	615500 24618	616500 24658	617500 24698	618500 24738	619500 24778	620500 24818	621500 24858	622500 24898	623500 24938	624500 24978	625500 25018	626500 25058	627500 25098	628500 25138	629500 25178	630500 25218	631500 25258	632500 25298	633500 25338	634500 25378	635500 25418	636500 25458	637500 25498	638500 25538	639500 25578	640500 25618	641500 25658	642500 25698	643500 25738	644500 25778	645500 25818	646500 25858	647500 25898	648500 25938	649500 25978	650500 26018	651500 26058	652500 26098	653500 26138	654500 26178	655500 26218	656500 26258	657500 26298	658500 26338	659500 26378	660500 26418	661500 26458	662500 26498	663500 26538	664500 26578	665500 26618	666500 26658	667500 26698	668500 26738	669500 26778	670500 26818	671500 26858	672500 26898	673500 26938	674500 26978	675500 27018	676500 27058	677500 27098	678500 27138	679500 27178	680500 27218	681500 27258	682500 27298	683500 27338	684500 27378	685500 27418	686500 27458	687500 27498	688500 27538	689500 27578	690500 27618	691500 27658	692500 27698	693500 27738	694500 27778	695500 27818

Product Information Section
Lifting Capacities

(mm) (inch)	1100 44	1000 120	6500 260	6000 240	2500 100		(mm) (inch)
							
9800 260							* 4000 * 4000 4500 * 10400 * 10400 1170
7900 200			* 5400 * 5400 4800 * 4800 * 12400 * 12400 10800 * 10800				* 3800 * 3800 4200 * 8150 * 8150 250
5800 240			* 6700 * 6700 5800 * 5800 * 13200 * 13200 12750 * 12750				* 3600 * 3600 1700 * 7550 * 7550 290
4900 100		* 8100 * 8100 7100 * 7100 * 20150 * 20150 16050 * 16050	* 11000 * 11000 9400 * 9400 * 13000 * 13000 12700 * 12700	* 16000 * 16000 14700 * 14700	* 18500 * 18500 16500 * 16500	* 4200 * 4200 3100 * 3100	8000 200
3900 120			* 9200 * 9200 7250 * 7250 * 20500 * 20500 18700 * 18700	* 12500 * 12500 11200 * 11200	* 15250 * 15250 13600 * 13600	* 4100 * 4100 3050 * 3050	8700 220
1900 60			* 10050 * 10050 8000 * 8000 * 23800 * 23800 17000 * 17000	* 14000 * 14000 12500 * 12500	* 16750 * 16750 15000 * 15000	* 3900 * 3900 2950 * 2950	8500 210
0 0		* 3000 * 3000 2500 * 2500 * 6000 * 6000 5250 * 5250	* 11000 * 11000 9400 * 9400 * 25250 * 25250 17750 * 17750	* 16000 * 16000 14700 * 14700	* 18500 * 18500 16500 * 16500	* 4150 * 4150 3050 * 3050	8170 200
1300 40	* 7100 * 7100 6300 * 6300 * 16300 * 16300	* 8100 * 8100 7100 * 7100 * 20550 * 20550	* 11400 * 11400 9850 * 9850 * 24000 * 24000	* 16450 * 16450 14200 * 14200	* 19250 * 19250 17050 * 17050	* 4250 * 4250 3150 * 3150	8300 200
3800 120	* 12200 * 12200 10400 * 10400 * 27150 * 27150	* 14300 * 14300 12300 * 12300 * 30950 * 30950	* 19200 * 19200 17000 * 17000 * 33700 * 33700	* 27000 * 27000 23500 * 23500	* 32200 * 32200 28700 * 28700	* 4500 * 4500 3350 * 3350	8700 220
4900 100		* 8800 * 8800 7700 * 7700 * 22100 * 22100	* 11700 * 11700 10000 * 10000 * 26700 * 26700	* 17000 * 17000 14700 * 14700	* 20000 * 20000 17700 * 17700	* 4100 * 4100 3000 * 3000	8500 210

Illustration 78

g06495111

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

(mm) (inch)	1100 44	1000 120	6500 260	6000 240	2500 100		(mm) (inch)
							
9800 260							* 5000 * 5000 4500 * 11150 * 11150 1170
7900 200			* 6200 * 6200 5300 * 5300 * 13600 * 13600 12150 * 12150				* 4400 * 4400 4200 * 8150 * 8150 250
5800 240			* 6800 * 6800 5800 * 5800 * 14500 * 14500 13050 * 13050				* 3950 * 3950 1700 * 8100 * 8100 290
4900 100		* 8800 * 8800 7700 * 7700 * 22100 * 22100	* 11700 * 11700 10000 * 10000 * 15000 * 15000	* 16000 * 16000 14700 * 14700	* 18500 * 18500 16500 * 16500	* 4300 * 4300 3100 * 3100	8000 200
3900 120			* 9200 * 9200 7250 * 7250 * 22700 * 22700	* 12500 * 12500 11200 * 11200	* 15250 * 15250 13600 * 13600	* 4100 * 4100 3050 * 3050	8700 220
1900 60			* 10050 * 10050 8000 * 8000 * 26000 * 26000	* 14000 * 14000 12500 * 12500	* 16750 * 16750 15000 * 15000	* 3900 * 3900 2950 * 2950	8500 210
0 0		* 3450 * 3450 2950 * 2950 * 6900 * 6900	* 12050 * 12050 10400 * 10400 * 27800 * 27800	* 16450 * 16450 14200 * 14200	* 19250 * 19250 17050 * 17050	* 4250 * 4250 3150 * 3150	8170 200
1300 40	* 7100 * 7100 6300 * 6300 * 16300 * 16300	* 8100 * 8100 7100 * 7100 * 20550 * 20550	* 11400 * 11400 9850 * 9850 * 24000 * 24000	* 16450 * 16450 14200 * 14200	* 19250 * 19250 17050 * 17050	* 4250 * 4250 3150 * 3150	8300 200
3800 120	* 12200 * 12200 10400 * 10400 * 28950 * 28950	* 14300 * 14300 12300 * 12300 * 32750 * 32750	* 19200 * 19200 17000 * 17000 * 36500 * 36500	* 27000 * 27000 23500 * 23500	* 32200 * 32200 28700 * 28700	* 4500 * 4500 3350 * 3350	8700 220
4900 100		* 8800 * 8800 7700 * 7700 * 22100 * 22100	* 11700 * 11700 10000 * 10000 * 26700 * 26700	* 17000 * 17000 14700 * 14700	* 20000 * 20000 17700 * 17700	* 4100 * 4100 3000 * 3000	8500 210

Illustration 79

g06495115

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

(mm) (inch)	1300 51	1600 63	2000 79	2400 94	2700 106	3000 118	3300 130	3600 141	3900 154	4200 165	4500 177	4800 189	5100 200	5400 212	5700 224	6000 236	6300 248	6600 260	6900 272	7200 284	7500 296	7800 308	8100 320	8400 332	8700 344	9000 356	9300 368	9600 380	9900 392	10200 404	10500 416	10800 428	11100 440	11400 452	11700 464	12000 476	12300 488	12600 500	12900 512	13200 524	13500 536	13800 548	14100 560	14400 572	14700 584	15000 596	15300 608	15600 620	15900 632	16200 644	16500 656	16800 668	17100 680	17400 692	17700 704	18000 716	18300 728	18600 740	18900 752	19200 764	19500 776	19800 788	20100 800	20400 812	20700 824	21000 836	21300 848	21600 860	21900 872	22200 884	22500 896	22800 908	23100 920	23400 932	23700 944	24000 956	24300 968	24600 980	24900 992	25200 1004	25500 1016	25800 1028	26100 1040	26400 1052	26700 1064	27000 1076	27300 1088	27600 1100	27900 1112	28200 1124	28500 1136	28800 1148	29100 1160	29400 1172	29700 1184	30000 1196	30300 1208	30600 1220	30900 1232	31200 1244	31500 1256	31800 1268	32100 1280	32400 1292	32700 1304	33000 1316	33300 1328	33600 1340	33900 1352	34200 1364	34500 1376	34800 1388	35100 1400	35400 1412	35700 1424	36000 1436	36300 1448	36600 1460	36900 1472	37200 1484	37500 1496	37800 1508	38100 1520	38400 1532	38700 1544	39000 1556	39300 1568	39600 1580	39900 1592	40200 1604	40500 1616	40800 1628	41100 1640	41400 1652	41700 1664	42000 1676	42300 1688	42600 1700	42900 1712	43200 1724	43500 1736	43800 1748	44100 1760	44400 1772	44700 1784	45000 1796	45300 1808	45600 1820	45900 1832	46200 1844	46500 1856	46800 1868	47100 1880	47400 1892	47700 1904	48000 1916	48300 1928	48600 1940	48900 1952	49200 1964	49500 1976	49800 1988	50100 2000	50400 2012	50700 2024	51000 2036	51300 2048	51600 2060	51900 2072	52200 2084	52500 2096	52800 2108	53100 2120	53400 2132	53700 2144	54000 2156	54300 2168	54600 2180	54900 2192	55200 2204	55500 2216	55800 2228	56100 2240	56400 2252	56700 2264	57000 2276	57300 2288	57600 2300	57900 2312	58200 2324	58500 2336	58800 2348	59100 2360	59400 2372	59700 2384	60000 2396	60300 2408	60600 2420	60900 2432	61200 2444	61500 2456	61800 2468	62100 2480	62400 2492	62700 2504	63000 2516	63300 2528	63600 2540	63900 2552	64200 2564	64500 2576	64800 2588	65100 2600	65400 2612	65700 2624	66000 2636	66300 2648	66600 2660	66900 2672	67200 2684	67500 2696	67800 2708	68100 2720	68400 2732	68700 2744	69000 2756	69300 2768	69600 2780	69900 2792	70200 2804	70500 2816	70800 2828	71100 2840	71400 2852	71700 2864	72000 2876	72300 2888	72600 2900	72900 2912	73200 2924	73500 2936	73800 2948	74100 2960	74400 2972	74700 2984	75000 2996	75300 3008	75600 3020	75900 3032	76200 3044	76500 3056	76800 3068	77100 3080	77400 3092	77700 3104	78000 3116	78300 3128	78600 3140	78900 3152	79200 3164	79500 3176	79800 3188	80100 3200	80400 3212	80700 3224	81000 3236	81300 3248	81600 3260	81900 3272	82200 3284	82500 3296	82800 3308	83100 3320	83400 3332	83700 3344	84000 3356	84300 3368	84600 3380	84900 3392	85200 3404	85500 3416	85800 3428	86100 3440	86400 3452	86700 3464	87000 3476	87300 3488	87600 3500	87900 3512	88200 3524	88500 3536	88800 3548	89100 3560	89400 3572	89700 3584	90000 3596	90300 3608	90600 3620	90900 3632	91200 3644	91500 3656	91800 3668	92100 3680	92400 3692	92700 3704	93000 3716	93300 3728	93600 3740	93900 3752	94200 3764	94500 3776	94800 3788	95100 3800	95400 3812	95700 3824	96000 3836	96300 3848	96600 3860	96900 3872	97200 3884	97500 3896	97800 3908	98100 3920	98400 3932	98700 3944	99000 3956	99300 3968	99600 3980	99900 3992	100200 4004	100500 4016	100800 4028	101100 4040	101400 4052	101700 4064	102000 4076	102300 4088	102600 4100	102900 4112	103200 4124	103500 4136	103800 4148	104100 4160	104400 4172	104700 4184	105000 4196	105300 4208	105600 4220	105900 4232	106200 4244	106500 4256	106800 4268	107100 4280	107400 4292	107700 4304	108000 4316	108300 4328	108600 4340	108900 4352	109200 4364	109500 4376	109800 4388	110100 4400	110400 4412	110700 4424	111000 4436	111300 4448	111600 4460	111900 4472	112200 4484	112500 4496	112800 4508	113100 4520	113400 4532	113700 4544	114000 4556	114300 4568	114600 4580	114900 4592	115200 4604	115500 4616	115800 4628	116100 4640	116400 4652	116700 4664	117000 4676	117300 4688	117600 4700	117900 4712	118200 4724	118500 4736	118800 4748	119100 4760	119400 4772	119700 4784	120000 4796	120300 4808	120600 4820	120900 4832	121200 4844	121500 4856	121800 4868	122100 4880	122400 4892	122700 4904	123000 4916	123300 4928	123600 4940	123900 4952	124200 4964	124500 4976	124800 4988	125100 5000	125400 5012	125700 5024	126000 5036	126300 5048	126600 5060	126900 5072	127200 5084	127500 5096	127800 5108	128100 5120	128400 5132	128700 5144	129000 5156	129300 5168	129600 5180	129900 5192	130200 5204	130500 5216	130800 5228	131100 5240	131400 5252	131700 5264	132000 5276	132300 5288	132600 5300	132900 5312	133200 5324	133500 5336	133800 5348	134100 5360	134400 5372	134700 5384	135000 5396	135300 5408	135600 5420	135900 5432	136200 5444	136500 5456	136800 5468	137100 5480	137400 5492	137700 5504	138000 5516	138300 5528	138600 5540	138900 5552	139200 5564	139500 5576	139800 5588	140100 5600	140400 5612	140700 5624	141000 5636	141300 5648	141600 5660	141900 5672	142200 5684	142500 5696	142800 5708	143100 5720	143400 5732	143700 5744	144000 5756	144300 5768	144600 5780	144900 5792	145200 5804	145500 5816	145800 5828	146100 5840	146400 5852	146700 5864	147000 5876	147300 5888	147600 5900	147900 5912	148200 5924	148500 5936	148800 5948	149100 5960	149400 5972	149700 5984	150000 5996	150300 6008	150600 6020	150900 6032	151200 6044	151500 6056	151800 6068	152100 6080	152400 6092	152700 6104	153000 6116	153300 6128	153600 6140	153900 6152	154200 6164	154500 6176	154800 6188	155100 6200	155400 6212	155700 6224	156000 6236	156300 6248	156600 6260	156900 6272	157200 6284	157500 6296	157800 6308	158100 6320	158400 6332	158700 6344	159000 6356	159300 6368	159600 6380	159900 6392	160200 6404	160500 6416	160800 6428	161100 6440	161400 6452	161700 6464	162000 6476	162300 6488	162600 6500	162900 6512	163200 6524	163500 6536	163800 6548	164100 6560	164400 6572	164700 6584	165000 6596	165300 6608	165600 6620	165900 6632	166200 6644	166500 6656	166800 6668	167100 6680	167400 6692	167700 6704	168000 6716	168300 6728	168600 6740	168900 6752	169200 6764	169500 6776	169800 6788	170100 6800	170400 6812	170700 6824	171000 6836	171300 6848	171600 6860	171900 6872	172200 6884	172500 6896	172800 6908	173100 6920	173400 6932	173700 6944	174000 6956	174300 6968	174600 6980	174900 6992	175200 7004	175500 7016	175800 7028	176100 7040	176400 7052	176700 7064	177000 7076	177300 7088	177600 7100	177900 7112	178200 7124	178500 7136	178800 7148	179100 7160	179400 7172	179700 7184	180000 7196	180300 7208	180600 7220	180900 7232	181200 7244	181500 7256	181800 7268	182100 7280	182400 7292	182700 7304	183000 7316	183300 7328	183600 7340	183900 7352	184200 7364	184500 7376	184800 7388	185100 7400	185400 7412	185700 7424	186000 7436	186300 7448	186600 7460	186900 7472	187200 7484	187500 7496	187800 7508	188100 7520	188400 7532	188700 7544	189000 7556	189300 7568	189600 7580	189900 7592	190200 7604	190500 7616	190800 7628	191100 7640	191400 7652	191700 7664	192000 7676	192300 7688	192600 7700	192900 7712	193200 7724	193500 7736	193800 7748	194100 7760	194400 7772	194700 7784	195000 7796	195300 7808	195600 7820	195900 7832	196200 7844	196500 7856	196800 7868	197100 7880	197400 7892	197700 7904	198000 7916	198300 7928	198600 7940	198900 7952	199200 7964	199500 7976	199800 7988	200100 8000	200400 8012	200700 8024	201000 8036	201300 8048	201600 8060	201900 8072	202200 8084	202500 8096	202800 8108	203100 8120	203400 8132	203700 8144	204000 8156	204300 8168	204600 8180	204900 8192	205200 8204	205500 8216	205800 8228	206100 8240	206400 8252	206700 8264	207000 8276	207300 8288	207600 8300	207900 8312	208200 8324	208500 8336	208800 8348	209100 8360	209400 8372	209700 8384	210000 8396	210300 8408	210600 8420	210900 8432	211200 8444	211500 8456	211800 8468	212100 8480	212400 8492	212700 8504	213000 8516	213300 8528	213600 8540	213900 8552	214200 8564	214500 8576	214800 8588	215100 8600	215400 8612	215700 8624	216000 8636	216300 8648	216600 8660	216900 8672	217200 8684	217500 8696	217800 8708	218100 8720	218400 8732	218700 8744	219000 8756	219300 8768	219600 8780	219900 8792	220200 8804	220500 8816	220800 8828	221100 8840	221400 8852	221700 8864	222000 8876	222300 8888	222600 8900	222900 8912	223200 8924	223500 8936	223800 8948	224100 8960	224400 8972	224700 8984	22

Product Information Section
Lifting Capacities

(mm) (inch)	1300 51	1600 63	2000 79	2400 94	2700 106		(mm) (inch)
8800 260							* 4000 * 4000 4500 * 10400 * 10400 1170
7900 300			* 5400 * 5400 4800 * 4800 * 12450 * 12450 10300 * 10300				* 3850 * 3850 4200 * 8150 * 8150 250
6800 240			* 4700 * 4700 3800 * 3800 * 11250 * 11250 10250 * 10250				* 3600 * 3600 1700 * 7550 * 7550 290
4900 160		* 8100 * 8100 7100 * 7100 * 20150 * 20150 16050 * 16050	1400 * 1400 12000 * 12000 12050 * 12050	1800 * 1800 16050 * 16050 12050 * 12050	1800 * 1800 16050 * 16050 12050 * 12050	4100 * 4100 3100 * 3100 8000 * 7050 * 7050 3050 * 3050 300	
3800 120			* 9200 * 9200 7250 * 7250 5000 * 5000 * 20500 * 20500 18010 * 18010 13600 * 13600	1250 * 1250 4000 * 4000 3050 * 3050 8700 * 20500 * 20500 18010 * 18010 13600 * 13600	1250 * 1250 4000 * 4000 3050 * 3050 8700 * 20500 * 20500 18010 * 18010 13600 * 13600	3050 * 3050 3450 * 3450 8700 * 8050 * 8050 3500 * 3500 330	
1500 60			* 10050 * 10050 8850 * 8850 5250 * 5250 * 23800 * 23800 17350 * 17350 11900 * 11900	8850 * 8850 5250 * 5250 1650 * 1650 3900 * 3900 * 23800 * 23800 17350 * 17350 11900 * 11900	8850 * 8850 5250 * 5250 1650 * 1650 3900 * 3900 * 23800 * 23800 17350 * 17350 11900 * 11900	3900 * 3900 3250 * 3250 8500 * 8150 * 8150 7300 * 7300 330	
0 0		* 3000 * 3000 11050 * 11050 7800 * 7800 * 60050 * 60050 25250 * 25250 16800 * 16800	11050 * 11050 7800 * 7800 5600 * 5600 1850 * 1850 * 60050 * 60050 25250 * 25250 16800 * 16800	11050 * 11050 7800 * 7800 5600 * 5600 1850 * 1850 * 60050 * 60050 25250 * 25250 16800 * 16800	11050 * 11050 7800 * 7800 5600 * 5600 1850 * 1850 * 60050 * 60050 25250 * 25250 16800 * 16800	1850 * 1850 3050 * 3050 4150 * 4150 3400 * 3400 * 6150 * 6150 7500 * 7500 330	
1300 40	* 7300 * 7300 16300 * 16300 * 20550 * 20550	* 7300 * 7300 16300 * 16300 * 20550 * 20550	* 11100 * 11100 11700 * 11700 11400 * 11400 * 26550 * 26550 24000 * 24000	7300 * 7300 10900 * 10900 10450 * 10450 * 26550 * 26550 24000 * 24000	7300 * 7300 10900 * 10900 10450 * 10450 * 26550 * 26550 24000 * 24000	10900 * 10900 8300 * 8300 11150 * 11150 * 26550 * 26550 24000 * 24000	11100 * 11100 7300 * 7300 3500 * 26550 * 26550 24000 * 24000
3800 120	* 12090 * 12090 20150 * 20150 * 27150 * 27150	* 12090 * 12090 20150 * 20150 * 27150 * 27150	* 14300 * 14300 10200 * 10200 7800 * 7800 * 30950 * 30950 22300 * 22300	14300 * 14300 10200 * 10200 7800 * 7800 * 30950 * 30950 22300 * 22300	14300 * 14300 10200 * 10200 7800 * 7800 * 30950 * 30950 22300 * 22300	10200 * 10200 4400 * 4400 8700 * 30950 * 30950 22300 * 22300	
4900 160			* 18050 * 18050 17700 * 17700 * 22100 * 22100	18050 * 18050 17700 * 17700 * 22100 * 22100	18050 * 18050 17700 * 17700 * 22100 * 22100	17700 * 17700 4100 * 4100 3500 * 22100 * 22100 14000 * 14000	

Illustration 82

g06495122

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

(mm) (inch)	1300 51	1600 63	2000 79	2400 94	2700 106		(mm) (inch)
8800 260							* 5000 * 5000 4500 * 11150 * 11150 1170
7900 300			* 4200 * 4200 5300 * 5300 * 13650 * 13650 10350 * 10350				* 4100 * 4100 4200 * 8150 * 8150 250
6800 240			* 4800 * 4800 4800 * 4800 * 14550 * 14550 12050 * 12050				* 3950 * 3950 1700 * 8100 * 8100 290
4900 160		* 8000 * 8000 7100 * 7100 * 20100 * 20100	1400 * 1400 11900 * 11900 15200 * 15200	1800 * 1800 16050 * 16050 12050 * 12050	1800 * 1800 16050 * 16050 12050 * 12050	4100 * 4100 3100 * 3100 8000 * 7050 * 7050 3050 * 3050 300	
3800 120			* 9200 * 9200 7250 * 7250 5000 * 5000 * 20500 * 20500 18010 * 18010	1250 * 1250 4000 * 4000 3050 * 3050 8700 * 20500 * 20500 18010 * 18010	1250 * 1250 4000 * 4000 3050 * 3050 8700 * 20500 * 20500 18010 * 18010	3050 * 3050 3450 * 3450 8700 * 8050 * 8050 3500 * 3500 330	
1500 60			* 10050 * 10050 8850 * 8850 5250 * 5250 * 23800 * 23800 17350 * 17350	8850 * 8850 5250 * 5250 1650 * 1650 3900 * 3900 * 23800 * 23800 17350 * 17350	8850 * 8850 5250 * 5250 1650 * 1650 3900 * 3900 * 23800 * 23800 17350 * 17350	3900 * 3900 3250 * 3250 8500 * 8150 * 8150 7300 * 7300 330	
0 0		* 3450 * 3450 12950 * 12950 7800 * 7800 * 63000 * 63000	12950 * 12950 7800 * 7800 5600 * 5600 1850 * 1850 * 63000 * 63000 25250 * 25250	12950 * 12950 7800 * 7800 5600 * 5600 1850 * 1850 * 63000 * 63000 25250 * 25250	12950 * 12950 7800 * 7800 5600 * 5600 1850 * 1850 * 63000 * 63000 25250 * 25250	1850 * 1850 3050 * 3050 4150 * 4150 3400 * 3400 * 6150 * 6150 7500 * 7500 330	
1300 40	* 7300 * 7300 16300 * 16300 * 20550 * 20550	* 7300 * 7300 16300 * 16300 * 20550 * 20550	* 11100 * 11100 11700 * 11700 11400 * 11400 * 26550 * 26550	7300 * 7300 10900 * 10900 10450 * 10450 * 26550 * 26550	7300 * 7300 10900 * 10900 10450 * 10450 * 26550 * 26550	10900 * 10900 8300 * 8300 11150 * 11150 * 26550 * 26550	11100 * 11100 7300 * 7300 3500 * 26550 * 26550
3800 120	* 12090 * 12090 20150 * 20150 * 27150 * 27150	* 12090 * 12090 20150 * 20150 * 27150 * 27150	* 14300 * 14300 10200 * 10200 7800 * 7800 * 30950 * 30950	14300 * 14300 10200 * 10200 7800 * 7800 * 30950 * 30950	14300 * 14300 10200 * 10200 7800 * 7800 * 30950 * 30950	10200 * 10200 4400 * 4400 8700 * 30950 * 30950	
4900 160			* 18050 * 18050 17700 * 17700 * 22100 * 22100	18050 * 18050 17700 * 17700 * 22100 * 22100	18050 * 18050 17700 * 17700 * 22100 * 22100	17700 * 17700 4100 * 4100 3500 * 22100 * 22100	

Illustration 83

g06495125

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

(mm) (inch)	1100 44	1300 52	1500 60	1700 68	1900 76	2100 84		(mm) (inch)
								
9800								* 4000 * 4000 4500
200								* 10400 * 10400 1170
1900				* 5400 * 5400	* 4800 * 4800			* 3800 * 3800 4200
300				* 12400 * 12400	* 10800 * 10800			* 8150 * 8150 250
1800				* 6700 * 6700	* 5800 * 5800			* 3000 * 3000 3300
240				* 13200 * 13200	* 11700 * 11700			* 7550 * 7550 290
1600		* 8100 * 8100	* 7100 * 7100	* 6400 * 6400	* 5600 * 5600	* 5000 * 5000	* 3100 * 3100	* 3200 3200 8000
300		* 20150 * 20150	* 18050 * 18050	* 16050 * 16050	* 14050 * 14050	* 12050 * 12050	* 7050 * 7050	* 7150 200
1500				* 9200 * 9200	* 8000 * 8000	* 7100 * 7100	* 3050 * 3050	* 3000 3000 8500
520				* 20500 * 20500	* 18000 * 18000	* 15900 * 15900	* 7000 * 7000	* 6500 330
1500				* 10000 * 10000	* 8700 * 8700	* 7700 * 7700	* 3400 * 3400	* 3100 2900 8500
60				* 23500 * 23500	* 20500 * 20500	* 18000 * 18000	* 7500 * 7500	* 6100 330
0				* 3000 * 3000	* 2600 * 2600	* 2300 * 2300	* 1100 * 1100	* 1100 3300 8150
0				* 60050 * 60050	* 52000 * 52000	* 45000 * 45000	* 2100 * 2100	* 1550 4500 330
1300	* 7100 * 7100	* 6100 * 6100	* 5400 * 5400	* 4800 * 4800	* 4200 * 4200	* 3700 * 3700	* 1800 * 1800	* 1800 3300 3500
40	* 16300 * 16300	* 14300 * 14300	* 12550 * 12550	* 11000 * 11000	* 9700 * 9700	* 8500 * 8500	* 4100 * 4100	* 3900 3100 300
1000	* 52000 * 52000	* 45000 * 45000	* 39000 * 39000	* 34000 * 34000	* 30000 * 30000	* 26000 * 26000		* 1000 3500 8700
120	* 27150 * 27150	* 23550 * 23550	* 20500 * 20500	* 18000 * 18000	* 15800 * 15800	* 13800 * 13800		* 6100 8500 270
1000				* 10000 * 10000	* 8700 * 8700	* 7700 * 7700		* 3100 3100 3500
100				* 22100 * 22100	* 19100 * 19100	* 16500 * 16500		* 6100 5400 270

Illustration 84

g06495128

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift OFF

(mm) (inch)	1100 44	1300 52	1500 60	1700 68	1900 76	2100 84		(mm) (inch)
								
9800								* 3000 * 3000 4500
200								* 11150 * 11150 1170
1900				* 4200 * 4200	* 3700 * 3700			* 4400 * 4400 4200
300				* 13000 * 13000	* 11500 * 11500			* 8150 * 8150 250
1800				* 6800 * 6800	* 5900 * 5900			* 3050 * 3050 3300
240				* 14500 * 14500	* 12800 * 12800			* 8100 * 8100 290
1600		* 8000 * 8000	* 7000 * 7000	* 6300 * 6300	* 5500 * 5500	* 4900 * 4900	* 3100 * 3100	* 3200 3200 8000
300		* 20150 * 20150	* 18050 * 18050	* 16050 * 16050	* 14050 * 14050	* 12050 * 12050	* 7050 * 7050	* 7150 200
1500				* 9200 * 9200	* 8000 * 8000	* 7100 * 7100	* 3050 * 3050	* 3000 3000 8500
520				* 20500 * 20500	* 18000 * 18000	* 15900 * 15900	* 7000 * 7000	* 6500 330
1500				* 10000 * 10000	* 8700 * 8700	* 7700 * 7700	* 3400 * 3400	* 3100 2900 8500
60				* 23500 * 23500	* 20500 * 20500	* 18000 * 18000	* 7500 * 7500	* 6100 330
0				* 3450 * 3450	* 3000 * 3000	* 2600 * 2600	* 1100 * 1100	* 1100 3300 8150
0				* 67000 * 67000	* 58000 * 58000	* 50000 * 50000	* 2100 * 2100	* 1600 4500 330
1300	* 7100 * 7100	* 6100 * 6100	* 5400 * 5400	* 4800 * 4800	* 4200 * 4200	* 3700 * 3700	* 1800 * 1800	* 1800 3300 3500
40	* 16300 * 16300	* 14300 * 14300	* 12550 * 12550	* 11000 * 11000	* 9700 * 9700	* 8500 * 8500	* 4100 * 4100	* 3900 3100 300
1000	* 52000 * 52000	* 45000 * 45000	* 39000 * 39000	* 34000 * 34000	* 30000 * 30000	* 26000 * 26000		* 1000 3500 8700
120	* 28050 * 28050	* 24450 * 24450	* 21400 * 21400	* 18900 * 18900	* 16600 * 16600	* 14500 * 14500		* 6100 8500 270
1000				* 10000 * 10000	* 8700 * 8700	* 7700 * 7700		* 3100 3100 3500
100				* 22100 * 22100	* 19100 * 19100	* 16500 * 16500		* 6100 5400 270

Illustration 85

g06495130

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift ON

Product Information Section
Lifting Capacities

(mm) (inch)	1100 44	1000 120	6500 260	6000 240	2500 100		(mm) (inch)
							
9800 260							* 4000 * 4000 4500 * 10400 * 10400 1170
7900 200			* 5400 * 5400 * 4900 * 4900				* 3850 * 3850 4200 * 8150 * 8150 250
5800 140			* 4500 * 4500 * 4000 * 4000				* 3000 * 3000 3300 * 7550 * 7550 200
4900 120		* 3150 * 3150	* 2800 * 2800 * 2500 * 2500				* 2100 * 2100 2300 * 5400 * 5400 200
3900 100			* 2200 * 2200 * 1900 * 1900				* 1650 * 1650 1750 * 4200 * 4200 150
2900 70			* 1600 * 1600 * 1400 * 1400				* 1200 * 1200 1300 * 3000 * 3000 100
1900 50			* 1000 * 1000 * 850 * 850				* 750 * 750 800 * 1900 * 1900 70
900 20			* 500 * 500 * 400 * 400				* 350 * 350 370 * 900 * 900 30
0 0			* 250 * 250 * 200 * 200				* 150 * 150 160 * 350 * 350 10
1900 40	* 7100 * 7100	* 6300 * 6300	* 5400 * 5400 * 4900 * 4900				* 4000 * 4000 4300 * 10400 * 10400 1170
1500 40	* 5200 * 5200	* 4500 * 4500	* 3800 * 3800 * 3300 * 3300				* 2800 * 2800 3000 * 7100 * 7100 250
1100 30	* 3800 * 3800	* 3200 * 3200	* 2600 * 2600 * 2200 * 2200				* 1900 * 1900 2000 * 4800 * 4800 170
700 20	* 2400 * 2400	* 2000 * 2000	* 1600 * 1600 * 1400 * 1400				* 1200 * 1200 1300 * 3000 * 3000 100

Illustration 86

g06495136

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

(mm) (inch)	1100 44	1000 120	6500 260	6000 240	2500 100		(mm) (inch)
							
9800 260							* 4000 * 4000 4500 * 10400 * 10400 1170
7900 200			* 5400 * 5400 * 4900 * 4900				* 3850 * 3850 4200 * 8150 * 8150 250
5800 140			* 4500 * 4500 * 4000 * 4000				* 3000 * 3000 3300 * 7550 * 7550 200
4900 120		* 3150 * 3150	* 2800 * 2800 * 2500 * 2500				* 2100 * 2100 2300 * 5400 * 5400 200
3900 100			* 2200 * 2200 * 1900 * 1900				* 1650 * 1650 1750 * 4200 * 4200 150
2900 70			* 1600 * 1600 * 1400 * 1400				* 1200 * 1200 1300 * 3000 * 3000 100
1900 50			* 1000 * 1000 * 850 * 850				* 750 * 750 800 * 1900 * 1900 70
900 20			* 500 * 500 * 400 * 400				* 350 * 350 370 * 900 * 900 30
0 0			* 250 * 250 * 200 * 200				* 150 * 150 160 * 350 * 350 10
1900 40	* 7100 * 7100	* 6300 * 6300	* 5400 * 5400 * 4900 * 4900				* 4000 * 4000 4300 * 10400 * 10400 1170
1500 40	* 5200 * 5200	* 4500 * 4500	* 3800 * 3800 * 3300 * 3300				* 2800 * 2800 3000 * 7100 * 7100 250
1100 30	* 3800 * 3800	* 3200 * 3200	* 2600 * 2600 * 2200 * 2200				* 1900 * 1900 2000 * 4800 * 4800 170
700 20	* 2400 * 2400	* 2000 * 2000	* 1600 * 1600 * 1400 * 1400				* 1200 * 1200 1300 * 3000 * 3000 100

Illustration 87

g06495139

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, 5.67 m (18 ft 7 inch) reach boom, 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

Variable Angle Boom with 2920 mm (9 ft 7 in) Stick 4900 kg (10800 lb) Counterweight

(mm) (inch)	1300 48	1900 75	2500 100	3100 125	3700 150	4300 175	4900 200	5500 225	6100 250	6700 275	7300 300	7900 325	8500 350	9100 375	9700 400	10300 425	10900 450	11500 475	12100 500	12700 525	13300 550	13900 575	14500 600	15100 625	15700 650	16300 675	16900 700	17500 725	18100 750	18700 775	19300 800	19900 825	20500 850	21100 875	21700 900	22300 925	22900 950	23500 975	24100 1000	24700 1025	25300 1050	25900 1075	26500 1100	27100 1125	27700 1150	28300 1175	28900 1200	29500 1225	30100 1250	30700 1275	31300 1300	31900 1325	32500 1350	33100 1375	33700 1400	34300 1425	34900 1450	35500 1475	36100 1500	36700 1525	37300 1550	37900 1575	38500 1600	39100 1625	39700 1650	40300 1675	40900 1700	41500 1725	42100 1750	42700 1775	43300 1800	43900 1825	44500 1850	45100 1875	45700 1900	46300 1925	46900 1950	47500 1975	48100 2000	48700 2025	49300 2050	49900 2075	50500 2100	51100 2125	51700 2150	52300 2175	52900 2200	53500 2225	54100 2250	54700 2275	55300 2300	55900 2325	56500 2350	57100 2375	57700 2400	58300 2425	58900 2450	59500 2475	60100 2500	60700 2525	61300 2550	61900 2575	62500 2600	63100 2625	63700 2650	64300 2675	64900 2700	65500 2725	66100 2750	66700 2775	67300 2800	67900 2825	68500 2850	69100 2875	69700 2900	70300 2925	70900 2950	71500 2975	72100 3000	72700 3025	73300 3050	73900 3075	74500 3100	75100 3125	75700 3150	76300 3175	76900 3200	77500 3225	78100 3250	78700 3275	79300 3300	79900 3325	80500 3350	81100 3375	81700 3400	82300 3425	82900 3450	83500 3475	84100 3500	84700 3525	85300 3550	85900 3575	86500 3600	87100 3625	87700 3650	88300 3675	88900 3700	89500 3725	90100 3750	90700 3775	91300 3800	91900 3825	92500 3850	93100 3875	93700 3900	94300 3925	94900 3950	95500 3975	96100 4000	96700 4025	97300 4050	97900 4075	98500 4100	99100 4125	99700 4150	100300 4175	100900 4200	101500 4225	102100 4250	102700 4275	103300 4300	103900 4325	104500 4350	105100 4375	105700 4400	106300 4425	106900 4450	107500 4475	108100 4500	108700 4525	109300 4550	109900 4575	110500 4600	111100 4625	111700 4650	112300 4675	112900 4700	113500 4725	114100 4750	114700 4775	115300 4800	115900 4825	116500 4850	117100 4875	117700 4900	118300 4925	118900 4950	119500 4975	120100 5000	120700 5025	121300 5050	121900 5075	122500 5100	123100 5125	123700 5150	124300 5175	124900 5200	125500 5225	126100 5250	126700 5275	127300 5300	127900 5325	128500 5350	129100 5375	129700 5400	130300 5425	130900 5450	131500 5475	132100 5500	132700 5525	133300 5550	133900 5575	134500 5600	135100 5625	135700 5650	136300 5675	136900 5700	137500 5725	138100 5750	138700 5775	139300 5800	139900 5825	140500 5850	141100 5875	141700 5900	142300 5925	142900 5950	143500 5975	144100 6000	144700 6025	145300 6050	145900 6075	146500 6100	147100 6125	147700 6150	148300 6175	148900 6200	149500 6225	150100 6250	150700 6275	151300 6300	151900 6325	152500 6350	153100 6375	153700 6400	154300 6425	154900 6450	155500 6475	156100 6500	156700 6525	157300 6550	157900 6575	158500 6600	159100 6625	159700 6650	160300 6675	160900 6700	161500 6725	162100 6750	162700 6775	163300 6800	163900 6825	164500 6850	165100 6875	165700 6900	166300 6925	166900 6950	167500 6975	168100 7000	168700 7025	169300 7050	169900 7075	170500 7100	171100 7125	171700 7150	172300 7175	172900 7200	173500 7225	174100 7250	174700 7275	175300 7300	175900 7325	176500 7350	177100 7375	177700 7400	178300 7425	178900 7450	179500 7475	180100 7500	180700 7525	181300 7550	181900 7575	182500 7600	183100 7625	183700 7650	184300 7675	184900 7700	185500 7725	186100 7750	186700 7775	187300 7800	187900 7825	188500 7850	189100 7875	189700 7900	190300 7925	190900 7950	191500 7975	192100 8000	192700 8025	193300 8050	193900 8075	194500 8100	195100 8125	195700 8150	196300 8175	196900 8200	197500 8225	198100 8250	198700 8275	199300 8300	199900 8325	200500 8350	201100 8375	201700 8400	202300 8425	202900 8450	203500 8475	204100 8500	204700 8525	205300 8550	205900 8575	206500 8600	207100 8625	207700 8650	208300 8675	208900 8700	209500 8725	210100 8750	210700 8775	211300 8800	211900 8825	212500 8850	213100 8875	213700 8900	214300 8925	214900 8950	215500 8975	216100 9000	216700 9025	217300 9050	217900 9075	218500 9100	219100 9125	219700 9150	220300 9175	220900 9200	221500 9225	222100 9250	222700 9275	223300 9300	223900 9325	224500 9350	225100 9375	225700 9400	226300 9425	226900 9450	227500 9475	228100 9500	228700 9525	229300 9550	229900 9575	230500 9600	231100 9625	231700 9650	232300 9675	232900 9700	233500 9725	234100 9750	234700 9775	235300 9800	235900 9825	236500 9850	237100 9875	237700 9900	238300 9925	238900 9950	239500 9975	240100 10000	240700 10025	241300 10050	241900 10075	242500 10100	243100 10125	243700 10150	244300 10175	244900 10200	245500 10225	246100 10250	246700 10275	247300 10300	247900 10325	248500 10350	249100 10375	249700 10400	250300 10425	250900 10450	251500 10475	252100 10500	252700 10525	253300 10550	253900 10575	254500 10600	255100 10625	255700 10650	256300 10675	256900 10700	257500 10725	258100 10750	258700 10775	259300 10800	259900 10825	260500 10850	261100 10875	261700 10900	262300 10925	262900 10950	263500 10975	264100 11000	264700 11025	265300 11050	265900 11075	266500 11100	267100 11125	267700 11150	268300 11175	268900 11200	269500 11225	270100 11250	270700 11275	271300 11300	271900 11325	272500 11350	273100 11375	273700 11400	274300 11425	274900 11450	275500 11475	276100 11500	276700 11525	277300 11550	277900 11575	278500 11600	279100 11625	279700 11650	280300 11675	280900 11700	281500 11725	282100 11750	282700 11775	283300 11800	283900 11825	284500 11850	285100 11875	285700 11900	286300 11925	286900 11950	287500 11975	288100 12000	288700 12025	289300 12050	289900 12075	290500 12100	291100 12125	291700 12150	292300 12175	292900 12200	293500 12225	294100 12250	294700 12275	295300 12300	295900 12325	296500 12350	297100 12375	297700 12400	298300 12425	298900 12450	299500 12475	300100 12500	300700 12525	301300 12550	301900 12575	302500 12600	303100 12625	303700 12650	304300 12675	304900 12700	305500 12725	306100 12750	306700 12775	307300 12800	307900 12825	308500 12850	309100 12875	309700 12900	310300 12925	310900 12950	311500 12975	312100 13000	312700 13025	313300 13050	313900 13075	314500 13100	315100 13125	315700 13150	316300 13175	316900 13200	317500 13225	318100 13250	318700 13275	319300 13300	319900 13325	320500 13350	321100 13375	321700 13400	322300 13425	322900 13450	323500 13475	324100 13500	324700 13525	325300 13550	325900 13575	326500 13600	327100 13625	327700 13650	328300 13675	328900 13700	329500 13725	330100 13750	330700 13775	331300 13800	331900 13825	332500 13850	333100 13875	333700 13900	334300 13925	334900 13950	335500 13975	336100 14000	336700 14025	337300 14050	337900 14075	338500 14100	339100 14125	339700 14150	340300 14175	340900 14200	341500 14225	342100 14250	342700 14275	343300 14300	343900 14325	344500 14350	345100 14375	345700 14400	346300 14425	346900 14450	347500 14475	348100 14500	348700 14525	349300 14550	349900 14575	350500 14600	351100 14625	351700 14650	352300 14675	352900 14700	353500 14725	354100 14750	354700 14775	355300 14800	355900 14825	356500 14850	357100 14875	357700 14900	358300 14925	358900 14950	359500 14975	360100 15000	360700 15025	361300 15050	361900 15075	362500 15100	363100 15125	363700 15150	364300 15175	364900 15200	365500 15225	366100 15250	366700 15275	367300 15300	367900 15325	368500 15350	369100 15375	369700 15400	370300 15425	370900 15450	371500 15475	372100 15500	372700 15525	373300 15550	373900 15575	374500 15600	375100 15625	375700 15650	376300 15675	376900 15700	377500 15725	378100 15750	378700 15775	379300 15800	379900 15825	380500 15850	381100 15875	381700 15900	382300 15925	382900 15950	383500 15975	384100 16000	384700 16025	385300 16050	385900 16075	386500 16100	387100 16125	387700 16150	388300 16175	388900 16200	389500 16225	390100 16250	390700 16275	391300 16300	391900 16325	392500 16350	393100 16375	393700 16400	394300 16425	394900 16450	395500 16475	396100 16500	396700 16525	397300 16550	397900 16575	398500 16600	399100 16625	399700 16650	400300 16675	400900 16700	401500 16725	402100 16750	402700 16775	403300 16800	403900 16825	404500 16850	405100 16875	405700 16900	406300 16925	406900 16950	407500 16975	408100 17000	408700 17025	409300 17050	409900 17075	410500 17100	411100 17125	411700 17150	412300 17175	412900 17200	413500 17225	414100 17250	414700 17275	415300 17300	415900 17325	416500 17350	417100 17375	417700 17400	418300 17425	418900 17450	419500 17475	420100 17500	420700 17525	421300 17550	421900 17575	422500 17600	423100 17625	423700 17650	424300 17675	424900 17700	425500 17725	426100 17750	4267

Product Information Section
Lifting Capacities

(mm) (inch)	1300 51	1600 63	2000 79	2500 98	3000 118	3500 138	4000 157	4500 177	5000 197	5500 217	6000 236	6500 256	7000 276	7500 295	8000 315	8500 335	9000 354	9500 374	10000 394	10500 413	11000 433	11500 453	12000 472	12500 492	13000 512	13500 531	14000 551	14500 571	15000 590	15500 610	16000 630	16500 649	17000 669	17500 689	18000 708	18500 728	19000 748	19500 768	20000 787	20500 807	21000 827	21500 847	22000 867	22500 886	23000 906	23500 926	24000 946	24500 966	25000 986	25500 1006	26000 1025	26500 1045	27000 1065	27500 1085	28000 1105	28500 1125	29000 1145	29500 1164	30000 1184	30500 1204	31000 1224	31500 1244	32000 1264	32500 1284	33000 1304	33500 1323	34000 1343	34500 1363	35000 1383	35500 1403	36000 1423	36500 1443	37000 1463	37500 1483	38000 1503	38500 1523	39000 1543	39500 1562	40000 1582	40500 1602	41000 1622	41500 1642	42000 1662	42500 1682	43000 1702	43500 1722	44000 1742	44500 1762	45000 1782	45500 1802	46000 1822	46500 1842	47000 1862	47500 1882	48000 1902	48500 1922	49000 1942	49500 1962	50000 1982	50500 2002	51000 2022	51500 2042	52000 2062	52500 2082	53000 2102	53500 2122	54000 2142	54500 2162	55000 2182	55500 2202	56000 2222	56500 2242	57000 2262	57500 2282	58000 2302	58500 2322	59000 2342	59500 2362	60000 2382	60500 2402	61000 2422	61500 2442	62000 2462	62500 2482	63000 2502	63500 2522	64000 2542	64500 2562	65000 2582	65500 2602	66000 2622	66500 2642	67000 2662	67500 2682	68000 2702	68500 2722	69000 2742	69500 2762	70000 2782	70500 2802	71000 2822	71500 2842	72000 2862	72500 2882	73000 2902	73500 2922	74000 2942	74500 2962	75000 2982	75500 3002	76000 3022	76500 3042	77000 3062	77500 3082	78000 3102	78500 3122	79000 3142	79500 3162	80000 3182	80500 3202	81000 3222	81500 3242	82000 3262	82500 3282	83000 3302	83500 3322	84000 3342	84500 3362	85000 3382	85500 3402	86000 3422	86500 3442	87000 3462	87500 3482	88000 3502	88500 3522	89000 3542	89500 3562	90000 3582	90500 3602	91000 3622	91500 3642	92000 3662	92500 3682	93000 3702	93500 3722	94000 3742	94500 3762	95000 3782	95500 3802	96000 3822	96500 3842	97000 3862	97500 3882	98000 3902	98500 3922	99000 3942	99500 3962	100000 3982	100500 4002	101000 4022	101500 4042	102000 4062	102500 4082	103000 4102	103500 4122	104000 4142	104500 4162	105000 4182	105500 4202	106000 4222	106500 4242	107000 4262	107500 4282	108000 4302	108500 4322	109000 4342	109500 4362	110000 4382	110500 4402	111000 4422	111500 4442	112000 4462	112500 4482	113000 4502	113500 4522	114000 4542	114500 4562	115000 4582	115500 4602	116000 4622	116500 4642	117000 4662	117500 4682	118000 4702	118500 4722	119000 4742	119500 4762	120000 4782	120500 4802	121000 4822	121500 4842	122000 4862	122500 4882	123000 4902	123500 4922	124000 4942	124500 4962	125000 4982	125500 5002	126000 5022	126500 5042	127000 5062	127500 5082	128000 5102	128500 5122	129000 5142	129500 5162	130000 5182	130500 5202	131000 5222	131500 5242	132000 5262	132500 5282	133000 5302	133500 5322	134000 5342	134500 5362	135000 5382	135500 5402	136000 5422	136500 5442	137000 5462	137500 5482	138000 5502	138500 5522	139000 5542	139500 5562	140000 5582	140500 5602	141000 5622	141500 5642	142000 5662	142500 5682	143000 5702	143500 5722	144000 5742	144500 5762	145000 5782	145500 5802	146000 5822	146500 5842	147000 5862	147500 5882	148000 5902	148500 5922	149000 5942	149500 5962	150000 5982	150500 6002	151000 6022	151500 6042	152000 6062	152500 6082	153000 6102	153500 6122	154000 6142	154500 6162	155000 6182	155500 6202	156000 6222	156500 6242	157000 6262	157500 6282	158000 6302	158500 6322	159000 6342	159500 6362	160000 6382	160500 6402	161000 6422	161500 6442	162000 6462	162500 6482	163000 6502	163500 6522	164000 6542	164500 6562	165000 6582	165500 6602	166000 6622	166500 6642	167000 6662	167500 6682	168000 6702	168500 6722	169000 6742	169500 6762	170000 6782	170500 6802	171000 6822	171500 6842	172000 6862	172500 6882	173000 6902	173500 6922	174000 6942	174500 6962	175000 6982	175500 7002	176000 7022	176500 7042	177000 7062	177500 7082	178000 7102	178500 7122	179000 7142	179500 7162	180000 7182	180500 7202	181000 7222	181500 7242	182000 7262	182500 7282	183000 7302	183500 7322	184000 7342	184500 7362	185000 7382	185500 7402	186000 7422	186500 7442	187000 7462	187500 7482	188000 7502	188500 7522	189000 7542	189500 7562	190000 7582	190500 7602	191000 7622	191500 7642	192000 7662	192500 7682	193000 7702	193500 7722	194000 7742	194500 7762	195000 7782	195500 7802	196000 7822	196500 7842	197000 7862	197500 7882	198000 7902	198500 7922	199000 7942	199500 7962	200000 7982	200500 8002	201000 8022	201500 8042	202000 8062	202500 8082	203000 8102	203500 8122	204000 8142	204500 8162	205000 8182	205500 8202	206000 8222	206500 8242	207000 8262	207500 8282	208000 8302	208500 8322	209000 8342	209500 8362	210000 8382	210500 8402	211000 8422	211500 8442	212000 8462	212500 8482	213000 8502	213500 8522	214000 8542	214500 8562	215000 8582	215500 8602	216000 8622	216500 8642	217000 8662	217500 8682	218000 8702	218500 8722	219000 8742	219500 8762	220000 8782	220500 8802	221000 8822	221500 8842	222000 8862	222500 8882	223000 8902	223500 8922	224000 8942	224500 8962	225000 8982	225500 9002	226000 9022	226500 9042	227000 9062	227500 9082	228000 9102	228500 9122	229000 9142	229500 9162	230000 9182	230500 9202	231000 9222	231500 9242	232000 9262	232500 9282	233000 9302	233500 9322	234000 9342	234500 9362	235000 9382	235500 9402	236000 9422	236500 9442	237000 9462	237500 9482	238000 9502	238500 9522	239000 9542	239500 9562	240000 9582	240500 9602	241000 9622	241500 9642	242000 9662	242500 9682	243000 9702	243500 9722	244000 9742	244500 9762	245000 9782	245500 9802	246000 9822	246500 9842	247000 9862	247500 9882	248000 9902	248500 9922	249000 9942	249500 9962	250000 9982	250500 10002	251000 10022	251500 10042	252000 10062	252500 10082	253000 10102	253500 10122	254000 10142	254500 10162	255000 10182	255500 10202	256000 10222	256500 10242	257000 10262	257500 10282	258000 10302	258500 10322	259000 10342	259500 10362	260000 10382	260500 10402	261000 10422	261500 10442	262000 10462	262500 10482	263000 10502	263500 10522	264000 10542	264500 10562	265000 10582	265500 10602	266000 10622	266500 10642	267000 10662	267500 10682	268000 10702	268500 10722	269000 10742	269500 10762	270000 10782	270500 10802	271000 10822	271500 10842	272000 10862	272500 10882	273000 10902	273500 10922	274000 10942	274500 10962	275000 10982	275500 11002	276000 11022	276500 11042	277000 11062	277500 11082	278000 11102	278500 11122	279000 11142	279500 11162	280000 11182	280500 11202	281000 11222	281500 11242	282000 11262	282500 11282	283000 11302	283500 11322	284000 11342	284500 11362	285000 11382	285500 11402	286000 11422	286500 11442	287000 11462	287500 11482	288000 11502	288500 11522	289000 11542	289500 11562	290000 11582	290500 11602	291000 11622	291500 11642	292000 11662	292500 11682	293000 11702	293500 11722	294000 11742	294500 11762	295000 11782	295500 11802	296000 11822	296500 11842	297000 11862	297500 11882	298000 11902	298500 11922	299000 11942	299500 11962	300000 11982	300500 12002	301000 12022	301500 12042	302000 12062	302500 12082	303000 12102	303500 12122	304000 12142	304500 12162	305000 12182	305500 12202	306000 12222	306500 12242	307000 12262	307500 12282	308000 12302	308500 12322	309000 12342	309500 12362	310000 12382	310500 12402	311000 12422	311500 12442	312000 12462	312500 12482	313000 12502	313500 12522	314000 12542	314500 12562	315000 12582	315500 12602	316000 12622	316500 12642	317000 12662	317500 12682	318000 12702	318500 12722	319000 12742	319500 12762	320000 12782	320500 12802	321000 12822	321500 12842	322000 12862	322500 12882	323000 12902	323500 12922	324000 12942	324500 12962	325000 12982	325500 13002	326000 13022	326500 13042	327000 13062	327500 13082	328000 13102	328500 13122	329000 13142	329500 13162	330000 13182	330500 13202	331000 13222	331500 13242	332000 13262	332500 13282	333000 13302	333500 13322	334000 13342	334500 13362	335000 13382	335500 13402	336000 13422	336500 13442	337000 13462	337500 13482	338000 13502	338500 13522	339000 13542	339500 13562	340000 13582	340500 13602	341000 13622	341500 13642	342000 13662	342500 13682	343000 13702	343500 13722	344000 13742	344500 13762	345000 13782	345500 13802	346000 13822	346500 13842	347000 13862	347500 13882	348000 13902	348500 13922	349000 13942	349500 13962	350000 13982	350500 14002	351000 14022	351500 14042	352000 14062	352500 14082	353000 14102	353500 14122	354000 14142	354500 14162	355000 14182	355500 14202	356000 14222	356500 14242	357000 14262	357500 14282	358000 14302	358500 14322	359000 14342	359500 14362	360000 14382	360500 14402	361000 14422	361500 14

(mm) (inch)	1300 51		2000 79		3300 130		4000 157		6000 236		7500 295				(mm) (inch)
															(mm) (inch)
															
9800					4550	4050						4150	4150	2120	
200					10250	10250						10150	10150	200	
1900					4400	4400	3800	3800				3850	3850	6700	
300					14150	14150	10500	10500				10500	10500	200	
1800					4700	4700	4700	4700	3600	3600		3600	3600	3400	1740
240					14650	14650	10600	10600	7950	7950		7950	7950	300	
1600				10100	10100	4700	4700	4700	4700	3600	3600	3100	3100	2900	8300
300				24150	24150	14200	14200	10600	10600	7950	7950	7150	7150	6400	300
1400	8150	8150	8700	8700	4200	4200	3800	3800	3800	3400	3400	3000	3000	2650	8600
120	15100	15100	21100	21100	15000	13000	11500	11500	8150	7250	7250	5900	5900	500	
1500				5000	5000	5700	4300	4300	4400	3250	3250	3000	3000	2600	8700
60				12000	12000	12200	9400	9400	9500	8900	8900	8100	8100	6600	300
0	6200	6200	5250	5250	3700	3300	3200	3200	3000	2100	2100	1850	1850	8500	
0	13450	13450	11550	11550	10200	10200	11300	10300	10000	8100	8100	7050	7050	570	340
1300	8600	8600	8100	8100	4200	4200	4700	4700	4700	3100	3100	3100	3100	2800	3000
60	19100	19100	21200	21200	13300	12400	13000	12000	10000	9000	9000	8100	8100	6300	300
1800	13700	13700	8900	8900	5500	4800	4700	4200				3450	3450	7120	
120	30250	30250	19100	19100	13800	13800	10800	9400				7000	7000	200	
1600	29400	29400	8100	8100	5800	5800						3450	3450	4000	
300	64150	64150	26150	26150	12950	12950						5450	5450	130	

Illustration 92

g06495155

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom, 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift OFF

(mm) (inch)	1300 51	1600 63	2000 79	2600 102	3300 130	4000 157	4800 190	5500 217	7100 280		(mm) (inch)
											(mm) (inch)
9800 390				4050 160	4050 160				4150 163	4150 163	2120 84
1900 300				11150 439	11150 439				11200 441	11200 441	200 8
1800 300				4400 173	4400 173	4700 185	4700 185		4750 187	4750 187	6700 264
1800 240				15450 612	15450 612	10300 405	10300 405		10400 410	10400 410	200 8
1600 300				4700 185	4700 185	5200 205	5200 205	4800 189	3600 142	3150 124	3400 134
1600 300				14650 580	14650 580	10600 417	10600 417	8700 343	7600 299	7500 295	7700 303
1600 300				11100 437	11100 437	7100 279	7100 279	4850 191	3600 142	3350 132	2900 114
1600 300				24600 972	24600 972	15400 608	15400 608	10350 408	8700 343	8200 323	6400 252
1600 300	8050 317	8050 317	86250 339	86250 339	4200 165	4050 160	4050 160	4200 165	3400 134	3150 124	2650 104
150 6	15000 591	15000 591	23150 915	23150 915	14500 574	14000 551	13500 531	13100 516	11400 450	10900 429	9000 354
1500 60			5050 199	5050 199	5700 224	4700 185	4450 175	4600 181	3250 128	3100 122	2600 102
60 2			13100 516	13100 516	13700 539	10700 421	10300 405	10400 410	9900 390	9500 374	8000 315
0 0	6000 236	6000 236	5250 207	5250 207	3700 146	3300 130	3200 126	3050 120	2100 83	1850 73	8500 335
0 0	14250 561	14250 561	12250 482	12250 482	11700 461	10200 401	12100 476	9800 386	8100 318	7550 297	5700 224
1300 51	8110 319	8110 319	8000 315	8000 315	4200 165	4200 165	4700 185	4700 185	3100 122	3050 120	2800 110
60 2	20250 797	20250 797	22450 887	22450 887	13000 512	12400 490	13000 512	11800 465	9000 354	8700 343	7300 287
1800 70	14800 583	14800 583	9000 354	9000 354	5500 217	4700 185	4200 165				3450 136
120 5	33100 1303	33100 1303	24650 972	24650 972	14700 580	13700 535	11250 443	9400 370			7000 276
1600 63	22150 873	22150 873	8000 315	8000 315	5800 228	5800 228					3450 136
300 12	60250 2370	60250 2370	23550 930	23550 930	14500 574	14500 574					5400 213

Illustration 93

g06495157

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom, 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift ON

Product Information Section
Lifting Capacities

(mm) (inch)	1100 44		1300 52		1500 60		1600 64		1700 68				(mm) (inch)	
													(mm) (inch)	
8800 300					4550 10250	4550 10250						4150 10150	4150 10150	2120 200
1700 300					4400 14150	4400 14150	3800 9200	3800 9200				3850 9600	3850 9600	6700 270
1800 240					4700 14550	4700 14550	4700 10200	4700 10200	3600 7950	3600 7950		3600 7950	3600 7950	1700 300
1900 300			10100 24150	10100 24150	4700 14200	4700 14200	4700 14200	4700 14200	3600 7950	3600 7950	3100 7150	3100 7150	3300 8300	8300
1800 520	8550 15150	8550 15150	8700 21100	8700 21100	4200 13000	4200 13000	3850 8300	3850 8300	3550 8100	3550 8100	3000 7000	3000 6700	3000 6700	3000
1500 60			5000 12000	5000 12000	5700 12250	5700 12250	4350 9400	4350 9400	4400 9900	4400 9900	3700 7900	3700 7900	2550 8100	8700
0 0	6300 13450	6300 13450	5250 11550	5250 11550	7350 15200	7350 15200	5200 11300	5200 11300	4900 10550	4900 10550	3600 7750	4150 9050	3050 6050	8500
1300 60	8050 19100	8050 19100	8700 21200	8700 21200	4200 17300	4200 17300	3850 13000	3850 13000	3000 10000	3000 10000	3100 7700	3100 7700	1300 3200	3000
1300 520	13700 31250	13700 31250	8900 10100	8900 10100	1050 11050	1050 11050	4700 10800	4700 10800			3450 7600	3450 7600	7120 200	
1800 300	29400 44150	29400 44150	8700 26150	8700 26150	1000 12050	1000 12050					1450 5450	1450 5450	4000 1000	

Illustration 94

g06495158

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom, 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

(mm) (inch)	1100 44		1300 52		1500 60		1700 68		1900 76		2100 84		2300 91				(mm) (inch)
																	(mm) (inch)
																	
8800																	2120
200																	200
1900																	6700
300																	200
1800																	3900
240																	300
1600																	3300
300																	320
1500																	8700
60																	300
0																	8500
0																	340
1300																	3000
60																	7250
1300																	7120
520																	200
1800																	4000
300																	100

Illustration 95

g06495159

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom, 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

(mm) (inch)	1100 44	1000 120	6500 260	6000 240	2500 100		(mm) (inch)
							
8800			4550	4050		4150	3120
260			10250	10250		10150	200
1900			4400	4400	3800	3800	6700
300			14150	14150	10500	10500	200
6800			6700	6700	4700	4700	1700
240			16550	16550	10200	10200	300
6000		10100	10100	4900	4900	3000	3000
300		24150	24150	14200	14200	7050	7050
3800	8150	8150	8150	8150	4200	3850	3450
120	15150	15150	21100	21100	15000	15000	1500
1500			5000	5000	5700	4350	4400
60			12000	12000	12250	9400	9400
0	6200	6200	5250	5250	1700	4800	5000
0	13450	13450	11150	11150	13750	11300	11300
1300	8000	8000	8100	8100	4200	4200	4750
40	19100	19100	21200	21200	15300	15300	6000
3800	13700	13700	8900	8900	4700	4300	3450
120	13250	13250	10100	10100	13850	10800	10800
4000	29400	29400	8100	8100	3900		3450
300	64150	64150	26150	26150	12050		12050

Illustration 96

g06495163

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom, 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift OFF

(mm) (inch)	1100 44	1000 120	6500 260	6000 240	2500 100		(mm) (inch)
							
8800			4550	4050		4150	3120
260			11150	11150		11050	200
1900			4400	4400	3800	3800	6700
300			15450	15450	10600	10600	200
6800			6700	6700	4700	4700	1700
240			16550	16550	10200	10200	300
6000		11100	11100	4900	4900	3000	3000
300		24600	24600	15200	15200	7050	7050
3800	9050	9050	8250	8250	4200	4200	3450
120	18000	18000	23100	23100	15500	15500	1500
1500			5050	5050	5700	4350	4400
60			13150	13150	13750	10700	10700
0	6000	6000	5250	5250	1700	4800	5000
0	14250	14250	12250	12250	13750	11900	11900
1300	8100	8100	8100	8100	4200	4200	4750
40	20250	20250	23450	23450	15800	15800	6000
3800	14000	14000	9000	9000	4700	4300	3450
120	13100	13100	10100	10100	13900	10850	10850
4000	22150	22150	8100	8100	3900		3450
300	64250	64250	26550	26550	12500		12500

Illustration 97

g06495166

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom, 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift ON

Product Information Section
Lifting Capacities

(mm) (inch)	1300 51	1600 63	2000 79	2400 94	2700 106	3000 118	3300 130	3600 141	3900 153	4200 165	4500 177	4800 189	5100 201	5400 213	5700 225	6000 237	6300 249	6600 261	6900 273	7200 285	7500 297	7800 309	8100 321	8400 333	8700 345	9000 357	9300 369	9600 381	9900 393	10200 405	10500 417	10800 429	11100 441	11400 453	11700 465	12000 477	12300 489	12600 501	12900 513	13200 525	13500 537	13800 549	14100 561	14400 573	14700 585	15000 597	15300 609	15600 621	15900 633	16200 645	16500 657	16800 669	17100 681	17400 693	17700 705	18000 717	18300 729	18600 741	18900 753	19200 765	19500 777	19800 789	20100 801	20400 813	20700 825	21000 837	21300 849	21600 861	21900 873	22200 885	22500 897	22800 909	23100 921	23400 933	23700 945	24000 957	24300 969	24600 981	24900 993	25200 1005	25500 1017	25800 1029	26100 1041	26400 1053	26700 1065	27000 1077	27300 1089	27600 1101	27900 1113	28200 1125	28500 1137	28800 1149	29100 1161	29400 1173	29700 1185	30000 1197	30300 1209	30600 1221	30900 1233	31200 1245	31500 1257	31800 1269	32100 1281	32400 1293	32700 1305	33000 1317	33300 1329	33600 1341	33900 1353	34200 1365	34500 1377	34800 1389	35100 1401	35400 1413	35700 1425	36000 1437	36300 1449	36600 1461	36900 1473	37200 1485	37500 1497	37800 1509	38100 1521	38400 1533	38700 1545	39000 1557	39300 1569	39600 1581	39900 1593	40200 1605	40500 1617	40800 1629	41100 1641	41400 1653	41700 1665	42000 1677	42300 1689	42600 1701	42900 1713	43200 1725	43500 1737	43800 1749	44100 1761	44400 1773	44700 1785	45000 1797	45300 1809	45600 1821	45900 1833	46200 1845	46500 1857	46800 1869	47100 1881	47400 1893	47700 1905	48000 1917	48300 1929	48600 1941	48900 1953	49200 1965	49500 1977	49800 1989	50100 2001	50400 2013	50700 2025	51000 2037	51300 2049	51600 2061	51900 2073	52200 2085	52500 2097	52800 2109	53100 2121	53400 2133	53700 2145	54000 2157	54300 2169	54600 2181	54900 2193	55200 2205	55500 2217	55800 2229	56100 2241	56400 2253	56700 2265	57000 2277	57300 2289	57600 2301	57900 2313	58200 2325	58500 2337	58800 2349	59100 2361	59400 2373	59700 2385	60000 2397	60300 2409	60600 2421	60900 2433	61200 2445	61500 2457	61800 2469	62100 2481	62400 2493	62700 2505	63000 2517	63300 2529	63600 2541	63900 2553	64200 2565	64500 2577	64800 2589	65100 2601	65400 2613	65700 2625	66000 2637	66300 2649	66600 2661	66900 2673	67200 2685	67500 2697	67800 2709	68100 2721	68400 2733	68700 2745	69000 2757	69300 2769	69600 2781	69900 2793	70200 2805	70500 2817	70800 2829	71100 2841	71400 2853	71700 2865	72000 2877	72300 2889	72600 2901	72900 2913	73200 2925	73500 2937	73800 2949	74100 2961	74400 2973	74700 2985	75000 2997	75300 3009	75600 3021	75900 3033	76200 3045	76500 3057	76800 3069	77100 3081	77400 3093	77700 3105	78000 3117	78300 3129	78600 3141	78900 3153	79200 3165	79500 3177	79800 3189	80100 3201	80400 3213	80700 3225	81000 3237	81300 3249	81600 3261	81900 3273	82200 3285	82500 3297	82800 3309	83100 3321	83400 3333	83700 3345	84000 3357	84300 3369	84600 3381	84900 3393	85200 3405	85500 3417	85800 3429	86100 3441	86400 3453	86700 3465	87000 3477	87300 3489	87600 3501	87900 3513	88200 3525	88500 3537	88800 3549	89100 3561	89400 3573	89700 3585	90000 3597	90300 3609	90600 3621	90900 3633	91200 3645	91500 3657	91800 3669	92100 3681	92400 3693	92700 3705	93000 3717	93300 3729	93600 3741	93900 3753	94200 3765	94500 3777	94800 3789	95100 3801	95400 3813	95700 3825	96000 3837	96300 3849	96600 3861	96900 3873	97200 3885	97500 3897	97800 3909	98100 3921	98400 3933	98700 3945	99000 3957	99300 3969	99600 3981	99900 3993	100200 4005	100500 4017	100800 4029	101100 4041	101400 4053	101700 4065	102000 4077	102300 4089	102600 4101	102900 4113	103200 4125	103500 4137	103800 4149	104100 4161	104400 4173	104700 4185	105000 4197	105300 4209	105600 4221	105900 4233	106200 4245	106500 4257	106800 4269	107100 4281	107400 4293	107700 4305	108000 4317	108300 4329	108600 4341	108900 4353	109200 4365	109500 4377	109800 4389	110100 4401	110400 4413	110700 4425	111000 4437	111300 4449	111600 4461	111900 4473	112200 4485	112500 4497	112800 4509	113100 4521	113400 4533	113700 4545	114000 4557	114300 4569	114600 4581	114900 4593	115200 4605	115500 4617	115800 4629	116100 4641	116400 4653	116700 4665	117000 4677	117300 4689	117600 4701	117900 4713	118200 4725	118500 4737	118800 4749	119100 4761	119400 4773	119700 4785	120000 4797	120300 4809	120600 4821	120900 4833	121200 4845	121500 4857	121800 4869	122100 4881	122400 4893	122700 4905	123000 4917	123300 4929	123600 4941	123900 4953	124200 4965	124500 4977	124800 4989	125100 5001	125400 5013	125700 5025	126000 5037	126300 5049	126600 5061	126900 5073	127200 5085	127500 5097	127800 5109	128100 5121	128400 5133	128700 5145	129000 5157	129300 5169	129600 5181	129900 5193	130200 5205	130500 5217	130800 5229	131100 5241	131400 5253	131700 5265	132000 5277	132300 5289	132600 5301	132900 5313	133200 5325	133500 5337	133800 5349	134100 5361	134400 5373	134700 5385	135000 5397	135300 5409	135600 5421	135900 5433	136200 5445	136500 5457	136800 5469	137100 5481	137400 5493	137700 5505	138000 5517	138300 5529	138600 5541	138900 5553	139200 5565	139500 5577	139800 5589	140100 5601	140400 5613	140700 5625	141000 5637	141300 5649	141600 5661	141900 5673	142200 5685	142500 5697	142800 5709	143100 5721	143400 5733	143700 5745	144000 5757	144300 5769	144600 5781	144900 5793	145200 5805	145500 5817	145800 5829	146100 5841	146400 5853	146700 5865	147000 5877	147300 5889	147600 5901	147900 5913	148200 5925	148500 5937	148800 5949	149100 5961	149400 5973	149700 5985	150000 5997	150300 6009	150600 6021	150900 6033	151200 6045	151500 6057	151800 6069	152100 6081	152400 6093	152700 6105	153000 6117	153300 6129	153600 6141	153900 6153	154200 6165	154500 6177	154800 6189	155100 6201	155400 6213	155700 6225	156000 6237	156300 6249	156600 6261	156900 6273	157200 6285	157500 6297	157800 6309	158100 6321	158400 6333	158700 6345	159000 6357	159300 6369	159600 6381	159900 6393	160200 6405	160500 6417	160800 6429	161100 6441	161400 6453	161700 6465	162000 6477	162300 6489	162600 6501	162900 6513	163200 6525	163500 6537	163800 6549	164100 6561	164400 6573	164700 6585	165000 6597	165300 6609	165600 6621	165900 6633	166200 6645	166500 6657	166800 6669	167100 6681	167400 6693	167700 6705	168000 6717	168300 6729	168600 6741	168900 6753	169200 6765	169500 6777	169800 6789	170100 6801	170400 6813	170700 6825	171000 6837	171300 6849	171600 6861	171900 6873	172200 6885	172500 6897	172800 6909	173100 6921	173400 6933	173700 6945	174000 6957	174300 6969	174600 6981	174900 6993	175200 7005	175500 7017	175800 7029	176100 7041	176400 7053	176700 7065	177000 7077	177300 7089	177600 7101	177900 7113	178200 7125	178500 7137	178800 7149	179100 7161	179400 7173	179700 7185	180000 7197	180300 7209	180600 7221	180900 7233	181200 7245	181500 7257	181800 7269	182100 7281	182400 7293	182700 7305	183000 7317	183300 7329	183600 7341	183900 7353	184200 7365	184500 7377	184800 7389	185100 7401	185400 7413	185700 7425	186000 7437	186300 7449	186600 7461	186900 7473	187200 7485	187500 7497	187800 7509	188100 7521	188400 7533	188700 7545	189000 7557	189300 7569	189600 7581	189900 7593	190200 7605	190500 7617	190800 7629	191100 7641	191400 7653	191700 7665	192000 7677	192300 7689	192600 7701	192900 7713	193200 7725	193500 7737	193800 7749	194100 7761	194400 7773	194700 7785	195000 7797	195300 7809	195600 7821	195900 7833	196200 7845	196500 7857	196800 7869	197100 7881	197400 7893	197700 7905	198000 7917	198300 7929	198600 7941	198900 7953	199200 7965	199500 7977	199800 7989	200100 8001	200400 8013	200700 8025	201000 8037	201300 8049	201600 8061	201900 8073	202200 8085	202500 8097	202800 8109	203100 8121	203400 8133	203700 8145	204000 8157	204300 8169	204600 8181	204900 8193	205200 8205	205500 8217	205800 8229	206100 8241	206400 8253	206700 8265	207000 8277	207300 8289	207600 8301	207900 8313	208200 8325	208500 8337	208800 8349	209100 8361	209400 8373	209700 8385	210000 8397	210300 8409	210600 8421	210900 8433	211200 8445	211500 8457	211800 8469	212100 8481	212400 8493	212700 8505	213000 8517	213300 8529	213600 8541	213900 8553	214200 8565	214500 8577	214800 8589	215100 8601	215400 8613	215700 8625	216000 8637	216300 8649	216600 8661	216900 8673	217200 8685	217500 8697	217800 8709	218100 8721	218400 8733	218700 8745	219000 8757	219300 8769	219600 8781	219900 8793	220200 8805	220500 8817	220800 8829	221100 8841	221400 8853	221700 8865	222000 8877	222300 8889	222600 8901	222900 8913	223200 8925	223500 8937	223800 8949	224100 8961	224400 8973	224700 8985</

Variable Angle Boom (Maximum Reach) with 2920 mm (9 ft 7 in) Stick 4900 kg (10800 lb) Counterweight

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
3000 30.0			* 6150 * 6750 * 12600 * 12600			* 4050 * 4500 * 11250 * 11250	5120 280
7500 30.0			* 6450 * 6450 * 14200 * 14200	* 9500 5300		* 3850 * 3850 * 8800 * 8800	6740 270
6000 24.0			* 6750 * 6750 * 14800 * 14800	* 5200 11200	* 4800 3550	* 3600 7550 * 7350 7400	1220 230
4500 30.0		* 12550 * 12550 * 26900 * 26900	* 8700 1800 * 18750 16850	* 6850 4850 * 14050 10700	* 5400 3450 * 7150 7400	* 3550 2850 * 7750 6300	8360 330
3000 32.0			* 7100 1850 * 20550 15250	* 7250 4850 * 15100 10800	* 5250 3300 * 7100 7180	* 3800 2800 * 7900 5750	8800 350
1500 60.0			* 10150 6450 * 21550 13050	* 7100 4250 * 9250 10000	* 5050 3150 * 6800 8300	* 3800 2550 * 8300 5550	8120 350
0 0			* 9600 6200 * 20850 13300	* 6850 4150 * 14750 8850	* 4950 3050 * 6650 6680	* 4150 2600 * 8650 5650	8520 340
1500 60.0		* 9300 * 8700 * 21200 * 21200	* 8250 6750 * 17600 15200	* 6400 4700 * 13800 10800	* 4700 3050 * 6500 6550	* 3950 2800 * 8300 6150	8020 320
3000 32.0			* 6850 * 6850 * 13050 * 13050	* 4750 4750 * 10000 8950		* 3500 3450 * 7800 7520	5580 280

Illustration 100

g06495173

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift OFF

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
3000 30.0			* 6700 * 6700 * 13750 * 13750			* 4050 * 4500 * 11200 * 11200	5120 280
7500 30.0			* 7000 * 7000 * 15400 * 15400	* 6400 5300		* 4250 * 4250 * 9400 * 9400	6740 270
6000 24.0			* 7300 * 7300 * 16150 * 16150	* 7050 11200	* 5250 3550	* 3850 7550 * 8700 7400	1220 230
4500 30.0		* 13800 * 13800 * 29500 * 29500	* 9550 1800 * 20600 16850	* 7400 4850 * 16000 10700	* 5400 3450 * 7150 7400	* 3850 2850 * 8500 6300	8360 330
3000 32.0			* 9300 1850 * 25150 15250	* 7450 4850 * 15900 10800	* 5250 3300 * 7100 7180	* 3950 2800 * 8650 5750	8800 350
1500 60.0			* 11200 6450 * 24800 13050	* 7100 4250 * 9250 10000	* 5050 3150 * 6800 8300	* 4050 2550 * 8650 5550	8720 350
0 0			* 10650 6200 * 23150 13300	* 6850 4150 * 14750 8850	* 4950 3050 * 6650 6680	* 4150 2600 * 9050 5650	8520 340
1500 60.0		* 9800 * 8900 * 23450 * 23450	* 8400 6750 * 20800 15200	* 6400 4700 * 14000 10800	* 4700 3050 * 6550 6550	* 4450 2800 * 8750 6150	8020 320
3000 32.0			* 6850 6850 * 14700 13050	* 4750 4750 * 11250 8950		* 3500 3450 * 8800 7520	5580 280

Illustration 101

g06495174

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift ON

Product Information Section
Lifting Capacities

Load (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		
							(inch)
9000 360			* 6150 * 6750 * 12600 * 12600			* 4050 * 4050 * 11250 * 11250	5100 280
7500 300			* 6450 * 6450 * 14200 * 14200	* 5900 5750 12300 12300		* 3850 * 3850 * 8600 * 8600	6740 270
6000 240			* 6750 * 6750 * 14800 * 14800	* 6500 5700 14100 12200	* 4800 3850 8200 8200	* 3600 * 3600 * 7950 * 7950	7740 240
4500 180		* 12550 * 12550 * 26900 * 26900	* 8700 8600 * 18750 18500	* 6850 5450 14850 11700	* 5500 2880 8150 8150	* 3550 * 3550 * 7750 * 7750	8360 130
3000 120			* 9700 8900 * 20950 18850	* 7700 5700 19700 11800	* 6700 3650 8500 7900	* 3800 * 3800 * 7900 * 7900	8800 350
1500 60			* 10150 7200 * 21550 15500	* 7450 4800 16100 10250	* 5850 3580 8200 7500	* 3800 * 3800 * 8300 * 8300	8720 350
0 0			* 9600 6900 * 20850 14800	* 7250 4600 15650 9800	* 5600 3480 8000 7300	* 3750 * 3750 * 8150 * 8150	8520 340
1500 60		* 9300 * 8700 * 21200 * 21200	* 8250 6850 * 17900 14750	* 6400 4050 13800 9800	* 4700 3300 7200 7200	* 3800 * 3800 * 8300 * 8300	8000 320
3000 120			* 6850 * 6850 * 13050 * 13050	* 4750 4600 10800 9850		* 3500 * 3500 * 7800 * 7800	6900 280

Illustration 102

g06495175

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

Load (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		
							(inch)
9000 360			* 6700 * 6700 * 13750 * 13750			* 4050 * 4050 * 11200 * 11200	5100 280
7500 300			* 7000 * 7000 * 15450 * 15450	* 6400 5750 13500 12300		* 4250 * 4250 * 9400 * 9400	6740 270
6000 240			* 7350 * 7350 * 16150 * 16150	* 7050 5700 15200 12200	* 5250 3850 8200 8200	* 3850 * 3850 * 8300 * 8300	7740 240
4500 180		* 13800 * 13800 * 29500 * 29500	* 9550 8600 * 20650 18500	* 7400 5450 16000 11700	* 5900 2880 8150 8150	* 3850 * 3850 * 8500 * 8500	8360 130
3000 120			* 10700 8900 * 23150 18850	* 8000 5700 17400 11800	* 6700 3650 8500 7900	* 3850 * 3850 * 8600 * 8600	8800 350
1500 60			* 11250 7200 * 24000 15500	* 8300 4800 17500 10250	* 6400 3580 8200 7500	* 4050 * 4050 * 8900 * 8900	8720 350
0 0			* 10650 6900 * 23150 14800	* 8050 4600 17000 9800	* 6200 3480 8000 7300	* 4000 * 4000 * 8850 * 8850	8520 340
1500 60		* 9800 * 8900 * 22450 * 22450	* 8400 6850 * 20000 14750	* 7150 4550 15400 9800	* 5300 3300 7200 7200	* 4450 * 4450 * 9250 * 9250	8000 320
3000 120			* 6850 * 6850 * 14700 * 14700	* 5200 4600 11250 9850		* 3500 * 3500 * 8000 * 8000	6900 280

Illustration 103

g06495176

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 600 mm (24 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
9000 360			* 6150 * 6750 * 12600 * 12600			* 4050 * 4500 * 10250 * 10250	5100 200
7500 300			* 6450 * 6450 * 14200 * 14200	* 9000 * 9000 * 12400 * 12400		* 3850 * 3850 * 8600 * 8600	6740 270
6000 240			* 6750 * 6750 * 14800 * 14800	* 6500 * 6500 * 14100 * 14100	* 4800 * 4800 * 8900 * 8900	* 3600 * 3600 * 7950 * 7950	7740 300
4500 180		* 12550 * 12550 * 26900 * 26900	* 8700 * 8700 * 18750 * 18750	* 6850 * 6850 * 14850 * 14850	* 5650 * 5650 * 11750 * 11750	* 3550 * 3550 * 7750 * 7750	2000 810
3000 120			* 9100 * 9100 * 20950 * 20950	* 7200 * 7200 * 15700 * 15700	* 6000 * 6000 * 13400 * 13400	* 3800 * 3800 * 7900 * 7900	2800 110
1500 60			* 10150 * 10150 * 21550 * 21550	* 6600 * 6600 * 14200 * 14200	* 4450 * 4450 * 9500 * 9500	* 3250 * 3250 * 6900 * 6900	2800 110
0 0			* 9600 * 9600 * 20850 * 20850	* 7000 * 7000 * 15000 * 15000	* 5850 * 5850 * 12600 * 12600	* 3100 * 3100 * 6650 * 6650	2650 100
-1500 -60		* 9050 * 9050 * 21200 * 21200	* 6250 * 6250 * 13450 * 13450	* 4150 * 4150 * 8900 * 8900	* 4700 * 4700 * 10000 * 10000	* 3800 * 3800 * 8300 * 8300	8000 320
-3000 -120			* 6850 * 6850 * 13850 * 13850	* 4250 * 4250 * 9100 * 9100		* 2900 * 2900 * 6300 * 6300	6900 280

Illustration 104

g06495177

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift OFF

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
9000 360			* 6100 * 6700 * 13750 * 13750			* 4050 * 4500 * 10200 * 10200	5100 200
7500 300			* 6900 * 6900 * 15450 * 15450	* 6400 * 6400 * 13500 * 13500		* 4250 * 4250 * 9400 * 9400	6740 270
6000 240			* 7250 * 7250 * 16150 * 16150	* 7050 * 7050 * 15200 * 15200	* 5250 * 5250 * 10700 * 10700	* 3850 * 3850 * 8300 * 8300	7740 300
4500 180		* 11800 * 11800 * 29500 * 29500	* 9550 * 9550 * 20650 * 20650	* 7800 * 7800 * 16800 * 16800	* 5850 * 5850 * 11750 * 11750	* 3850 * 3850 * 8500 * 8500	2000 810
3000 120			* 10100 * 10100 * 22150 * 22150	* 7200 * 7200 * 18200 * 18200	* 6000 * 6000 * 13400 * 13400	* 3800 * 3800 * 8050 * 8050	2800 110
1500 60			* 11250 * 11250 * 24200 * 24200	* 6600 * 6600 * 14200 * 14200	* 4450 * 4450 * 9500 * 9500	* 3250 * 3250 * 6900 * 6900	2800 110
0 0			* 10650 * 10650 * 23150 * 23150	* 7000 * 7000 * 15000 * 15000	* 5850 * 5850 * 12600 * 12600	* 3100 * 3100 * 6650 * 6650	2650 100
-1500 -60		* 9900 * 9900 * 22450 * 22450	* 6250 * 6250 * 13450 * 13450	* 4150 * 4150 * 8900 * 8900	* 4700 * 4700 * 10000 * 10000	* 3800 * 3800 * 8300 * 8300	8000 320
-3000 -120			* 6850 * 6850 * 14000 * 14000	* 4250 * 4250 * 9100 * 9100		* 2900 * 2900 * 6300 * 6300	6900 280

Illustration 105

g06495178

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift ON

Product Information Section
Lifting Capacities

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
9000 360			* 6150 * 6750 * 12600 * 12600			* 4050 * 4500 * 11250 * 11250	5100 200
7500 300			* 6450 * 6450 * 14200 * 14200	* 9000 * 9000 * 12400 * 12400		* 3850 * 3850 * 8600 * 8600	6740 270
6000 240			* 6750 * 6750 * 14800 * 14800	* 6500 * 6500 * 14100 * 12850	* 4800 * 4100 * 8700 * 7950	* 3600 * 3600 * 7350 * 7350	7740 310
4500 180		* 12550 * 12550 * 26900 * 26900	* 8700 * 8700 * 18750 * 18750	* 6850 * 6850 * 14850 * 12350	* 5500 * 4000 * 8600 * 7750	* 3550 * 3550 * 7350 * 7350	8360 330
3000 120			* 9300 * 8300 * 20950 * 17850	* 7200 * 6400 * 15700 * 11600	* 5700 * 5100 * 12000 * 8300	* 3800 * 3000 * 7900 * 6700	8800 350
1500 60			* 10150 * 7850 * 21550 * 90500	* 7450 * 5100 * 16100 * 10250	* 5850 * 3700 * 12700 * 7950	* 3800 * 2950 * 8300 * 6300	8170 320
0 0			* 9600 * 7350 * 20850 * 15850	* 7200 * 5000 * 15600 * 10550	* 5600 * 3600 * 12000 * 7750	* 4150 * 3050 * 8650 * 6650	8520 340
-1500 -60		* 9350 * 8100 * 21200 * 21200	* 8250 * 7300 * 17900 * 15700	* 6400 * 4800 * 13800 * 10400	* 4700 * 3600 * 10600 * 7700	* 3800 * 3300 * 8050 * 7250	8020 320
-3000 -120			* 6850 * 6850 * 13850 * 13850	* 4750 * 4750 * 10000 * 10000		* 3500 * 3500 * 7600 * 7600	6900 280

Illustration 106

g06495180

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
9000 360			* 6300 * 6700 * 13750 * 13750			* 4050 * 4500 * 11200 * 11200	5100 200
7500 300			* 7000 * 7000 * 15450 * 15450	* 6400 * 6850 * 13500 * 12950		* 4250 * 4250 * 9400 * 9400	6740 270
6000 240			* 7350 * 7350 * 16150 * 16150	* 7050 * 6800 * 15200 * 12850	* 5250 * 5700 * 8700 * 8300	* 3850 * 3550 * 8500 * 8050	7740 310
4500 180		* 13800 * 13800 * 29500 * 29500	* 9550 * 9050 * 20600 * 19500	* 7400 * 6850 * 16000 * 12350	* 5900 * 5200 * 12700 * 8600	* 3850 * 3500 * 8500 * 7350	8360 330
3000 120			* 10300 * 8300 * 23150 * 17850	* 8000 * 6400 * 17400 * 11600	* 6100 * 5100 * 13550 * 8300	* 3850 * 3050 * 8650 * 6700	8800 350
1500 60			* 11250 * 7850 * 24200 * 90500	* 8300 * 5100 * 17200 * 10250	* 6400 * 3700 * 13750 * 7950	* 4150 * 2950 * 9100 * 6300	8170 320
0 0			* 10650 * 7350 * 23150 * 15850	* 8050 * 5000 * 17400 * 10550	* 6200 * 3600 * 13500 * 7750	* 4050 * 3050 * 8650 * 6650	8520 340
-1500 -60		* 9900 * 8100 * 23450 * 23450	* 8200 * 7300 * 20600 * 15700	* 7100 * 4800 * 13400 * 10400	* 5000 * 3600 * 11200 * 7700	* 4450 * 3300 * 9350 * 7250	8020 320
-3000 -120			* 6850 * 6850 * 14300 * 14300	* 5200 * 4800 * 11250 * 10250		* 3500 * 3500 * 8000 * 8000	6900 280

Illustration 107

g06495181

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 700 mm (28 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		
							(mm) (inch)
							
3000 30.0			* 6150 * 6750 * 12600 * 12600			* 4050 * 4500 * 11250 * 11250	5100 280
1500 30.0			* 6450 * 6450 * 14200 * 14200	* 9500 * 5450 11600		* 3850 * 3850 * 8600 * 8600	6740 270
6000 24.0			* 6750 * 6750 * 14800 * 14800	* 6500 * 5250 14100 11500	* 4800 * 3650 8000 7150	* 3600 * 3450 7850 7350	7740 350
4500 18.0		* 12550 * 12550 * 26900 * 26900	* 8700 * 8800 * 18750 * 17250	* 6850 * 5900 14050 11800	* 5500 * 3550 7050 * 7750	* 3550 * 2950 6500 6500	8360 330
3000 12.0			* 9100 * 1250 * 20950 * 19700	* 7300 * 4800 19700 10300	* 6400 * 3450 7350 * 7900	* 3800 * 2700 3950 * 3950	8680 350
1500 6.0			* 10150 * 6700 * 21550 * 14400	* 7300 * 4500 15700 9650	* 5250 * 3300 7050 * 11250	* 3800 * 2650 4300 * 5750	8170 350
0 0			* 9600 * 6400 * 20850 * 13750	* 7100 * 4300 15250 9250	* 5100 * 3150 6800 * 11800	* 3750 * 2650 4650 * 5850	8520 340
1500 6.0		* 9300 * 8700 * 21200 * 21200	* 8250 * 6350 * 17900 * 13850	* 6400 * 4250 13800 9100	* 4700 * 3150 6800 * 10900	* 3800 * 2900 4300 * 6400	8020 520
3000 12.0			* 6850 * 6850 * 13850 * 13850	* 4750 * 4300 10800 9250		* 3500 * 3500 * 7800 * 7800	8980 280

Illustration 108

g06495182

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom(max reach), 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift OFF

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		
							(mm) (inch)
							
3000 30.0			* 6300 * 6700 * 13750 * 13750			* 4050 * 4500 * 11200 * 11200	5100 280
1500 30.0			* 7000 * 7000 * 15450 * 15450	* 6400 * 5450 11600		* 4250 * 4250 * 9400 * 9400	6740 270
6000 24.0			* 7350 * 7350 * 16150 * 16150	* 7050 * 5250 15200 11500	* 5250 * 3650 8000 7150	* 3850 * 3450 7850 7350	7740 350
4500 18.0		* 11800 * 13800 * 29500 * 29500	* 9550 * 8800 * 20600 * 17250	* 7400 * 5900 16000 11800	* 5500 * 3550 7050 * 7750	* 3850 * 2950 6500 6500	8360 330
3000 12.0			* 10300 * 1250 * 23150 * 19700	* 7600 * 4800 18400 10300	* 6400 * 3450 7350 * 7900	* 3850 * 2700 3950 * 3950	8680 350
1500 6.0			* 11250 * 6700 * 24200 * 14400	* 7300 * 4500 15700 9650	* 5250 * 3300 7050 * 11250	* 4150 * 2600 4300 * 5750	8170 350
0 0			* 10650 * 6400 * 23150 * 13750	* 7100 * 4300 15250 9250	* 5100 * 3150 6800 * 11800	* 4000 * 2650 4650 * 5850	8520 340
1500 6.0		* 9800 * 8900 * 22450 * 22450	* 8200 * 6350 * 20600 * 13850	* 6400 * 4250 13800 9100	* 4700 * 3150 6800 * 10900	* 4450 * 2900 4300 * 6400	8020 520
3000 12.0			* 6850 * 6850 * 14300 * 13800	* 4750 * 4300 10800 9250		* 3500 * 3500 * 8000 * 7800	8980 280

Illustration 109

g06495183

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade up, and heavy lift ON

Product Information Section
Lifting Capacities

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
9000 360			* 6150 * 6150 * 12600 * 12600			* 4050 * 4050 * 10250 * 10250	5120 200
7500 300			* 6450 * 6450 * 14200 * 14200	* 5900 * 5900 * 12400 * 12400		* 3850 * 3850 * 8800 * 8800	6740 270
6000 240			* 6750 * 6750 * 14800 * 14800	* 6200 * 6200 * 14100 * 14100	* 4800 * 4800 * 8050 * 8050	* 3600 * 3600 * 7950 * 7950	7740 240
4500 180		* 12550 * 12550 * 26900 * 26900	* 6700 * 6700 * 10750 * 10750	* 6050 * 6050 * 14050 * 14050	* 5500 * 5500 * 11500 * 11500	* 3250 * 3250 * 7750 * 7750	8360 330
3000 120			* 9700 * 9700 * 20950 * 20950	* 8400 * 8400 * 18100 * 18100	* 7250 * 7250 * 15100 * 15100	* 5700 * 5700 * 12300 * 12300	8680 350
1500 60			* 80150 * 7750 * 21550 * 16750	* 7450 * 7150 * 16150 * 11150	* 5850 * 5550 * 12700 * 8100	* 3750 * 3400 * 8300 * 6000	8720 350
0 0			* 9600 * 7500 * 20850 * 16100	* 7250 * 5650 * 15700 * 10700	* 5500 * 3650 * 12000 * 7850	* 4950 * 3100 * 9650 * 6750	8520 340
1500 60		* 9700 * 8150 * 21200 * 21200	* 8250 * 7400 * 17900 * 15950	* 6400 * 4800 * 13000 * 10550	* 4750 * 3650 * 10000 * 7850	* 3850 * 3350 * 8700 * 7250	8600 320
3000 120			* 6850 * 6050 * 15050 * 13050	* 4750 * 4750 * 10000 * 9000		* 3800 * 3300 * 7800 * 7800	8800 280

Illustration 110

g06495184

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift OFF

(mm) (inch)	1500 60	3000 120	4500 180	6000 240	7500 300		(mm) (inch)
							
9000 360			* 6700 * 6700 * 13750 * 13750			* 4050 * 4050 * 11200 * 11200	5120 200
7500 300			* 7000 * 7000 * 15450 * 15450	* 6400 * 6400 * 13500 * 13500		* 4250 * 4250 * 9400 * 9400	6740 270
6000 240			* 7350 * 7350 * 16150 * 16150	* 6700 * 6700 * 15200 * 15200	* 5250 * 5250 * 11000 * 11000	* 3850 * 3850 * 8650 * 8650	7740 240
4500 180		* 13800 * 13800 * 29500 * 29500	* 9550 * 9550 * 20650 * 20650	* 7400 * 7400 * 16000 * 16000	* 5800 * 5800 * 12700 * 12700	* 4050 * 3850 * 8950 * 8950	8360 330
3000 120			* 10300 * 8400 * 23150 * 18200	* 8000 * 8000 * 17400 * 17400	* 6100 * 6100 * 13550 * 13550	* 3950 * 3850 * 8850 * 8850	8680 350
1500 60			* 11250 * 7750 * 24200 * 16750	* 8300 * 8300 * 17200 * 11150	* 6400 * 6400 * 13750 * 8100	* 4150 * 4150 * 9100 * 6000	8720 350
0 0			* 10650 * 7500 * 23150 * 16100	* 8050 * 6050 * 17400 * 10700	* 6200 * 4650 * 13500 * 7850	* 4950 * 3100 * 9650 * 6750	8520 340
1500 60		* 9800 * 8100 * 22450 * 22450	* 8200 * 7450 * 20650 * 15950	* 7150 * 6000 * 15400 * 10550	* 5000 * 4650 * 11200 * 7850	* 4450 * 3300 * 9350 * 7250	8600 320
3000 120			* 6850 * 6050 * 16100 * 14200	* 5700 * 5700 * 12200 * 10700		* 3850 * 3350 * 8700 * 7800	8800 280

Illustration 111

g06495185

Lift Chart Above : 325, 4900 kg (10800 lb) counterweight, VA boom (max reach), 2.92 m (9 ft 6 inch) stick, 790 mm (31 inch) heavy-duty triple grouser track shoes, blade down, and heavy lift ON

Identification Information

i08299502

Plate Locations and Film Locations

SMCS Code: 1000; 7000

The Product Identification Number (PIN) will be used to identify a powered machine that is designed for an operator to ride.

Caterpillar products such as engines, transmissions, and major attachments that are not designed for an operator to ride are identified by Serial Numbers.

For quick reference, record the identification numbers in the spaces that are provided below the illustration.

Product Identification Number (PIN) Plate



Illustration 112

g06184412

The PIN plate is positioned on the front of the machine, close to the operator compartment.

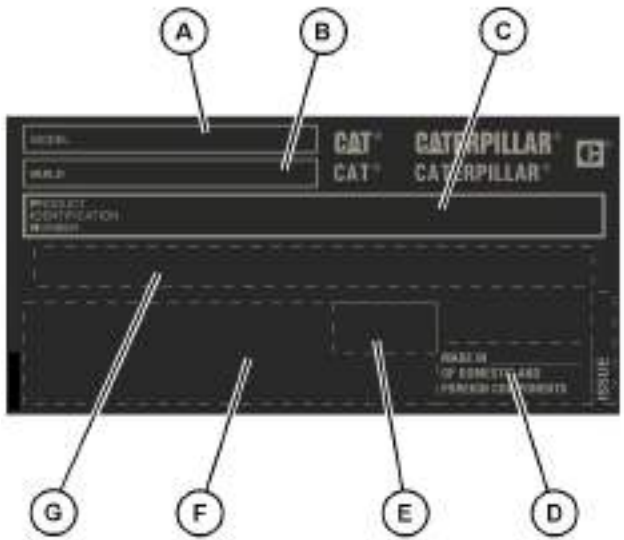


Illustration 113

g06184421

Model number (A)_____

Build (B)_____

Machine PIN (C)_____

Country of Origin Info Plate (If Required) (D)_____

Month and Year of Manufacture (If Required) (E)_____

Regional Certification Plate (If Required) (F)_____

Service Information Plate (G)_____

Local regulation may require documentation of the month and/or year of manufacture in the Operation and Maintenance Manual. Enter on line (E) above if required.

European Union



Illustration 114

g06201193

This plate is positioned on the bottom left side of the plate for the PIN.

Note: The CE plate is on machines that are certified to the European Union requirements that were effective at that time.

For machines compliant to 2006/42/EC, the following information is stamped onto the CE plate. For quick reference, record this information in the spaces that are provided below.

- Engine Power Primary Engine (kW) _____
- Engine Power for Additional Engine (kW) (If Equipped) _____
- Typical Machine Operating Weight for European Market (kg) _____
- Year of Construction _____
- Machine Type _____



Illustration 115

g06201198

This plate is positioned on the bottom left side of the plate for the PIN.

Note: The CE plate is on machines that are certified to the European Union requirements that were effective at that time.

For machines compliant to 98/37/EC and 89/392/EEC, the following information is stamped onto the CE plate. For quick reference, record this information in the spaces that are provided below.

- Engine Power Primary Engine (kW) _____
- Typical Machine Operating Weight for European Market (kg) _____
- Year _____

For manufacturer name and address and the country of origin, see the PIN plate.

Eurasian Economic Union

For machines compliant to the Eurasian Economic Union requirements, the EAC plate is positioned on or near the Product Identification Number (PIN) plate (see Product Information Section of the machine Operation and Maintenance Manual). The EAC plate is placed on machines certified to the Eurasian Economic Union requirements effective at the time of market entry.

Note: One of the below plates may be installed on the machine.



Illustration 116 g06094564

If equipped, the Month and Year of Manufacture are on the PIN plate.



Illustration 117 g06532250

If equipped, the following information is stamped onto the EAC plate. For quick reference, record this information in the spaces provided below.

- Primary Engine Power (kW)_____
- Additional Engine Power (kW) _____
- Typical Machine Operating Weight for Eurasian Economic Union (kg)_____
- Month and Year of Manufacture_____
- Machine Type _____

Manufacturer Information

Manufacturer:

Caterpillar Inc.,
100 N.E. Adams Street
Peoria, Illinois 61629, USA

Entity authorized by the manufacturer at the territory of Eurasian Economic Union:

Caterpillar Eurasia LLC
75, Sadovnicheskaya Emb.
Moscow 115035, Russia

Machine Specification Film

The machine specification film is on machines that are going into Japan.

The Japanese Industrial Safety and Health Act requires machine specifications to be displayed on a film that can easily be seen by the operator.

If equipped, this film will be located on the cab door.

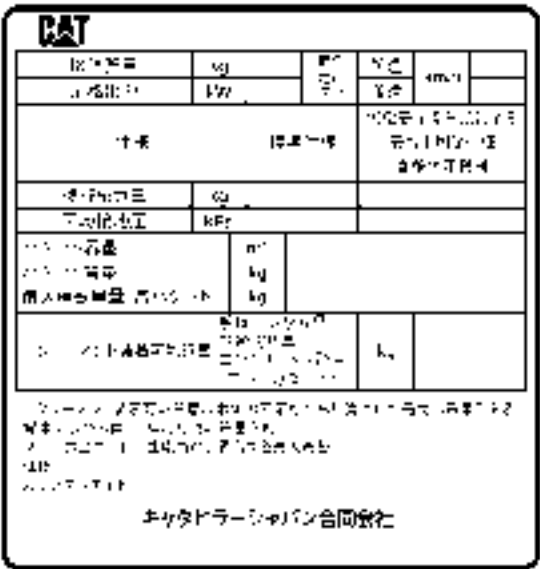


Illustration 118 g06178867

Typical example

Electromagnetic Emissions

Note: This label is on machines that are going into Canada.



Illustration 119

g06063443

If equipped, this label is located next to the PIN plate. This label verifies that the product meets the requirements of ICES-002 Issue 6. Compliance to ICES-002 Issue 6 is accomplished by meeting electromagnetic emissions industry standard CISPR-12.

Engine Serial Number

This label is located on the engine.

Engine Serial Number _____

Sound Certification Film

If equipped, this label is located on the cab door.

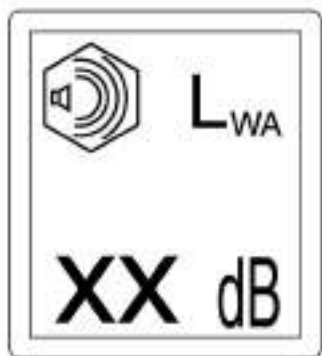


Illustration 120

g06248926

If equipped, this label will be located on the cab door. The certification label is used to verify the environmental sound certification of the machine to the requirements of the European Union. The value that is listed on the label indicates the guaranteed exterior sound power level L_{WA} at the time of manufacture for the conditions that are specified in "2000/14/EC".



Illustration 121

g03105800

(A) Low Noise Film
(B) Super Low Noise Film

If equipped, these certification labels are used to verify the Japan Ministry of Land, Infrastructure, Transportation, and Tourism (MLIT) noise designation according to the Japan "Designation Rule of Low Noise Type Construction Machine".

Low Noise (A) – Verifies that the Japan "MLIT" designates the machine as a "Low Noise" type construction machine.

Super Low Noise (B) – Verifies that the Japan "MLIT" designates the machine as a "Super Low Noise" type construction machine.

i05757951

Emissions Certification Film

SMCS Code: 1000; 7000; 7405

Note: This information is pertinent in Japan.



Illustration 122

g03654940

2014 certification label example

A certification label is located on the cab door.

The certification label verifies that the machine conforms to the 2014 Japan Nonroad Special Motor Vehicle Exhaust Regulation.

i08085827

Emissions Certification Film

SMCS Code: 1000; 7000; 7405

Consult your Cat dealer for an Emission Control Warranty Statement.

The emission certification film is on the engine.

Declaration of Conformity

SMCS Code: 1000; 7000

Table 18

An EC or EU Declaration of Conformity document was provided with the machine if it was manufactured to comply with specific requirements for the European Union. In order to determine the details of the applicable Directives, review the complete EC or EU Declaration of Conformity provided with the machine. The extract shown below from an EC or EU Declaration of Conformity for machines that are declared compliant to "2006/42/EC" applies only to those machines originally "CE" marked by the manufacturer listed and which have not since been modified.

ORIGINAL EC or EU DECLARATION OF CONFORMITY

Manufacturer: Caterpillar Inc., 100 N.E. Adams Street, Peoria, Illinois 61629, USA

Person authorized to compile the Technical File and to communicate relevant part (s) of the Technical File to the Authorities of European Union Member States on request:

Standards & Regulations Manager, Caterpillar France SAS
40 Avenue Leon-Blum 38000 Grenoble, France

I, the undersigned, _____, hereby certify that the construction equipment specified hereunder

Description:	Generic Denomination:	Earth - moving Equipment
	Function:	Hydraulic Excavator
	Model/Type:	325
	Serial Number:	
	Commercial Name:	Caterpillar

Fulfills all the relevant provisions of the following Directives

Directives	Notified Body	Document No.	
2000/14/EC amended by 2005/88/EC, Note (1)			
2006/42/EC	N/A		
2014/30/EU	N/A		

Note (1) Guaranteed Sound Power Level - ____ dB (A) Annex VI
Representative Equipment Type Sound Power Level - ____ dB (A)
[Engine Power per ISO 14396 - ____ kW, Rated engine speed - ____ rpm
Technical Documentation accessible through person listed above authorized to compile the Technical File

Done at:

Signature

Date:

Name/Position

Note: The above information was correct as of August 2017, but may be subject to change, please refer to the individual declaration of conformity issued with the machine for exact details.

Operation Section

Before Operation

i07103304

Mounting and Dismounting

SMCS Code: 6700; 7000



Illustration 123

g06224270

Typical example

Mount the machine and dismount the machine only at locations that have steps and/or handholds. Before you mount the machine, clean the steps and the handholds. Inspect the steps and handholds. Make all necessary repairs.

Face the machine whenever you get on the machine and whenever you get off the machine.

Maintain a three-point contact with the steps and with the handholds.

Note: Three-point contact can be two feet and one hand. Three-point contact can also be one foot and two hands.

Do not mount a moving machine. Do not dismount a moving machine. Never jump off the machine. Do not carry tools or supplies when you try to mount the machine or when you try to dismount the machine. Use a hand line to pull equipment onto the platform. Do not use any controls as handholds when you enter the operator compartment or when you exit the operator compartment.

Machine Access System Specifications

The machine access system has been designed to meet the intent of the technical requirements in "ISO 2867 Earth-moving Machinery – Access Systems". The access system provides for operator access to the operator station and to conduct the maintenance procedures described in Maintenance section.

Alternate Exit

Machines that are equipped with cabs have alternate exits. For additional information, see Operation and Maintenance Manual, "Alternate Exit".

i07956125

Daily Inspection

SMCS Code: 1000; 6319; 6700; 7000

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

At operating temperature, the engine coolant is hot and under pressure.

Steam can cause personal injury.

Check the coolant level only after the engine has been stopped and the cooling system pressure cap is cool enough to touch with your bare hand.

Remove the cooling system pressure cap slowly to relieve pressure.

Cooling system conditioner contains alkali. Avoid contact with the skin and eyes to prevent personal injury.

NOTICE

Accumulated grease and oil on a machine is a fire hazard. Remove this debris with steam cleaning or high pressure water, at least every 1000 hours or each time any significant quantity of oil is spilled on a machine.

For maximum service life of the machine, perform a thorough walk-around inspection before you mount the machine and before you start the engine.

First 100 Hours

Daily, perform the procedures that are applicable to your machine:

- Operation and Maintenance Manual, "Boom and Stick Linkage - Lubricate"

- Operation and Maintenance Manual, “Bucket Linkage - Lubricate”

Daily Basis

Daily, perform the procedures that are applicable to your machine:

- Operation and Maintenance Manual, “Fuel Tank Water and Sediment - Drain”
- Operation and Maintenance Manual, “Hydraulic System Oil Level - Check”
- Operation and Maintenance Manual, “Indicators and Gauges - Test”
- Operation and Maintenance Manual, “Seat Belt - Inspect”
- Operation and Maintenance Manual, “Track Adjustment - Inspect”
- Operation and Maintenance Manual, “Travel Alarm - Test”
- Operation and Maintenance Manual, “Undercarriage - Check”

Refer to Operation and Maintenance Manual, “Maintenance Interval Schedule” for all maintenance recommendations.

Note: Watch closely for leaks. If you observe a leak, find the source of the leak and correct the leak. If you suspect a leak or you observe a leak, check the fluid levels more frequently.



Illustration 124

g06181597

Inspect the attachment control linkage, attachment cylinders, and attachment for damage or excessive wear. Make any necessary repairs.

Inspect the lights for broken bulbs and for broken lenses. Replace any broken bulbs and any broken lenses.

Inspect the engine compartment for any trash buildup. Remove any trash buildup from the engine compartment.

Inspect the cooling system for any leaks, for faulty hoses and for any trash buildup. Correct any leaks. Remove any trash from the radiator.

Inspect all the belts for the engine attachments. Replace any belts that are worn, frayed, or broken.



Illustration 125

g06181620

Inspect the hydraulic system for leaks. Inspect the tank, cylinder rod seals, hoses, tubes, plugs, connections, and fittings. Correct any leaks in the hydraulic system.

Inspect the tubes and hoses along the boom and stick for wear and leaks. Replace any hoses or tubes that are worn or leak.

Inspect the differential and the final drives for leaks. Make any necessary repairs.

Inspect the swing drive for leaks.

Make sure that all covers and guards are securely attached. Inspect the covers and the guards for damage.



Illustration 126

g06493968

Inspect the steps, the walkways, and the handholds.
Clean the steps, the walkways, and the handholds.
Make any necessary repairs.

Inspect the operator compartment for trash buildup.
Check for trash buildup under the floorplate and on
the crankcase guard. Keep these areas clean.

Adjust the mirrors to achieve the best visibility.

Machine Operation

i06952448

Alternate Exit

SMCS Code: 7310

Rear Window with Ring Seal (If Equipped)

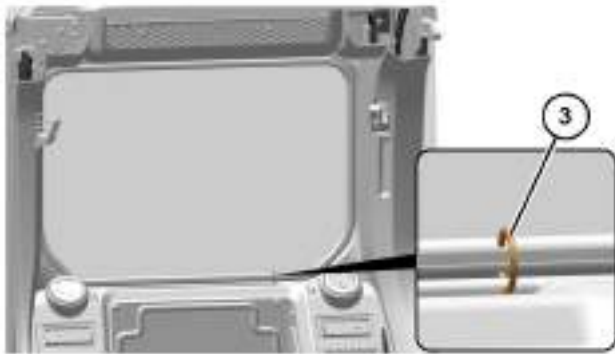


Illustration 127

g06187008



Alternate Exit – The rear window serves as an alternate exit.

To remove the rear window, pull ring (3) and completely remove the window seal, then push out the glass. Climb through the rear window opening to exit the cab.

Rear Window with Lever (If Equipped)



Illustration 128

g06213470

Inside lever in latched position



Alternate Exit – The rear window serves as an alternate exit.

To remove the rear window, rotate handle from its latched position, then push out the glass. Climb through the rear window opening to exit the cab.

i07383859



Illustration 129

g06213471

The window is also equipped with an outside handle. If the operator is unable, outside personnel can rotate the outside handle and pull the window out.

Seat

SMCS Code: 5258-025; 7312-025; 7324; 7327

Comfort Level Seat (If Equipped)



Illustration 130

g06225151

- (1) Headrest
- (2) Backrest adjuster
- (3) Seat and console fore and aft adjuster
- (4) Indicator
- (5) Seat height adjustment lever
- (6) Seat fore and aft lever

The operator can adjust the height of headrest (1). To adjust the headrest, hold the headrest with both hands. Move the headrest up and down. Release the headrest when the desired position is attained. The headrest will remain in the desired position.

Pull up on backrest adjuster (2) to release the lock. Move the backrest to the desired position and then release the adjuster.

Lift up on fore and aft adjuster (3) to release the seat from the locked position. Adjust the seat and console forward or rearward to the desired position and then release the lever to lock the seat.

Use seat height adjustment lever (5) to adjust the seat for the operator's height and weight. Move the adjuster switch to the "+" symbol to raise the height. Ratchet the seat upward without sitting in the seat. Then sit in the seat to check the color of indicator (4). When the indicator is showing green, the seat is in the right range for the operator. Further adjustment can be made as long as the indicator stays green.

To lower the seat, move the adjust switch to the "-" symbol. Ratchet the adjuster downward without sitting in the seat. Then sit in the seat to check the color of indicator (4). When the indicator is showing green, the seat is in the right range for the operator. Further adjustment can be made as long as the indicator stays green.

Pull upward on seat fore and aft lever (6) to release the cushion lock. Adjust the seat cushion forward or backward to the desired position and then release the lock to lock the cushion in place.

Deluxe Level Seat (If Equipped)



Illustration 131

g06303504

- (1) Adjustment lever for the lumbar support
- (2) Seat heater switch
- (3) Adjustment lever for reclining the seat
- (5) Indicator
- (6) Seat and console fore and aft lever
- (7) Seat height adjustment
- (8) Seat cushion angle adjuster
- (9) Console height adjuster
- (10) Seat fore and aft adjuster
- (11) Seat cushion fore and aft adjuster
- (12) Headrest

The lumbar support is located in the back of the seat. Turn knob (1) (if equipped) counterclockwise to increase the force of the lumbar support. To decrease the lumbar support, continue to turn the knob counterclockwise.

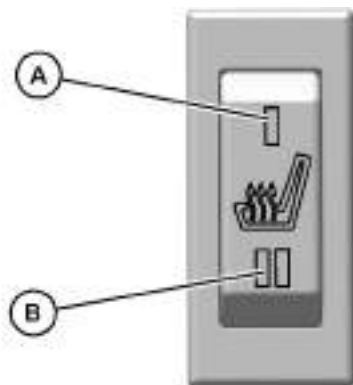


Illustration 132

g06251600

(A) Low heat
(B) High heat

Seat heater switch (2) is a three position switch. The middle position of the switch is off. Press the top position of the switch for low heat. Press the bottom of the switch for high heat.

⚠ WARNING

Heat-induced burns can occur when some people use a seat heater. Do not use the seat heater if you have a reduced ability to sense temperature changes, a reduced ability to feel pain, or have sensitive skin.

Pull up lever (3) to change the angle of the backrest. With the backrest in the desired position. Release the lever.

Push in adjuster (11) to adjust the fore/aft position of the seat cushion.

Pull lever (6) to adjust the seat and the console forward and backward.

Operate seat height adjustment (7) to adjust the seat and the console to the desired height. Pull up the lever to raise the height of the seat. Push down on the lever to lower the seat. Indicator (5) will turn green when the seat is at the optimum height for the operator's height and weight. If the indicator is yellow, further adjustment is required.

Note: Do not operate the seat compressor for over a minute or damage can result.

Use handle (9) to adjust the height of the console. When the lever is pulled forward, a gear is released. The operator can rotate the lever freely. Release the lever to return to the original position.

To adjust the seat forward or backward, pull up lever (10) and hold the lever. Move the seat to the desired position. To lock the seat in the selected position, release the lever.

Push the adjuster (8) to adjust the tilt angle of the seat cushion.

The operator can adjust the height of headrest (12). To adjust the headrest, hold the headrest with both hands. Move the headrest up and down. Release the headrest when the desired position is attained. The headrest will remain in the desired position.

Premium Level Seat (If Equipped)



Illustration 133

g06251562

- (1) Seat heater switch
- (2) Cooling switch
- (3) Adjustment lever for reclining the seat
- (4) Fore/Aft isolator activate/deactivate lever
- (5) Seat and console fore and aft lever
- (6) Seat cushion angle adjuster
- (7) Seat height adjustment
- (8) Adjustable damper
- (9) Seat cushion fore and aft adjuster
- (10) Console height adjustment
- (11) Seat fore and aft adjuster
- (12) Headrest

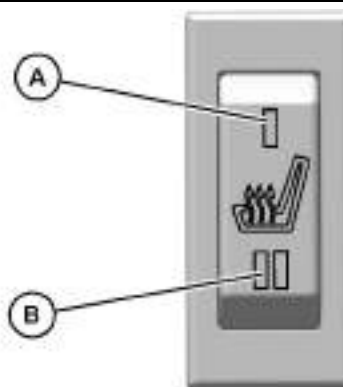


Illustration 134

g06251600

- (A) Low heat
- (B) High heat

Seat heater switch (1) is a three position switch. The middle position of the switch is off. Press the top position of the switch for low heat. Press the bottom of the switch for high heat.

WARNING

Heat-induced burns can occur when some people use a seat heater. Do not use the seat heater if you have a reduced ability to sense temperature changes, a reduced ability to feel pain, or have sensitive skin.

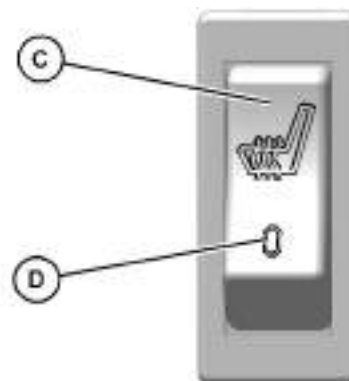


Illustration 135

g06251623

- (C) Cooling on
- (D) Cooling off

To cool the seat, press the top of cooling switch (2). Press the bottom of the switch to turn the cooling off.

Pull up lever (3) to change the angle of the backrest. With the backrest in the desired position. Release the lever.

Push in adjuster (9) to adjust the fore/aft position of the seat cushion.

Pull lever (5) to adjust the seat and the console forward and backward.

Fore/Aft isolator activate/deactivate lever (4) allows the operator to lock the seat and console or allow the seat and console to float with the movement of the machine. With the adjuster pointing to the front of the machine, the console is locked. Rotate the lever to the rear to unlock the console and allow it to float.

Operate seat height adjustment (7) to adjust the seat and the console to the desired height. Pull up the lever to raise the height of the seat. Push down on the lever to lower the seat.

Use adjustable damper (8) to stiffen or loosen the seat suspension.

Note: Do not operate the seat compressor for over a minute or damage can result.

Use handle (10) to adjust the height of the console. When the lever is pulled forward, a gear is released. The operator can rotate the lever freely. Release the lever to return to the original position.

To adjust the seat forward or backward, pull up lever (11) and hold the lever. Move the seat to the desired position. To lock the seat in the selected position, release the lever.

Push adjuster (6) to adjust the tilt angle of the seat cushion.

The operator can adjust the height of headrest (12). To adjust the headrest, hold the headrest with both hands. Move the headrest up and down. Release the headrest when the desired position is attained. The headrest will remain in the desired position.

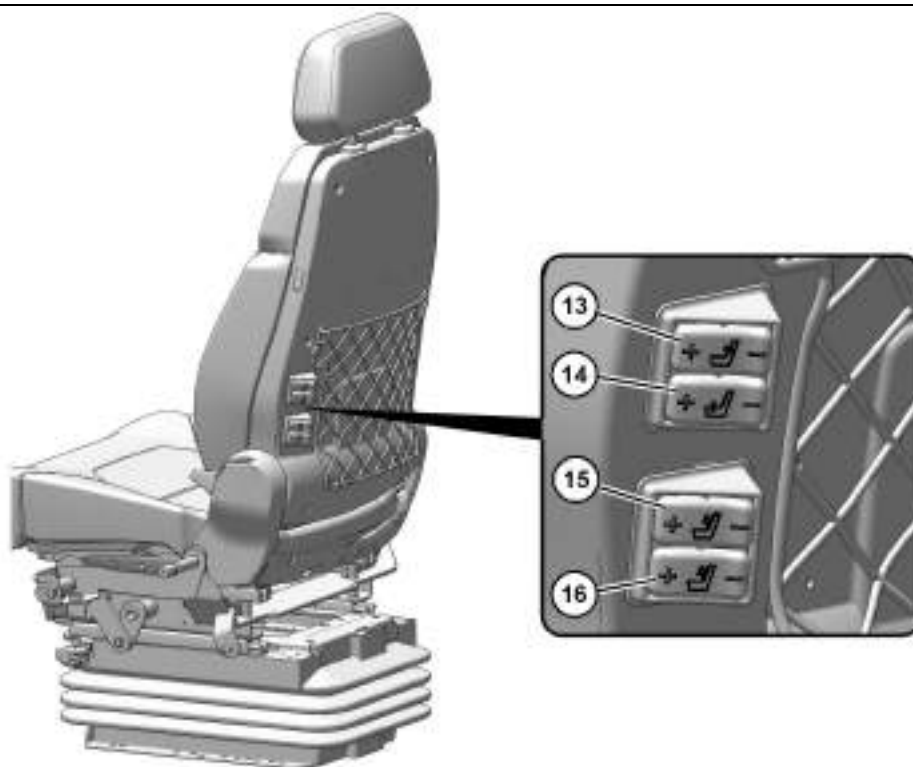


Illustration 136

g06251575

(13) Seat back side bolster control
(14) Seat cushion side bolster control

(15) Upper lumbar control
(16) Lower lumbar control

The lumbar controls on the back of the seat back all use two position switches. Press the + symbol to increase lumbar support. Press the - symbol to decrease lumbar support.

i07092308

Seat Belt

SMCS Code: 7327

Note: This machine was equipped with a seat belt when the machine was shipped from Caterpillar. At the time of installation, the seat belt and the instructions for installation of the seat belt meet the SAE J386 and ISO 6683 standards. Consult your Cat dealer for all replacement parts.

Always check the condition of the seat belt and the condition of the mounting hardware before you operate the machine.

Seat Belt Adjustment for Retractable Seat Belts

Fastening The Seat Belt



Illustration 137

g06223891

Pull seat belt (2) out of retractor (1) in a continuous motion.

Fasten seat belt catch (3) into buckle (4). Make sure that the seat belt is placed low across the lap of the operator.

The retractor will adjust the belt length and the retractor will lock in place. The comfort ride sleeve will allow the operator to have limited movement.

Releasing The Seat Belt



Illustration 138

g06223894

Push the release button on the buckle to release the seat belt. The seat belt will automatically retract into the retractor.

Extension of the Seat Belt

WARNING

When using retractable seat belts, do not use seat belt extensions, or personal injury or death can result.

The retractor system may or may not lock up depending on the length of the extension and the size of the person. If the retractor does not lock up, the seat belt will not retain the person.

Longer, non-retractable seat belts and extensions for the non-retractable seat belts are available.

Caterpillar requires only non-retractable seat belts to be used with a seat belt extension.

Consult your Cat dealer for longer seat belts and for information on extending the seat belts.

i07098988

Selective Catalytic Reduction Warning System

SMCS Code: 1091-WXX; 7400

The selective catalytic reduction (SCR) system is a system used to reduce NOx emissions from the engine. Diesel exhaust fluid (DEF) is pumped from the DEF tank and is sprayed into the exhaust stream. The DEF reacts with the SCR catalyst to reduce NOx and leaves a nitrogen and water vapor. The Exhaust Gas Recirculation (EGR) system cools, measures, and introduces recirculated exhaust gas into the intake manifold to aid in NOx reduction.

NOTICE

Stopping the engine immediately after the engine has been working under load can result in overheating of SCR components.

Refer to the Operation and Maintenance Manual, "Engine Stopping" procedure to allow the engine to cool and to prevent excessive temperatures in the turbocharger housing and the DEF injector.

Note: With the operator key in the OFF position, the purge system will activate.

Definitions

Observe the following definitions.

Self-correct – Fault condition no longer exists. An active fault code will no longer be active.

Notification – Action taken by the system to alert the operator of pending Inducement.

Inducement – Engine derates, vehicle speed limits, or other actions intended to prompt the operator to repair or maintain the emission control system.

Inducement Trigger – Fault conditions that result in activation of the inducement strategy. DEF level inducement faults have a diagnostic fault code. DEF quality fault, SCR tampering fault, SCR system fault, and EGR system faults will all have a related diagnostic fault code along with an inducement diagnostic fault code.

First occurrence – A DEF quality fault, SCR tampering fault, SCR system fault, or an EGR system fault becomes active for the first time.

Repeat occurrence – If any DEF quality fault, SCR tampering fault, SCR system fault, or an EGR system fault becomes active again within 40 hours of the first occurrence.

Safe Harbor Mode – Safe harbor mode is a 20 minute engine run time period. The engine can be operated with full power after reaching a level 3 inducement. Once in level 3 inducement, the operator can perform a key cycle and the engine will enter safe harbor mode. Safe harbor mode can only be implemented once. Safe harbor mode is not allowed for DEF level inducements.



Illustration 139

g06223861

DEF Level Normal

Inducement Strategy for DEF Level

If multiple warnings are present in the system, the most important problem is shown first. Press the right key or press the left key to view all the warnings that are present in the machine. If no keys are pressed within 5 seconds, the display will return to the most important problem.

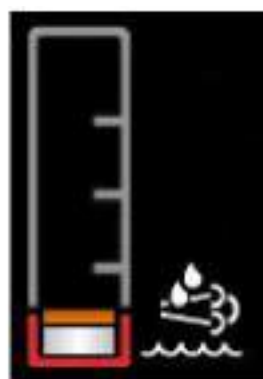


Illustration 140

g06223864

DEF Level Low

If the DEF level falls below 19%, "DEF Level Low" message will be displayed on the monitor. To avoid further inducements, turn the key to the OFF position and add DEF to the DEF tank.



Illustration 141

g06223865

DEF Level Low and Emission Fault

If the DEF level falls below 12.5%, a level 1 inducement event will occur. a “DEF Level Low” message and an “Emission Fault” message will appear on the monitor.



Illustration 143

g06223883

DEF Level Low, Emission Fault, Flashing Action Lamp, and Audible Alarm

If the ECM is configured to “Reduced Performance” and the DEF tank has been emptied of all DEF, the engine will be in a level 3 final inducement. If the ECM is configured to “Reduced Time” and the DEF level is 0%, the engine will be in a level 3 final inducement. Prior to final inducement a “DEF Level Low” message, and an “Emission Fault” message will appear on the monitor. The action lamp on the monitor will flash and an audible alarm will sound 20 seconds prior to the final inducement. The engine will be taken to low idle or will be shut down. Once shut down, the engine can be restarted for 5 minute periods at reduced speed and torque. If set to idle, the engine will idle indefinitely at reduced torque. The amber indicator next to the DEF level gauge on the dash will remain lit.

Note: Turn the key to the OFF position and add DEF to the DEF tank to reset the DEF level inducement.



Illustration 142

g06223866

DEF Level Low, Emission Fault, and Flashing Action Lamp

If the DEF level is below 6%, a level 2 inducement event will occur. a “DEF Level Low” message and an “Emission Fault” message will appear on the monitor. The action lamp on the monitor will flash. If the ECM is configured to “Reduced Performance” and the DEF level has reached 0%, the machine will be limited to 75% torque.

Inducement Strategy for DEF Quality, Tampering, SCR System Fault, and Impeded EGR

If multiple warnings are present in the system, the most important problem is shown first. Press the right key or press the left key to view all the warnings that are present in the machine. If no keys are pressed within 5 seconds, the display will return to the most important problem.



Illustration 144

g03623190

A “Engine Fault Check Engine” message and an “Emission Fault” message will appear on the monitor for a fault resulting from poor DEF quality, SCR system tampering, SCR system fault, or an EGR system fault. If the fault is the result of poor DEF quality, SCR system tampering, or SCR system fault, a first occurrence will result in a level 1 inducement for a duration of 2.5 hours. The level 1 inducement will also illuminate the check engine lamp. Repeat occurrences will result in a level 1 inducement duration of 5 minutes. If the fault is the result of an EGR system fault, a first occurrence will result in a level 1 inducement for a duration of 35 hours. Repeat occurrences will result in a level 1 inducement duration of 48 minutes.

 


Illustration 145

g03623191

If a fault condition exists for the entire duration of inducement level 1, the strategy advances to inducement level 2. A “Engine Fault Check Engine” message, and an “Emission Fault” message will appear on the monitor and the action lamp on the monitor will flash for a fault resulting from poor DEF quality, SCR system tampering, SCR system fault, or an EGR system fault. For poor DEF quality, SCR system tampering, and SCR system faults, the duration for a level 2 inducement is 70 minutes for the first occurrence. For EGR system faults, the duration for a level 2 inducement is 60 minutes for the first occurrence. Repeat occurrences for poor DEF quality, SCR system tampering, and SCR system faults will result in a level 2 inducement of 5 minutes. Repeat occurrences for EGR system faults will result in a level 2 inducement of 60 minutes.

 


Illustration 146

g03623193

If a fault condition exists for the entire duration of inducement level 2, the strategy advances to inducement level 3. A “Engine Fault Check Engine” message, and an “Emission Fault” message will appear on the monitor, the action lamp will flash, and an audible alarm will sound 20 seconds prior to the level 3 inducement. The engine will be taken to low idle or will be shut down. After the level 3 inducement you may cycle the key, which will allow 20 minutes of engine run time with full torque. After 20 minutes, the engine will be in level 3 final inducement and will allow idle only or be shut down until the issue has been resolved. Once shut down, the engine can be restarted for 5 minute periods at reduced speed and torque. If set to idle, the engine will idle indefinitely at reduced torque.

Note: Contact your Cat dealer for repairs if a fault occurs.

i08161555

Operator Controls

SMCS Code: 7300; 7301; 7451

Note: Your machine may not be equipped with all the controls that are described in this topic.

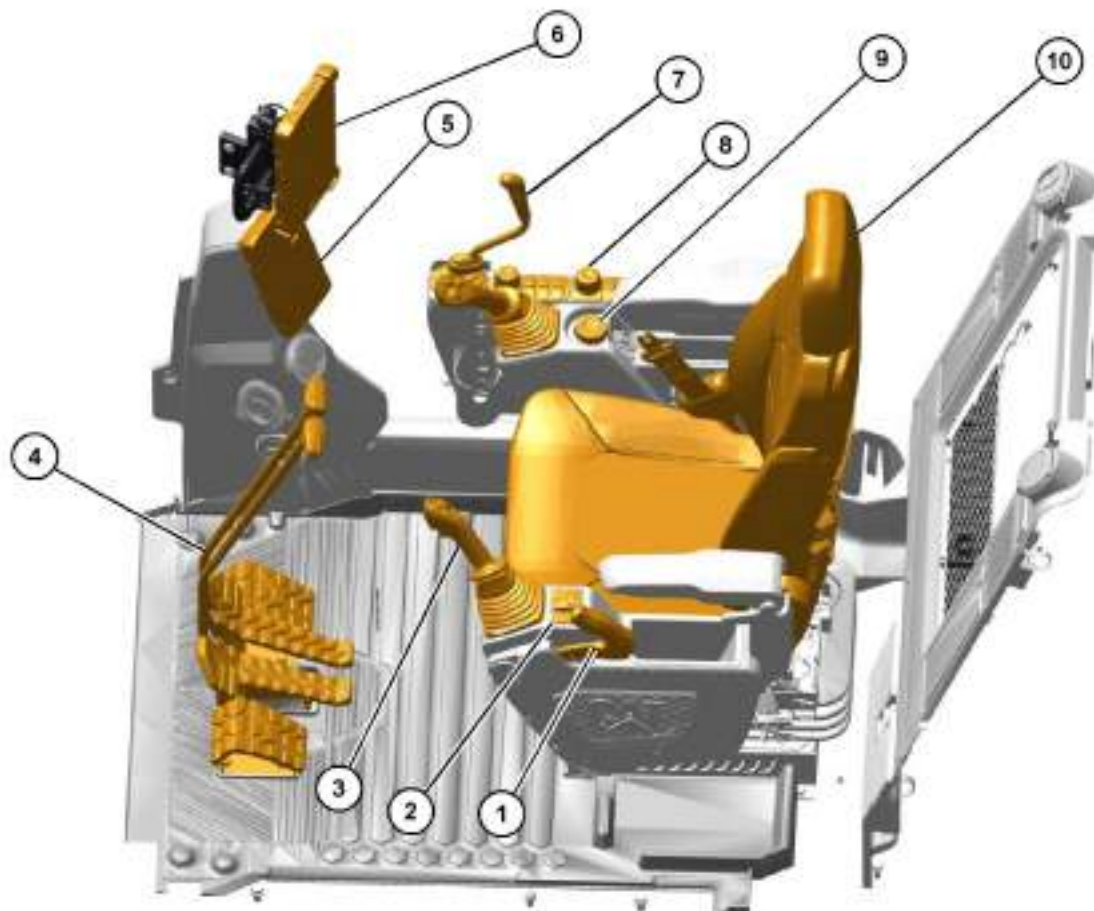


Illustration 147

g06464441

- (1) Hydraulic lockout control
- (2) Left side switch panel
- (3) Joystick controls
- (4) Travel controls

- (5) Monitor
- (7) Blade Control Lever
- (6) Cat Grade Control Monitor (If Equipped)
- (8) Right side switch panel

- (9) Engine start switch
- (10) Operator seat

Hydraulic Lockout Control (1)

The lever for the hydraulic lockout control is at the left side of the left console.



Locked – Move the travel levers/pedals and move the joysticks to the HOLD (center) position. Move the lever for the hydraulic lockout control backward to the LOCKED position. All the factory installed hydraulic controls will become inoperable.

Note: Make sure that the lever for the hydraulic lockout control is in the LOCKED position before attempting to start the engine. If the lever is in the UNLOCKED position, the engine start switch will not function.



Unlocked – Move the lever for the hydraulic lockout control forward to the UNLOCKED position. All the factory installed hydraulic controls will become operable.



Tilt – For machines equipped with the tilt-up console, pull the lever to the rear most position to release the console lock and tilt the console upward for easier exit and entry.

Left Side Switch Panel (2)



Illustration 148

g06219690

Beacon Light Switch (2A) (If equipped)



Beacon Light Switch – Push the top of the switch to turn on the beacon light. Push the bottom of the switch to turn off the beacon light.

Quick Coupler Control (2B) (If equipped)



If equipped, the switch for the quick coupler control is on the left console. The switch is equipped with a spring loaded lock button. To operate the switch, the lock button must be pushed forward to release the switch. With the lock held forward, press the rear of the switch downward to uncouple the bucket or work tool. Press the button again to attach the bucket or work tool.

Note: An alarm will sound whenever the switch has been activated to lock or unlock a work tool.

For further details, see Operation and Maintenance Manual, “Quick Coupler Operation”.

Joystick Controls (3)

The joystick control is used to control the functions of the machine implements. For more information on the individual functions of the joysticks, refer to Operation and Maintenance Manual, “Joystick Controls”.

Travel Control (4)



Illustration 149

g06178249

Position for normal travel

- (A) Rear of machine
- (B) Final drive
- (C) Idler

When you travel, make sure that final drive sprockets (B) are under the rear of the machine.

Stop – Release the travel levers/pedals to stop the machine. When you release the travel levers/pedals from any position, the travel levers/pedals will return to the CENTER position. The travel brakes will be applied.

Move both of the travel levers or both of the travel pedals equally in the same direction to travel straight.

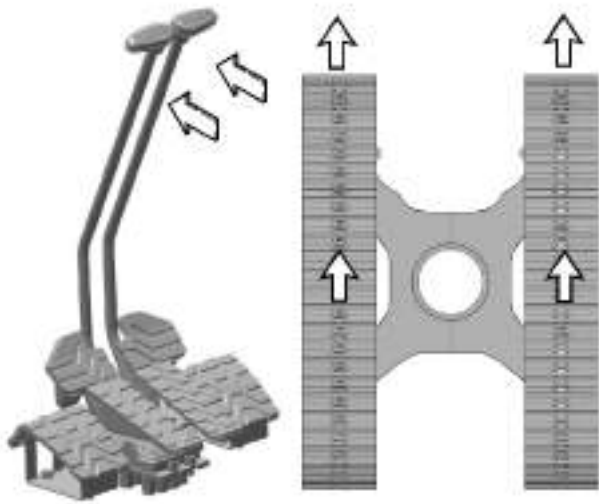


Illustration 150
FORWARD travel

g06178269

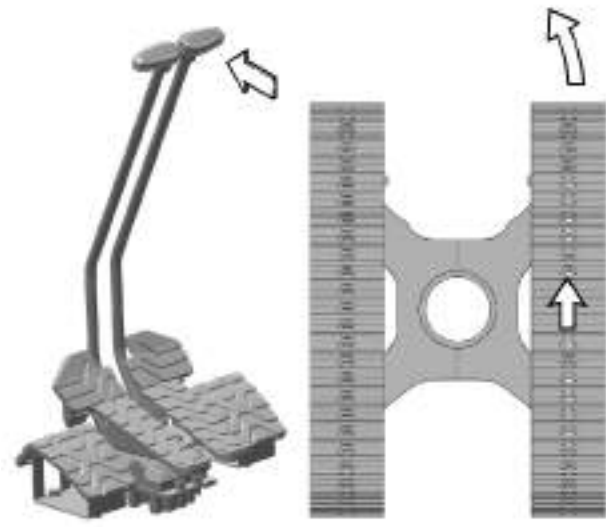


Illustration 152
Pivot left turn (FORWARD)

g06178288

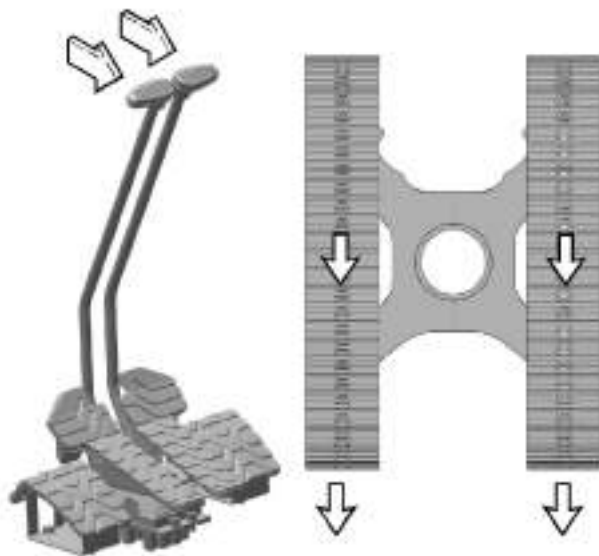


Illustration 151
REVERSE travel

g06178283

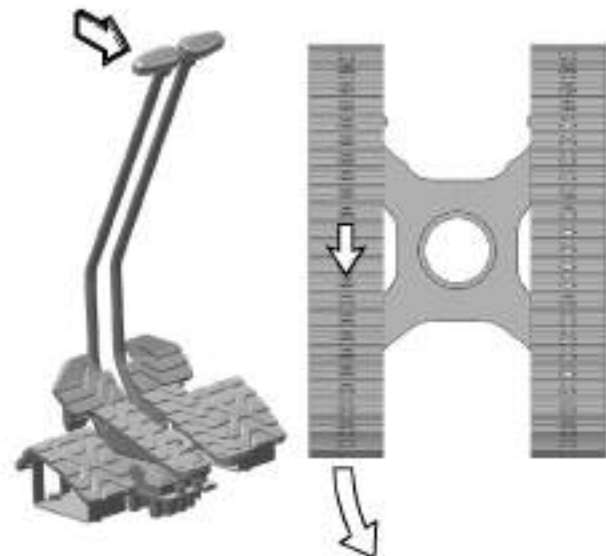


Illustration 153
Pivot Left Turn (REVERSE)

g06178294

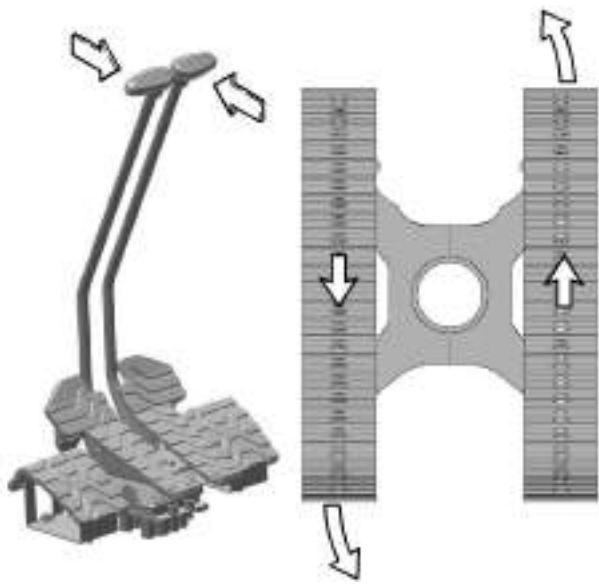


Illustration 154

g06178300

Counterrotate turn (LEFT)

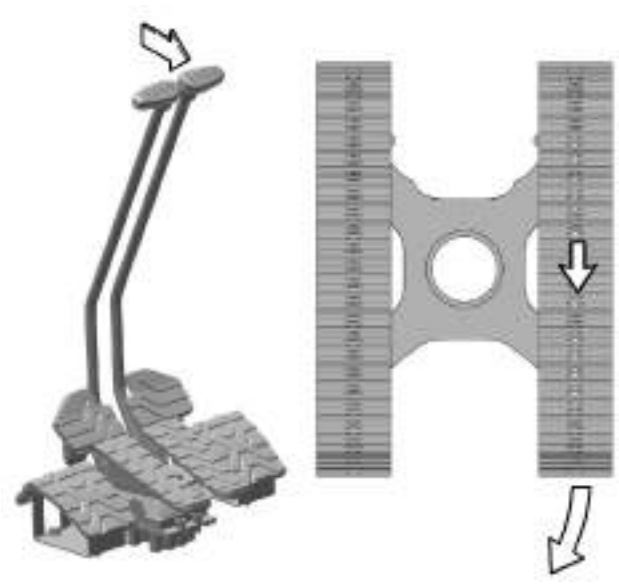


Illustration 156

g06178308

Pivot right turn (REVERSE)

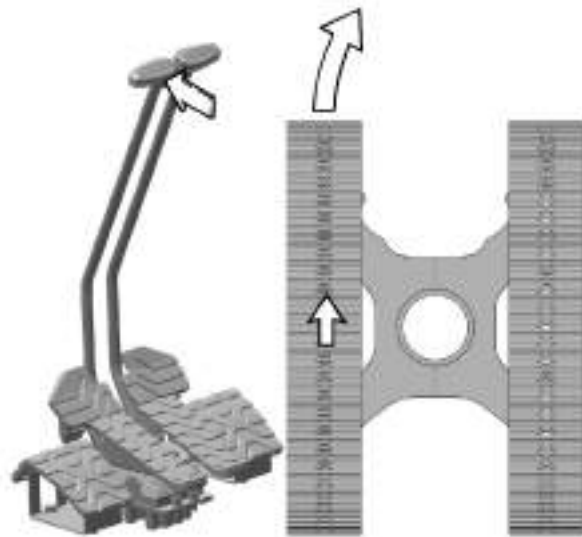


Illustration 155

g06178305

Pivot right turn (FORWARD)

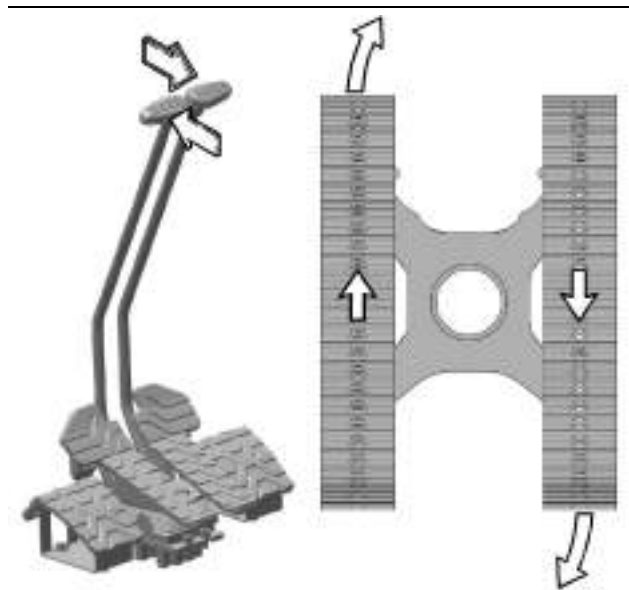


Illustration 157

g06178313

Counterrotate turn (RIGHT)

Monitor (5)

The monitor is used to display various operating information of the machine. For more information on the operation of the monitor, refer to Operation and Maintenance Manual, "Monitoring System".

Cat Grade Control Monitor (6) (If Equipped)

Monitor (6) is used to display Cat Grade Control operating information. Cat Grade Control is designed to calculate bucket tip position and provide visual and audible feedback to the operator. This feedback allows the operator to achieve the desired grade safer, quicker and more accurately than traditional grading techniques. For more information on the operation of the monitor, refer to Operation and Maintenance Manual, M0082987, "Cat 2D and 3D GRADE System for Next Gen Hydraulic Excavators".

Blade Control (7) (If Equipped)



Illustration 158

g06571650

NOTICE

Avoid hitting or moving rocks using the blade. Blade and cylinder damage could occur.

When using the blade as outrigger, be sure to support the machine with the edge of the blade against the ground. When curling the front attachment, do not allow the bucket to hit the blade.

During digging operation, do not allow the boom cylinder to contact the blade edge. When no blade operation is needed, operate with the bucket on the opposite side of the machine from the blade.

Do not swing the upper structure with cab door and/or upper structure covers opened. An opened door and/or cover can hit the blade when the blade is in the raised position while the machine is swinging.



Float (A) – Push the lever forward past the detent to activate the blade float function. The float function is not deactivated when the lever is released into the NEUTRAL position. When in float, the blade moves up and down with the ground contour. Display indicates that float is active. Float will be deactivated if the lever is moved through the HOLD position to the RAISE or the LOWER position at least 6° degrees from the HOLD position.

Note: 6° degree should be evaluated by operator



Lower (B) – Push the lever forward to lower the blade. Blade lower movement speed can be controlled by how far the lever is pushed forward. Releasing the lever will return to the HOLD position.

Hold (C) – The lever will return to the HOLD position when you release the lever from the RAISE position, or from the LOWER position. The movement of the bulldozer blade stops in the up and down direction. If

the lever is released from the float position, the float function remains active.



Raise (D) – Pull back on the lever to raise blade. Blade raise movement speed can be controlled by how far the lever is pulled back. Releasing the lever will return to the HOLD position.

Engine Start Switch (9)

NOTICE

The engine start switch must be in the ON position and the engine must be running in order to maintain electrical functions and hydraulic functions. This procedure must be followed in order to prevent serious machine damage.

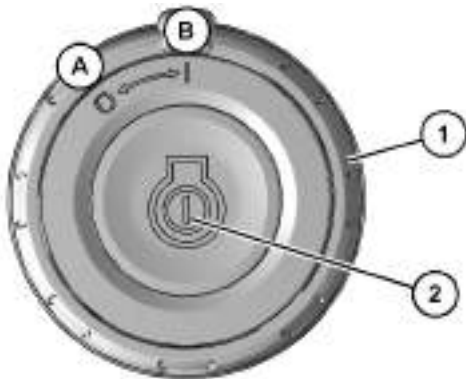


Illustration 159

g06180554

- (A) Off
- (B) On
- (1) Engine start ring
- (2) Start button



OFF – Turn the engine start ring (1) to the OFF position (A) to stop the engine.



ON – To activate the electrical circuits in the cab and enable engine starting, turn the engine start ring (1) clockwise to the ON position (B).



START – To start the engine, enter the code on the monitor. Press start button (2). After the engine starts, release the button.

Note: Pressing the start button with the engine on will also turn off the engine.

Engine Idle Shutdown

If the operator has not operated the machine for a period of time, this function shuts down the engine. Engine Idle Shutdown does not shut down other systems, such as the AC, which can run down the battery after idle shutdown. This function comes disabled from the factory but can be enabled and adjusted in the monitoring system. Refer to Operation and Maintenance Manual, “Monitoring System”

Note: Engine Idle Shutdown may be required for local regulations.

The Engine Idle Shutdown (EIS) shuts down the engine if the following conditions are met:

- The control levers are in neutral.
- The engine coolant temperature is greater than 70° C (158° F).
- The battery voltage is greater than 24.5V
- The engine speed is less than 2000 rpm.
- The ambient temperature range is between 0° C (32° F) and 30° C (86° F).
- The Back Pressure Valve (BPV) is not working.

Note: If any service tests or calibrations are running, the machine will not enter into engine idle shutdown.



Engine Idle Shut down – The action lamp will illuminate and the monitor will display a message 20 seconds before the engine shuts down. An operator can cancel the shutdown by pressing a button on the monitor or move one of the controls.

Operator's Seat (10)

There are different options for operators seats. Each operator seat and console have various adjustments to meet a wide range of operators. For more information, refer to Operation and Maintenance Manual, "Seat".

Tilt-Up Console (10A)

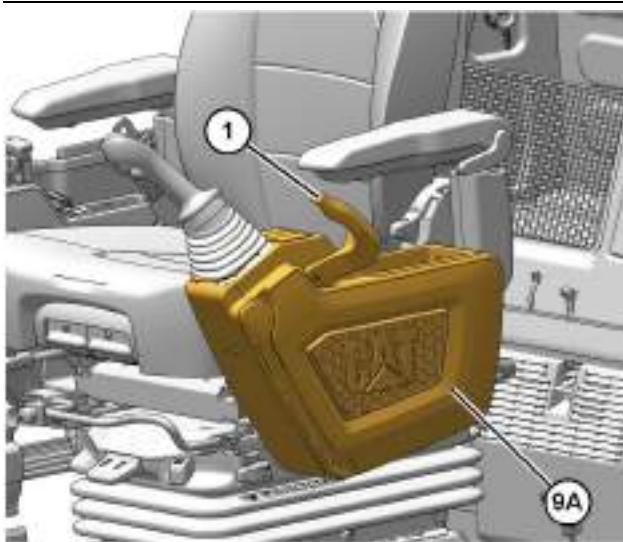


Illustration 160

g06226523

- (1) Hydraulic lockout control
- (2) Tilt-up console

Some optional seats are equipped with a tilt-up console. The console can be tilted upward for easier exit and entry. The console is unlocked by pulling the hydraulic lockout control (1) to the rearmost position. The console will then tilt upward. Simply push the console downward until the console locks into place when ready for use.

Right Side Switch Panel (8)

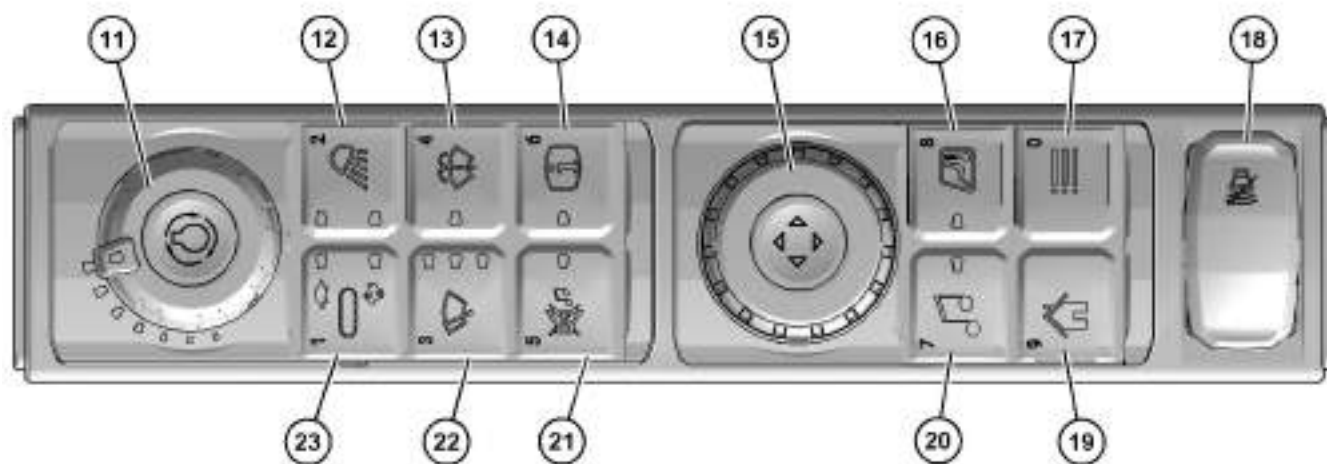


Illustration 161

g06464446

Right side switch panel

(11) Engine speed / power mode control	(16) Heating and air conditioning	(21) Radio mute switch
(12) Light switch	(17) Next menu	(22) Window wiper
(13) Window washer	(18) Travel alarm mute (If Equipped)	(23) Travel speed control
(14) Operator Information	(19) Home	
(15) Jog dial	(20) Radio control	

Note: In addition to the intended functions, the buttons on the switch panel are numbered from 0-9. The numbered buttons can be used to enter numbers into the monitor for screens such as the passcode screen.

Engine Speed / Power Mode Control (11)

Engine Speed Control – Turn the dial to control the engine speed (engine rpm). Select the desired position from the seven available positions. Turn the dial counterclockwise to decrease the engine speed (engine rpm). Turn the dial clockwise to increase the engine speed (engine rpm).



Power Mode Control – Push in the dial to change the power mode settings. The Power Mode Control allows the operator to choose what power mode to operate the engine. The modes that can be selected are: “ECONOMY”, “SMART”, and “POWER”.

Note: The default power mode setting can be set within the monitor. For more information, refer to Operation and Maintenance Manual, “Monitoring System”.

Note: “ECONOMY” mode is **not** available on GC models.

Light Switch (12)

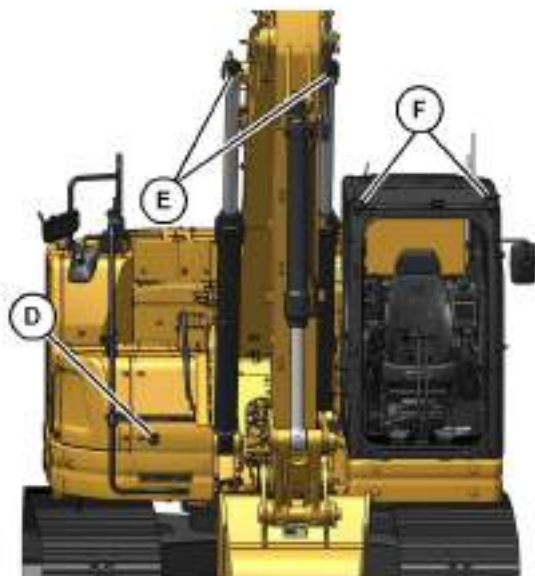


Illustration 162

g06494056



Light Switch – Push the switch to turn on the work lights.

Whenever you push the switch, you change the pattern of the work lights that are turned on. The indicator lights in the cab indicate the pattern of the work lights.

Pattern 1 – When you press the light switch once, the first indicator light turns on. When the first indicator light is on, the following work lights are turned on: work light (D), which is mounted on the chassis, and work lights (F), which are mounted on the cab.

Pattern 2 – When you press the light switch twice, the first indicator light and the second indicator light turn on. When the first indicator light and the second indicator lights are on, the following work lights are turned on: work light (D), which is mounted on the chassis, work lights (F), which are mounted on the cab, and work lights (E), which are mounted on the boom.

OFF – When both of the indicator lights are off, all the work lights are off.

Note: Your machine may be equipped with a Premium Surrounding lighting package with left side, right side, and rear lights. Refer to M0109053, "Next Generation Hydraulic Excavator Monitoring System Supplement", Function List Screen, Work Light Control for more information.

Note: Your machine may be equipped with a lighting system that has a time delay. When this system is installed, cab lights (F) and boom lights (E) will not turn off for a predetermined amount of time after the engine start key has been turned to the OFF position. The time delay can vary from 0 minutes to 5 minutes. For further details, consult your Cat dealer.

Window Washer (13)



Window Washer (13) – Push the switch to activate the window washer. While the switch is depressed, the indicator light will come on and washer fluid will spray from the nozzle. The window wiper will also operate while the switch is depressed. After the switch is released for approximately 3 seconds, the window wiper will stop.

NOTICE

If the wiper does not operate with the switch in the ON position, turn the switch off immediately. Check the cause. If the switch remains on, motor failure can result.

NOTICE

If the washer is used continuously for more than 20 seconds or used when no washer solution comes out, motor failure can result.

Operator Information (14)



Help Button (14) – Press and hold this button to view the operator information screen. The indicator light will illuminate when the button is pressed.

Jog Dial (15)

The jog dial can be used to select items displayed on the monitor screen. The dial can be rotated 360 degrees. The dial can also be moved left, right, up, and down. The dial can be pushed in to make a selection.

Air Conditioning and Heating (16)



Air Conditioning and Heating (16) – Press this button to bring up the air conditioning and heating menu. The indicator light will illuminate when the heating and cooling system is active. The jog dial (15) can be used to make selections. If equipped with a touch screen, the selections can be made by touching the monitor.

Refer to Air Conditioning and Heating Control for more information.

Next Menu (17)



Next Menu (17) – Press the next menu button to access the next higher menu. If there is not a menu above the current screen being viewed, the button will not do anything.

Refer to Monitoring System for more information.

Travel Alarm Mute Switch (18) (If Equipped)



Travel Alarm Mute Switch (18) – Press travel alarm mute switch (18) to mute the travel alarm.

Note: The travel alarm will sound when the travel levers or the travel pedals are activated.

Home (19)



Home Key (19) – Press the home key to return to the default display at any time.

Refer to Monitoring System for more information.

Radio Control (20)



Radio Control (20) – Press this button to display the radio controls on the monitor. The indicator light on the button will illuminate when the radio is turned on. Use jog dial (14) to make selections. If equipped with a touch screen display, touch the icons on the screens to make a selection.

Refer to Radio for more information.

Radio Mute (21)



Radio Mute (21) – Press radio mute switch (21) to mute the radio. The indicator light will illuminate when mute is activated. Press the button again to unmute the radio.

Window Wiper (22)



Window Wiper (22) – Push the switch to activate the window wiper. Whenever the switch is depressed, the mode of the window wiper will change according to the indicator light that is illuminated.

6 Second Delay – When the window wiper switch is depressed one time, the first indicator light will turn on. The window wiper will operate intermittently at six second intervals.

3 Second Delay – When the window wiper switch is depressed two times, the second indicator light will turn on. The window wiper will operate intermittently at three second intervals.

Continuous Operation – When the window wiper switch is depressed three times, the first indicator light and the second indicator light will turn on. The window wiper will operate continuously.

OFF – When the window wiper switch is depressed four times, the indicator lights will turn off. The window wiper stops.

Travel Speed Control (23)



WARNING

Do not change the setting of the travel speed control switch while you travel. Machine stability may be adversely affected.

Personal injury can result from sudden changes in machine stability.



Travel Speed Control Switch (23) – Press the travel speed control switch to select automatic travel speed or low travel speed. When the engine start switch is on, the travel speed control switch is always set at the LOW SPEED position. Whenever the travel speed control switch is pressed, the travel speed changes. The indicator lights illuminate to show which speed selection is active.



LOW SPEED – Select the LOW SPEED position if you travel on rough surfaces or on soft surfaces or if you require a great drawbar pull. Also, select the LOW SPEED position if you are loading a machine onto a trailer or you are unloading a machine from a trailer.



AUTOMATIC – If you travel on a hard, level surface at a fast speed, select the AUTO position.

Continuous driving at high speed should be limited to 2 hours. If you need to continue driving at high speed for more than 2 hours, stop the machine for 10 minutes. This process will cool down the travel drives before you resume driving.

USB/Aux Ports (24)



Illustration 163

g06464450

(24) USB/AUX/MIC port
(25) 12 V socket



USB – The USB port is used to play music from a portable device. The USB symbol on the radio screen on the monitor must be selected.

AUX – The AUX port is used to play music from a portable device. AUX must be selected on the radio screen on the monitor.

12V Power Receptacle (25) & (26)

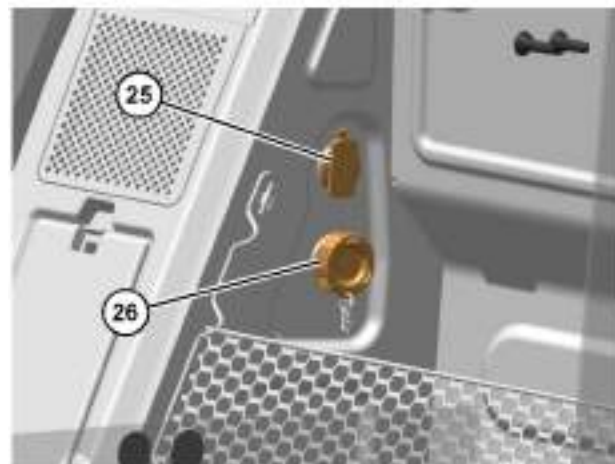


Illustration 164

g06178354

Electronic Technician service port



12V Power Receptacle – The power receptacles can be used to power automotive electrical equipment or accessories. The power receptacle only operates when the engine start switch is in the ON position.

Service Port (26)

An Electronic Technician (ET) service port is located inside the cab behind the seat. This service port allows service personnel to connect a laptop computer that is equipped with Electronic Technician. Service personnel can use electronic technician to diagnose machine and engine systems.

Contact your Cat dealer for additional information.

Dome Light (27)



Illustration 165

g06208645

The dome light has three different positions. When the dome light is in the center position (horizontal), the light will come on when the door is open and shut off when the door is closed.

When the left side of the light is pressed, the lamp will be inoperable.

When the right side of the light is pressed, the lamp will be illuminated until the lamp is switched to another position.

i07876023

Battery Disconnect Switch

SMCS Code: 1411-B11



Illustration 166

g06466191

The battery disconnect switch is on the left side of the machine behind the rear access door.

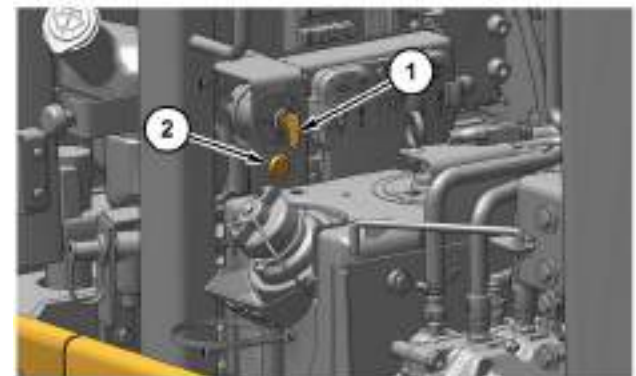


Illustration 167

g06466205

- (1) Battery disconnect switch
- (2) DEF purge light

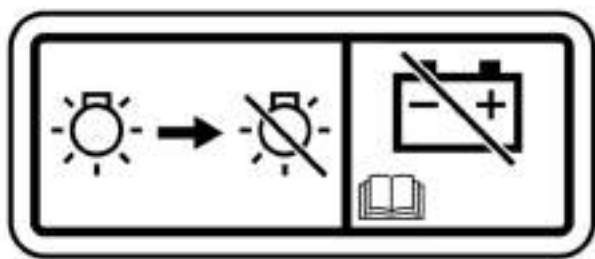


Illustration 168

g03408962

NOTICE

Do not turn off the battery disconnect switch until the indicator lamp has turned off. If the switch is turned off when the indicator lamp is illuminated the Diesel Exhaust Fluid (DEF) system will not purge the DEF. If the DEF does not purge, DEF could freeze and damage the pump and lines.

If DEF purge light (2) is illuminated, wait for the light to turn off before turning the disconnect switch to the OFF position. Waiting for the light to turn off allows the DEF system to fully purge the exhaust fluid and prevents damage to engine components.



Battery Disconnect Switch – The battery disconnect switch can be used to disconnect the battery from the machines electrical system. The key must be inserted into the battery disconnect switch before the battery disconnect switch can be turned.



ON – To activate the electrical system, insert the disconnect switch key and turn the battery disconnect switch clockwise. The battery disconnect switch must be turned to the ON to enable battery power to start the engine.



OFF – To deactivate the electrical system, turn the battery disconnect switch counterclockwise to the OFF position.

The battery disconnect switch and the engine start switch perform different functions. The entire electrical system is disabled when you turn the battery disconnect switch to the OFF position. The battery remains connected to the electrical system when you turn the engine start switch to the OFF position.

Turn the battery disconnect switch to the OFF position and remove the key when you service the electrical system or any other machine components. If installed with a cover lock, close the cover and install a padlock.

It is also good practice to use the disconnect switch after you operate the machine. This will prevent the battery from being discharged. The following problems can cause battery discharge:

- short circuits
- current draw via some components
- vandalism

i08001446

Product Link

SMCS Code: 7490; 7606

Note: Your machine may be equipped with the Cat® Product Link™ system.

The Cat Product Link communication device utilizes cellular and/or satellite technology to communicate equipment information. This information is communicated to Caterpillar, Cat dealers, and Caterpillar customers. The Cat Product Link communication device uses Global Positioning System (GPS) satellite receivers.

The capability of two-way communication between the equipment and a remote user is available with the Cat Product Link communication device. The remote user can be a dealer or a customer.

Data Broadcasts

Data concerning this machine, the condition of the machine, and the operation of the machine is being transmitted by Cat Product Link to Caterpillar and/or Cat dealers. The data is used to serve the customer better and to improve upon Cat products and services. The information transmitted may include: machine serial number, machine location, and operational data, including but not limited to: fault codes, emissions data, fuel usage, service meter hours, software, and hardware version numbers and installed attachments.

Caterpillar and/or Cat dealers may use this information for various purposes. Refer to the following list for possible uses:

- Providing services to the customer and/or the machine
- Checking or maintaining Cat Product Link equipment
- Monitoring the health of the machine or performance

- Helping maintain the machine and/or improve the efficiency of the machine
- Evaluating or improving Cat products and services
- Complying with legal requirements and valid court orders
- Performing market research
- Offering the customer new products and services

Caterpillar may share some or all the collected information with Caterpillar affiliated companies, dealers, and authorized representatives. Caterpillar will not sell or rent collected information to any other third party and will exercise reasonable efforts to keep the information secure. Caterpillar recognizes and respects customer privacy. For more information, please contact your local Cat dealer.

Operation in a Blast Site for Product Link Radios

WARNING

This equipment is equipped with a Cat® Product Link communication device. When electric detonators are being used for blasting operations, radio frequency devices can cause interference with electric detonators for blasting operations which can result in serious injury or death. The Product Link communication device should be deactivated within the distance mandated under all applicable national or local regulatory requirements. In the absence of any regulatory requirements Caterpillar recommends the end user perform their own risk assessment to determine safe operating distance.

Refer to your products Operation and Maintenance Manual Supplement, "Regulatory Compliance Information" for more information.

For information regarding the methods to disable the Cat Product Link communication device, please refer to your specific Cat Product Link manual listed below:

- Operation and Maintenance Manual, SEBU8142, "Product Link - PL121, PL321, PL522, and PL523"
- Operation and Maintenance Manual, SEBU8832, "Product Link PLE702, PLE602, PLE601, PL641, PL631, PL542, PL240, PL241, PL243, PL141, PL131, PL161, PL083 and PL042 Systems"

Note: If no radio disable switch is installed and the equipment will be operating near a blast zone, a Product Link radio disable switch may be installed on the equipment. The switch will allow the Cat Product Link communication device to be shut off by the operator from the equipment control panel. For more details and installation procedures, refer to the following:

- Special Instruction, REHS7339, "Installation Procedure for Product Link PLE640 Systems"
- Special Instruction, REHS8850, "Installation Procedure for the Elite Product Link PLE601, PLE641, and PLE631 Systems"
- Special Instruction, SEHS0377, "Installation Procedure for the Product Link PL131, PL141, and PL161 Systems"
- Special Instruction, REHS9111, "Installation Procedure for the Pro Product Link PL641 and PL631 Systems"
- Special Instruction, M0098124, "Installation Procedure for Pro Product Link PL243 Systems"
- Special Instruction, M0109130, "Installation Procedure for Product Link PL683 and PL783 Systems"

i07785958

Machine Security System

SMCS Code: 7631

General Information

NOTICE

This machine may be equipped with a Cat® Machine Security System (MSS) and may not start under certain conditions.



Illustration 169

g06223917

Machines that are equipped with Cat MSS can be identified by a decal in the operator station. Read the following information and know your machine settings. Your Cat dealer can identify your machine settings.

The Cat Machine Security System (MSS) discourages unwanted operation of a machine. When armed, the MSS requires operator login to start the engine. The following methods of operator login to disarm the security system are available:

- Cat Bluetooth® key fob
- Cat App: Fleet Management
- Passcode

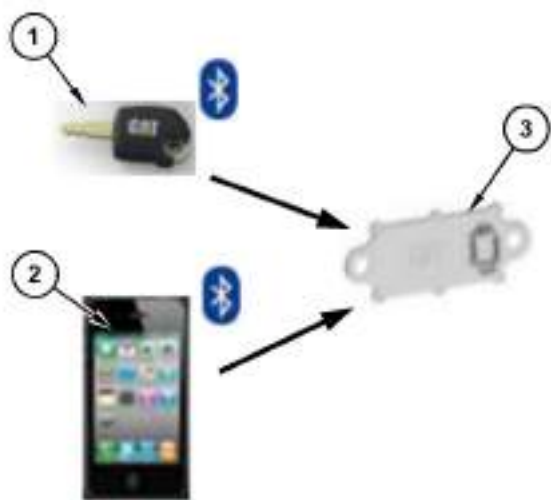


Illustration 170

g06212167

Bluetooth Connections

- (1) Cat Bluetooth key fob (CATBTFOB)
- (2) Cat App: Fleet Management mobile application
- (3) Cat Bluetooth transceiver (CATBTNT)

The Cat Bluetooth key fob (1) contains an electronic chip. The electronic chip has a unique identification number (ID). A Bluetooth transceiver is mounted in the cab to read the ID of the key. The Bluetooth transceiver module translates the information received from the key fob into a J1939 message. This message is sent to the Electronic Control Module (ECM) that is connected to the MSS. The ECM is typically the Machine ECM. The ECM is set up with the ID of the keys of the intended users.

When the MSS is armed, the ECM validates the ID of the key fob. If the key ID is on the list of authorized keys in the ECM and the key is valid, the machine will operate normally. If the key ID is not on the list of authorized keys in the ECM or is not valid, the MSS will keep the critical machine functions disabled.

Note: A Bluetooth enabled phone can disarm MSS if the phone is on the list. Operator Management System (OMS) is necessary to be able to add phones to the vehicle ID list. After the phone is added, OMS is no longer needed for the Cat App: Fleet management mobile application to function as a valid key.

If the MSS is not installed, the operator can skip the login and the machine will operate normally.

Components

The Machine Security System (MSS) consists of the following components:

- Electronic Control Module (ECM)
- Cat Bluetooth key fob (CATBTFOB)
- Machine display
- Bluetooth transceiver module (CATBTNT)
- Engine start switch

System Overview

The Machine Security System (MSS) is designed to restrict operation of a machine. A list of the authorized electronic keys and passcodes for a machine is contained in the ECM for the MSS. A valid Bluetooth key fob, mobile application, or passcode can disarm the MSS. If the MSS is disabled or not installed, any operator may access critical machine functions.

The Cat® Electronic Technician (Cat ET) Service Tool can be used to program the ECM with the authorized keys and passcodes. Bluetooth devices and passcodes can be registered using the in-cab display if the operator is logged in to the system using a master access account.

When the engine start switch is turned to the ON position, the display boots up. If Bluetooth detection is enabled, the transceiver will receive a signal from any Bluetooth key that is present or from the mobile application. The ECM will then compare this ID to the list of authorized keys.

Note: If multiple devices are present, the first valid device detected by the transceiver will be read.

If the ID of the key matches an authorized key, the status indicator on the engine start switch will turn a green color and the MSS will disarm. This disarming will allow the operator access to critical functions of the machine.

If the ID of the key that is read does not match the list in the ECM, the status indicator will remain a red color. The MSS remains in the “armed” state and the machine will remain disabled.

If the MSS is disabled and the ID of the key matches an authorized key, the operator will be identified and allowed access to the critical machine functions. The operator will be able to save configurations and start the machine.

If the MSS is disabled and the ID of the key that is read does not match an authorized key, the operator must log in as a guest. The operator will not be able to save custom configurations but will have access to starting the engine.

Activating Bluetooth Functionality

For shipping purposes, Bluetooth functionality is deactivated. Ensure that Bluetooth functionality is active on your machine using the following procedure:

1. Ensure that the function is active from the radio screen:

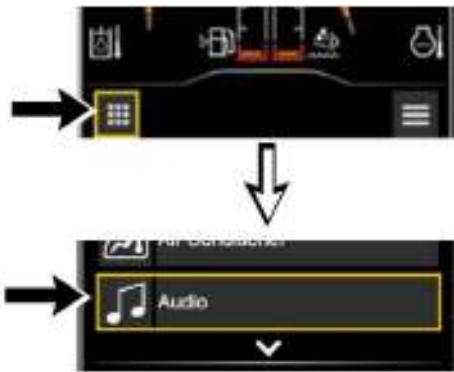


Illustration 171

g06319669

- a. From the home screen, press the navigation button in the lower left corner, then select "Audio".

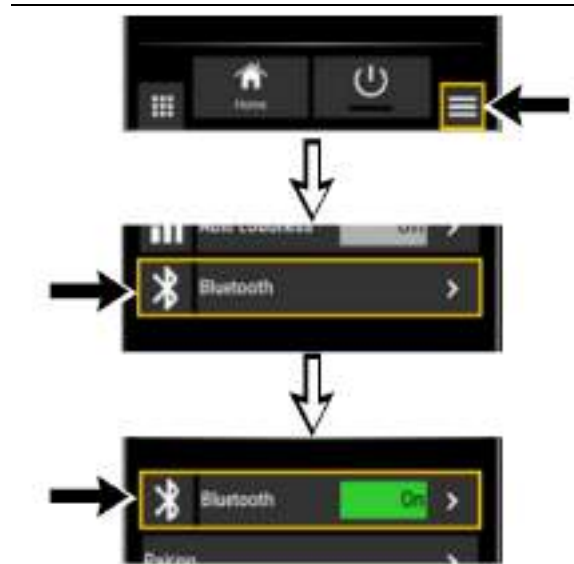


Illustration 172

g06319667

- b. Press the radio function list menu button in the lower right corner, then select "Bluetooth". Ensure that "Bluetooth" is set to "ON".

Pairing Your Device to the Machine

Use the following procedure to pair your device to the machine:

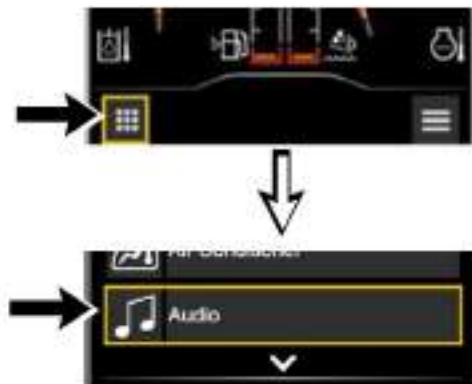


Illustration 173

g06319669

1. From the home screen, press the navigation button in the lower left corner, then select "Audio".



Illustration 174

g06319672

2. Press the radio function list menu button in the lower right corner, then select "Bluetooth".

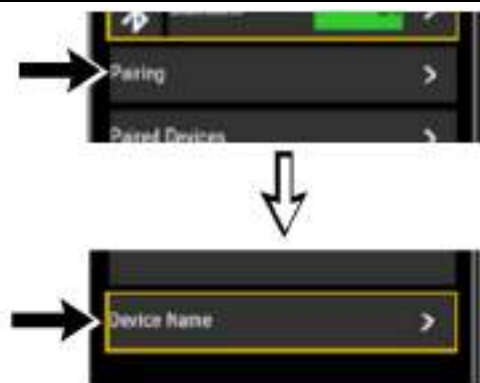


Illustration 175

g06319676

3. Select "Pairing", then "Device Name".



Illustration 176

g06319681

Machine name on monitoring system and operator device

4. Find your device on the list and pair the devices.
Ensure that the devices are paired on your phone as well.

Note: The device name on your phone should be "## CAT RADIO", with the number being from "00" to "99".

Reading the ID of a Key

The Machine Security System (MSS) must identify a valid passcode, Bluetooth key fob ID, or Cat App: Fleet management mobile application ID.

When the engine start switch ring is turned to the ON position, the MSS will check the ID of any key fob or mobile application. If the ID matches a key ID stored in the machine ECM, the critical ECM functions are enabled. An enable message is also sent via the Cat[®] data link or J1939 data link to the other ECMs on the machine. The machine will operate normally.

Note: If the machine ECM has failed or has been removed, the critical machine operations controlled by the other electronic control modules will not operate.

Armed

When the MSS is armed, critical machine functions are disabled. The MSS disables the power that is supplied to each component that is powered by the output drivers. The machine will not be able to operate normally.

There are two states of operation within the “armed” mode:

Engine Start Switch Ring Position OFF – When no power is applied to the MSS, the MSS will default to “armed” state. When power is applied to the MSS and the grace period has expired, the MSS will return to the “MSS Armed” .

Engine Start Ring Switch Position ON – When the engine start switch ring is first moved to the ON position, the display boots up and the system attempts to detect a Bluetooth key ID or mobile application ID. The ECM will continue reading until a valid key ID is read or a passcode is entered. If a valid key ID or passcode is not read, the MSS status indicator will remain red and the MSS remains armed.

Disarmed

When the MSS is disarmed, normal machine operation is allowed. A message is sent to the other machine ECMs over the Cat data link. or J1939 data link. The machine will be able to start. The green LED on the status indicator will illuminate.

There are multiple ways to disarm the machine:

- Use a valid passcode
- Use a valid Bluetooth key fob
- Use the Cat App: Fleet management mobile application
- Use the Cat® Electronic Technician (Cat ET) Service Tool to configure the MSS bypass schedule to allow machine operations during scheduled periods of time during the week.

Grace Period

After a machine has been started successfully, the operator will have a grace period after the machine is turned off before the MSS is automatically armed. The operator is not required to arm the system manually.

During the grace period an operator can start the machine without a key ID or passcode. When the grace period expires, the MSS will rearm automatically.

If the MSS is unable to read a key ID, the system will remain armed. When the MSS identifies a key with an invalid key ID, the system will remain armed.

The grace period for a machine can be configured with Cat ET if a factory password or master level account is available.

Navigating the User Interface Touchscreen Display



Illustration 177

g06210561

Startup sequence screens

The display will start up automatically after turning the battery disconnect switch to the ON position. The screen will prompt the operator to turn the engine start ring to the ON position. When the engine start ring is turned to the ON position, the display will navigate to the passcode entry screen.

If the operator has not turned the engine start ring to the ON position, the display will time out after 1 minute.

If the battery disconnect switch is already on and the display is off, the display will startup automatically after the engine start ring is powered on. The Cat screen will appear for a short time and then login keypad will appear.

Note: Avoid touching the screen with sharp objects.

The access level assigned to the operator can limit or expand the amount of freedom the user has to manage the system. The following paragraphs explain access levels.

There are three levels of operator access recognized by the touchscreen display. The following levels are available:

- Guest
- Standard
- Master

Guest – If an operator does not have an authenticated key or passcode, the user is able to bypass log in as a guest. Some menu features will not be available such as the options for saving

configurations and operator management. If the Machine Security System (MSS) is enabled, guest operators cannot start the machine.

Standard – A standard operator is a registered user of the machine. Operators with this access level can start the engine whether or not the MSS is installed. This user may save a control configuration for future application.

Master – Master accounts can perform operator management in addition to all standard level functions.

Any “Standard” or “Master” account may be created or removed by a “Master” level operator.

Table 19

Selections and Access for the Touchscreen Display	
Access Level	Operator Setting
Guest	“Operator Input Configuration” “Response” “Change Operator”
Standard	“Operator Input Configuration” “Response” “Controls Setup” “Change Operator”
Master	“Operator Input Configuration” “Response” “Controls Setup” “Change Operator” “Manage Operator”

Operation of Status Indicator



Illustration 178 g06215426

Engine start switch with integrated MSS indicator

The Machine Security System (MSS) uses a status indicator that is integrated into the engine start switch in the cab. This indicator provides a visible alert for the security system.

The operator can use the status indicator to determine the status of the system or for troubleshooting.



Illustration 179 g06226442

Status indicator when the MSS is armed

When the MSS is armed, the status indicator will be red. The red light warns the operator that the machine is armed with the security system and that an operator login is required. The red LED will remain ON until a valid key is read while the key switch or engine start switch ring is in the ON position.



Illustration 180 g06226444

Status indicator when the MSS is disarmed or uninstalled

When the MSS is disarmed, the status indicator will be green. The green light notifies the operator that an operator is logged on the machine and the security system has been disarmed. The status indicator will be green if the MSS is not installed on the machine. Also, the green LED will remain ON after power down for the duration of the grace period. After the grace period, the MSS automatically returns to the “armed” mode.

For machines with a standard key switch, a separate status indicator will be available.

Operator Login

Any user may start the engine if the Machine Security System (MSS) is disabled.

If the MSS is active, only a “Standard” or “Master” account can start the machine engine. Before starting the machine engine, the security system must identify a registered operator. An operator can access the machine display using one of the following methods:

- Passcode
- Cat Bluetooth key
- Cat App: Fleet management mobile application

Passcode Entry

To log in using a passcode, refer to the following steps:

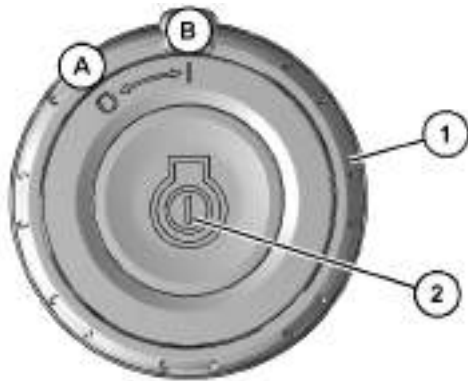


Illustration 181

g06180554

- (A) Off
- (B) On
- (1) Engine start switch ring
- (2) Engine start button

1. Turn engine start switch (1) to the ON position (B).



Illustration 182

g06209470

2. Enter a registered passcode using the monitor keypad and then press “Enter” .

Note: The jog dial or the numbered buttons on the right-side switch panel can also be used to enter the code.



Illustration 183

g06211194

3. Select "Enter" to confirm the passcode. If a registered passcode is recognized, the operator information screen will appear on the display. If the MSS is not installed, the passcode screen will be bypassed automatically after 10 seconds. The operator will be logged in to the system as a guest. Refer to Illustration 183 .

4. Select "OK" to continue to the display homescreen.



Illustration 184

g06209482

5. After an operator logs in to the system successfully, an "Engine Start Allowed" message will appear across the top of the monitor. Refer to Operation and Maintenance Manual, Engine Starting for instructions on starting the engine.

Invalid Passcode



Illustration 185

g06209472

Invalid passcode screen

If a passcode is not recognized, the display will notify the user with an "Invalid code" message. Refer to Illustration 185 .

The operator has five tries to enter a valid passcode successfully. After a fifth unsuccessful attempt, a lockout screen will appear and remain on the display for a duration of 5 minutes.

Note: If the Machine Security System (MSS) is not active, the user can select the “Skip Login” button to avoid the lockout period. Refer to the “Bypass login” section for further information.

Bypass login

Operator login can be bypassed if the user selects the “Skip Login” button on the display. The operator will be logged in to the machine with “Guest” level access.

If the MSS is inactive, the operator will be able to start the engine as normal and view all display screens.

If the MSS is active on the machine, the operator is able to view all display screens but will not have access to starting the engine.

Bluetooth Entry

Alternatively, a Bluetooth Operator ID can be used to log in to the machine. For a Bluetooth key to be detected by the system, ensure that the following qualifications are met:

- The key must be registered with the machine
- The key must be within the cab
- Bluetooth setting must be enabled on the display

Refer to the following steps when logging in to a machine using the Bluetooth key:

2. Wait several seconds for the system to detect the key when the passcode dialog appears. Once the key is detected, the “Operator Information” screen will display.



Illustration 187

g06209615

Bluetooth operator information screen

3. Select the “OK” button if the proper operator has been displayed.

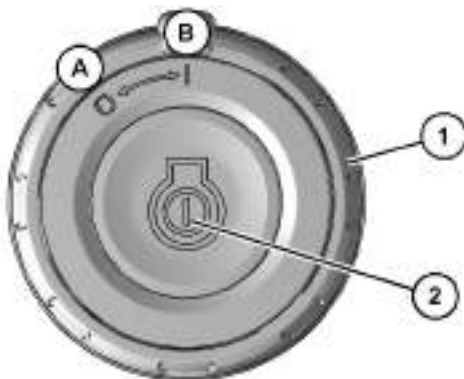


Illustration 186

g06180554

- (A) Off
(B) On
(1) Engine start switch ring
(2) Engine start button

1. Turn engine start switch (1) to the ON position (B).



Illustration 188 g06209482

4. After an operator logs in to the system successfully, an “Engine Start Allowed” message will appear across the top of the monitor. Refer to Operation and Maintenance Manual, Engine Starting for instructions on starting the engine.

NOTICE

The access level will change to a “Guest” account automatically if the key is removed from the cab at any time. If the MSS is enabled and the engine is on when the key is removed from the cab, the operator will not be able to start the engine if turned off. To turn on the engine again without the Bluetooth key, the operator will need to log in a registered account using either the smart phone application or passcode.

Note: If multiple Bluetooth devices are within the cab, the system will select the first device detected by the Bluetooth transceiver as the active operator.

Cat® Fleet Management Mobile Application

Operators can also log in to a machine using the Cat App: Fleet management mobile application. For the application to be detected by the system, ensure that the following qualifications are met:

- The Mobile Device ID (MDID) of the mobile application must be assigned to the machine in the Operator Management System (OMS)

Note: It is not possible to assign mobile devices through the MSS interface.

- The mobile device must be within the cab

- “Operator Management Bluetooth Device Enabled Status” is enabled (Cat ET Configuration)

Note: For adding an operator, adding MDID to the machine key list, and pushing the machine key list from the OMS to the machine refer to the OMS documentation at:

<https://myoperators.cat.com/>

Mobile Device / Operating Software Compatibility

Table 20

Mobile Device / Operating Software Compatibility		
Make	Model	Operating Software
Android	Varies	Android 8.x Oreo and up (Preferably Android 9.x Pie)
Apple	iPhone 6/ iPhone 6 Plus and up	iOS 11.0 and up (Preferably 12)

Note: Android mobile hardware support for Bluetooth can vary, so it is possible that a mobile device running Android 8.x software or higher could have hardware that does not support Bluetooth 4.1.

Mobile Application Entry (Android Devices)

To log in using the Cat App: Fleet management mobile application, refer to the following steps:

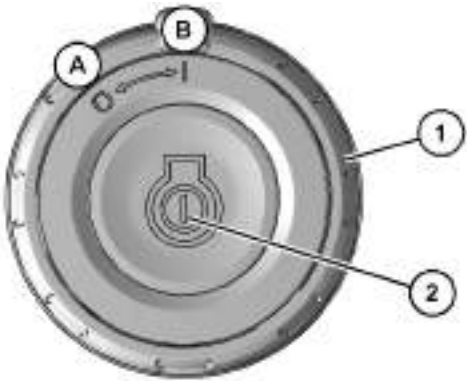


Illustration 189 g06180554

- (A) Off
- (B) On
- (1) Engine start switch ring
- (2) Engine start button

1. Turn engine start switch (1) to the ON position (B).



Illustration 190

g06400799

2. Open the Cat App: Fleet management mobile application on the mobile device.



Illustration 191

g06433500

3. Click "I Agree" to agree with the End-User License Agreement and sign in with Cat eCustomer account credentials.

Note: If you do not have a Cat eCustomer account, click "Get Started" to create one.

4. Select "Login" .



Illustration 192

g06214518

CWS login screen

5. Enter Cat eCustomer account credentials.



Illustration 193

g06400826

6. Click "Allow" to enable the Cat App: Fleet management mobile application to work as designed.

Note: Cat App: Fleet management requires access to the mobile device location to use Bluetooth radio to connect to Cat machines.



Illustration 194

g06433507

- (1) Menu Icon
- (2) Map Icon
- (3) Add Equipment Icon

7. Upon login, the Cat App: Fleet management mobile application will open onto the equipment tab.

Note: The “Equipment” tab will be empty on the first login.

The Menu Icon (1) includes “Preferences”, “Notifications and Alerts”, along with various documents covering the end-user license agreement, and privacy notice.

By tapping the Map Icon (2), the operator will be able to see the location of each vehicle on their “Equipment” tab on a map.

If a vehicle is not equipped with a telematics device, or the vehicle is a non-caterpillar machine it may be necessary to add it manually using the Add Equipment Icon (3).



Illustration 195

g06433513

8. Go to the keys tab.

Keys are necessary to connect to vehicles. If no keys are given, the screen in Illustration 195 will be displayed. The MDID is necessary to assign keys to the user account. The MDID of Android devices is linked to the app.

Note: Uninstalling the Cat App: Fleet management mobile application will result in the MDID and keys being deleted. The Sim card of the phone contains the MDID information, damage to the Sim card may result in keys being lost, if the phone is replaced transfer the Sim card to avoid key loss.

9. Pull the “Equipment Keys” down to refresh the list once the Fleet/Key configuration process has finished. Wait up to 30 seconds until the keys populate. If the keys do not populate, check that the MDID is correct and that the list was pushed properly through OMS.



Illustration 196

g06433520

- 10.** Ensure that the machine is ON to connect to a machine.

The machine display should prompt the operator for a password. In the “Keys” tab in the Cat App: Fleet management mobile application and tap the key that matches the machine. If a vehicle is OFF, currently occupied, or too far away the key will be grayed out and say “Out of range”.

Note: If the machine has a user signed in that is not in the cab and it has become necessary for a different user to operate the machine, change the operator in operator setting.



Illustration 197

g06433521

- 11.** Access the “Equipment” tab by tapping it. The machines associated with the keys should have populated. To learn more about a machine, tap it.



Illustration 198

g06433525

- 12.** Press the “Disconnect” button if the user wishes to disconnect. If the user wants to switch machines, tap the arrow in the upper left then tap the machine the operator wants to be switched to.

Note: Disconnect from vehicles if the user is not going to be using a vehicle again within a short time.



Illustration 199

g06209482

13. After an operator logs in to the system successfully, an “Engine Start Allowed” message will appear across the top of the monitor. Refer to Operation and Maintenance Manual, Engine Starting for instructions on starting the engine.

Mobile Application Entry (iOS Devices)

To log in using the Cat App: Fleet management mobile application, refer to the following steps:

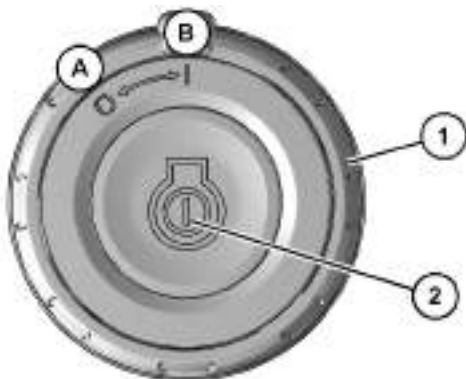


Illustration 200

g06180554

- (A) Off
(B) On
(1) Engine start switch ring
(2) Engine start button

1. Turn engine start switch (1) to the ON position (B).
2. Ensure that Bluetooth detection is enabled on the in-cab display.



Illustration 201

g06400799

Cat App: Fleet management mobile application icon

3. Open the Cat App: Fleet management mobile application on the mobile device.



Illustration 202

g06433528

4. Click “I Agree” to agree with the End-User License Agreement and sign in with Cat eCustomer account credentials.

Note: If you do not have a Cat eCustomer account, click “Get Started” to create one.

5. Select “Login” .



Illustration 203 g06214875

6. Enter eCustomer account credentials to log in.

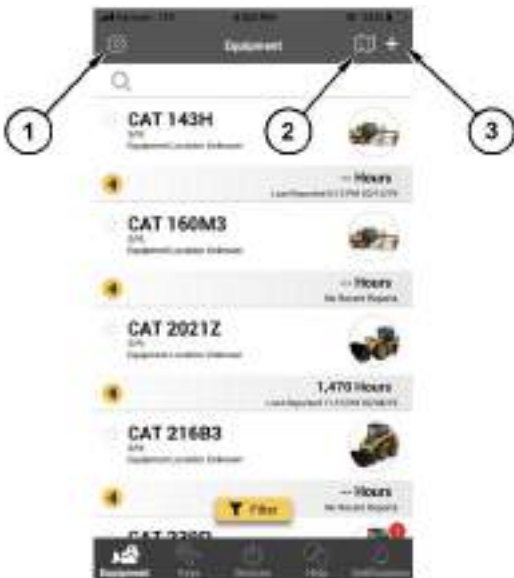


Illustration 204 g06433533

- (1) Menu Icon
- (2) Map Icon
- (3) Add Equipment Icon

7. Upon login the Cat App: Fleet management mobile application will open onto the equipment tab.

Note: The equipment tab will be empty on the first login.

The Menu Icon (1) includes “Preferences” , “Notifications and Alerts” , along with various documents covering the end-user license agreement, and privacy notice.

By tapping the Map (2), the operator will be able to see the location of each vehicle on the equipment tab on a map.

When using this for the first time, the Cat App: Fleet management mobile application will ask if it can use the location feature. Allow the location feature to use the map.

If a vehicle is not equipped with a telematics device, or the vehicle is a non-caterpillar machine it may be necessary to add it manually using the add equipment button (3).



Illustration 205 g06433536

8. Access the “Keys” tab. Keys are necessary to connect to vehicles. If no keys are given, the screen in Illustration 205 will be displayed. The MDID is necessary to assign keys to the user account. The MDID of IOS devices is linked to the user account.

9. Once the Fleet/Key configuration process has finished, tap the refresh button in the Cat App: Fleet management mobile application top right. Wait up to 30 seconds until the keys populate. If the keys do not populate, check that the MDID is correct and that the list was pushed properly in OMS.



Note: Disconnect from vehicle if the user will not be using the vehicle again within a short time.

Illustration 206

g06433538

10. To connect to a machine, ensure that the machine is ON. The machine display should prompt the operator for a password. At this point on the Cat App: Fleet management mobile application go to the “Keys” tab and tap the key that matches the machine. If a vehicle is OFF, currently occupied, or too far away the key will be grayed out and say “Out of range” .



Illustration 207

g06433540

11. Press the disconnect button if the user wishes to disconnect. If the user wants to switch machines tap the arrow in the upper left, then tap the key of the machine to switch to.



Illustration 208 g06209482

12. After an operator logs in to the system successfully, an “Engine Start Allowed” message will appear across the top of the monitor. Refer to Operation and Maintenance Manual, Engine Starting for instructions on starting the engine.

Engine Start Switch Troubleshooting

Table 21

Switch Status	Possible Cause	Resolution
Engine startswitch is not illuminated	Engine start accessory power not on	Turn engine start switch ring to ON position
	Power management triggered	Cycle engine start switch ring and try to restart
Engine start switch is green	Starting component failure	Contact your Cat dealer
Engine start switch is red	Machine interlock conditions not met	Hydraulic lock in LOCKED position
	Engine shut down without cycling start switch ring	Cycle engine start switch ring and try restart
	Operator not authenticated (Passcode login)	Add operator to machine authorized user list
		Switch operator from guest mode using display
	Operator not authenticated (Bluetooth key)	Add operator to machine authorized user list
		Replace key fob battery
		Ensure more than 4.5 m (15 ft) from other Bluetooth equipped machine
		Alternately login with display passcode or contact local Cat dealer

(continued)

(Table 21, contd)

Switch Status	Possible Cause	Resolution
	Operator not authenticated (Cat Fleet management app)	Add operator to machine authorized user list
		Ensure more than 4.5 m (15 ft) from other Bluetooth equipped machine
		Enable phone Bluetooth and connect Cat Fleet management app
		Change Bluetooth system enable status to enabled (Cat dealer)
		Contact local Cat dealer if unable to see machine Bluetooth device

i07896230

For more information refer to Operation and Maintenance Manual, “Monitoring System”.

Camera

SMCS Code: 7347; 7348

Rear View Camera



Illustration 209

g06472295

Rear Camera

The rear view camera system consists of a camera that is located in the middle of the top of the counterweight.

Note: The rear view camera system has been set up by the factory or by a Cat dealer to provide views which comply with specified guidelines. Consult your Cat dealer before any adjustments are made to the system.

Side View Camera (If Equipped)



Illustration 210

g06472355

Right Side Camera

The side view camera system consists of a camera mounted on the panel next to the pump compartment.

Note: The side view camera system has been set up by the factory or by a Cat dealer to provide views which comply with specified machine side views. Consult your Cat dealer before any adjustments are made to the system.

For more information refer to Operation and Maintenance Manual, "Monitoring System".

360 Visibility (If Equipped)



Illustration 211

g06263449

Front Camera



Illustration 212

g06472367

Left Side Camera

If equipped with the optional side and front cameras, the 360 visibility feature can be toggled on and off to enable or disable the 360 degree visibility view in the monitor.



Illustration 213

g06263096

From the main screen, press the Function List icon. In the Function List menu, select "360 Visibility".

Note: The 360 visibility system has been set up by the factory or by a Cat dealer to provide views which comply with specified machine side views. Consult your Cat dealer before any adjustments are made to the system.

For more information refer to Operation and Maintenance Manual, "Monitoring System".

i08257805

Monitoring System

SMCS Code: 7451; 7490



Do not operate the machine if the monitor is not functioning (for example, monitor has a black screen or is not responding) when the key switch is in the ON position.

The monitor provides images from the camera system and other information for safe machine operation. Operating the machine without a properly functioning monitor may result in injury or death. If the monitor is not functioning, place the machine in a safe state by following the procedures for stopping and parking the machine. Determine the cause of the monitor malfunction and correct before returning the machine to service.

NOTICE

When the monitor provides a warning, immediately check the monitor and perform the required action or maintenance as indicated by the monitor.

The monitor indicator does not guarantee that the machine is in a good condition. Do not use the monitor panel as the only method of inspection. Maintenance and inspection of the machine must be performed on a regular basis. See the Maintenance Section of this Operation and Maintenance Manual.

General Information

Reference: For complete monitoring system information, refer to M0109053, "Next Generation Hydraulic Excavator Monitoring System Supplement".

The monitoring system is an input and an output of the Machine Control System. The monitor has a multi-touch 8 inch or 10 inch display. The Machine Control System communicates back and forth on the data link. The monitoring system consists of the following components:

- Display (with numerous screens and menus)
- Indicators
- Gauges
- Soft Switch Panel
- Jog Dial



Illustration 214

g06397192

- (1) Action Lamps
- (2) Status Information Area
- (3) Event Indicator Area
- (4) Camera View Area
- (5) Gauge Area
- (6) Navigation Area
- (7) Function List
- (8) Shortcuts

The monitoring system displays various warnings and information about the condition of the machine, and the machines surrounding with various camera views. There are gauges and several alert indicators included on monitoring system display. Each gauge is dedicated to a parameter within a machine system. The monitoring system will allow the user to do the following:

- View Surroundings
- Interpret status information
- Interpret parameters
- View OMM
- View service intervals
- Perform calibrations
- Troubleshoot machine systems

Action Lamps (1)

The action lamps illuminate to show that a problem has occurred with the machine.

Status Information Area (2)

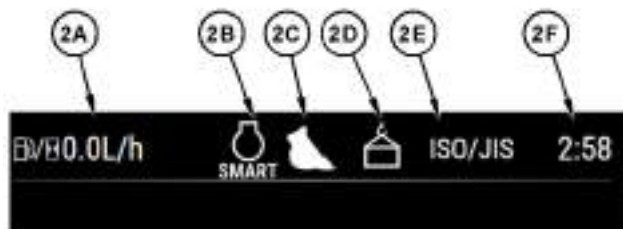


Illustration 215

g06464039

- (2A) Multi Status Information
- (2B) Seatbelt Switch Status (if equipped) / Power Mode
- (2C) Work tool
- (2D) Heavy Lift / Cat® Dig Boost (if equipped)
- (2E) Lever Pattern / Fuel Level
- (2F) Clock

Reference: For complete status information, refer to M0109053, "Next Generation Hydraulic Excavator Monitoring System Supplement".

Event Indicator Area (3)

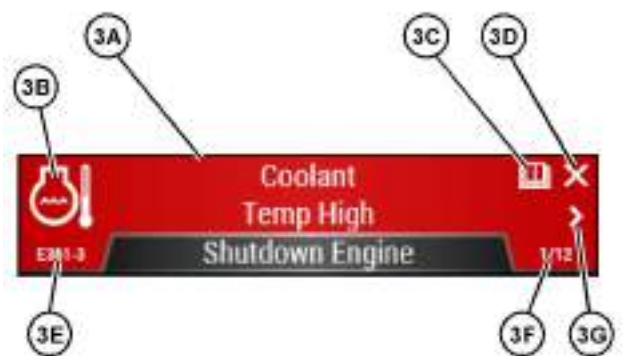


Illustration 216

g06223056

- (3A) Event Description
- (3B) Event Symbol
- (3C) e-OMM
- (3D) Close
- (3E) Event ID
- (3F) Order Number / Total Number
- (3G) Arrow (Next)

Event Description (3A) – This area will display the description of pop-up message of the impending problem.

- Line 1 : System
- Line 2 : Condition
- Line 3 : Action to be taken

Event Symbol (3B) – This area will display the symbol of the problem

e-OMM (3C) – This area will indicate that the e-OMM is available for this event. If e-OMM is not available for this event, the area will be blank.

Close (3D) – Select this to hide the pop-up message and display the event icon list.

Event ID (3E) – The identification number for the event will be shown here.

Priority Number / Total Number (3F) – The priority number of the pop-up message is displayed next to the total number of messages. The messages are ordered from the highest to the lowest priority.

Arrow (3G) – The arrow is shown when there is a next or previous message. Select the arrow to display the next or previous message.

Camera View (4)

This area on the monitor displays the view of the cameras. A rear view camera mounted on top of the counterweight and an optional side view camera mounted in the side panel next to the hydraulic tank.

If both rear view camera and side view camera are equipped, the monitor screen can be toggled to show:

- Rear only
- Side only
- Split vertically
- Split horizontally

The camera view can be toggled when the cursor is on the camera view area and the area is touched or the jog dial is turned.

Gauge Area (5)



Fuel Level – This gauge indicates the amount of fuel that is remaining in the fuel tank. When the fuel gauge is in the red range, add fuel immediately.



Hydraulic Oil Temperature – This gauge indicates the temperature of the hydraulic oil. The normal operating range is the green range. If the gauge is in the white range, the engine and machine warm-up is required. Refer to Operation and Maintenance Manual, “Engine and Machine Warm-up”. If the gauge reaches the red range, reduce the load on the system. If the gauge stays in the red range, stop the machine and investigate the cause of the problem.



Engine Coolant Temperature – This gauge indicates the temperature of the engine coolant. The normal operating range is the green range. If the gauge is in the white range, the engine and machine warm-up is required. Refer to Operation and Maintenance Manual, “Engine and Machine Warm-up”. If the gauge reaches the red range, stop the machine and investigate the cause of the problem.



Diesel Exhaust Fluid (DEF) Gauge – This gauge indicates the level of DEF fluid in the DEF tank. When the DEF gauge is in the red range, add DEF immediately.

Navigation Bar (6)



Apps Key – Allows you to display different information in the gauge area related to operation. Also contains air conditioner and audio controls. This key includes the settings screen allowing change of a multitude of parameters, some password protected.



Function List Key – Allows you to turn on and off various functions related to the active screen. This icon only appears in certain screens where additional settings are necessary.

Shortcuts – Allows you to set certain shortcuts on the navigation bar.

Machine Warnings



Illustration 217

g06223766

Event Indicator Area

- (1) Event Icon List
- (2) Pop-up Event Message

The Monitor will display warnings, and log events for machine conditions that are not within normal operating parameters.

The event warnings are classified into three warning levels. Warning Level 1 represents the least severe problem and Warning Level 3 represents the most severe problem. The warning levels, monitor response, and the required operator actions are given below.

Warning Level 1 (Gray) – Requires operator awareness. The icon and pop-up message will both appear gray.

Warning Level 2 (Amber) – Requires a change in the operation of the machine or a change in the maintenance of the machine to correct the condition. The icon and pop-up message will both appear amber and the action lamp will blink.

Warning Level 3 (Red) – Requires immediate shutdown of the machine to prevent damage to the machine or personnel. The icon and pop-up message will both appear red, the action lamp will blink, and the buzzer will sound.

When multiple warnings are present in the system, the highest warning is shown first. Press the right or left key to view all the logged warnings. If no keys are pressed within a few seconds, the display will return to the highest warning.

Reference: For complete machine warning information, refer to M0109053, “Next Generation Hydraulic Excavator Monitoring System Supplement”.

Logging In



Illustration 218

g06242074

There are different ways to access the monitor which include:

- Guest access
- Passcode access
- Bluetooth access
- Cat[®] Fleet Management app

For more information on logging in, refer to Operation and Maintenance Manual, Machine Security System - Operator Login.

Navigation

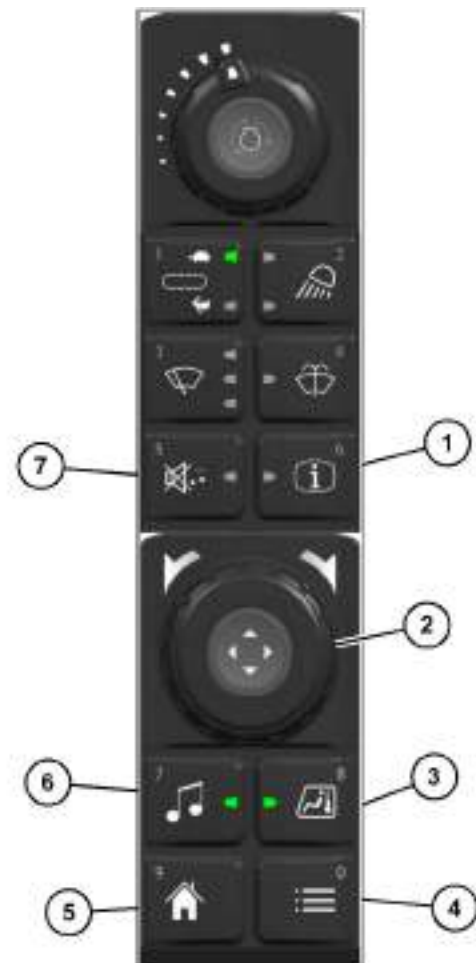


Illustration 219

g06464384

Right side switch panel

- (1) Operator information button
- (2) Jog dial
- (3) Air conditioner button
- (4) Next menu button
- (5) Home button
- (6) Audio button
- (7) Mute button

The monitor can be navigated by touch screen or the switch panel. Switch panel components can be used to interface with the monitor in the following ways:

Operator information button (1) – Press and hold this button to access the operator information screen. This screen shows information such as operator settings.

Jog dial (2) – Rotate the jog dial to highlight menu items in the monitor. Push the jog dial down to select the highlighted item.

Air conditioner button (3) – Press the button to access the air conditioner controls.

Next menu button (4) – This button is equivalent to the function list key on the monitor. This button can only be used on screens where the function list key is shown.

Home button (5) – Press this button to return to the main screen.

Audio button (6) – Press this button to access the audio controls.

Mute button (7) – Press this button to mute the audio. Press the button again to unmute the audio.

Each of the buttons is also assigned a number which is imprinted in the top corner of the button. These buttons can be used to enter the numerical passcodes used to log in to the monitor.

Application Menu



Illustration 220

g06391692

Press the application menu button to access the Application menu.



Illustration 221

g06247445

The Application menu “(Apps)” contains the list of applications. The available applications may differ depending on the machine configuration or software version.



Illustration 222

g06263058

Once an “App” has been selected, an operator can sort through the available “Apps” by swiping the selected area left or right.

Reference: For complete application menu information, refer to M0109053, “Next Generation Hydraulic Excavator Monitoring System Supplement”.

Setting Menu

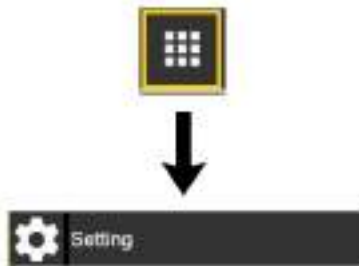


Illustration 223 g06213909

From the main screen, press the application menu button. In the Application menu, select “Setting”.



Illustration 224 g06217518

A warning will appear notifying the operator that the camera is not visible in the Setting menu. After you have read the warning and understand the content, press the “OK” button.



Illustration 225 g06213929

The Setting menu contains the following menu items:

- Display Setting
- Information
- Machine Setting
- Operator Setting
- Service

Note: A dealer password is necessary to access the Service menu.

Machine Setting

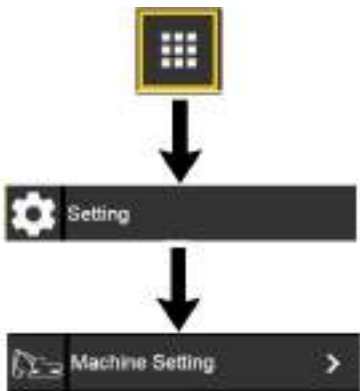


Illustration 226 g06217583

From the main screen, press the application menu button. In the Application menu, select “Setting”. Next, select “Machine Setting”.



Illustration 227

g06261306

The Machine Setting menu may differ depending on the machine configuration or software version. Basic settings are described below.

Reference: For complete machine settings information, refer to M0109053, "Next Generation Hydraulic Excavator Monitoring System Supplement".

Audio

The Audio screen allows the user to choose the radio region, enable Bluetooth, pair devices, and scan for Digital Audio Broadcast (DAB) channels.

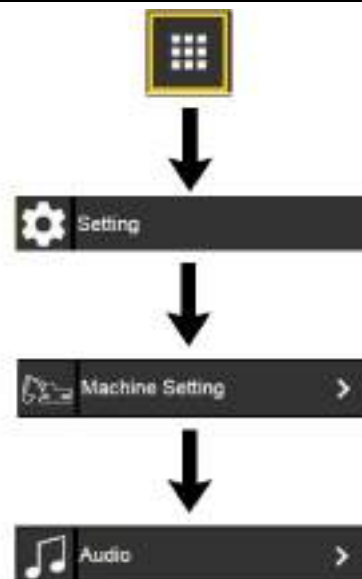


Illustration 228

g06261319

From the main screen, press the application menu button. In the Application menu, select "Setting". Next, select "Machine Setting", and then "Audio".



Illustration 229

g06241515

The Audio screen contains the following menu items:

- Radio Region Setting - Choose the radio region from the list of locations around the world.
- Bluetooth - Allows the operator to enable Bluetooth and pair a phone. This menu is also available through the main Audio screen. Refer to Operation and Maintenance Manual, Monitoring System - Bluetooth for information on the Bluetooth screen.

- DAB Channel Scan - Start a scan to find DAB channels in the area with good reception.
- Volume Gain - Allows the user to individually adjust the gain on various outputs such as the AM radio, FM radio, and the phone.

Auto Warm Up

The Auto Warm Up screen allows the user to enable and set the auto warm-up feature. This feature automatically starts a warm-up period when the engine is started and the hydraulic oil is below the set temperature.

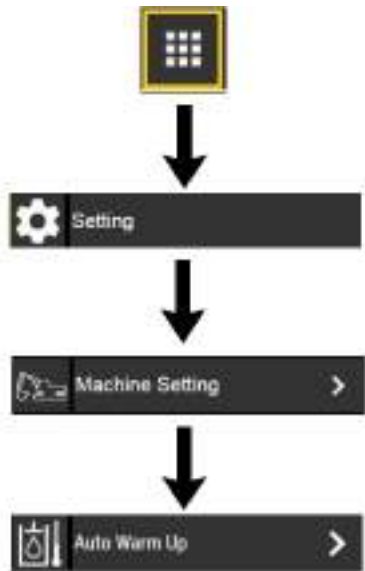


Illustration 230

g06261321

From the main screen, press the application menu button. In the Application menu, select “Setting”. Next, select “Machine Setting”, and then “Auto Warm Up”.



Illustration 231

g06219830

To set the auto warm-up temperature, press the “Auto Warm Up Target Temp” window, then enter the temperature. If the hydraulic oil is below the set temperature, the auto warm-up feature will activate after the engine is started.

Sleep Time



Illustration 232

g06360101

The Sleep time Setting feature allows the user to set a sleep timer for the engine start switch. If the start switch is left in the ON position, power will automatically shut off once the chosen timer interval has elapsed.

Security

Note: Master level access is required to adjust security settings.

The Security screen allows the user to set the operator lockout time. The lockout time is the amount of time after engine shutdown that an operator can start the engine without logging back in to the monitor.

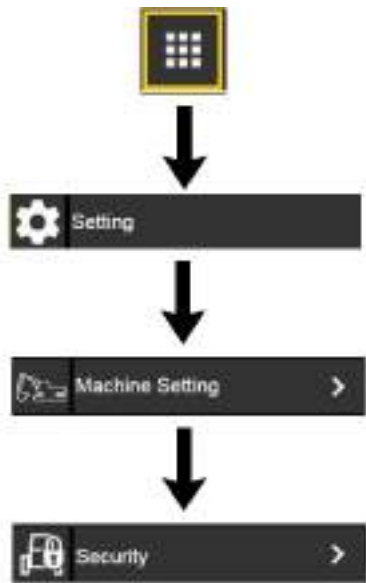


Illustration 233

g06261324

From the main screen, press the application menu button. In the Application menu, select “Setting” . Next, select “Machine Setting” , and then “Security” .

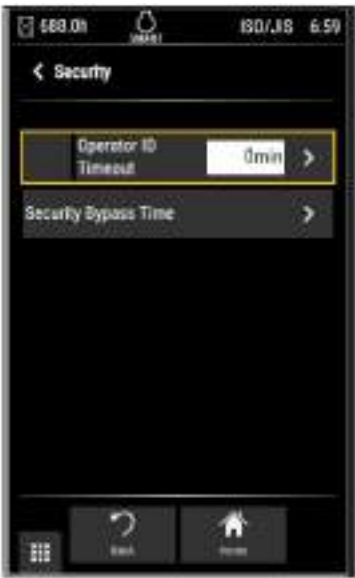


Illustration 234

g06242069

Select “Operator ID Timeout” to select the amount of time before the operators passcode times out after engine shutdown. To block out periods of time throughout the week to bypass security, select “Security Bypass Time” .

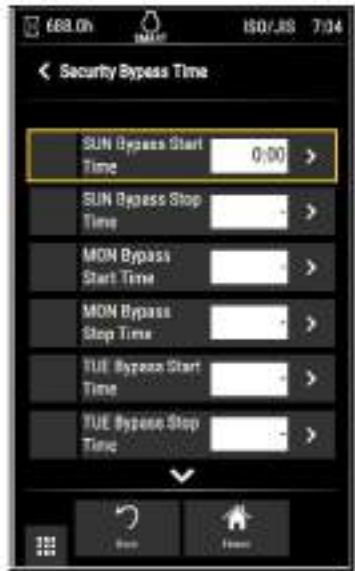


Illustration 235

g06242071

Enter the times and the days to bypass the security system.

Operator Setting



Illustration 236 g06217328

From the main screen, press the application menu button. In the Application menu, select “Setting”. Next, select “Operator Setting”.



Illustration 237 g06261330

The Operator Setting menu contains the following menu items:

- Operator Inputs Configuration
- Response

Reference: For complete operator settings information, refer to M0109053, “Next Generation Hydraulic Excavator Monitoring System Supplement”.

Operator Inputs Configuration

The operator inputs configuration screen allows the operator to configure the joystick buttons for personal preference. The settings will be stored in the preferences for that login ID.



Illustration 238 g06261334

From the main screen, press the application menu button. In the Application menu, select “Setting”. Next, select “Operator Setting”, then “Operator Inputs Configuration”.



Illustration 239 g06222026

Choose the operator input to configure.

Lever Pattern



Illustration 240 g06222026

From the Operator Inputs Configuration screen, select “Lever Pattern” .

Select the desired lever pattern from the menu items. Press the “Home” button to return to the main screen.

Restore to Factory Setting



Illustration 241 g06222026

From the Operator Inputs Configuration screen, select “Restore to Factory Setting” .



Illustration 242 g06222053

Select the item from the list to be restored.



Illustration 243 g06222061

A warning will appear asking if you want to proceed. Press “Restore” to restore the settings or press “Cancel” to abort. After pressing “Restore” , the operator information screen will appear to show the new button assignments. Press the “OK” button to return to the main screen.

Air Conditioner

Refer to Operation and Maintenance Manual, Air Conditioning and Heating Control for coverage of the air conditioner screen in the monitor.

Audio

Refer to Operation and Maintenance Manual, Radio for coverage of the audio screen in the monitor.

Phone



Illustration 244 g06213901

From the main screen, press the application menu button. In the Application menu, select “Phone” .



Illustration 245 g06340470

To make a call, select “Call” , then use the keypad to dial the number.

Note: There must be a paired phone in the cab and Bluetooth enabled to make a call.

Reference: For phone and Bluetooth settings, refer to M0109053, “Next Generation Hydraulic Excavator Monitoring System Supplement”.

Bucket/Work Tool Setting

The Bucket/Work Tool Setting screen allows the operator to choose the tool being used for work.



Illustration 246 g06220041

From the main screen, press the application menu button. In the Application menu, select “Bucket/Work Tool Setting” .



Illustration 247 g06220034

Select the desired tool.

Reference: For complete Bucket/Work Tool settings, refer to M0109053, “Next Generation Hydraulic Excavator Monitoring System Supplement”.

Electronic OMM

The Electronic OMM screen allows the operator to view the Operation and Maintenance Manual (OMM) for the machine.



Illustration 248

g06261340

From the main screen, press the application menu button. In the Application menu, select “Setting”. Next, select “Information” and then “Electronic OMM”.

Note: Contact your Cat Dealer for information to update the electronic OMM.

Function List Screen

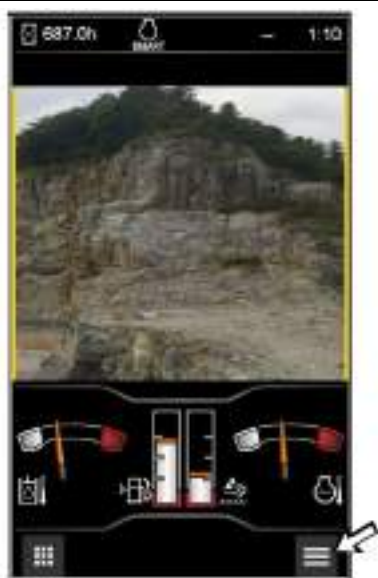


Illustration 249

g06213511

Press the Function List icon to access the Function List screen.

The Function List screen allows the user to turn on or off the available functions on the machine. Tap or select with the jog dial the item to turn on or off.

The Function list menu may differ depending on the machine configuration or software version.

Reference: For complete function list information, refer to M0109053, “Next Generation Hydraulic Excavator Monitoring System Supplement”.

i07956260

Fuel Transfer Pump (Refueling) (If Equipped)

SMCS Code: 1256

Use the following procedure to pump fuel and store the hose.

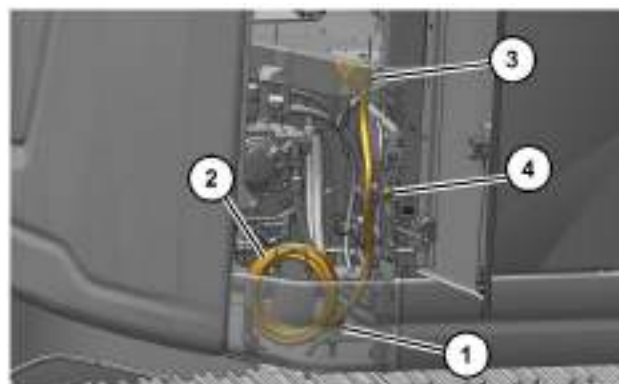


Illustration 250

g06494084

- (1) Suction valve
- (2) Suction hose
- (3) Electric refueling pump
- (4) ON/OFF switch



ON/OFF Switch – Push the ON/OFF switch (4) to activate or deactivate the fuel transfer pump. A red indicator on the switch will illuminate when the fuel transfer pump is activated.

If one of the following conditions occur, the fuel transfer pump will not activate and/or stop operating:

- Battery disconnect switch is in the OFF position
- Engine is operating
- Engine start switch is moved to the START position.
- Engine start switch is in the OFF position
- Hydraulic lockout control is not in the LOCKED position
- Fuel tank level is full
- Fuel is not detected at the suction valve.
- 30 seconds following a detection of no fuel at the suction valve.

Use the following procedure to pump fuel and store the hose.

1. Park the machine on a level surface. Move the hydraulic lockout control to the LOCKED position. Stop the engine
2. Turn the engine start switch to the ON position without starting the engine.
3. Remove the fuel tank cap from the fuel tank.
4. Open the access that is on the right side of the machine.



Illustration 251

g06180748

Suction valve (1) is at the end of hose (2).

Turn the end of the suction valve clockwise to open the valve

5. Uncoil the hose and turn the end of the suction valve clockwise to open the suction valve.
6. Properly insert the end of the suction valve into a container of fuel.
7. Push switch (4) to activate the fuel transfer pump and supply the fuel to the tank. A red indicator on the switch will illuminate when the fuel transfer pump is activated.

When the fuel tank is full, the fuel transfer pump will automatically stop.

When the fuel container is empty, push the switch again to stop refueling. If additional fuel is needed, wait 30 seconds and return to step 6.

Note: The red indicator on the switch will no longer illuminate when the fuel transfer pump has stopped refueling.

Note: The fuel transfer pump will not activate for 30 seconds following a detection of no fuel at the suction valve.

8. Push the switch at any time to deactivate the fuel transfer pump.

Note: The red indicator on the switch will no longer illuminate when the fuel transfer pump has stopped refueling.

9. Drain excess fuel from the hose and turn the end of the suction valve counter-clockwise to close the suction valve.

10. Wind the hose and store in the hose container.

NOTICE

To prevent hose damage, do not coil the hose in a tight radius.

11. Close the access door.

12. Install the fuel tank cap onto the fuel tank.

13. Turn the engine start switch to the OFF position.

i07092848

Radio

SMCS Code: 7338

The radio is integrated into the monitoring system. All the radio controls are adjusted using the monitor. The actual radio is mounted in the right rear console behind the operator seat.



Illustration 252

g06213193

- (1) Jog dial
- (2) Home button
- (3) Radio button

The audio menu can be directly accessed by pressing radio button (3) on the right side switch panel. Input selections can be made using jog dial (1) or using the monitor touch screen. Home button (2) can be used to return to the main screen.

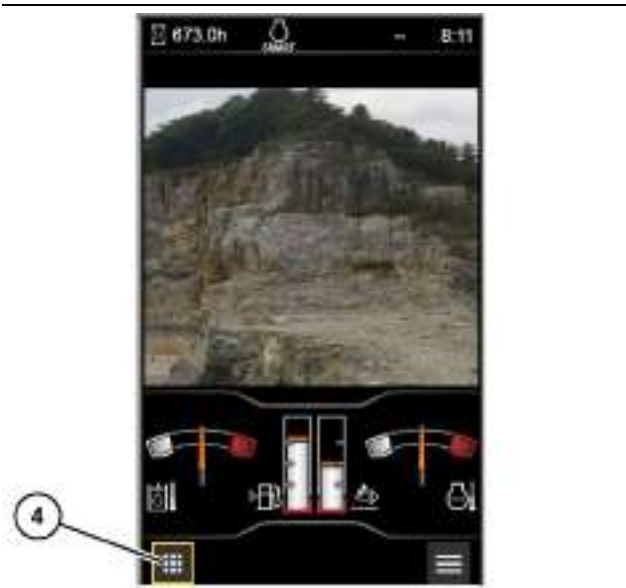


Illustration 253

g06213076

Press radio button (3) to go directly to the radio screen. To navigate to the radio screen from the main screen, press application menu button (4).

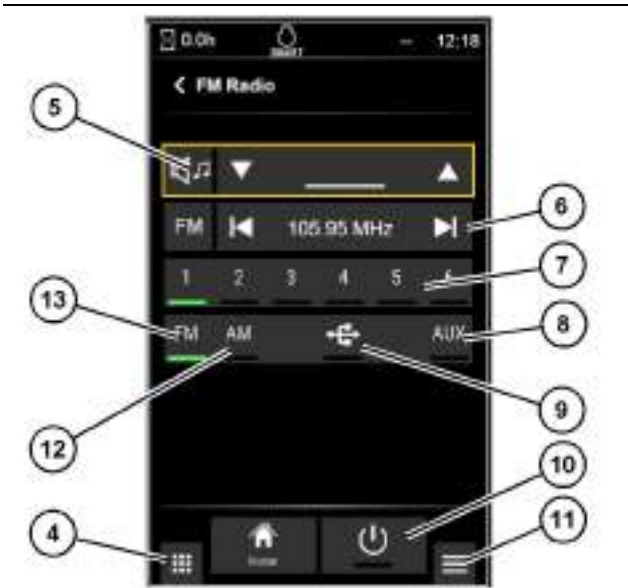


Illustration 255

g06213200

Radio screen

- (4) Application menu button
- (5) Volume control
- (6) Tuner
- (7) Preset stations
- (8) Auxiliary button
- (9) USB button
- (10) Power button
- (11) Radio Function List menu
- (12) AM button
- (13) FM button

Application menu button (4) – Use this button to return to the application menu.

Volume control (5) – The volume control is used to raise or lower the audio volume.

Tuner (6) – The tuner is used to tune the radio to the desired station.

Preset stations (7) – The preset stations store favorite radio stations for the operator. To set a station, tune to the desired station. Press and hold the preset number you want to assign to that station. Once a beep is heard, release the button. The indicator light for the active preset station will illuminate.

Auxiliary button (8) – When a device is plugged into the auxiliary port, press the auxiliary button to connect the device to the radio. The indicator light will illuminate when this mode is active.

USB button (9) – When a device is plugged into the USB port, press the USB button to connect the device to the radio. The indicator light will illuminate when this mode is active.

Power button (10) – Pressing this button turns the radio on and off. The indicator light on the monitor and on button (3) will illuminate when the power is on.



Illustration 254

g06213198

Use jog dial (1) to highlight “Audio” and then press the jog dial downward to select the entry. You may also access the screen by simply touching the “Audio” box on the touch screen.

Radio function list menu button (11) – Pressing this button leads to the radio function list menu.

AM button (12) – Press this button to access AM radio. The indicator light will illuminate when this mode is active.

FM button (13) – Press this button to access FM radio. The indicator light will illuminate when this mode is active.

Radio Function List

To access the radio function list, press the function list button (11) in the lower right corner of the radio screen.



Illustration 256

g06223378

The function list menu consists of the following items:

Treble – Allows the user to adjust the treble.

Bass – Allows the user to adjust the bass.

Balance – Allows the user to adjust the balance between speakers.

Auto Loudness – When on, this feature automatically adjust treble and bass levels when reducing the volume setting. This effect allows the user to hear more clearly at a lower volume.

Bluetooth – Allows the user to pair a phone, view paired devices, and edit device names.

Refer to Operation and Maintenance Manual, Monitoring System - Bluetooth for information on the Bluetooth screen.

Selection Method

All settings can be made using the touch screen or by using the jog dial. The method depends on the preference of the operator. When using the touch screen, simply touch the icon you want to select. When using the jog dial, rotate the dial to switch to different selections within the screen. Press the jog dial downward to choose a selection.

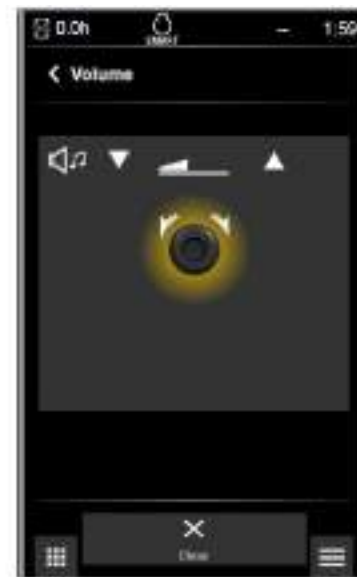


Illustration 257

g06213233

When using the jog dial to set the volume or tuner, rotate the dial clockwise to increase and counter-clockwise to decrease. Press downward on the dial to enter the desired setting.

Radio Operation

1. To operate the system, press power button (10).
2. Select between the AM button for AM stations or select the FM button for FM stations.
3. Use tuner (6) to adjust to the desired station. If presets stations (7) are set, press the desired preset station.
4. Use volume control (5) to adjust the volume.

5. When the machine is in operation turn down the volume of the radio.

USB/AUX Operation



Illustration 258

g06213245

1. To play music from a device such as an MP3 player or a phone, connect the device using an auxiliary cable or a USB cable. Depending on the cable being used, plug the cable into the appropriate port on the console.
2. Select either USB or AUX depending on which type of cable was used. Play the music from the device. The music should be playing over the radio speakers if properly connected. Adjust the volume as necessary.

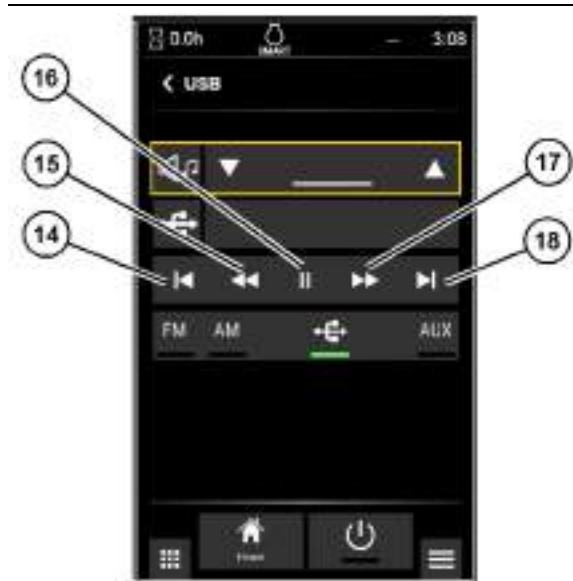


Illustration 259

g06213254

Note: If USB is selected, extra controls appear on the screen for playing music. They include the following:

- 14** – Skip to the beginning of the track
- 15** – Rewind the track
- 16** – Pause/Play the track
- 17** – Fast forward the track
- 18** – Skip to the end of the track

i08031142

Air Conditioning and Heating Control

SMCS Code: 7304; 7320; 7337

Consult with your Cat dealer for periodic maintenance of the heating and air conditioning system.



Illustration 260

g06178710

- (1) Jog dial
- (2) Heating and air conditioning button
- (3) Home button

Air conditioning and heating functions are controlled through the monitor. The heating and cooling menu can be directly accessed by pressing button (2) on the right side switch panel. Input selections can be made using jog dial (1) or using the monitor touch screen. Home button (3) can be used to return to the main screen.



Illustration 261

g06213076

Press the Air Conditioning and Heating button (2) to go directly to the air conditioner screen. To navigate to the air conditioner screen from the main screen, press application menu button (4).



Illustration 262

g06213088

Use jog dial (1) to highlight "Air Conditioner" and then press the jog dial downward to select the entry. You may also access the screen by simply touching the "Air Conditioner" box on the touch screen.

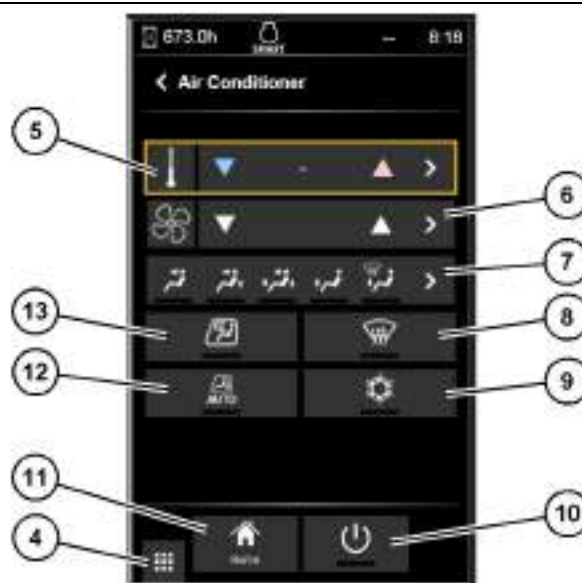


Illustration 263

g06213092

Air conditioner screen

- (4) Application menu button
- (5) Temperature control
- (6) Fan blower speed control
- (7) Air outlet settings
- (8) Defroster
- (9) Compressor ON/OFF
- (10) Power
- (11) Home button
- (12) Auto
- (13) Recirculation

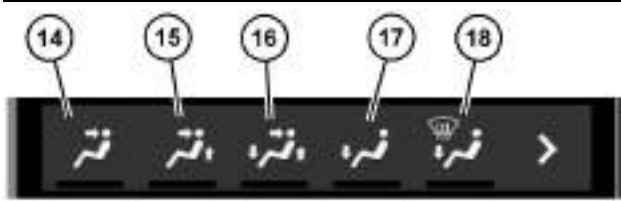


Illustration 264

g06213104

- (14) Front vents
- (15) Front and rear vents
- (16) Front, foot, and rear vents
- (17) Foot vents
- (18) Defrost and foot mode

Application menu button (4) – Use this button to return to the application menu.

Temperature control (5) – The temperature control is used to raise or lower the desired temperature.

Fan blower speed control (6) – The blower control is used to increase or decrease the desired blower speed.

Air outlet settings (7) – The desired air outlet setting can be chosen from this panel. The indicator light will illuminate to show the active setting.

Defroster (8) – Pressing this button activates and deactivates the defroster. Use the defroster to remove steam and frost from the windows. The indicator light will illuminate when this mode is active.

Compressor ON/OFF (9) – Pressing this button activates and deactivates the air conditioner. The indicator light will illuminate when this mode is active.

Power (10) – Pressing this button turns the heating and cooling system on and off. Push and hold the power button for 3 seconds to turn OFF the HVAC system. The indicator light on the monitor and on button (2) will turn green when power is on.

Home button (11) – Use this button to return to the main screen.

Auto (12) – Select this option to hold the system at the desired temperature. The system will modulate to keep the cab at the temperature that the system is set to. The indicator light will illuminate when this mode is active.

Recirculation (13) – This option recirculates air from the cab instead of pulling air from the outside. This mode is more efficient because the system is recycling conditioned air from the cab. However, no fresh air is coming into the cab when in this mode. The indicator light will illuminate when this mode is active.

Front vents (14) – In this mode, air will only circulate from the front vents.

Front and rear vents (15) – In this mode, air will circulate from the front vents and rear vents.

Front, foot, and rear vents (16) – In this mode, air will circulate from the front vents, rear vents, and foot vents.

Foot vents (17) – In this mode, air will only circulate from the foot vents.

Defrost and foot mode (18) – In defrost mode, air will circulate from the defrost vents and foot vents.

Selection Method

All settings can be made using the touch screen or by using the jog dial. The method depends on the preference of the operator. When using the touch screen, simply touch the icon you want to select. When using the jog dial, rotate the dial to switch to different selections within the screen. Press the jog dial downward to choose a selection.

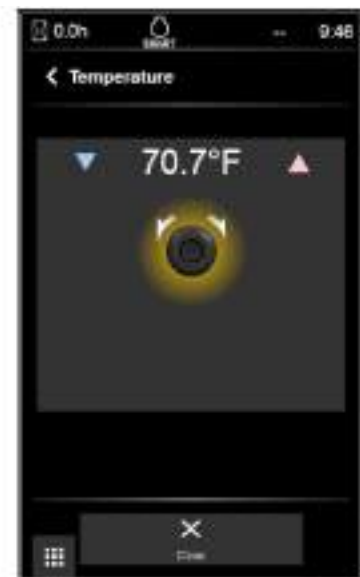


Illustration 265

g06213141

When using the jog dial to set the temperature or blower speed, rotate the dial clockwise to increase and counter-clockwise to decrease. Press downward on the dial to enter the desired setting.

Operation

1. To operate the system, press power button (10).
2. Use temperature control (5) to adjust to the desired temperature.
3. Select the desired mode and outlet vents.
4. Use fan blower speed control (6) to adjust the blower. If the system is in "Auto" mode, the blower fan speed and air outlet setting will automatically be adjusted. But recirculation air intake is not changed automatically.

Note: In cold ambient temperature condition, fan speed is stopped or restricted depend on coolant temperature.

5. Redirect the louvers for air outlets (A) and (C) by hand to the desired direction. The louvers for air outlet (B) cannot be redirected.

i07896329

Mirror

SMCS Code: 7319

WARNING

Adjust all mirrors as specified in the Operation and Maintenance Manual. Failure to heed this warning can lead to personal injury or death.

Note: Your machine may not be equipped with all the mirrors that are described in this topic.

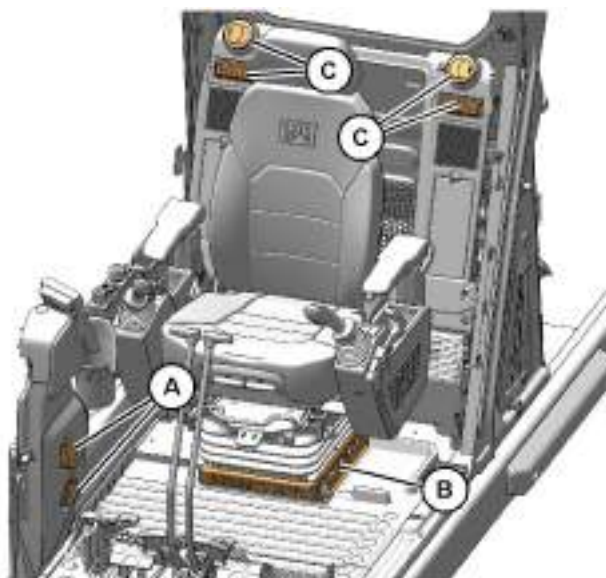


Illustration 266

g06178705

- (A) Defrost vent (front window)
- (B) Foot air vents
- (C) Rear air vents

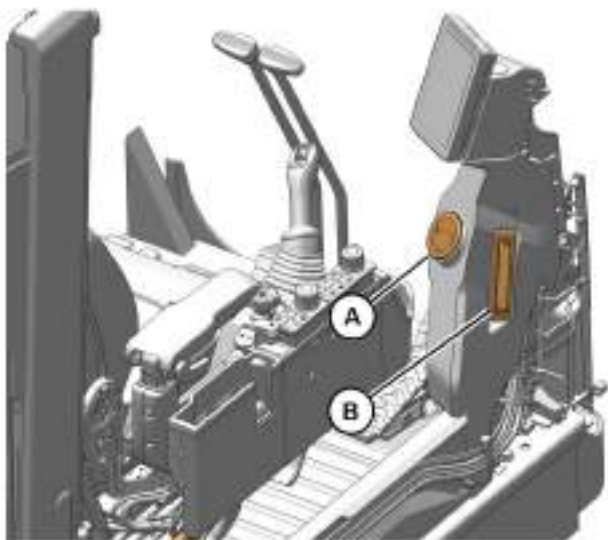


Illustration 267

g06287632

- (A) Front vent
- (B) Defrost vent (RH window)



Illustration 268

g06220616

- (1) Right Side View Mirror on the Cab
- (2) Left Side View Mirror on the Cab

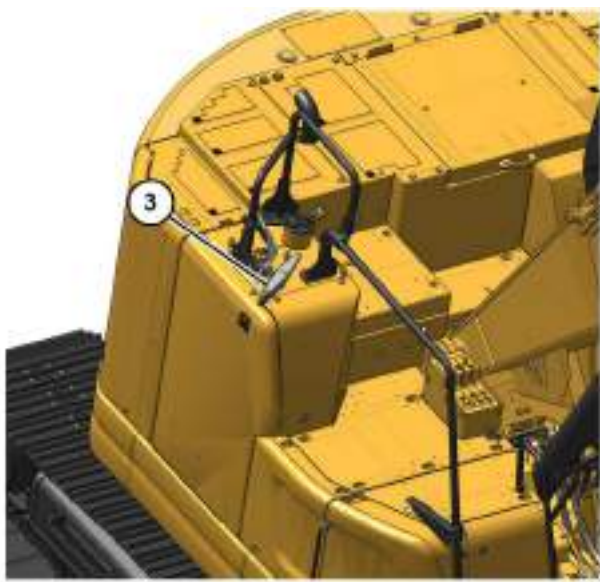


Illustration 269

g06472409

(3) Tank mirror

Mirrors provide additional visibility around your machine. Make sure that the mirrors are in proper working condition and that the mirrors are clean. Adjust all mirrors at the beginning of each work period and adjust the mirrors when you change operators.

Modified machines or machines that have additional equipment or attachments may influence your visibility.

Mirror Adjustment

- Park the machine on a level surface.
- Lower the work tool to the ground.
- Move the hydraulic lockout control to the LOCKED position. For further details on this procedure, refer to Operation and Maintenance Manual, "Operator Controls".
- Stop the engine.
- Adjust rear view mirrors to provide visibility behind the machine at a maximum distance of 30 m (98 ft) from the rear corners of the machine.



Illustration 270

g06220634

Tightening sequence

After adjustment of the mirror angle, make sure that the CAT logo is at the top.

It may be necessary to periodically tighten the mirror mounting bolts. If the bolts are loose, tighten the bolts in the sequence shown in Illustration 270. Tighten bolts (1) and (2) to $11 \pm 2 \text{ N}\cdot\text{m}$ ($8.1 \pm 1.5 \text{ lb}\cdot\text{ft}$).

Tighten the bolts (3) through (6) to $2 \pm 0.4 \text{ N}\cdot\text{m}$ ($1.5 \pm 0.3 \text{ lb}\cdot\text{ft}$).

Right Side View Mirror on the Cab (3)



Illustration 271

g06223277

If equipped, adjust the right side view mirror on the cab (1) so the front of the right track can be seen from the operator seat. A view of at least 1 m (3.3 ft) from the right front of the machine should be seen from the operator seat.

Left Side View Mirror on the Cab (4)



Illustration 272

g06223279

If equipped, adjust the left side view mirror on the cab (4) so the left side of the cab, access door, and rear of left track can be seen from the operator seat. A view of at least 1 m (3.3 ft) from the side of the machine should be seen from the operator seat. Additionally, provide as much visibility to the rear as possible.

Tank Mirror (3)



Illustration 273

g06472420

If equipped, adjust the tank mirror so the fuel tank and the hydraulic tank can be seen from the operator seat. A view of at least 1 m (3.3 ft) from the side of the machine should be seen from the operator seat.

i07427990

Window (Front)

SMCS Code: 7310-FR

To provide full ventilation inside the cab, the upper window and the lower window can be fully opened.



WARNING

When opening or closing the windows, be extra careful to prevent any personal injury. The hydraulic lockout control must be in the LOCKED position in order to prevent any possibility of sudden movement of the machine due to inadvertent contact with the hydraulic control(s).

Do not change the position of the window until the following items have been done:

- Park the machine on a level surface.
- Lower the work tool to the ground.
- Move the hydraulic lockout control to the LOCKED position.
- Stop the engine.

Perform Step 1 through Step 3 to open the upper window.

Note: If equipped, the Cat Grade Control monitor may interfere with the window when opening. Ensure that the monitor is adjusted out of the way before opening the window.

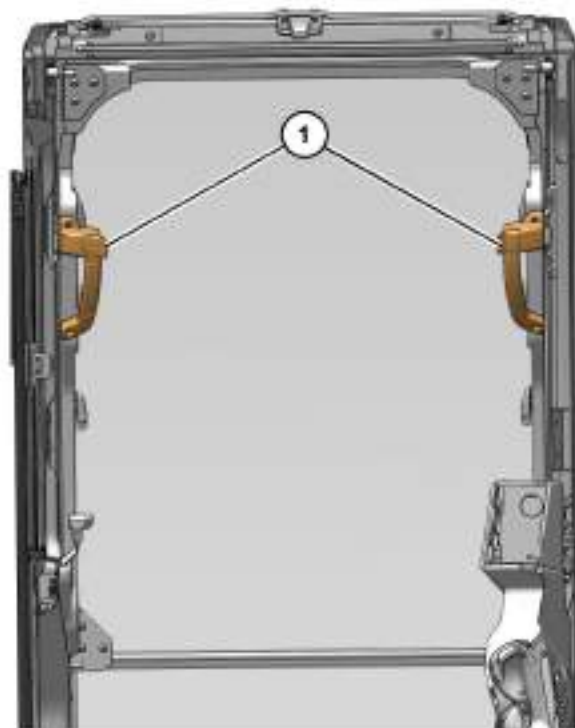


Illustration 274

g06185052

(1) Release lever

1. Release the auto-lock latches by pressing release levers (1) on the window handles.
2. Holding both handles on the window frame, pull the window upward.
3. Hold both grips that are provided on the window frame and move the window into the storage position until the auto-lock latches near the ceiling are engaged.

Perform Steps 4 through 5 to close the upper window.

Note: If equipped, the Cat Grade Control monitor may interfere with the window when closing. Ensure that the monitor is adjusted out of the way before closing the window.

4. Release the auto-lock latches by pressing release levers (1) on the window handles.
5. Reverse Steps 1 through 3 to close the upper window.

Perform Steps 6 through 8 to open the lower window and close the lower window.

6. Raise the lower window out of the window frame.

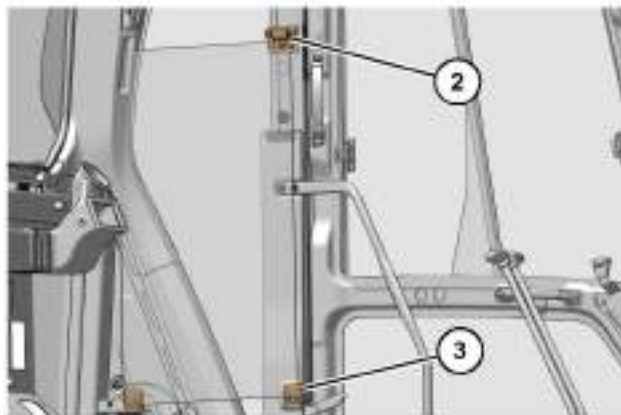


Illustration 275

g06185076

- (2) Catch
(3) Brackets

7. Store the lower window in the holder that is located in the rear of the left side cab frame. To store the lower window, locate one end of the lower window into brackets (3). Secure the opposite end of the lower window with catch (2).

8. To close the lower window, reverse the procedure that is used for opening the lower window.

Note: The lower window is curved. The lower window can only be positioned one way in the holders.

i07538754

Sun Screen

SMCS Code: 7165-ZZ



WARNING

When opening or closing the windows, be extra careful to prevent any personal injury. The hydraulic lockout control must be in the LOCKED position in order to prevent any possibility of sudden movement of the machine due to inadvertent contact with the hydraulic control(s).

NOTICE

Do not change the position of the sun screen without performing the following actions:

- Park the machine on a level surface.
- Lower the work tool to the ground.
- Move the hydraulic lockout control to the LOCKED position.
- Stop the engine.

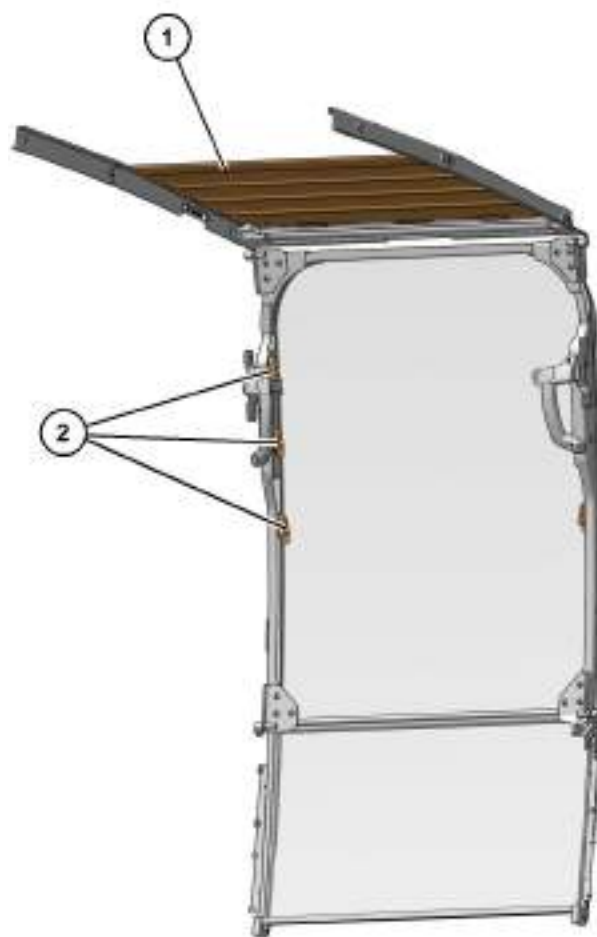


Illustration 276

g06179846

Pull sun screen (1) down from the ceiling. Hook the sun screen to the brackets (2) at both sides of the front window. The sun screen may be positioned at two different heights.

i07538807

i06949447

Roof Hatch

SMCS Code: 7303

WARNING

When opening or closing the windows, be extra careful to prevent any personal injury. The hydraulic lockout control must be in the **LOCKED** position in order to prevent any possibility of sudden movement of the machine due to inadvertent contact with the hydraulic control(s).

NOTICE

Do not change the position of the roof hatch without performing the following actions:

- Park the machine on a level surface.
- Lower the work tool to the ground.
- Move the hydraulic lockout control to the **LOCKED** position.
- Stop the engine.

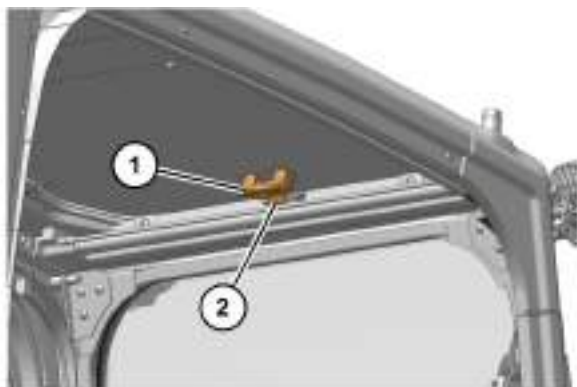


Illustration 277

g06179871

- (1) Grip
(2) Lock

To open the roof hatch, release lock (2). Hold grip (1) and push the roof hatch upward.

To close the roof hatch, hold grip (1) and pull the roof hatch downward. Engage lock (2) securely.

NOTICE

Do not stand or walk on the hatch or the roof of the cab. Serious damage may occur.

Cab Door

SMCS Code: 7308



Illustration 278

g06180275

To open the cab door from the outside of the cab, pull outward on the door handle.



Illustration 279

g06179959

To open the cab door while inside the cab, push forward on the lever for the cab door latch.

For additional ventilation, open the cab door all the way to engage the catch on the exterior wall of the cab.

i06946782

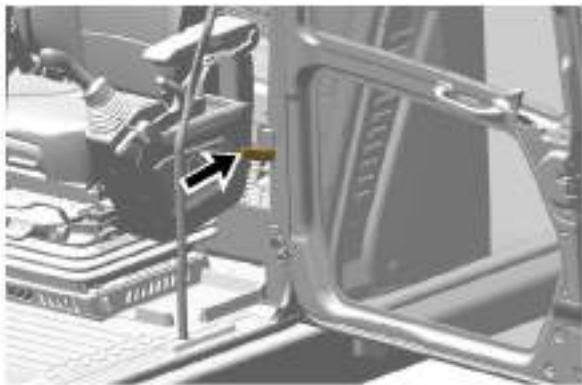


Illustration 280

g06180267

To release the cab door from the catch, pull downward on the cab door release lever.

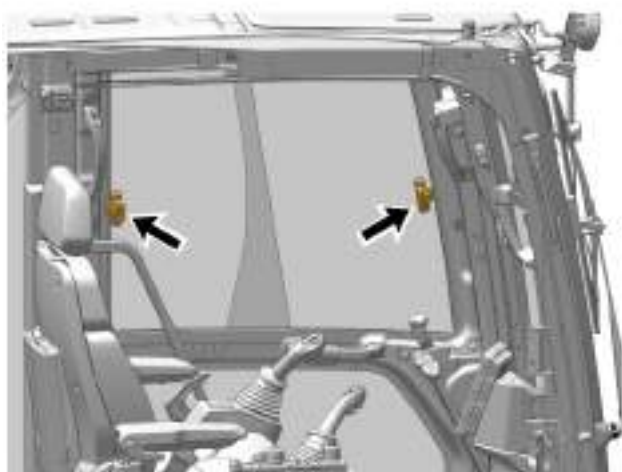


Illustration 281

g06179957

To open a window, release the window latch, and then slide the window to the desired position.

Travel Control (Straight Travel Pedal (If Equipped))

SMCS Code: 5462

WARNING

With certain attachment combinations, the third pedal can have different functions. Always check for third pedal function before using the third pedal. Improper operation of the third pedal could result in serious injury or death.



Illustration 282

g06178249

Position for normal travel

- (A) Rear of machine
- (B) Final drive
- (C) Idler

When you travel, make sure that final drive sprockets (B) are under the rear of the machine.

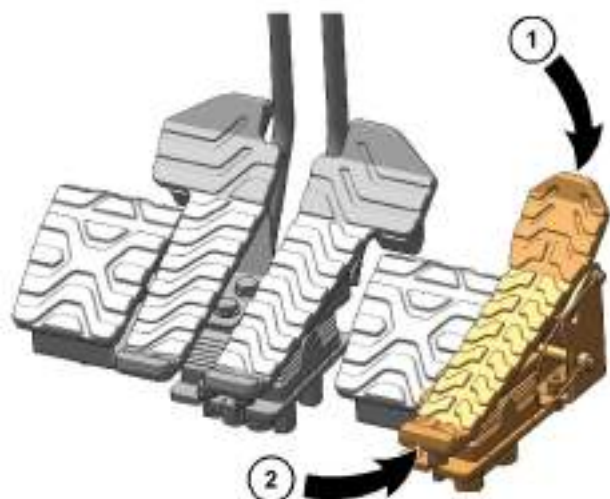


Illustration 283

g06178758

- (1) Forward Travel
- (2) Reverse Travel

The third pedal is to the right of the right travel pedal. The third pedal controls the forward and backward movement of the machine.

Note: If the third pedal is depressed and a travel pedal or a travel lever is operated, the machine will turn accordingly.

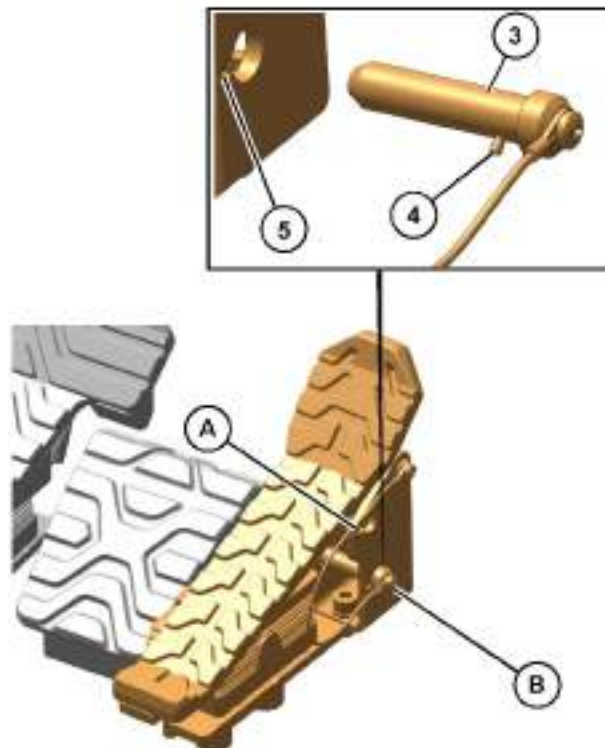


Illustration 284

g06178798

- (3) Lock pin
- (4) Pin
- (5) Notch
- (A) LOCKED position
- (B) UNLOCKED position

When the machine is not operated with the third pedal, install lock pin (3) at the LOCKED position to prevent accidental operation.

Note: To prevent lock pin (3) from being pulled out, insert pin (4) through notch (5) and turn lock pin (3) counterclockwise by 1/4 turn.

i07233941

Shovel Crane Control (If Equipped)

SMCS Code: 7451

WARNING

Do not perform a lifting operation with the shovel crane on a slope greater than 5 degrees. Lifting on a slope greater than 5 degrees may cause the machine to become unstable or roll over. Lifting with the shovel crane on a slope greater than 5 degrees may result in property damage, personal injury, or death.

⚠ WARNING

Do not operate the shovel crane with a hook that has cracks or deformities. Failure to follow these instructions may cause the load to fall and result in injury or death. Replace the shovel crane hook if there are any signs of cracks or deformities.

⚠ WARNING

Do not operate the bucket without securing the shovel crane hook. Operating the bucket without properly securing the hook may result in personal injury or machine damage.

NOTICE

Do not perform a lifting operation if the monitors external display light does not come on. Do not perform a lifting operation if the monitor does not display the suspended load information.

NOTICE

Lifting capacities are different than rated load capacities. Lifting capacities should not be used to determine the rated load of the shovel crane function. Only use the rated load capacities found in Operation and Maintenance Manual, "Specifications" to determine the rated load capacity for the shovel crane function.

NOTICE

Do not operate the shovel crane if the beacon light does not function properly. Before operation, check that the beacon light is flashing/rotating properly.

In some regions, regulations require a shovel crane configuration to lift certain objects. Always obey the local regulations in your region.

Refer to this Operation and Maintenance Manual, "Shovel Crane Operation" for additional information regarding the operation of the shovel crane.

Operate the machine according to the rated load table for your machine. Refer to Operation and Maintenance Manual, "Specifications (Shovel Crane)" for more information.

Activating the Shovel Crane



Illustration 285

g06224668

Use pitch indicator (1) and roll indicator (2) on the monitor to position the machine on a level surface.

Once the machine is in position on firm level ground, retract the bucket and lower the bucket to the ground.

Move the hydraulic lockout control to the LOCKED position. Stop the engine.

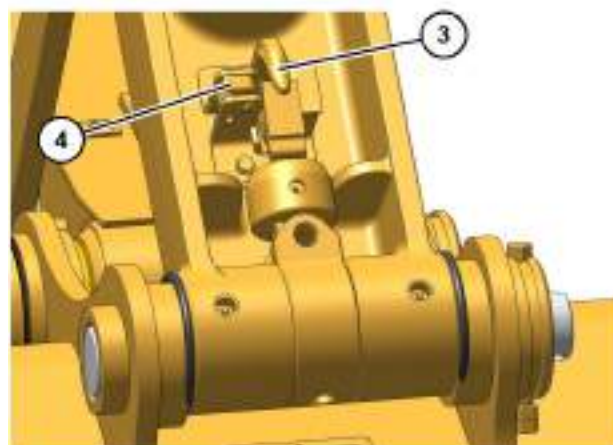


Illustration 286

g06205428

(3) Shovel crane hook
(4) Shovel crane latch

Release latch (4). Lower hook (3) into operating position.

Inspect the shovel crane hook for damage. See Operation and Maintenance Manual, "Shovel Crane - Inspect"



Illustration 287

g06224672

Press the function list button on the home screen.



Illustration 288

g06210063

Tap the crane option or if using the jog dial highlight the crane option and press down on the jog dial. The crane option should now say "ON"

Note: Tool Control should be turned OFF before the shovel crane can be activated. Select "Bucket" instead of any other tools. If any other work tool is selected, the shovel crane mode cannot be activated.



Illustration 289

g06224673

(5) Shovel crane indicator

Once the crane option is enabled, press the home button.

The monitor will display the following on the home page:

- Height
- Radius
- Actual Load
- Rated Load (not traveling)
- Rated Load (traveling)

Note: The rated load icon will turn yellow and a track will appear when the machine is travelling.

Shovel crane indicator (5) will display at the top of the monitor to indicate that the shovel crane feature is active.

Fully retract the bucket to activate the shovel crane mode. The bucket will lock into place and will not move, and the engine speed will then be reduced.

Note: If the hydraulic lockout control is moved to the LOCKED position, the shovel crane will become inoperable.

Refer to Operation and Maintenance Manual, "Shovel Crane Operation" for additional information regarding the operation of the shovel crane.

Deactivating the Shovel Crane



Illustration 290

g06191883

Return to the function list screen. Tap the crane option or if using the jog dial highlight the crane option and press down on the jog dial. The crane option should now say "OFF".

Position the stick so that it is perpendicular to the ground and slowly lower the boom until the bucket contacts the ground.

Return the hook to the stored position and latch the hook.

Indicators and Warnings

Below is a list of indicators and warnings that may appear on the monitor during the shovel crane operation.

Travel With Lift Out of Work Area – If the radius is over 70% of maximum radius when traveling, the monitor will display this warning. If this warning occurs, stop traveling until the machine center of gravity becomes stable or reduce the suspended load.

Crane 90% Load – If the suspended load is 90% of the rated load, the monitor will display this warning and an alarm will sound continuously. If this warning occurs, stop operation until the machine center of gravity becomes stable or reduce the suspended load.

Crane 100% Load – If the suspended load is 100% of the rated load, the monitor will display this warning

and an alarm will sound continuously. If this warning occurs, stop operation until the machine center of gravity becomes stable or reduce the suspended load.

Crane Hook Interference – When the lifting height is too high, the monitor will display this warning. If this warning is present, stop lifting and lower the boom or retract the stick.

Boom Out of Work Area – When the boom cylinder is extended to the point near stroke end, the monitor will display this warning. If this warning is present, lower the boom.

Stick Out of Work Area – When the stick is retracted from the vertical position, the monitor will display this warning. If this warning occurs, return the stick to vertical.

Crane Malfunction – When an abnormality occurs with a shovel crane-related component, the monitor will display this warning. If this warning occurs, stop lifting and contact your Cat dealer.

Crane Mode Off – When the crane system has been stopped or disabled, the monitor will display this indicator.

i07233863

Joystick Controls (Medium Pressure (If Equipped))

SMCS Code: 5705

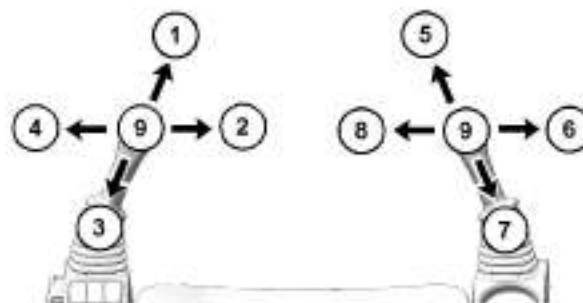


Illustration 291

g06180324

- (1) STICK OUT
- (2) SWING RIGHT
- (3) STICK IN
- (4) SWING LEFT
- (5) BOOM LOWER
- (6) TOOL OPEN
- (7) BOOM RAISE
- (8) TOOL CLOSE
- (9) HOLD

WARNING

The Fine Swing Control delays the engagement of the swing parking brake.

If the machine is operating on a slope with the Fine Swing Control in the ON position, the swing motion may become uncontrollable which could result in property damage, personal injury or death.

Turn the Fine Swing Control to the OFF position when the machine is operating on a slope.

When you release the joysticks from any position, the joysticks will return to HOLD position (9). Movement of the upper structure will stop unless the fine swing control (if equipped) is ON. When the fine swing control is ON, the swing parking brake will not activate until 6.5 seconds after the joystick control for the swing function returns to the HOLD position.

The machine control pattern is initially set at the factory to the SAE system, as shown. The pattern on the left pertains to the left joystick and the pattern on the right pertains to the right joystick.

The machine control pattern can be varied. Refer to Operation and Maintenance Manual, "Joystick Controls Alternate Patterns" for more information.

Two functions may be performed at the same time by moving a joystick diagonally.

Rotating Tool Control

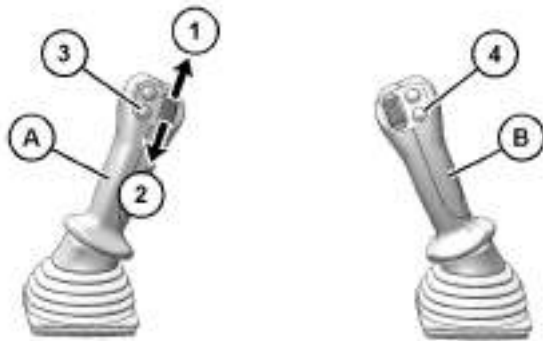


Illustration 292

g06260903

- (A) Left joystick
- (B) Right joystick
- (1) Thumb wheel (Clockwise)
- (2) Thumb wheel (Counterclockwise)
- (3) Horn switch
- (4) AEC switch

WARNING

The joystick and controls on the joystick can be configured with different functions. Always make sure to check the joystick configuration on the monitor before using the machine to avoid unexpected machine movement. These unexpected machine movements could cause a hazard resulting in serious injury or death.



- (1) ROTATE CLOCKWISE – Move the thumb wheel upward to rotate the work tool clockwise.



- (2) ROTATE COUNTERCLOCKWISE – Move the thumb wheel downward to rotate the work tool counterclockwise.



- (3) HORN – Press the horn switch on the left joystick to activate the horn.



- (4) AEC SWITCH – Press the AEC switch on the right joystick to activate low engine speed. Press the switch again to activate high engine speed.

i07638304

Joystick Controls

SMCS Code: 5705

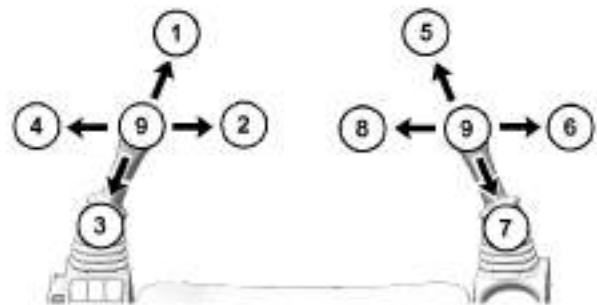


Illustration 293

g06180324

- (1) STICK OUT
- (2) SWING RIGHT
- (3) STICK IN
- (4) SWING LEFT
- (5) BOOM LOWER
- (6) BUCKET DUMP
- (7) BOOM RAISE
- (8) BUCKET CLOSE
- (9) HOLD

⚠ WARNING

The Fine Swing Control delays the engagement of the swing parking brake.

If the machine is operating on a slope with the Fine Swing Control in the ON position, the swing motion may become uncontrollable which could result in property damage, personal injury or death.

Turn the Fine Swing Control to the OFF position when the machine is operating on a slope.

When you release the joysticks from any position, the joysticks will return to HOLD position (9). Movement of the upper structure will stop unless the fine swing control (if equipped) is ON. When the fine swing control is ON, the swing parking brake will not activate until 6.5 seconds after the joystick control for the swing function returns to the HOLD position.

Two functions may be performed at the same time by moving a joystick diagonally.

The machine control pattern is initially set at the factory to the SAE system, as shown. The pattern on the left pertains to the left joystick and the pattern on the right pertains to the right joystick.

The machine control pattern can be varied. Refer to Operation and Maintenance Manual, “Joystick Controls Alternate Patterns” for more information.

Manual Low Idle – Activate the manual low idle to reduce the engine speed to approximately 1000 rpm. Pressing the switch again will allow the engine speed to return to the original setting of the engine speed dial.

The manual low idle allows the operator to reduce the rpm without touching the engine speed dial. Manual low idle is useful when the operator wants to reduce the engine speed to talk to someone or while the operator is waiting for a truck.

GC Machines

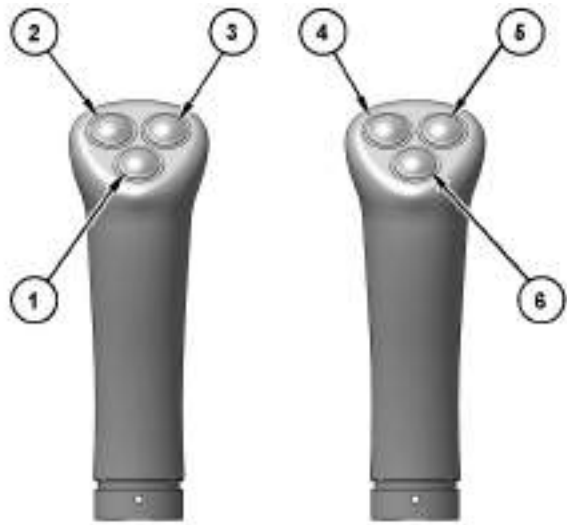


Illustration 294

g06223512

3 Button Joystick Controls

- (1) Left joystick switch 1
- (2) Left joystick switch 2
- (3) Left joystick switch 3
- (4) Right joystick switch 2
- (5) Right joystick switch 3
- (6) Right joystick switch 1

Table 22

Joystick Configurations	
Switch Location	3 Button Joystick
1	Horn
2	Configurable
3	Configurable
4	Configurable
5	Configurable
6	Configurable

Note: The following functions can be assigned to the configurable buttons: radio mute, one-touch low idle, work tool select, and HVAC.



Illustration 295

g06225116

Vertical Slider Joystick Controls

- (7) Left joystick switch 3
- (8) Left joystick switch 4
- (9) Left joystick switch 1
- (10) Left joystick switch 2
- (11) Left joystick thumbwheel
- (12) Right joystick thumbwheel
- (13) Right joystick switch 2
- (14) Right joystick switch 1
- (15) Right joystick switch 4
- (16) Right joystick switch 3

Table 23

Joystick Configurations	
Switch Location	Joystick With Tool Control Sliders
7 ⁽¹⁾	Hammer
8	Configurable
9	Horn
10	Configurable
11 ⁽¹⁾	Work Tool Rotation
12 ⁽¹⁾	Work Tool Open / Close
13	Configurable
14	Configurable
15	Configurable
16	Configurable

(continued)

(Table 23, contd)
(1) Button is configurable on machines without tool control.

Standard Machines



Illustration 296 g06224200

Vertical Slider Joystick Controls

- (1) Left joystick switch 3
(2) Left joystick switch 4
(3) Left joystick switch 1
(4) Left joystick switch 2
- (5) Left joystick thumbwheel
(6) Right joystick thumbwheel
(7) Right joystick switch 2
(8) Right joystick switch 1
- (9) Right joystick switch 4
(10) Right joystick switch 3

Table 24

Joystick Configurations				
Switch Location	Machine Configuration			
	Grade	Grade Assist	Grade Payload	Grade Assist Payload
1 ⁽¹⁾	Hammer	Hammer	Hammer	Hammer
2	Standby / Weigh	Standby / Weigh	Standby / Weigh	Standby / Weigh
3	Horn	Horn	Horn	Horn
4	Store	Store	Store	Store
5 ⁽¹⁾	Work Tool Rotation	Work Tool Rotation	Work Tool Rotation	Work Tool Rotation
6 ⁽¹⁾	Work Tool Open / Close	Work Tool Open / Close	Work Tool Open / Close	Work Tool Open / Close
7	Bucket Recall and Store	Bucket Recall and Store	Bucket Recall and Store	Bucket Recall and Store
8	Bench Mark	Bench Mark	Bench Mark	Bench Mark
9	Grade and Bucket Assist Activation	Grade and Bucket Assist Activation	Grade and Bucket Assist Activation	Grade and Bucket Assist Activation
10	Laser and Touch Point	Laser and Touch Point	Laser and Touch Point	Laser and Touch Point

(1) Button is configurable on machines without tool control.

i08233391

Joystick Controls (Tilt-Rotator System (TRS) (If Equipped))

SMCS Code: 5705

WARNING

Verify the joystick control pattern and functionality parameters before operating machine.

Ensure that the joystick control film on the cab window matches the control functions of your machine. Consult your Cat dealer for additional information regarding the joystick control film.

Become familiar with the joystick controls before operating the machine.

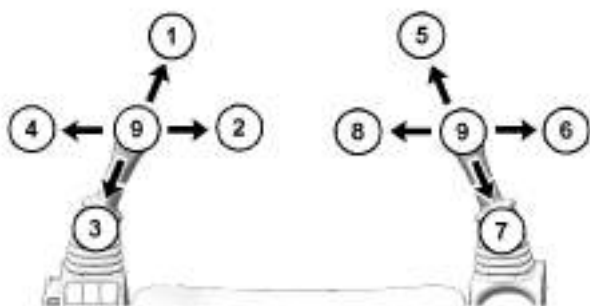


Illustration 297

g06180324

- (1) STICK OUT
- (2) SWING RIGHT
- (3) STICK IN
- (4) SWING LEFT
- (5) BOOM LOWER
- (6) BUCKET DUMP
- (7) BOOM RAISE
- (8) BUCKET CLOSE
- (9) HOLD

WARNING

The Fine Swing Control delays the engagement of the swing parking brake.

If the machine is operating on a slope with the Fine Swing Control in the ON position, the swing motion may become uncontrollable which could result in property damage, personal injury or death.

Turn the Fine Swing Control to the OFF position when the machine is operating on a slope.

When you release the joysticks from any position, the joysticks will return to HOLD position (9). Movement of the upper structure will stop unless the fine swing control (if equipped) is ON. When the fine swing control is ON, the swing parking brake will not activate until 6.5 seconds after the joystick control for the swing function returns to the HOLD position.

Two functions may be performed at the same time by moving a joystick diagonally.

The machine control pattern is initially set at the factory to the SAE system, as shown. The pattern on the left pertains to the left joystick and the pattern on the right pertains to the right joystick.

The machine control pattern can be varied. Refer to Operation and Maintenance Manual, "Joystick Controls Alternate Patterns" for more information.

Manual Low Idle – Activate the manual low idle to reduce the engine speed to approximately 1000 rpm. Pressing the switch again will allow the engine speed to return to the original setting of the engine speed dial.

The manual low idle allows the operator to reduce the rpm without touching the engine speed dial. Manual low idle is useful when the operator wants to reduce the engine speed to talk to someone or while the operator is waiting for a truck.

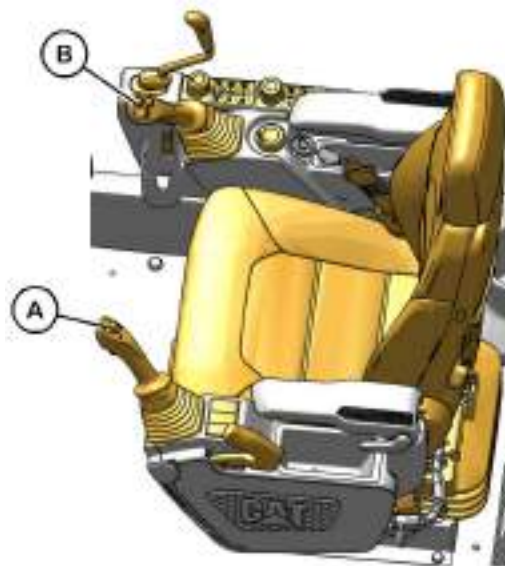


Illustration 298

g06595876

(A) Left Joystick

(B) Right Joystick

Rear View of Joystick Controls

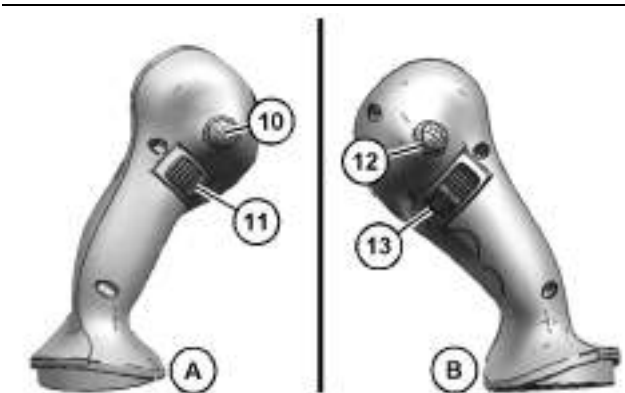


Illustration 299 g06596328
(A) Rear View Left Joystick
(B) Rear View Right Joystick
(10) Left Joystick Switch
(11) Left Joystick Thumb Wheel
(12) Right Joystick Switch
(13) Right Joystick Thumb Wheel

Left Joystick Control Patterns

The left joystick has seven buttons.

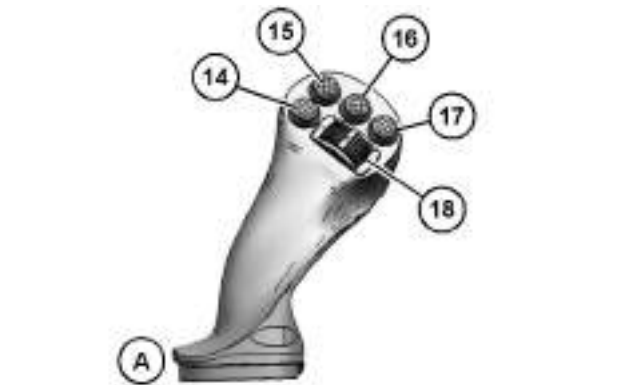


Illustration 300 g06595878
Typical Example
(A) Left Joystick

Table 25

Joystick Control	Left Joystick Function
(14)	Tilt-Rotator Bucket
(15)	Horn
(16)	Weigh Mode

(continued)

(Table 25, contd)

(14)	Tilt-Rotator Bucket
(17)	One Touch
(18)	-

Right Joystick Control Patterns

The right joystick has seven buttons.



Illustration 301 g06595879
Typical Example
(B) Right Joystick

Table 26

Joystick Control	Right Joystick Patterns
19	Laser and Touch
20	Grade and Bucket
21	Bench Mark
22	Tilt-Rotator Rec
23	-

i07966290

VA Boom Controls
(If Equipped)

SMCS Code: 5461-VAR



WARNING
With certain attachment combinations, the third pedal can have different functions. Always check for third pedal function before using the third pedal. Improper operation of the third pedal could result in serious injury or death.

The VA boom extends the working range of the machine by hydraulically increasing or reducing the angle of the boom. The VA boom is equipped with a hydraulic check valve to prevent the boom from lowering in case a hydraulic line breaks.

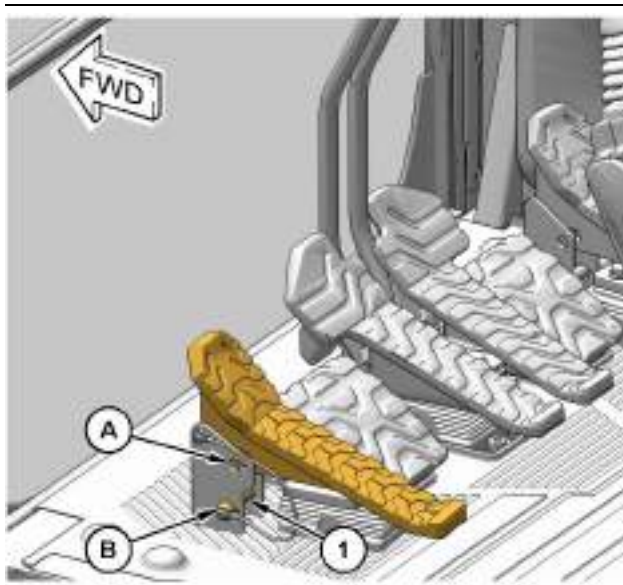


Illustration 302

g06496588

- (1) Lock pin
(A) LOCKED position
(B) VA BOOM position



VA Boom EXTEND – Push down on the front of the pedal to extend the VA boom cylinder.



VA Boom RETRACT – Push down on the rear of the pedal to retract the VA boom cylinder.

i06951419

SmartBoom Control (If Equipped)

SMCS Code: 5461-ZS; 7332

WARNING

Personal injury or death can result from not following the proper procedures.

To avoid the possibility of injury or death, follow the established procedure.

WARNING

Activating the SmartBoom function and using the work tool joystick control while the front of the machine is elevated could result in unexpected machine motion. Unexpected machine motion could result in serious injury or death. Do not activate the SmartBoom function if the front of the machine is elevated by the front linkage.

WARNING

Do not elevate or lower the track when in the SmartBoom mode. Follow the operation procedures for the SmartBoom in the Operation and Maintenance Manual. Failure to follow these instructions can result in serious injury or death.

WARNING

Always make sure that the boom control joystick is in the NEUTRAL position before activating the SmartBoom control. Activating the SmartBoom control with the joystick out of the neutral position could result in unexpected machine motion which could result in serious injury or death.

WARNING

Do not select any SmartBoom mode, using the SmartBoom selector switch located on the console, while the tracks are elevated. Selecting the SmartBoom mode with the tracks elevated could result in a sudden drop of the machine which could result in serious injury or death.

WARNING

If any SmartBoom mode is active and the boom control joystick is in the BOOM DOWN position (forward) with a bucket or a work tool on the ground, pressing the disable button that is located on the front of the right hand joystick could cause a sudden boom down motion. This control function could lift the machine upward, with unexpected machine movement that could result in serious injury or death. Do not press the disable button while the SmartBoom mode is active and the boom control joystick is in the BOOM DOWN position (forward) with a bucket or a work tool on the ground.

WARNING

Do not attempt to lift the tracks of the machine by using the disable button and applying downward force with the boom lowering control while the machine is in any SmartBoom mode. Releasing the disable button will immediately return the machine to the active SmartBoom mode. This action could cause the machine to drop down abruptly which could result in serious injury or death.



Illustration 303 g06210059

From the home screen, press the function list button.



Illustration 304 g06210090

Tap the smart boom option, or if using the jog dial, select the smart boom option and press down on the dial.



Illustration 305 g06210095

Select either “Up & Down” or “Down Only” from the list. The two options work as follows:

“Up & Down” mode: When the joystick is moved to the BOOM DOWN position, the boom will lower by the weight of the boom. The boom can move upward freely.

“Down Only” mode: The boom will lower by the weight of the boom when the control lever is moved to the BOOM LOWER position. This mode prevents the boom from moving upward. To move the boom upward, the operator must use the boom control joystick to activate the BOOM UP mode.

Press the home button when finished.

During operation of the SmartBoom function, the operator may wish to apply downward force to the boom. The operator can disable the SmartBoom function temporarily with the SmartBoom disable switch. While the trigger switch is pressed, BOOM RAISE and BOOM LOWER will operate in the normal modes. The SmartBoom disable switch is a configurable switch.

i08222281

Work Tool Control (One-Way Flow) (If Equipped)

SMCS Code: 6700

The following information pertains to work tools that require hydraulic oil flow in one direction. Hydraulic hammers are an example of work tools that require hydraulic oil flow in one direction.

Note: For information that pertains to work tools that require hydraulic oil flow in two directions, refer to Operation and Maintenance Manual, "Work Tool Control (Two-Way Flow)".

Joystick

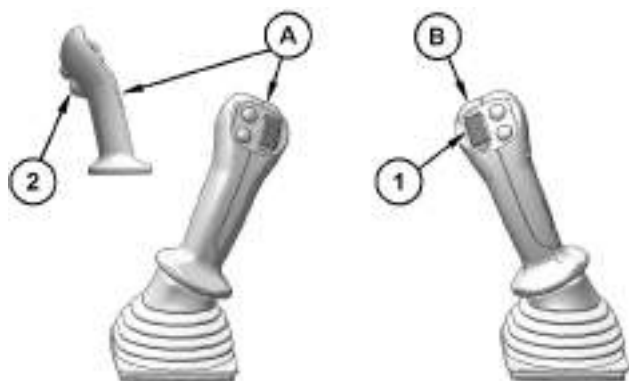


Illustration 306

g06588792

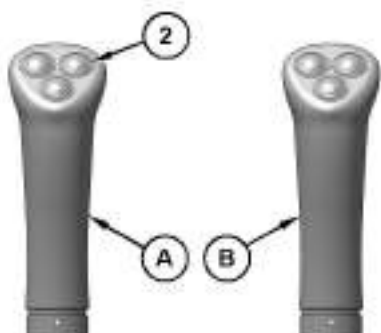


Illustration 307

g06588793

(A) Left joystick
(B) Right joystick



(1) Variable Speed – Move the thumb wheel downward to activate the work tool. Move the thumb wheel further to increase the speed of the work tool.



(2-1) On/Off (Momentary) – While pressing this switch, the work tool will remain activate at a constant rate. Release the switch to turn off the work tool.



(2-2) On/Off (Toggled) – Press the switch once to activate the work tool. Press the switch again to turn off the work tool.

Work Tool Pedal

⚠ WARNING

With certain attachment combinations, the work tool pedal can have different functions. Always check for work tool pedal function before using the work tool pedal. Improper operation of the work tool pedal could result in serious injury or death.

The work tool pedal can be installed on either side of the travel pedals. The work tool pedal allows the operator to modulate the speed of the work tool.

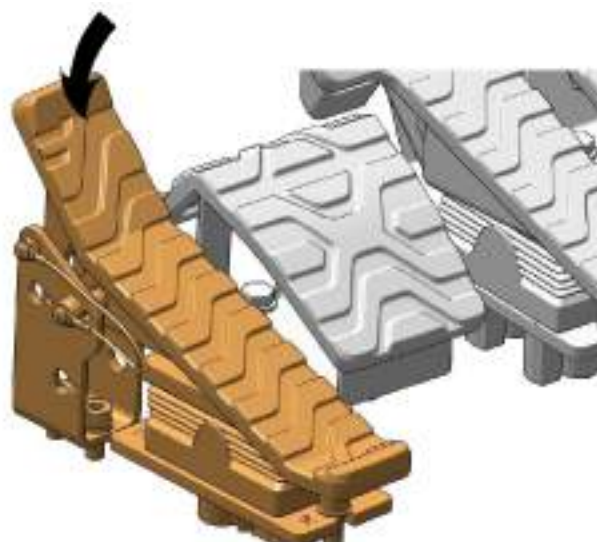


Illustration 308

g06180447



Variable Speed – Push down on the front of the pedal to activate the work tool. Move the pedal further to increase the speed of the work tool. Release the pedal to turn off the work tool.

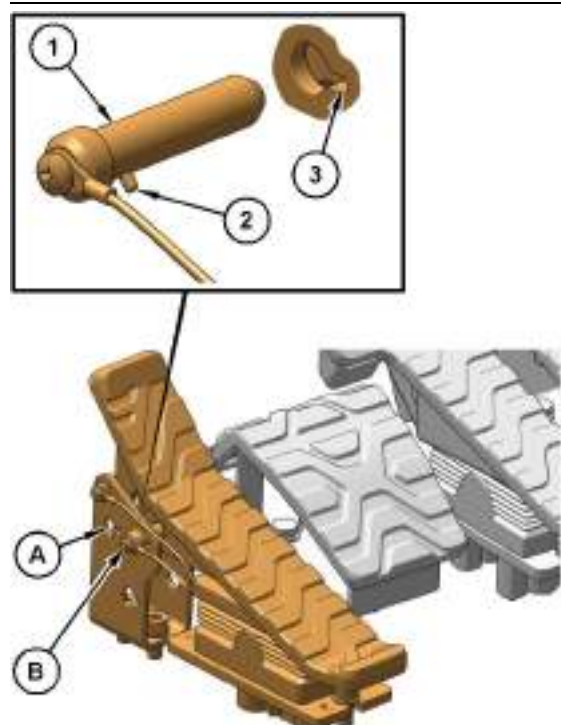


Illustration 309

g06591307

- (1) Lock pin
- (2) Pin
- (3) Notch
- (A) UNLOCKED position
- (B) LOCKED position

When you are not using the work tool, put the lock pin (1) in LOCKED position (B). This will lock the work tool pedal to prevent any unexpected operation of the work tool.

Note: To prevent lock pin (1) from being accidentally pulled out, insert pin (2) through notch (3) and turn lock pin (1) counterclockwise by 1/4 turn.

i07243676

Work Tool Control (Two-Way Flow) (If Equipped)

SMCS Code: 6700

WARNING

The joystick and controls on the joystick can be configured with different functions. Always make sure to check the joystick configuration on the monitor before using the machine to avoid unexpected machine movement. These unexpected machine movements could cause a hazard resulting in serious injury or death.

The following information pertains to work tools that require hydraulic oil flow in two directions. These work tools can also be equipped with a rotate circuit. Hydraulic shears, pulverizers, crushers, and grapples are examples of work tools that require hydraulic oil flow in two directions.

Note: For information that pertains to hydraulic hammers, refer to Operation and Maintenance Manual, "Work Tool Control (One-Way)".

Joystick

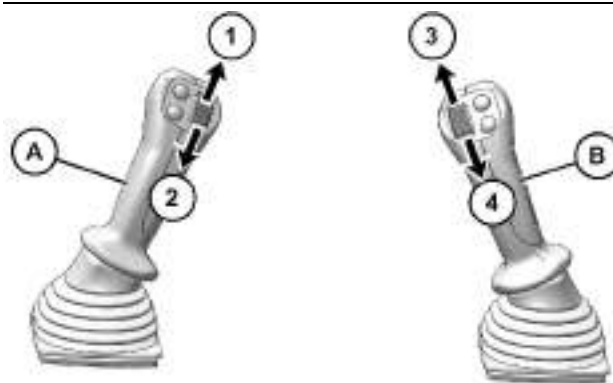


Illustration 310

g06180488

- (A) Left joystick
- (B) Right joystick



(1) ROTATE CLOCKWISE – Move the thumb wheel upward to rotate the work tool clockwise.



(2) ROTATE COUNTERCLOCKWISE – Move the thumb wheel downward to rotate the work tool counterclockwise.



(3) CLOSE – Move the thumb wheel upward to close the work tool.



(4) OPEN – Move the thumb wheel downward to open the work tool.

Work Tool Pedal

WARNING

With certain attachment combinations, the work tool pedal can have different functions. Always check for work tool pedal function before using the work tool pedal. Improper operation of the work tool pedal could result in serious injury or death.

The work tool pedal can be installed on either side of the travel pedals. The work tool pedal allows the operator to vary the speed of the work tool.

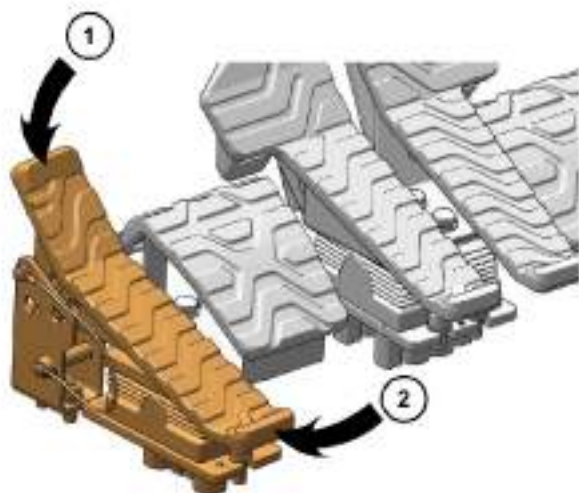


Illustration 311

g06180510



(1) CLOSE – Push down on the front of the pedal to close the work tool.



(2) OPEN – Push down on the rear of the pedal to open the work tool.

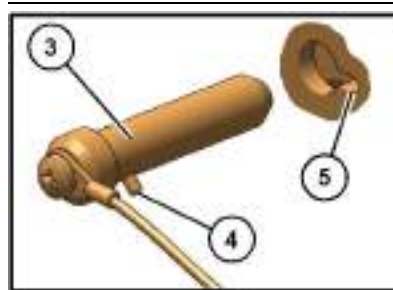


Illustration 312

g06180514

- (3) Lock pin
- (4) Pin
- (5) Notch
- (A) LOCKED position
- (B) UNLOCKED position

When you are not using the work tool, put the lock pin (3) in LOCKED position (A). This will lock the work tool pedal to prevent any unexpected operation of the work tool.

Note: To prevent lock pin (3) from being accidentally pulled out, insert pin (4) through notch (5) and turn lock pin (3) by 1/4 turn.

i08209549

Joystick Controls Alternate Patterns

SMCS Code: 5059; 5137

Changing Machine Control Pattern (If Equipped)

WARNING

Whenever a change is made to the machine control pattern, also exchange the pattern card in the cab to match the new pattern.

Check the machine control pattern for conformance to the pattern on the card in the cab. If the pattern does not match, change the card to match the machine control pattern before you operate the machine. Failure to do so could result in personal injury.

The machine control pattern can be changed to the ISO/JIS pattern, BHL pattern, MHI pattern, KOBE pattern, or the former SCM pattern. To change the joystick controls between the patterns, refer to Operation and Maintenance Manual, Monitoring System for more information.

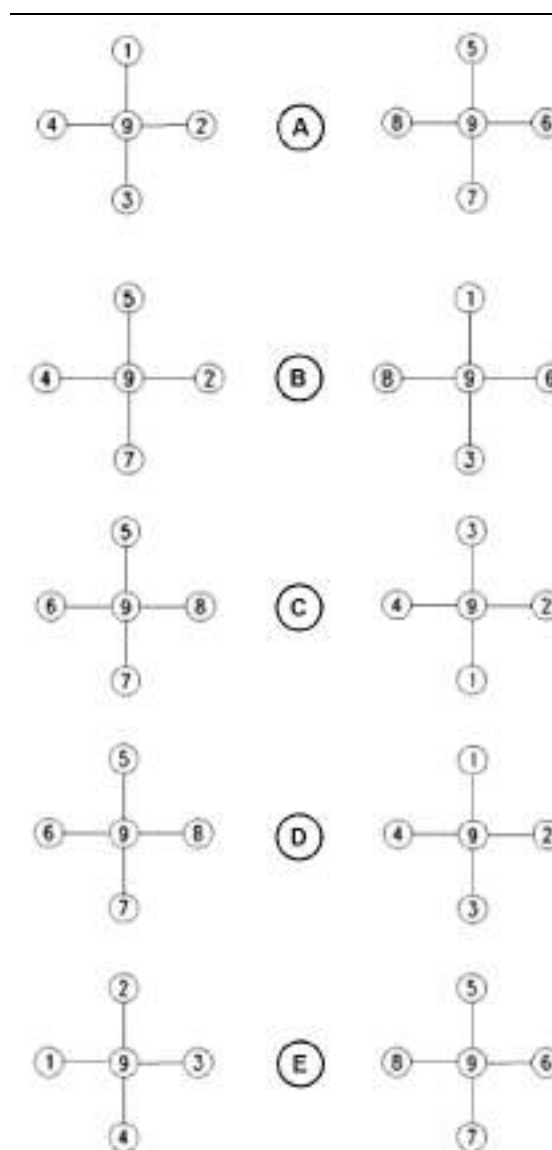


Illustration 313

g06136699

- (A) ISO/JIS machine control pattern
- (B) BHL machine control pattern
- (C) MHI machine control pattern
- (D) KOBE machine control pattern
- (E) Former SCM machine control pattern

The patterns on the left side of the Illustration show the possible configurations for the left control lever. The patterns on the right side of the Illustration show the possible configurations for the right control lever.



STICK OUT (1) – Move the control lever to this position to move the stick outward.



SWING RIGHT (2) – Move the control lever to this position to swing the upper structure to the right.



STICK IN (3) – Move the control lever to this position to move the stick inward.



SWING LEFT (4) – Move the control lever to this position to swing the upper structure to the left.



BOOM LOWER (5) – Move the control lever to this position to lower the boom.



BUCKET DUMP (6) – Move the control lever to this position to dump the bucket.



BOOM RAISE (7) – Move the control lever to this position to raise the boom.



BUCKET CLOSE (8) – Move the control lever to this position to close the bucket.

HOLD (9) – When the control lever is released from any position, the control lever will return to the HOLD position. Movement of the upper structure will stop.

Two functions may be performed at the same time by moving a control lever diagonally.

If the machine is equipped with a hydraulic hammer, the function of position (6) and of position (8) is different.

HYDRAULIC HAMMER RAISE (6) – Move the control lever to this position to raise the hydraulic hammer.

HYDRAULIC HAMMER LOWER (8) – Move the control lever to this position to lower the hydraulic hammer.

If the machine is equipped with a grapple, the function of position (6) and of position (8) is different.

GRAPPLE OPEN (6) – Move the control lever to this position to open the grapple arms.

GRAPPLE CLOSE (8) – Move the control lever to this position to close the grapple arms.

If the machine is equipped with a clamshell, the function of position (6) and of position (8) is different when in “Clamshell” mode.

Note: When in “Clamshell” mode, the work tool can only be operated if Work Tool Select also has clamshell selected.

CLAMSHELL OPEN (6) – Move the control lever to this position to open the clamshell.

CLAMSHELL CLOSE (8) – Move the control lever to this position to close the clamshell.

i07876663

Fuel Tank Shutoff and Drain Control

SMCS Code: 1273

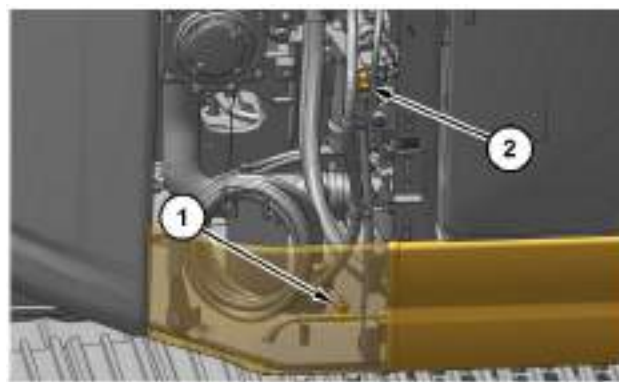


Illustration 314

g06466693

Fuel tank drain valve and shutoff

Fuel Tank Drain Valve (1) – The drain valve for the fuel tank is located behind the right side access door. To drain the water and sediment from the fuel tank, turn the fuel drain valve counterclockwise. To close the fuel tank drain valve, turn the drain valve clockwise.

Fuel Shutoff Valve (2) – The fuel shutoff valve is located behind right side access door. To shut off the fuel supply, turn the fuel shutoff valve clockwise. To turn on the fuel supply, turn the fuel shutoff valve counterclockwise.

Note: For more detailed information that pertains to draining the water and sediment from the fuel tank, refer to Operation and Maintenance Manual, “Fuel Tank Water and Sediment - Drain”.

Engine Starting

i08185791

Engine Starting

SMCS Code: 1000; 1090; 1456; 7000

NOTICE

This machine is equipped with a Cat[®] Machine Security System (MSS) and may not start under certain conditions.

NOTICE

The engine start switch must be in the ON position and the engine must be running in order to maintain electrical functions and hydraulic functions. This procedure must be followed in order to prevent serious machine damage.

Note: The engine can start in areas that have temperatures as low as -18°C (0°F). For areas that are colder, a starting kit for cold weather is available.

1. Move the hydraulic lockout control to the LOCKED position.

This machine is equipped with an engine neutral start system. The system only allows the engine to start when the lever for the hydraulic lockout control is in the LOCKED position.

2. Ensure that the joysticks and travel controls are in the HOLD position.



Illustration 315

g06209482

3. The operator passcode, Bluetooth key or Cat App: Fleet management app must be authenticated before starting the engine. Once authenticated, an "Engine Start Allowed" message will appear across the top of the monitor and the start switch LED will turn green.



Illustration 316 g06579150

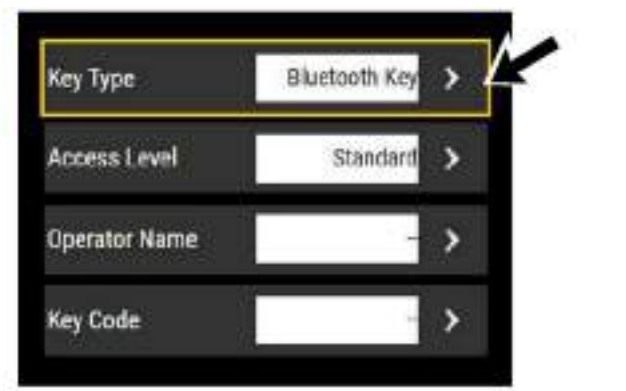


Illustration 317 g06579155

4. Bluetooth devices and passcodes can be registered using the in-cab display if the operator is logged in to the system using a master access account. Contact your Cat dealer for additional information.

Reference: Refer to Operation and Maintenance Manual, Machine Security System, Operator Login for instructions.

5. Before you start the engine, check for the presence of bystanders or maintenance personnel. Ensure that all personnel are clear of the machine. Briefly sound the horn before you start the engine.

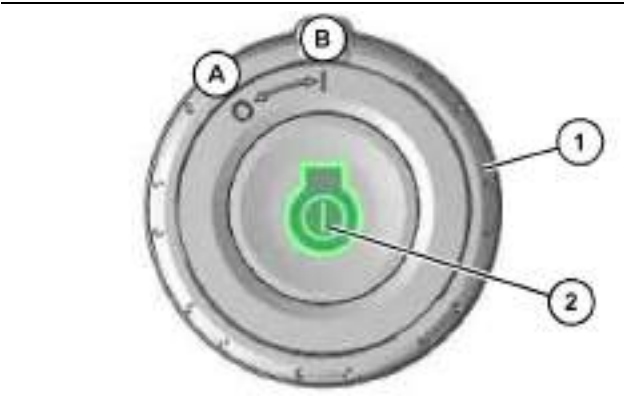


Illustration 318 g06226447

- (A) Off
- (B) On
- (1) Engine start ring
- (2) Engine start button

6. Turn the engine start ring(1) to the ON position, then press and hold start button (2) to start the engine. Release the button after the engine has started.

If the engine is having trouble starting, do not crank the engine for more than 30 seconds. Cranking the engine for more than 30 seconds can damage starting system components.

i07896361

Engine and Machine Warm-Up

SMCS Code: 1000; 7000

NOTICE

Keep engine speed low and do not operate until the message "Warm-Up Mode Power Derate" on the monitor goes out. If it does not go out within thirty seconds, stop the engine and investigate the cause before starting again. Failure to do so, can cause engine damage.

NOTICE

Always run the engine at low idle for at least ten minutes before performing any other operations in cold conditions or each time the engine oil and oil filter are changed in order to protect your engine and hydraulic components.

NOTICE

Depending on the ambient temperature, in order to prevent the machine operation with high speed without sufficient lubrication at the turbo bearing, the engine speed may be set to low speed and the hydraulic power minimized for a pre-determined time after the engine starts. Refer to turbo protection feature.

The engine may automatically change speeds when the machine is stationary and idling in cold ambient temperature for an extended time. This is to:

- Maintain desired coolant temperature.
- Maintain desired operation of engine systems.

During extended idling in cold ambient conditions, engine speed may operate between 900 rpm and 1000 rpm. Operation at 1000 rpm is minimal and will only last for up to 20 minutes.

Hydraulic System

Automatic Warm-Up

This machine comes with an automatic warm-up feature that can be enabled or disabled. If the feature is enabled, and the hydraulic oil temperature is below the threshold that has been set, a prompt will appear on the monitor after starting the machine. Follow the prompts on the monitor. If this feature is disabled or you would like to change the temperature setting, refer to Operation and Maintenance Manual, Monitoring System.



Illustration 319

g06219830

Manual Warm-Up

WARNING

When you cycle the machine controls, the machine can move suddenly. Contact between the machine and external objects or ground personnel can result in serious injury or death. Before you cycle the machine controls, the machine should be located in an unobstructed, hazard-free work area that is away from external objects and ground personnel.

1. Make sure that the area is clear of personnel and equipment.

Note: The hydraulic lockout control must be in the UNLOCKED position before the hydraulic controls will function.

2. Allow the engine to warm up at low idle for at least 5 minutes. Engage the work tool controls and disengage the work tool controls. This will speed up the warm-up of the hydraulic components.

When you idle the machine for warm-up, observe the following recommendations:

- If the temperature is greater than 0°C (32°F), warm up the engine for approximately 15 minutes.
- If the temperature is less than 0°C (32°F), warm up the engine for approximately 30 minutes.

- If the temperature is less than -18°C (0°F) or if hydraulic functions are sluggish, additional time may be required.

NOTICE

The hydraulic oil temperature should be higher than 25°C (77°F) before performing work with the machine. Make sure that the warm-up procedure is performed.

If the hydraulic oil temperature is less than 25°C (77°F) and the machine is operated abruptly, serious damage to the hydraulic components may occur.

Note: The recommended operating temperature of the hydraulic fluid for this machine is 55°C (131°F).

3. To warm up the hydraulic oil, turn the engine speed dial to the medium engine speed. Run the engine for approximately 5 minutes and move the joystick intermittently from the BUCKET DUMP position to the HOLD position. Do not hold the joystick in the BUCKET DUMP position with the bucket cylinder fully extended for more than 10 seconds.

This allows the oil to attain relief pressure, which causes the oil to warm up more rapidly.

4. Turn the engine speed dial to the maximum engine speed and repeat Step 3.
5. Cycle all controls to circulate warm oil through all hydraulic cylinders and all hydraulic lines, and through the swing motor and travel motors.
6. Observe the gauges and the indicators frequently during the operation.

Turbo Protection Power Derate – After an engine start, the engine speed will be set to low speed and the hydraulic power limited for a time period . During this period, the monitor displays the message "Warm-Up Mode Power Derate". (Maximum is around 30 seconds). After the turbo bearing lubrication is sufficient, the engine speed goes to the setting dial speed and the monitor stops to display the message.

Improve Cold-Weather Performance

Covers installed over the vents in the radiator compartment door will help to control overcooling in ambient temperatures below -15°C (5°F).

The materials used for the covers and the method used to install the covers is at the installers discretion.

Install the covers if overcooling is observed while the machine is idling in ambient temperatures below -15°C (5°F).

Stop the machine, and remove the covers under the following conditions:

- The ambient temperature is above -15°C (5°F).
- The engine temperature gauge indicates overheating.
- The hydraulic oil temperature gauge indicates overheating.

Recommendation for Crankcase Breather Protection

Crankcase ventilation gases contain a large quantity of water vapor. This water vapor can freeze in cold ambient conditions and can plug or damage the crankcase ventilation system. If the engine is operated in temperatures below -25°C (-13°F), measures must be taken to prevent freezing and plugging of the breather system. Insulated hoses and a heated canister assembly should be installed.

Consult with your Cat dealer for the recommended breather components for operation from -25° to -40°C (-13° to -40°F).

Installation



Illustration 320

g06472456

Vent locations on the radiator compartment door.

1. Clean the surface of the radiator compartment door.
2. Install the covers in the locations shown in Illustration 320 . The covers should fully cover the door vents.

Operation

i07348768

Operation Information

SMCS Code: 7000

Note: Operating Temperature Range for the Machine The machine must function satisfactorily in the anticipated ambient temperature limits that are encountered during operation. The standard machine configuration is intended for use within an ambient temperature range of -18°C (0°F) to 43°C (109°F). Special configurations for different ambient temperatures may be available. Consult your Cat dealer for additional information on special configurations of your machine.

Make sure that no personnel are on the machine or near the machine to prevent any personal injury. Keep the machine under control at all times to prevent injury.

Sound the horn and allow adequate time for bystanders to clear the area before moving the machine into a restricted visibility area. Follow local practices for your machine application. For more information refer to Operation and Maintenance Manual, "Restricted Visibility".

Reduce the engine speed when you maneuver the machine in tight quarters and when you drive over an incline.

Select the necessary travel speed range before you drive downgrade. Do not change the travel speed range while you drive downhill.

Use the same travel speed on a downgrade and on an upgrade.

When you travel for any distance, keep the stick inward and carry the boom in a low position.

When you drive up a steep grade, keep the boom as close to the ground as possible.

When you travel uphill or you travel downhill, keep the boom on the uphill side of the machine.

1. Adjust the operator seat.
2. Fasten the seat belt.



Illustration 321

g06181515

3. Turn the engine speed dial to the desired operating range.
4. Move the hydraulic lockout control to the UNLOCKED position.



Illustration 322

g06181525

5. Raise the boom enough to provide sufficient ground clearance.



Illustration 323

g06181517

6. Select the desired travel speed by operating the travel speed control switch. The indicator will light to display the active mode.
7. Make sure that the position of the upper structure and of the undercarriage is known before you move the machine. The drive sprockets should be at the rear of the machine.

Note: The directional steering controls will operate normally if the drive sprockets are at the rear of the machine and the idlers are at the front of the machine and under the cab. When the sprockets are under the cab, the travel controls will operate backward.

8. Turn the engine speed dial to increase the engine speed (rpm) to the desired speed.
9. Push both travel levers forward at the same time to travel forward. If both travel levers are pushed farther, the travel speed at the selected engine speed (rpm) will be faster.

Note: If the machine does not operate or if the machine does not travel in a straight line, consult your Cat dealer.

10. See Operation and Maintenance Manual, "Operator Controls" for information about spot turning and about pivot turns.

11. When you make turns in soft material, travel in a forward direction occasionally to clear the tracks.
12. Slowly move both of the travel levers or both of the travel pedals to the CENTER position to stop the machine.

Lifting Objects

If the machine is equipped with the CE plate per requirements for the European Union, used to lift objects, then the machine must be equipped with a boom lowering control valve, a stick lowering control valve, and an overload warning device.

A fit for purpose test was completed to confirm that a properly equipped machine meets the requirements of the European Union Machinery Directive "2006/42/EC" for lifting objects.

The overload warning device (if equipped) must be adjusted for the bucket linkage and bucket size that is installed on the machine. Adjust the overload warning device for proper operation.

The setting for the overload warning device (if equipped) should be checked by an authorized dealer.

i06981624

Frozen Ground Conditions

SMCS Code: 7000



Illustration 324

g06185895

To free the tracks from frozen ground, swing the boom to the front of the machine. Use boom down pressure to free the idler end of the machine.

Swing the boom to the rear of the machine. Use boom down pressure to free the sprocket end of the machine.

i07896714

Equipment Lowering with Engine Stopped

SMCS Code: 7000

To lower the boom, place the hydraulic lockout control in the UNLOCKED position. Move the joystick to the BOOM LOWER position. If the accumulator is still charged, the boom will lower.

If the boom does not lower, the accumulator is empty. Use one of the following procedures to lower the boom.

Machines Equipped with Boom Lowering Control Valves

WARNING

Boom load may cause cylinder oil pressure to reach relief pressure of the boom lowering control device when the boom is supported by one cylinder. Boom can lower suddenly, causing possible injury or death.

To avoid possible injury or death, be sure no one is under or near the work tool before manually lowering the boom.

Keep all personnel away from the boom drop area when lowering the boom with the engine stopped.

WARNING

Be sure no one is under or near the work tools before manually lowering the boom. Keep all personnel away from the boom drop area when lowering the boom with the engine stopped in order to avoid possible personal injury.

WARNING

Personal injury can result from hydraulic oil pressure and hot oil.

Hydraulic oil pressure can remain in the hydraulic system after the engine has been stopped. Serious injury can be caused if this pressure is not released before any service is done on the hydraulic system.

Make sure all of the work tools have been lowered to the ground, and the oil is cool before removing any components or lines. Remove the oil filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand.

If the engine or the hydraulic system is disabled and the boom is up, the boom can be lowered manually. Boom lowering control valves allow the boom to be manually lowered. The boom lowering control valves are at the head end port on the boom cylinders.

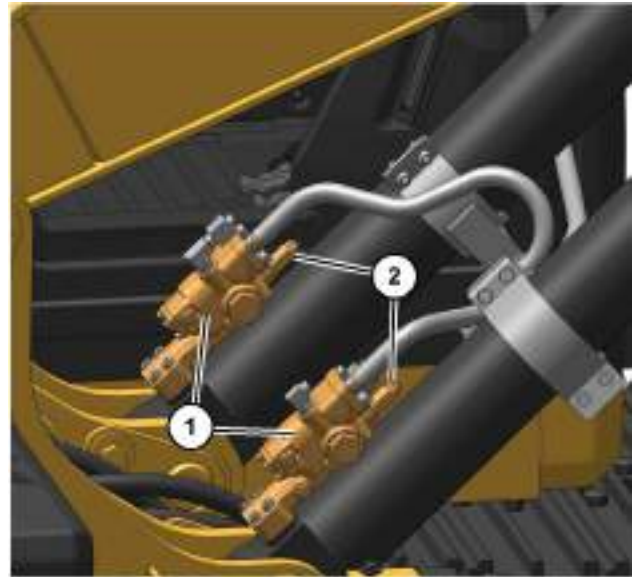


Illustration 325

g06263683

- (1) Boom lowering control valve
- (2) Line relief

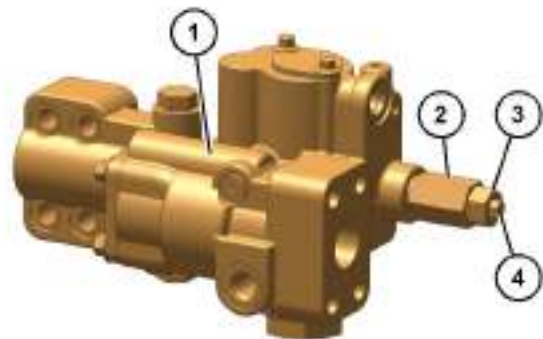


Illustration 326

g06263723

- (1) Boom lowering control valve
- (2) Line relief
- (3) Locknut
- (4) Set screw

1. Loosen the locknut (3) at each of the boom lowering control valves.
2. Slowly, turn set screw (4) counterclockwise until the boom begins to lower onto the ground.

Note: Once the boom begins to lower, stop turning set screw (4).

3. After the boom has lowered completely onto the ground, turn set screw (4) back to the original position.
4. Tighten locknut (3) to 40 ± 4 N·m (29.5 ± 3 b ft).
5. Before operating the machine, make any necessary repairs.

For additional information, consult your Cat dealer.

Machines without a Boom Lowering Control Valve

WARNING

Be sure no one is under or near the work tools before manually lowering the boom. Keep all personnel away from the boom drop area when lowering the boom with the engine stopped in order to avoid possible personal injury.

Use the following procedure to manually lower the boom due to an engine malfunction.

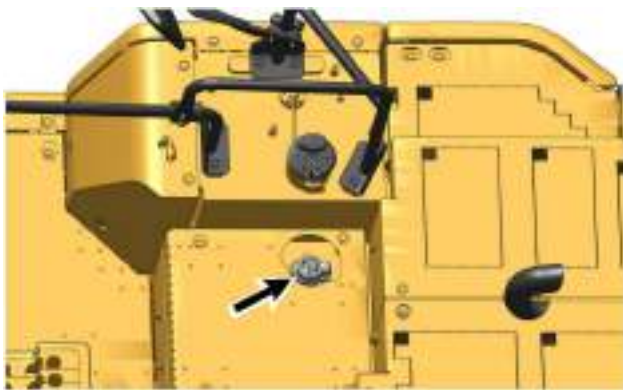


Illustration 327

g06472526

Hydraulic tank filler cap location

WARNING

Pressurized system!

The hydraulic tank contains hot oil under pressure. To prevent burns from the sudden release of hot oil, relieve the tank pressure with the engine off. Relieve pressure by slowly turning the cap until the cap reaches the secondary stop.

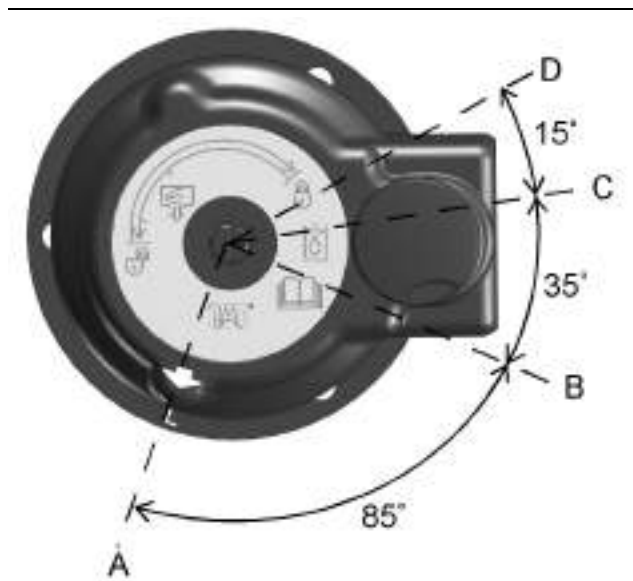


Illustration 328

g06184990

Filler cap

- (A) LOCK position
- (B) PRESSURE RELEASE - START position
- (C) PRESSURE RELEASE - END position
- (D) OPEN position

1. Release the pressure that may be present in the return hydraulic circuit with the following procedure. Refer to Illustration 328 for filler cap positions.
 - a. Turn the filler cap counterclockwise and move the arrow from position (A) to position (B).
 - b. Release the pressure for a minimum of 45 seconds by moving the arrow from position (B) to position (C).
 - c. Move the arrow from position (C) to position (D).
 - d. After the tank pressure is relieved, remove the filler cap.

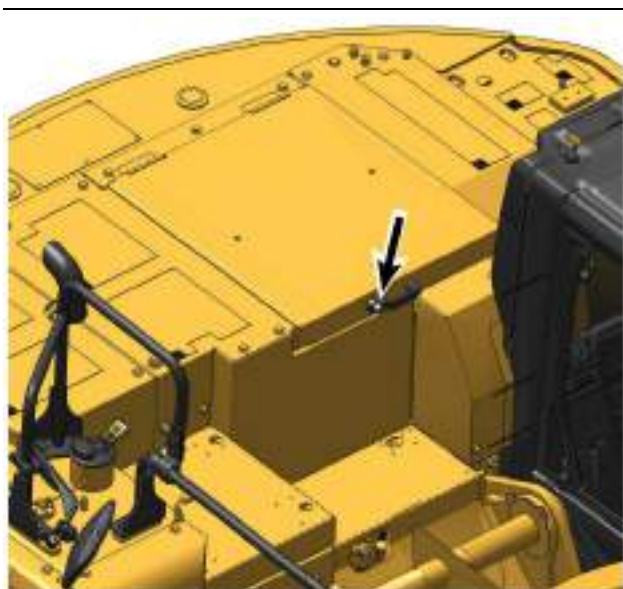


Illustration 329

g06472500

2. Open the engine hood.

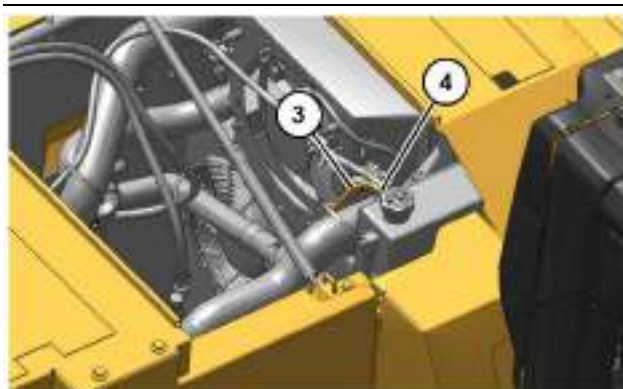


Illustration 330

g06472507

(3) Hose
(4) Clamp

3. Loosen clamp (4) and disconnect hose (3) from the reservoir. Remove the clamps and the cable straps that secure the hose to the machine.

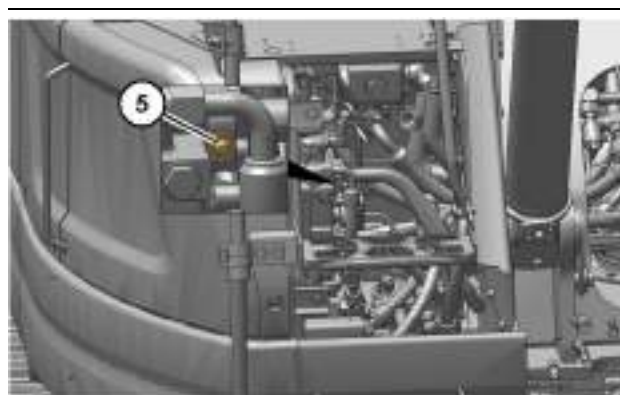


Illustration 331

g06494414

Main Control valve

(5) Screw

4. Connect one end of the radiator hose to screw (5). Put the other end of the hose into the hydraulic tank opening. The screw is at the front, right side of the main control valve.
5. Slowly loosen screw (5) by a maximum of 1/2 turn. This allows the hydraulic oil in the boom circuit to drain into the hydraulic tank. The boom will now start to lower.
6. Make sure that the work tool has lowered all the way to the ground. Tighten screw (5) to $13 \pm 2 \text{ N}\cdot\text{m}$ ($9 \pm 1 \text{ lb ft}$).
7. Disconnect the hose from the screw. Do not allow the oil that is contained in the hose to spill. Drain the oil into a suitable container.
8. Connect the hose to the original position on the radiator and install the hydraulic tank filler cap.
9. Close the engine hood.

After completion of the manual boom lowering, make necessary repairs before you operate the machine again.

Pressure Release of Auxiliary Lines



Personal injury can result from hot oil spray and raised work tools.

Make sure all the work tools have been lowered, the oil is cool and the pressure has been released from the hydraulic system before removing any components or lines.

Do not allow hot oil or components to contact skin.

Note: Refer to Operation and Maintenance, “General Hazard Information” for information on containing fluid spillage.

Refer to the procedure below before any of the following conditions.

- The work tool is changed.
 - The position of the ball valve is changed.
1. Turn the engine start switch to the OFF position.
 2. Place the hydraulic lockout lever in the UNLOCKED position.
 3. Release the pressure in the auxiliary lines by pressing the auxiliary control buttons or the auxiliary control pedal three times.
 4. Place the hydraulic lockout lever in the LOCKED position.
 5. Change the work tool.

Note: There should be movement in the auxiliary hydraulic lines as the pressure is released. If there is no movement in the auxiliary hydraulic lines, start the engine and run the engine for 20 seconds. Repeat steps 1 to 5.

For additional information, consult your Cat dealer.

Operating Techniques

i08069554

Operating Technique Information

SMCS Code: 7000

WARNING

Know the maximum height and the maximum reach of your machine. Serious injury or death by electrocution can occur if the machine or the work tools are not kept a safe distance from electrical power lines. Keep a distance of at least 3000 mm (118 inch) plus an additional 10 mm (0.4 inch) for each 1000 volts over 50000 volts.

For safety, one of the following may require a greater distance:

- Local codes
- State codes
- Requirements of the job site

NOTICE

When swinging into a ditch, do not use the ditch to stop the swinging motion. Inspect the machine for damage if the boom is swung into a bank or an object.

Repeated stopping by an object can cause structural damage if the boom is swung into a bank or an object.

With certain boom-stick-bucket combinations, the bucket or worktool can hit the cab and/or the front structure of the machine. Always check for interference when first operating a new bucket or a new work tool. Keep the bucket or work tool away from the cab and away from the front structure during operation.

Whenever the tracks of the machine raise off the ground while digging, lower the machine back to the ground smoothly. **DO NOT DROP OR CATCH IT WITH THE HYDRAULICS.** Damage to the machine can result.

With certain combinations of work tools, the third pedal can have different functions. Always check the function of the third pedal before you use the third pedal.

Know the location of any buried cables. Mark the locations clearly before you dig.

Consult your Cat dealer for special work tool tips that are available for use in severe applications.

Move the machine whenever the position for operating the machine is not efficient. The machine can be moved forward or backward during the operating cycle.

When you operate the machine in close places, utilize the bucket or the other work tool to perform the following functions:

- Pushing the machine
- Pulling the machine
- Lifting the tracks

Use a comfortable travel speed while you operate the machine.

Operating efficiency can be increased by using more than one machine control to perform a task.

Never swing a load over a truck cab or workers.

Position the truck so that material can be loaded from the rear of the truck or from the side of the truck. Load the truck evenly so that the rear axles are not overloaded.

An oversize bucket or a bucket that is equipped with side cutters should not be used in rocky material. These types of buckets slow down the cycle. Damage to the bucket and to other machine components could result.

Coaching Tips



Illustration 332

g06223763

Digging with a stable machine increases productivity. Create a stable work platform.



Illustration 333

g06210141

- (A) Most stable dig
(B) Dump

For improved stability: Do not dig over the drives or perpendicular to the tracks.

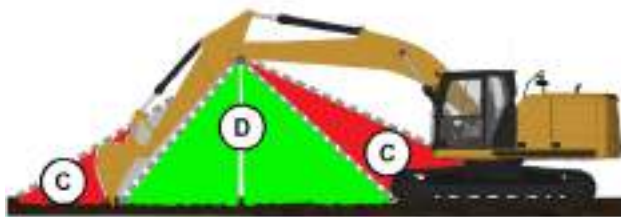


Illustration 334

g06212328

- (C) Weak crowd force
(D) Ideal crowd force

Dig from the top down in layers. Try to have a full bucket by the time the stick is vertical, but do not reach too far with the stick. The most crowd force is generated with the stick +/- 30 degrees from vertical.

Minimize unneeded movement. Only curl/dump the bucket as much as required to hold/dump material.

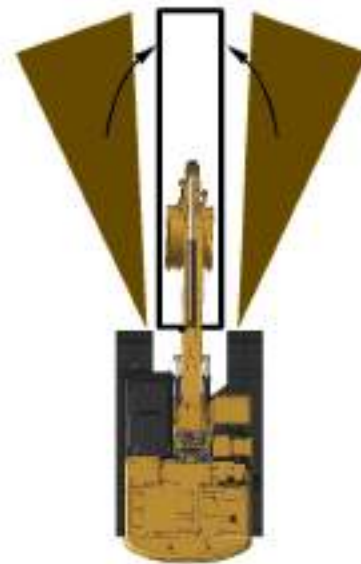


Illustration 335

g06210334

Minimize unneeded movement. During backfilling, start with the material closest to the trench.

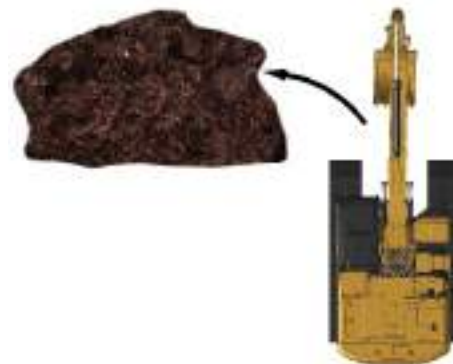


Illustration 336

g06210343

Watch your surroundings. Swing left to dump material for better visibility.

Watch the bucket. The bucket can contact the tracks or the cab.

Concentrate on being smooth, speed will come with practice.



Illustration 337

g06212604

Truck placement will affect efficiency: 45 degree truck loading is more efficient than 90 degree. Spotting the truck too far from the excavator causes excessive motion.

Load from a bench when possible. Bench loading is more efficient.

Restricted Operation



Illustration 338

g06222487

Do not use the swing force to perform the following operations:

- Soil compaction
- Ground breaking
- Demolition

Do not swing the machine while the bucket tips are in the soil.

These operations will damage the boom, the stick, and the work tool and the operations will reduce the life of the equipment.



Illustration 339

g06212594

Do not use the dropping force of the bucket or work tool as a hammer. This will bring excessive force on the rear of the machine. Possible damage to the machine could result.



Illustration 340

g06222492

If the cylinder is operated at the end of the stroke during operations, excessive force will occur on the stopper on the inside of the cylinder. This will reduce the life of the cylinder and structures. To avoid this problem, always leave a small margin of play when the cylinder is operated.

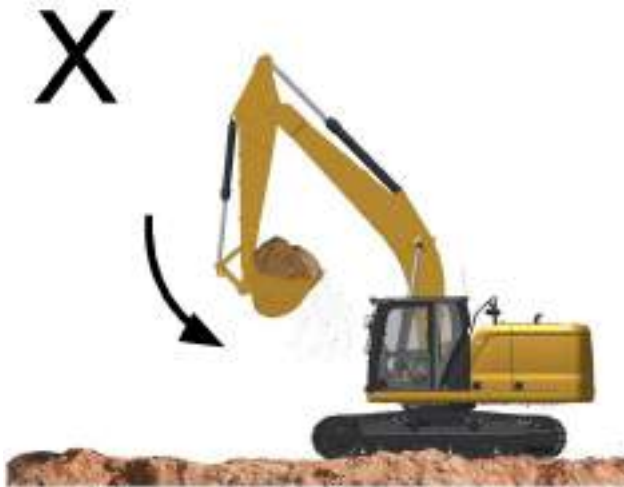


Illustration 341

g06222498

If the stick IN function is operated at full speed with a fully loaded bucket or heavy work tool attachment to the end of the cylinder stroke, excessive force will occur inside the stick cylinder. This action will reduce the life of the stick cylinder. To avoid this problem, always operate a stick IN function with moderate speed towards the end of cylinder stroke.



Illustration 343

g06222505

Do not use the dropping force of the rear of the machine for excavation. This operation will damage the machine.

Operating Precaution



Illustration 342

g06222500

While the bucket is in the ground, do not use the travel force for any excavation. This operation will cause excessive force on the rear of the machine.



Illustration 344

g06222507

NOTICE

Do not allow the machine to swing from the force of traveling when you use the bucket, the stick, or the boom to assist in travel. If the force from traveling causes the machine to swing, damage may occur to the swing motor and to the swing drive.

Do not use the force of the bucket, the stick, or the boom to assist in turning the machine while the machine is traveling. This technique is referred to as "jump steering". This technique will damage the swing motor and the swing brake.



Illustration 345

g06222509

When deep holes are dug, do not lower the boom so that the bottom side of the boom touches the ground.

When deep holes are dug, do not allow the boom to interfere with the tracks.

Grade and Assist Operating Tips

The following image displays proper stick speeds for accurate grading. One of the factors to accuracy is the grade assist speed setting. The setting can be set to Quick, Normal, or Fine. The settings are found in the Grade Assist screen on the monitor.



Illustration 346

g06250472

Stick speed vs. accuracy

(A) Stick joystick movement

(B) Joystick movement must be gradual

(C) In fine or normal mode, joystick input can be at 100 percent.

(D) Joystick movement too fast

(E) Good for fine or normal mode

(F) Good in any mode

For best results using Cat Grade, it is important to be cognizant of stick speed in order to obtain accurate results. When the bucket touches the ground before digging, the initial dig movement must be gradual. If operating in Fine or Normal mode, joystick speed can be increased to 100 percent after the slow initial engagement. Approximately 50 percent stick speed is necessary to maintain accuracy when in Quick mode after the slow initial engagement.

Cut/fill error can be minimized if the work tool is properly calibrated and the operator maintains a deliberate speed of operation.

Smart Boom

When using the smart boom function, it is necessary to slow down stick speed. Smart boom cannot keep up when the stick is operating at a rapid pace. This is particularly noticeable when the boom is at the raise/lower transition point and the stick is near vertical.

i07058371

Travel in Water and Mud

SMCS Code: 7000-V6

NOTICE

When working in or around any body of water, around a stream or river, or in conditions of heavy mud, be careful that the swing bearing, the swing drive gear, and the swivel joint do not dip into water, mud, sand, or gravel. If the swing bearing dips into water, mud, sand, or gravel, immediately grease the swing bearing until the used grease leaks from the outer circle of the swing bearing. Failure to carry out this procedure may cause premature wear in the swing bearing.



Illustration 347

g06223764

Depth of water to the center of the track carrier roller.

The following guidelines pertain to travel across water and travel through mud, sand, or gravel.

The machine can travel across a river only under the following conditions:

- The bed of the river is flat.
- The flow of the river is slow.
- The machine dips into the water only to the center of the track carrier roller (dimension A).

NOTICE

Do not allow the fan on the engine to contact the water while the machine travels through the water. Do not allow the fan on the engine to contact the water during a swing while the machine is in the water. Damage to the fan may occur if the fan contacts the water.

While you cross the river, carefully confirm the depth of the water with the bucket. Do not move the machine into an area that has a water depth that is greater than Dimension A.

The machine may sink gradually on soft ground. Therefore, you should frequently check the height of the undercarriage from ground level and the depth of water on the ground.

Check the swing gear by looking through the port for inspection that is on the upper frame. If there is water in the swing gear, contact your Cat dealer for the required maintenance on the swing gear.

After you travel through water, carefully clean the machine to remove any salt, sand, or other foreign matter.

Procedure for Removing the Machine from Water or Mud

NOTICE

Do not allow the machine to swing from the force of traveling when you use the bucket, the stick, or the boom to assist in travel. If the force from traveling causes the machine to swing, damage may occur to the swing motor and to the swing drive.



Illustration 348

g06222519

1. You may not be able to move the machine by using the travel controls only. In this case use both the travel control levers/pedals and the stick to pull the machine out of the water or ground.



Illustration 349

g06222525

2. The machine may slip because of a steep slope. The procedure in Step 1 may not work. In this case, first rotate the upper structure by 180°. Then use both the travel control levers/pedals and the stick to move the machine up the slope.



Illustration 350

g06212337

3. It may be impossible to travel because the bottom of the frame comes into contact with the ground or the undercarriage is clogged with mud or gravel. In this case, operate the boom and the stick together. Raise the track and rotate the track forward and backward to remove the mud and the gravel.

i07107419

Boom, Stick and Bucket Operation

SMCS Code: 7000

Digging



Illustration 351

g06212506

1. Position the stick at a 70 degree angle to the ground.



Illustration 352

g06212513

2. Position the bucket cutting edge at a 120 degree angle to the ground. Maximum breakout force can now be exerted with the bucket.



Illustration 353

g06222533

3. Move the stick toward the cab and keep the bucket parallel to the ground.



Illustration 354

g06222535

4. If the stick stops due to the load, raise the boom and/or perform a curl to adjust the depth of the cut.

5. To apply the greatest force at the cutting edge, decrease the down pressure as you move the stick toward the cab.

6. Maintain a bucket attitude that ensures a continuous flow of material into the bucket.

7. Continue the pass in a horizontal direction so that material peels into the bucket.



Illustration 355

g06222538

8. Close the bucket and raise the boom when the pass has been completed.



Illustration 356

g06223077

9. Engage the swing control when the bucket is clear of the excavation.



Illustration 357

g06223078

10. To dump a load, move the stick outward and open the bucket in a smooth motion.

Lifting Objects

WARNING

To prevent injury, do not exceed the rated load capacity of the machine. If the machine is not on level ground, load capacities will vary.

NOTICE

Damage to bucket cylinder, bucket or linkage could result if slings are placed incorrectly.

There may be local regulations and/or government regulations that govern the use of machines which lift heavy objects. Obey all local and government regulations.

If this machine is used to lift objects within an area that is controlled by the European Directive "2006/42/EC", the machine must be equipped with a boom lowering control valve, a stick lowering control valve, and an overload warning device.

Japan regulations require a shovel crane configuration to lift certain objects.

Contact your Cat dealer for additional information.

Short slings will prevent excessive load swing.



Illustration 358

g06212526

Use the lifting eye that is provided on the linkage to lift objects.

If the lifting eye is used, the connection must be made with a sling or with a shackle.



Illustration 359

g06212532

An unstable condition can exist if a load exceeds the machine load rating or if a heavy load is swung over an end or over a side.



Illustration 360

g06212530

The most stable lifting position is over a corner of the machine.



Illustration 361

g06212535

For the best stability, carry a load close to the machine and to the ground.

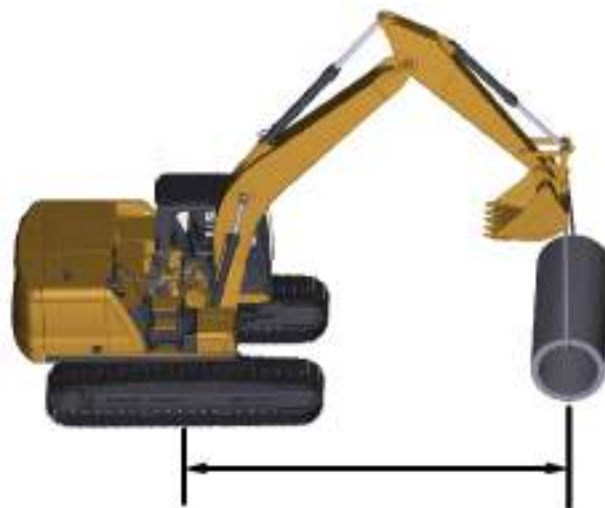


Illustration 362

g06212539

Lift capacity decreases as the distance from the swing centerline is increased.

Machines that are Equipped with a Long Reach Configuration

Machines with a long reach configuration require larger swing drift than standard machines when stopping, because inertial force in time of swing is large. Taking this into account, adjustments are made in timing for applying the swing brakes and speed of swinging.

Machines with a long reach configuration could be damaged and stability of the machine would be adversely affected if a control was suddenly operated, because inertial force of work tool is large.

i08036890

Shovel Crane Operation

SMCS Code: 6500

WARNING

Operating the machine using the correct method when performing a lifting operation is important. Incorrectly operating the machine may result in serious injury or death. Be sure to observe the following precautions.

Refer to this Operation and Maintenance Manual, "Shovel Crane Control" for additional information regarding machine controls for the shovel crane.

Operate the machine according to the rated load table of your machine. Refer to Operation and Maintenance Manual, "Specifications (Shovel Crane Specifications)" for more information.

Traveling with a Suspended Load



Illustration 363

g06222543

The rated load when traveling while suspending a load is limited to 50 percent of a stationary suspension. Make sure that the suspending load weight is within this limit before starting to move.

When traveling while suspending a load:

1. Make sure that the load is in the front of the machine, and operate within the maximum operating radius of 70° or less.
2. The height below the suspended load shall be 30 cm (12 inch) or less above ground.
3. The traveling speed shall be 3 km/h or less.
4. The traveling ground shall be level and of firm ground.

Traveling while suspending a swinging load may cause the machine to roll over. Wait until the load stops swinging before starting to move.

Dragging of load is prohibited.

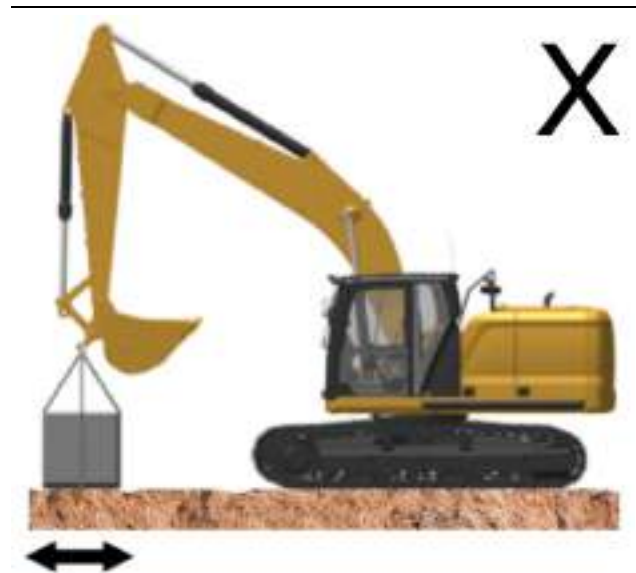


Illustration 364

g06222544

Horizontally, vertically or diagonally dragging a load may cause the machine to roll over, the wire rope to break, or the load to collapse, resulting in personal injuries.

Be sure to lift the load directly above.

Lifting operation on a slope is prohibited.



Illustration 365

g06222549

Performing an operation on a slope of 5° or more and on a soft ground may cause the machine to roll over or the load to collapse, resulting in personal injuries. Make sure that the machine is on level and firm ground before performing the operation.

Place an iron plate or other appropriate material on a soft ground.

Use in non-standard specification conditions is prohibited.



Illustration 366

g06222553

Use of the machine in non-standard specification conditions is prohibited as the lifting load and the operation range cannot be accurately displayed.

Sudden lifting operation is prohibited.



Illustration 367

g06222555

WARNING

Suddenly lifting a suspended load will apply an abnormal force on the hook and cause the hook to break, resulting in serious injuries or death. Never perform such an operation.

Sudden swinging operation while suspending a load is prohibited.



Illustration 368

g06222561

WARNING

Never perform a swinging operation suddenly while suspending a load. Doing so may cause the suspended load to be pulled with a centrifugal force, causing the machine to roll over.

Never suddenly swing, and stop or lower the hook suddenly, as doing so may cause the wire rope to come off the hook latch.

Factors that cause the wire rope to come off

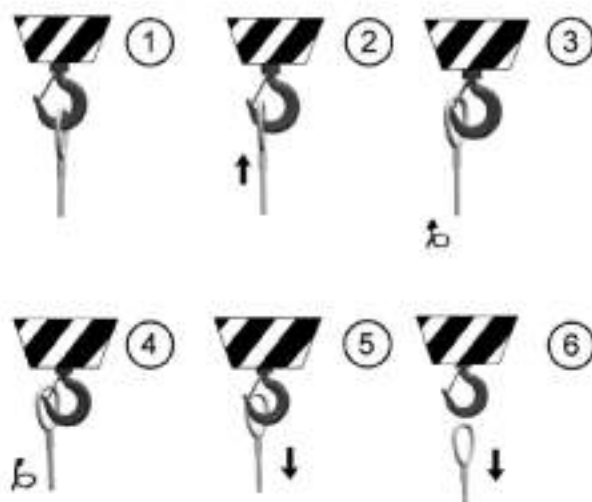


Illustration 369

g06222768

(1) Wire rope in normal condition.

- (2) The wire rope gets raised when the hook is lowered too suddenly.
- (3) If the wire rope gets twisted and gets untwisted in the direction of the arrow, the wire rope will go beyond the tip of the hook.
- (4) The wire rope goes around the back of the hook.
- (5) The hook goes up or the wire rope goes down.
- (6) The wire rope simply falls off.

Diagonal dragging operation is prohibited.



Illustration 370

g06222769

WARNING

Diagonal dragging operation applies an abnormal force on the hook and may cause the hook to break, resulting in serious injuries or death. Never perform such an operation.

Leaving the seat while suspending a load is prohibited.



Illustration 371

g06222773

Do not leave the operator seat while a load is being suspended. The load may fall, resulting in personal injuries. Do not allow a slinging operator or another worker under the load.

Temporarily stopping the lifting operation.



Illustration 372

g06191918

When there is a large area to stop the machine, fully retract the stick cylinder and slowly lower the boom until the bucket contacts the ground.

Note: Make sure that the lifting tool does not get caught under the bucket.



Illustration 373

g06191883

When there is small area to stop the machine, press the shovel crane button on the switch panel in order to disable the operation. Position the stick so that it is perpendicular to the ground and slowly lower the boom until the bucket contacts the ground.

Note: Make sure that the lifting tool does not get caught under the bucket.



Illustration 374

g06191925

Hook in latched position

Be sure to store the hook during a bucket use. Otherwise, the bucket, the hook, and other parts may be damaged.

Wire rope suspension angle

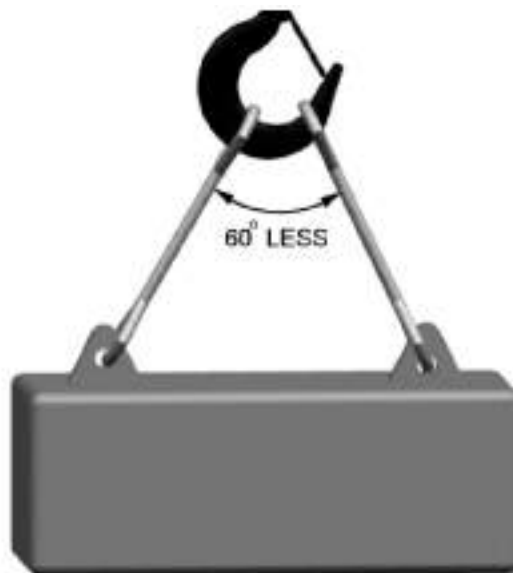


Illustration 375

g06222775

As a rule, try to set the wire rope suspension angle at 60° or below.

Keep out of the area under a suspended load.



Illustration 376

g06222777

Never allow anyone to enter an area under a suspended load.

Lifting operation with a quick coupler device is prohibited.

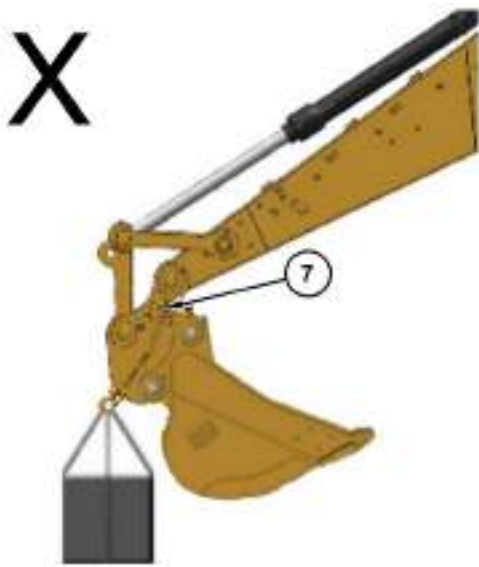


Illustration 377

g06222779

(7) Quick Coupler

Accurate lifting load and operation range cannot be displayed in a lifting operation equipped with a quick coupler. Furthermore, never perform a lifting operation with a quick coupler attached, as doing so causes the hook to contact the quick coupler, applies an abnormal force on the hook, and causes the hook to become damaged and/or the machine to roll over.

i03875131

SmartBoom Operation (If Equipped)

SMCS Code: 5461-ZS; 7332

WARNING

Personal injury or death can result from not following the proper procedures.

To avoid the possibility of injury or death, follow the established procedure.

WARNING

Activating the SmartBoom function and using the work tool joystick control while the front of the machine is elevated could result in unexpected machine motion. Unexpected machine motion could result in serious injury or death. Do not activate the SmartBoom function if the front of the machine is elevated by the front linkage.

WARNING

Do not elevate or lower the track when in the SmartBoom mode. Follow the operation procedures for the SmartBoom in the Operation and Maintenance Manual. Failure to follow these instructions can result in serious injury or death.

WARNING

Always make sure that the boom control joystick is in the NEUTRAL position before activating the SmartBoom control. Activating the SmartBoom control with the joystick out of the neutral position could result in unexpected machine motion which could result in serious injury or death.

WARNING

Do not select any SmartBoom mode, using the SmartBoom selector switch located on the console, while the tracks are elevated. Selecting the SmartBoom mode with the tracks elevated could result in a sudden drop of the machine which could result in serious injury or death.

WARNING

If any SmartBoom mode is active and the boom control joystick is in the BOOM DOWN position (forward) with a bucket or a work tool on the ground, pressing the disable button that is located on the front of the right hand joystick could cause a sudden boom down motion. This control function could lift the machine upward, with unexpected machine movement that could result in serious injury or death. Do not press the disable button while the SmartBoom mode is active and the boom control joystick is in the BOOM DOWN position (forward) with a bucket or a work tool on the ground.

WARNING

Do not attempt to lift the tracks of the machine by using the disable button and applying downward force with the boom lowering control while the machine is in any SmartBoom mode. Releasing the disable button will immediately return the machine to the active SmartBoom mode. This action could cause the machine to drop down abruptly which could result in serious injury or death.

The Caterpillar SmartBoom provides significant advantages in the following operations:

Excavation and Loading

The operator should select the SmartBoom UP AND DOWN mode for excavating operations and for loading operations. This mode is effective during the return cycle. The BOOM DOWN movement is assisted by gravity, and the pump flow that is normally required for the boom circuit is available for faster STICK OUT and SWING functions. More work is performed for the amount of hydraulic oil flow that is provided by the pumps. This results in faster cycle times and improved fuel efficiency.

When the SmartBoom UP AND DOWN mode is active, no downward hydraulic force is applied to the boom. The operator can intermittently apply downward hydraulic force when the force is required for bucket penetration. A button on the right joystick enables the operator to override the SmartBoom mode.

Hammering

The operator should select the SmartBoom DOWN mode for hammering operations. In the SmartBoom DOWN mode, the weight of the hammer plus the boom and the stick provides sufficient downward force for effective hammering. This mode prevents the hammer from rebounding. The boom follows the hammer downward freely as the tool penetrates the rock. This mode also reduces strain on the machine structures.

Advantages

In hammering, the SmartBoom provides the following advantages:

- The mode reduces shock in the cab.
- The mode reduces strain on machine structures.
- The mode prevents blank shots.
- The mode maintains optimum frequency.

In rock cleaning, the SmartBoom provides the following advantages:

- The mode reduces strain on machine structures.
- The mode reduces wear on the bucket and the teeth.
- The mode maintains optimum frequency.

In a leveling operation, the SmartBoom eases the operation. Only STICK IN actuation and bucket actuation are required to level the surface.

In material handling, the SmartBoom reduces the chance of damage below the material.

i07757775

Quick Coupler Operation (Circuit for CW Coupler (If Equipped))

SMCS Code: 6129; 6522; 7000

NOTICE

The Cat Quick Coupler (CW Coupler) is not designed to be used in applications where there is long exposure to excessive vibration. The vibration caused by extensive use of a hydraulic hammer as well as the added weight of certain demolition tools such as shears, crushers, and pulverizers may cause premature wear and decreased service life of the coupler.

Be sure to carefully inspect the coupler daily for cracks, bent components, wear, distressed welds, etc. when operating with any of the above work tools.

General Operation

The quick coupler is used to change work tools while the operator remains in the cab. The quick coupler can be used with a broad range of buckets and work tools. Each work tool must have a set of pins in order for the quick coupler to work properly.

The work tools are held onto the quick coupler by hydraulic pressure. If pressure is lost, a locking bar keeps the work tool locked with the force of built-in springs. Ensure that the hydraulic system and the blocking bar are working properly before using the quick coupler.

A lifting eye is included on the quick coupler. Release the work tool from the quick coupler to use the lifting eye to pick up loads. To lift a load with the lifting eye, extend the bucket cylinder until the quick coupler is in a VERTICAL position. Do not exceed the rated load for the machine.

NOTICE

Once the work tool has been properly attached to the coupler, no loosening of the work tool should occur. Refer to the "Quick Coupler Installation and Removal" section of the quick coupler Operation and Maintenance Manual for additional information. If at any point after the proper attachment and back drag testing of the work tool, should the work tool then become loose or if the rear pin of the work tool detaches from the movable hook, stop work immediately and safely ground and detach the work tool. Consult your Cat dealer to inspect the coupler prior to putting the coupler back into service. This situation could indicate potential coupler damage that may not be readily visible to the customer or operator of the machine and coupler.

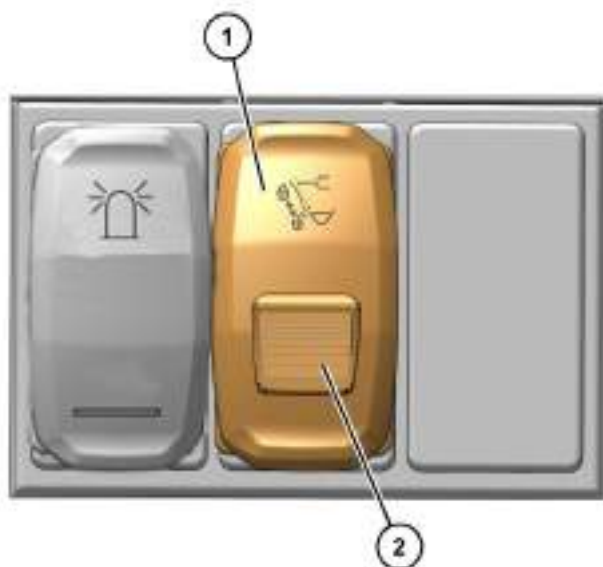
Electric Switch Operation

Illustration 378

g06184557

Quick coupler switch (1) is located inside the cab on the switch panel to the left of the operator's seat. The electric switch has only one position for coupling the work tool and uncoupling the work tool. The switch is equipped with a safety lock (2). The locking tab must be pushed forward before the switch can be pressed.

Coupling the Work Tool**WARNING**

Inspect the coupler wedge engagement before you operate the excavator.

Serious injury or death may result from an improperly engaged coupler.

Inspect coupler wedge engagement from the cab by rotating the bucket or the work tool inward. Extend the bucket cylinder to bring the coupler actuator into view and bring the stick in until the wedges are visible.



Illustration 379

g06220881

1. Position the work tool on a level surface.
2. Retract the bucket cylinder. Position the quick coupler in alignment between the hinges of the work tool.

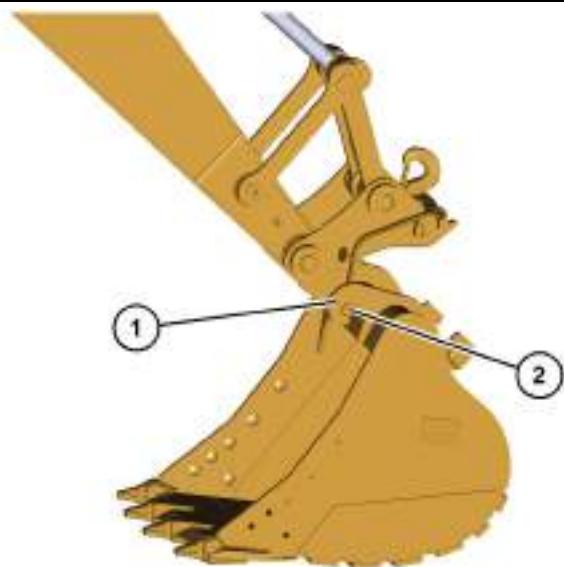


Illustration 380

g06220883

- (1) Hinges
 (2) Lower bosses

3. Move the stick forward and raise the stick until the lower bosses (2) engage the hinges (1) of the work tool.
4. There are two possible settings for locking the quick coupler in Cat ET, "Alarm" and "Hold to Run". For the "Hold to Run" setting, push the locking tab on the switch forward and then depress and hold the rear of the switch until the quick coupler engages the work tool. The message "Quick Coupler Locking" will display on the monitor. For the "Alarm" setting, push the locking tab on the switch forward and then depress, but do not hold, the rear of the switch until the quick coupler engages the work tool. The message "Quick Coupler Locking" will display on the monitor.

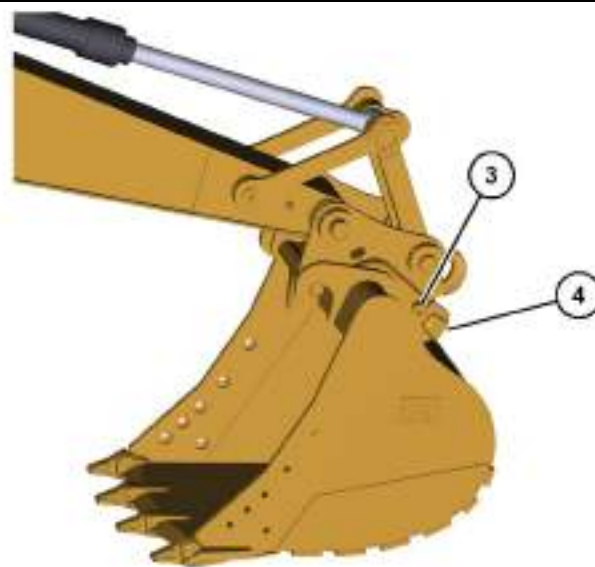


Illustration 381

g06220887

- (3) Center bosses
 (4) Locking area

5. Extend the bucket cylinder to rotate the quick coupler toward the work tool.
 Center bosses (3) must engage with the cutout of the hinge.
6. Release the quick coupler switch to lock the work tool.
 The springs in the quick coupler will move the wedge into the locking area (4).
 The monitor will display the message "Verify Tool Locking".

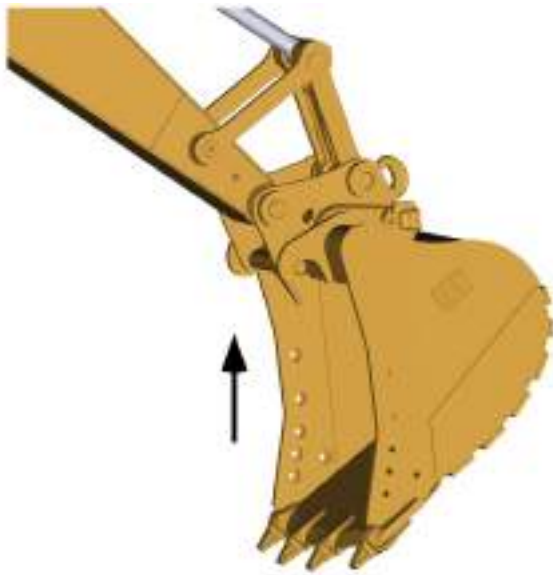


Illustration 382

g06220888

7. Raise the boom or raise the stick. Retract the bucket cylinder to confirm that the wedge is fully engaged. If the wedge is fully engaged, the work tool is locked in place. The work tool is ready to use.

Uncoupling the Work Tool

WARNING

Place the work tool or bucket in a safe position before disengaging the coupler. Disengaging the coupler will release the work tool or bucket from control of the operator.

Serious injury or death may result from disengaging the work tool or bucket when it is in an unstable position or carrying a load.



Illustration 383

g06220889

1. Level the bucket or level the work tool on the ground.
2. Push the locking tab on the switch forward and then depress the rear of the switch until the quick coupler releases the work tool. The message "Quick Coupler Unlock" will display on the monitor. For the "Alarm" setting, push the locking tab on the switch forward and then depress, but do not hold, the rear of the switch until the quick coupler engages the work tool. The message "Quick Coupler Locking" will display on the monitor.



Illustration 384

g06220891

3. Retract the bucket cylinder to move the quick coupler toward the machine.
4. Release the quick coupler switch to retract the wedge.



Illustration 385

g06220892

5. Lower the stick and move the stick toward the machine to disengage the quick coupler.

i07852525

Quick Coupler Operation (Hydraulic Pin Grabber Quick Coupler (If Equipped))

SMCS Code: 6129; 6522; 7000

NOTICE

The Cat Quick Coupler (Hydraulic Pin Grabber) is not designed to be used in applications where there is long exposure to excessive vibration. The vibration caused by extensive use of a hydraulic hammer as well as the added weight of certain demolition tools such as shears, crushers, and pulverizers may cause premature wear and decreased service life of the coupler.

Be sure to carefully inspect the coupler daily for cracks, bent components, wear, distressed welds, etc. when operating with any of the above work tools.

General Operation

The quick coupler is used to change work tools while the operator remains in the cab. The quick coupler can be used with a broad range of buckets and work tools. Each work tool must have a set of pins in order for the quick coupler to work properly.

The work tools are held onto the quick coupler by hydraulic pressure. If pressure is lost, a check valve in the hydraulic cylinder traps oil in the cylinder. Ensure that the hydraulic system is working properly before using the quick coupler.

A lifting eye is included on the quick coupler. Release the work tool from the quick coupler to use the lifting eye to pick up loads. To lift a load with the lifting eye, extend the bucket cylinder until the quick coupler is in a VERTICAL position. Do not exceed the rated load for the machine.

NOTICE

Once the work tool has been properly attached to the coupler, no loosening of the work tool should occur. Refer to the "Quick Coupler Installation and Removal" section of the quick coupler Operation and Maintenance Manual for additional information. If at any point after the proper attachment and back drag testing of the work tool, should the work tool then become loose or if the rear pin of the work tool detaches from the movable hook, stop work immediately and safely ground and detach the work tool. Consult your Cat dealer to inspect the coupler prior to putting the coupler back into service. This situation could indicate potential coupler damage that may not be readily visible to the customer or operator of the machine and coupler.

Quick Coupler Operation

Electric Switch Operation

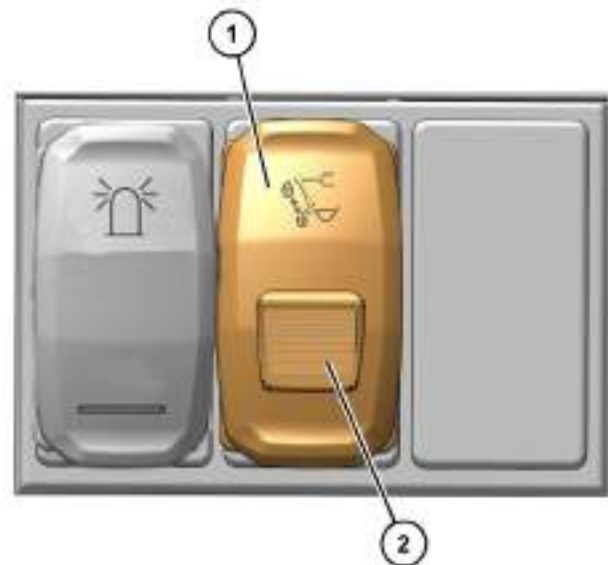


Illustration 386

g06184557

Quick coupler switch (1) is located inside the cab on the switch panel to the left of the operator's seat. The electric switch has only one position for coupling the work tool and uncoupling the work tool. The switch is equipped with safety lock (2). The locking tab must be pushed forward before the switch can be pressed.

Coupling the Work Tool

WARNING

Place the work tool or bucket in a safe position before engaging the quick coupler. Ensure that the work tool or bucket is not carrying a load.

Serious injury or death may result from engaging the work tool or bucket when it is in an unstable position or carrying a load.

WARNING

Inspect the quick coupler engagement before operating the machine.

Serious injury or death may result from improperly engaged coupler.

WARNING

Crush injury. Could cause serious injury or death. Always confirm that the quick coupler is engaged onto the pins. Read the Operator's Manual.

WARNING

The alarm will go off when the coupler is locked and the monitor will display a message. These assurances do not confirm that the coupler pins are engaged. A physical test is required by dragging the attachment on the ground to confirm the coupler pins are engaged.

NOTICE

With certain work tool combinations, including quick couplers, the work tool can hit the cab or the front of the machine. Always check for interference when first operating a new work tool.

1. Position the bucket or the work tool on a level surface.
2. Make sure that the pins are in the bucket or the work tool. Make sure that the pin keepers are installed correctly.



Illustration 387

g06187057

3. Extend the stick cylinder and fully extend the bucket cylinder until the quick coupler is curled past a vertical position. This action must be performed before pressing the switch.



Illustration 388

g06300078

4. Push the lock mechanism on the switch forward and then depress the rear of the switch. The alarm will sound continuously and the message "Quick Coupler Unlock" will display on the monitor.
5. Hold the control lever for the bucket cylinder in the EXTEND position for 5 seconds to unlock the hook.



Illustration 389

g06187063

6. Align the quick coupler with the work tool.



Illustration 390

g06187068

7. Rotate the quick coupler to grab the top pin.



Illustration 391

g06187086

8. Rotate the quick coupler downward to grab the bottom pin.



Illustration 392

g06187108

9. Extend the stick cylinder and extend the bucket cylinder until the work tool is curled past a vertical position.



Illustration 393

g06300088

10. Push the lock mechanism on the switch forward and then depress the rear of the switch. The alarm will sound continuously and the message "Quick Coupler Locking" will display on the monitor.

11. Hold the control lever for the bucket cylinder in the EXTEND position for 5 seconds to lock the hook. The monitor will display the message "Verify Tool Locking" and the alarm will stop.



Illustration 394

g06187115

WARNING

Inspect the quick coupler engagement before operating the machine.

Verify that the quick coupler is engaged per the procedure in the Operation and Maintenance Manual. Verify prior to operating the machine, after every engine start, and after an extended time of inactivity.

Serious injury or death may result from improperly engaged coupler.

12. Verify that the quick coupler and the work tool are locked together.

- a. Retract the bucket cylinder and place the work tool on the ground.
- b. Apply pressure to the work tool against the ground.

Operation Section
Hydraulic Pin Grabber Quick Coupler (If Equipped)

NOTICE

Back drag the work tool on the ground to ensure the quick coupler is properly locked.

Do Not strike the work tool on the ground to ensure the quick coupler is properly locked. Striking the work tool on the ground will result in damage to the coupler cylinder.

c. Drag the work tool backward.

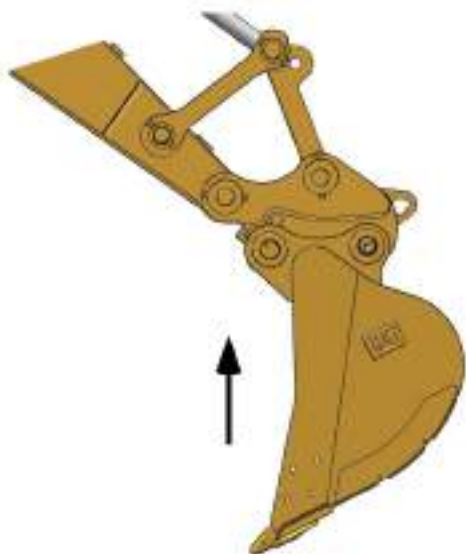


Illustration 395

g06458083

13. Raise the boom or raise the stick. Retract the bucket cylinder to confirm that the coupler is fully engaged. If the coupler is fully engaged, the work tool is locked in place. The work tool is ready to use.

Uncoupling the Work Tool

WARNING

Place the work tool or bucket in a safe position before disengaging the coupler. Disengaging the coupler will release the work tool or bucket from control of the operator.

Serious injury or death may result from disengaging the work tool or bucket when it is in an unstable position or carrying a load.

NOTICE

Auxiliary hoses for work tools must be disconnected before the Hydraulic Quick Coupler is disengaged.

Pulling the work tool with the auxiliary hoses could result in damage to the host machine or the work tool.



Illustration 396

g06187108

1. Extend the stick cylinder and fully extend the bucket cylinder until the work tool is curled past a vertical position. This action must be performed before pressing the switch.
2. Push the lock mechanism on the switch forward and then depress the rear of the switch to unlock the work tool. The alarm will sound continuously and the message "Quick Coupler Unlock" will display on the monitor.

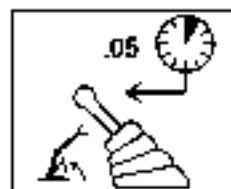


Illustration 397

g01231447

3. Hold the control lever for the bucket cylinder in the EXTEND position for 5 seconds to unlock the hook.



Illustration 398

g06187142

4. Move the boom and the stick until the tool or the bucket is in the storage position. Keep the tool close to the ground.



Illustration 399

g06187151

5. Rotate the quick coupler upward to release the bottom pin.



Illustration 400

g06187156

6. Continue to rotate the quick coupler upward to release the top pin and completely release the work tool from the quick coupler.

7. Move the stick to a position that is clear of the work tool.

Note: To lift objects with the lifting eye of the quick coupler, refer to "Coupler Lifting Eye Operation without Bucket" later in this chapter.

Coupling a Bucket that is Reversed



Illustration 401

g06187159

1. When you use a hydraulic pin grabber quick coupler, you can connect to a bucket that is in a reversed position. Refer to Illustration 401 for an example of connecting to a bucket that is in a reversed position.



Illustration 402

g06187057

2. Extend the stick cylinder and fully extend the bucket cylinder until the quick coupler is curled past a vertical position. This action must be performed before pressing the switch.
3. Follow the same steps for coupling the work tool to couple the host machine to a bucket that is reversed. Refer to "Coupling the Work Tool" for the proper procedure.

NOTICE

When some Caterpillar buckets are used in the reverse position, it can be more difficult to couple the bucket and uncouple the bucket than in the normal position.

Care must be taken to ensure that the position of the boom, stick, and bucket are aligned to ensure smooth coupling. The coupler must be in position between the bucket bosses.

If the bucket is not fully engaged in the jaw of the coupler, the quick coupler can become snagged on the bucket bosses. The full weight of the bucket is then carried by the quick coupler sideplates, which can cause damage to the quick coupler.

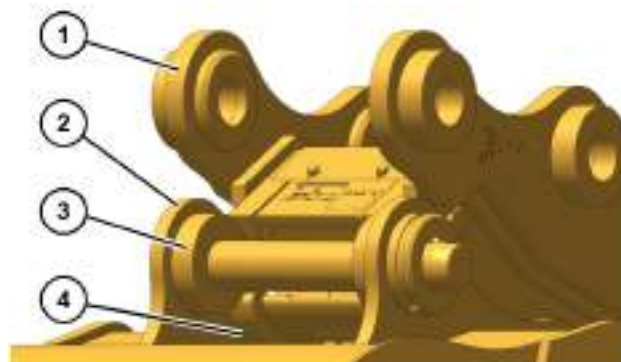


Illustration 403

g06187418

- (1) Quick coupler
- (2) Bucket
- (3) Boss
- (4) Hook

Coupler Lifting Eye Operation without Bucket

1. Remove the work tool. Refer to "Uncoupling the Work Tool" for the proper procedure.



Illustration 404

g06187057

2. The quick coupler must be curled past a vertical position before depressing the switch. Extend the stick cylinder and fully extend the bucket cylinder until the quick coupler is curled past a vertical position.



Illustration 405

g06300088

3. Push the lock mechanism on the switch forward and then depress the rear of the switch to lock the quick coupler. The alarm will sound continuously and the message “Quick Coupler Locking” will display on the monitor.

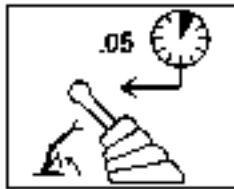


Illustration 406

g01231447

4. Hold the control lever for the bucket cylinder in the EXTEND position for 5 seconds to lock the hook. The monitor will display the message “Verify Tool Locking” and the alarm will stop.



Illustration 407

g06187164

5. Rotate the quick coupler downward and move the stick to a position that is clear of the work tool.



Illustration 408

g06223888

6. Use the lifting eye of the quick coupler, as needed.
7. To reinstall the bucket or the work tool, refer to “Coupling the Work Tool” for the proper procedure.

i06978374

Bucket - Remove and Install

SMCS Code: 6001-011; 6001; 6001-012; 6101; 6102; 6523

Removal Procedure

WARNING

Failure to follow the instruction below for the installation of a work tool may result in personal injury or death. Special care must be taken if more than one person is installing the work tool.

- Confirm the verbal communication and the hand signals that will be used during the installation.
- Be alert for sudden movement of the front linkage and the work tool.
- Do not insert fingers into the bores of the support pins when the support pins and the bores are being aligned.

Operation Section
Bucket - Remove and Install

NOTICE

To facilitate removal of the bucket pins without causing damage to the pins, the bearings, and/or the O-ring seals put the bucket on the floor and the stick in a vertical position, as shown.



Illustration 409

g06181120

1. Start the engine. Park the machine on a hard, level surface. Position the bucket, the stick, and the bucket control linkage, as shown. Shut off the engine.

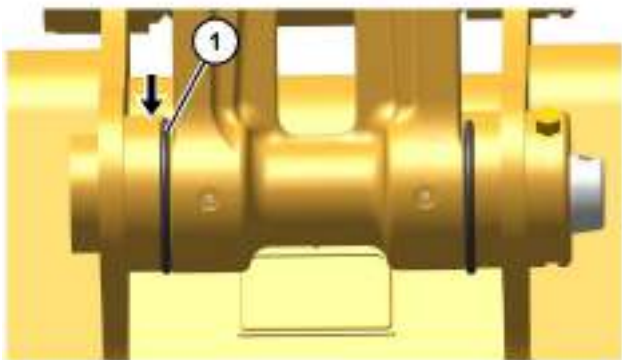


Illustration 410

g06192508

2. Slide O-ring seals (1) off the pin joints and onto the flanges of the bucket.

WARNING

When the pin assembly is removed, the linkage assembly may swing out of the bucket. To prevent possible personal injury, do not stand in front of the linkage assembly when the pin assembly is being removed.

Note: Removing the support pin may be difficult due to excessive pressure on the support pin. Remove the pressure on the support pin by adjusting the front linkage.

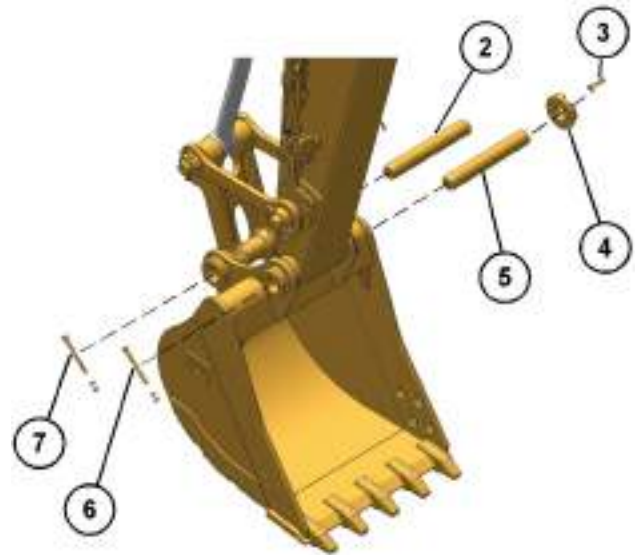


Illustration 411

g06186090

3. Remove nuts and retaining bolt (7) from support pin (2). Remove the support pin.
4. Remove bolts (3) and adapter plate (4). Remove the shims.
5. Remove nuts and retaining bolt (6) from support pin (5). Remove the support pin.
6. Start the engine and raise the stick out of the bucket.
7. Remove the O-ring seals (1) from the flanges on the bucket.

Note: After the support pins have been removed, make sure that the support pins do not become contaminated with sand or dirt. Make sure that the seals on the end of the stick and the seals on the end of the link do not become damaged.

Installation Procedure

1. Clean each pin and each pin bore. Lubricate each pin bore with molybdenum grease.

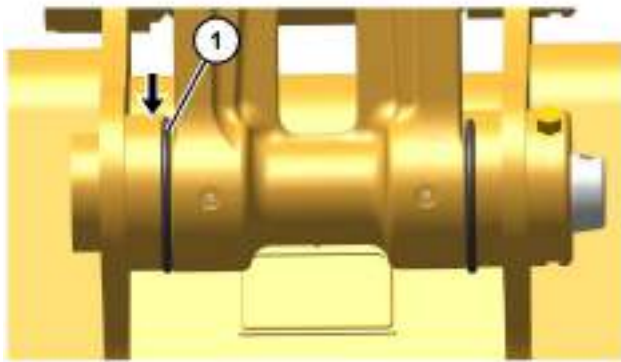


Illustration 412

g06192508

2. Position the O-ring seals (1) onto the flanges of the bucket.
3. Start the engine and lower the stick into the bucket until the pin bores are in alignment with each other. Stop the engine.

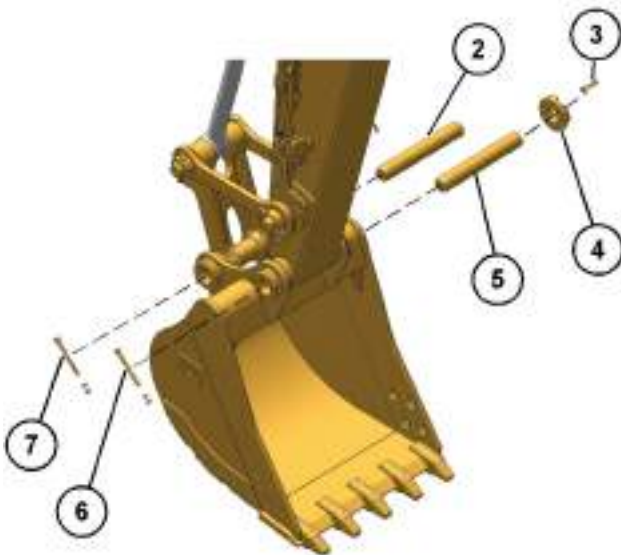


Illustration 413

g06186090

4. Install support pin (5). Align the retaining bolt hole in the support pin with the retaining bolt hole in the bucket.
5. Install the retaining bolt and nuts (6). Install adapter plate (4) without the shims, and without bolts (3) that hold the adapter plate.
6. Refer to Operation and Maintenance Manual, "Bucket Linkage - Inspect/Adjust" to adjust the bucket clearance.
7. Slide O-ring seals (1) in position over the pin joints between the bucket and the stick.

8. Start the engine and position the bucket linkage into the bucket until the pin bores are in alignment with each other. Stop the engine.
9. Install support pin (2). Align the retaining bolt hole in the bucket pin with the retaining bolt hole in the bucket.
10. Install retaining bolt and nuts (7).
11. Slide the O-ring seals (1) over the pin joints between the bucket and the link assembly.

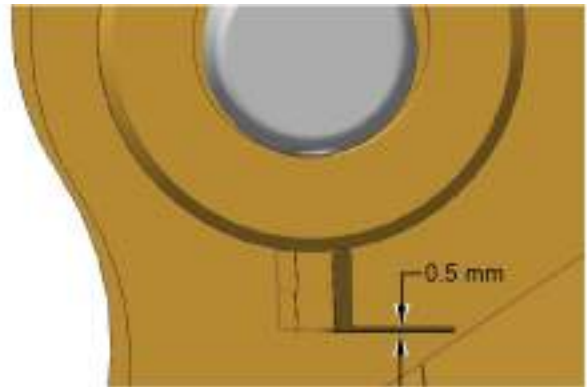


Illustration 414

g06192530

12. Tighten retaining nuts (6) and (7). Position the outside nut even with the end of the retaining bolt or 0.5 mm (0.02 inch) beyond the end of the retaining bolt. Tighten the inside nut against the outside nut.

13. Lubricate the bucket pins. Refer to Operation and Maintenance Manual, "Bucket Linkage - Lubricate".

i07349163

Work Tool Operation (If Equipped)

SMCS Code: 6700; 7000

Hammer Operation (If Equipped)



Illustration 415

g06222793

NOTICE

Use only a hydraulic hammer that is recommended by Caterpillar.

The use of a hydraulic hammer that is not recommended by Caterpillar could result in structural damage to the host machine.

Consult your Cat dealer for information on recommended hydraulic hammers.

Only use the hydraulic hammer to break rocks, concrete, and other hard objects. Before you start hydraulic hammer operation, place the machine on a level, stable surface.

Before you start hydraulic hammer operation, close the front window. Caterpillar recommends the installation of a window guard on the front window for protection from flying debris.

NOTICE

In order to avoid structural damage to the host machine or the hydraulic hammer, comply with the following:

Do not attempt to break rocks or concrete by burying the hammer tool completely into the rocks or concrete.

Do not apply a prying force to the hammer tool in order to remove the hammer tool from the material.

Do not allow the hydraulic hammer to operate at one location and for more than 15 seconds. Change the location of the hydraulic hammer and repeat the procedure. Failure to change the location of the hydraulic hammer could cause the hydraulic oil to overheat. Overheated hydraulic oil could damage the accumulator.

Stop the hydraulic hammer immediately if the jumper lines are pulsating violently. This indicates that the accumulator nitrogen charge is lost. Consult your Cat dealer for the necessary repair.

NOTICE

Do not use the dropping force of the hydraulic hammer to break rocks or other hard objects. This could cause structural damage to the machine.

Do not use the sides or back of the hydraulic hammer to move rocks or other hard objects. Doing this could cause damage not only to the hammer but to stick or boom cylinder.

Do not operate the hydraulic hammer with any of the cylinders fully retracted or extended. Doing this could cause structural damage to the machine, resulting in reduced machine life.

Do not use the hydraulic hammer to lift an object.

Do not operate the hydraulic hammer while the stick is vertical to the ground. This could allow the stick cylinder to vibrate excessively.

Operate the attachment control levers carefully to keep the hydraulic hammer tool from hitting the boom.

Do not operate the hydraulic hammer under water unless the hydraulic hammer is properly equipped. Operating the hydraulic hammer under water could damage the machine hydraulic system. Consult your Cat dealer for information on underwater operation.

Do not operate the hydraulic hammer with the upper structure sideways to the undercarriage. Before you start hydraulic hammer operation, place the upper structure in the recommended positions that are shown in illustration 416. Any other operating positions could make the machine unstable. Any other operating positions could place excessive loads on the undercarriage.

Refer to the following for any additional questions about the operation and care of your Cat hydraulic hammer:

- Operation and Maintenance Manual, SEBU7346, "Hydraulic Hammers"
- The Operation and Maintenance Manual specific to your machine

An operation and maintenance decal, SMEU7397, is available for all hydraulic hammers. The decal provides procedures for operation and maintenance of the hydraulic hammers. The decal can be placed on the machine or the hammer. The decal can be obtained through the normal literature ordering channels.

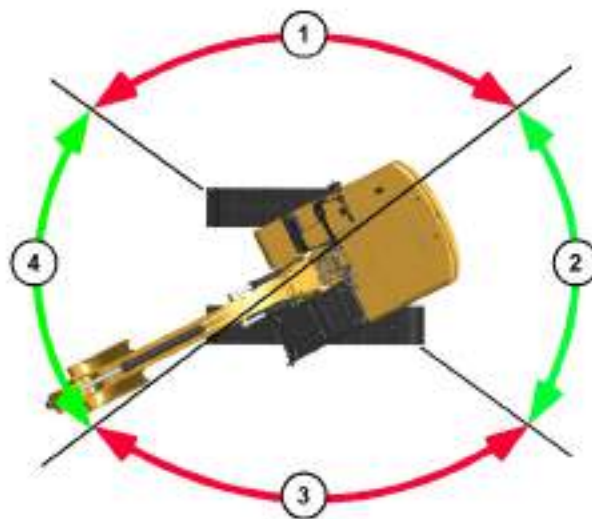


Illustration 416

g06192837

- (1) Incorrect working position
- (2) Correct working position
- (3) Incorrect working position
- (4) Correct working position

Shear Operation (If Equipped)



Illustration 417

g06222798

WARNING

Do not operate or work on this work tool unless you have read and understand the instructions and warnings in the Operation And Maintenance Manual for both the work tool and the host machine.

Failure to follow the instructions or heed the warnings could result in injury or death.

Contact your Caterpillar dealer for replacement manuals. Proper care is your responsibility.

NOTICE

Selection of a hydraulic shear must be done with extra care.

Use of a hydraulic shear not recommended by Caterpillar could result in structural damage to the host machine.

Consult your Cat dealer for hydraulic shear information.

WARNING

Serious injury or death could occur from the demolition of pipes, vessels, tanks or other containers that may contain gas, flammable materials or hazardous chemicals.

Do not perform any demolition work on these items until all of their contents have been removed.

Follow all regulations for the removal and disposal of these materials.

NOTICE

Using the demolition tool to level the work site or push over standing structures may damage the machine or the demolition tool. Use appropriate equipment to do site preparation or maintenance operations.

NOTICE

To avoid structural damage to the machine, do not break road surfaces by placing the cutting edge of the hydraulic shear on the ground and moving the machine.

Be sure that no one is near the work tool to prevent injury. Keep the work tool under control at all times to prevent injury. When a demolition tool is used, all personnel must maintain a minimum distance of 10 m (33 ft).

Close all windows. Make sure that all required guards are in place. Wear all required protective equipment. Follow the instructions in the Operation and Maintenance Manual for the work tool.

Crusher Operation (If Equipped)

WARNING

Improper operation and maintenance of the crusher could cause personal injury or death. Observe the following procedures for safe operation of the crusher.

Consult your Cat dealer for more information on the operation and maintenance of the crusher.

Do not operate the host machine with the work tool unless you have read and understood the instructions and warnings in the Operation and Maintenance Manual. Failure to follow the instructions or heed the warnings could result in machine or work tool damage, and/or serious injury or death. Contact your Cat dealer for a replacement manual, if needed.

When the crusher is installed on the host machine, always make sure that the protective guarding is in place.

Using the crusher in an incorrect manner can damage the machine and/or cause personal injury or death.

Always ensure that the work area is clear of ground personnel, due to the potential crush hazards with falling debris and machine movement.

Resting or placing your foot on the work tool pedal could result in unexpected movement of the machine / work tool which could result in personal injury or death. Always lock the crusher when not in use.

NOTICE

Selection of a hydraulic crusher must be done with extra care.

Use of a hydraulic crusher not recommended by Caterpillar could result in structural damage to the host machine.

Consult your Cat dealer for hydraulic crusher information.

Close all windows. Make sure that all required guards are in place. Wear all required protective equipment. Follow the instructions in the Operation and Maintenance Manual for the work tool.



Illustration 418

g06222800

Demolition work on the roof of a building could lead to serious personal injury if the building were to collapse and the excavator turned over or fell off the roof. The demolition work must be started ONLY AFTER surveying the building for its structural integrity.



Illustration 419

g06222803

Crushing work above your head must be avoided because objects can fall and damage the machine.

X



Illustration 420

g06222806

Do not perform demolition work at the base of the machine, because the ground could be unstable and cause the machine to fall.

X



Illustration 421

g06222809

Do not suddenly lower or stop the work tool, otherwise the excavator could turn over.

X

X



Illustration 422

g06222813

Crushing work using impact, swing, or dropping forces of the excavator could cause damages to the machine and also could lead to personal injury. As such, NEVER perform such an operation.

X



Illustration 423

g06222817

Crushing work with hydraulic cylinder at stroke end position could damage the excavator, resulting in shortening of lifespan. Also, as it could lead to unexpected personal injury due to breakage of the machine, do not perform any work at stroke end.



Illustration 424

g06222821

When performing work at elevated positions, always use care for the surroundings as well as for falling objects to avoid personal injury. Use guide personnel and signs as required.



Illustration 426

g06222831

Crushers could interfere with the boom and the cab depending on the type and method of usage. Know the working range of the crusher being used.



Illustration 425

g06222829

When working sideways, the track can lift. Avoid abrupt operation and operate slowly.

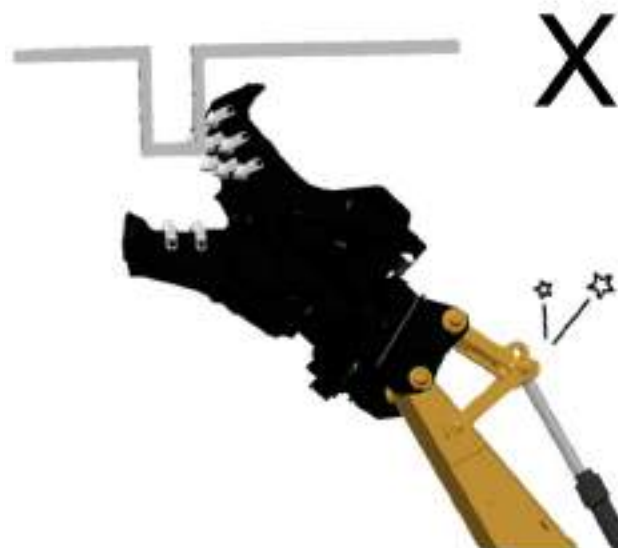


Illustration 427

g06222833

If the tooth of the crusher engages an object at a slant, excessive forces could be applied to the front regions. As such move the crusher to the front.

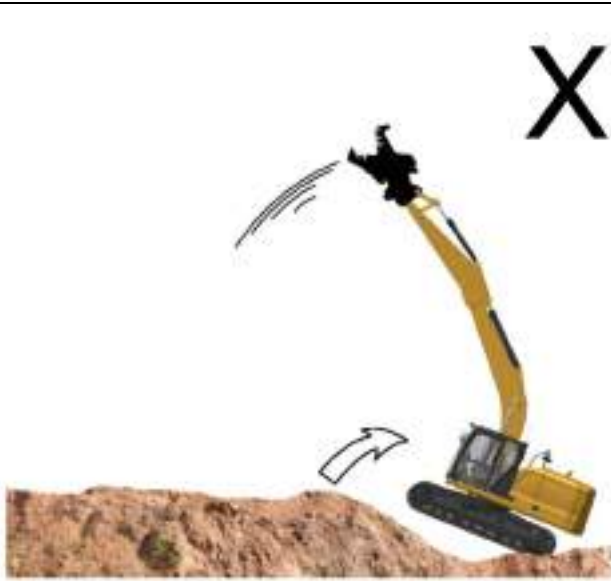


Illustration 428

g06222836

Never extend the boom cylinder suddenly. Sudden extension of the boom could cause tip backwards.



Illustration 429

g06222831

Sudden extension of the bucket cylinder, or sudden extension of the stick cylinder could cause damages at the stroke end position, resulting in personal injury. Operations that cause sudden extension of the cylinders is PROHIBITED!

Parking

i07868085

Stopping the Machine

SMCS Code: 7000

WARNING

Leaving the machine unattended when the engine is running may result in personal injury or death. Before leaving the machine operator station, neutralize the travel controls, lower the work tools to the ground and deactivate all work tools, and place the lever for the hydraulic lockout control in the LOCKED position.

Note: There may be regulations that define the requirements for the operator and/or support personnel to be present when the engine is running.

Park on a level surface. If the machine must be parked on a grade, chock the tracks securely.

Note: The swing parking brake is automatically applied when the machine is stopped. The swing parking brake is released when the engine is running and the joystick is activated.

1. Turn the engine speed dial counterclockwise to reduce engine speed.



Illustration 430

g06181402

2. Release the travel levers/pedals to stop the machine.

3. Lower the work tool to the ground. Apply a slight downward pressure.
4. Move the hydraulic lockout control to the LOCKED position.

i07088536

Freezing Conditions

SMCS Code: 7000

If freezing temperatures are expected, remove the mud and the dirt from each track roller frame. Park the machine on wood planks. Use the following procedure to clean each track roller frame.



Illustration 431

g06188791

1. Position the boom over one side of the machine.
2. Use boom down pressure to lift the track on one side off the ground. Operate the track in the forward direction. Then operate the track in reverse. Continue this procedure until the maximum amount of material is thrown off the track.
3. Lower the track onto the wood planks.
4. Repeat the procedure for the other track.
5. Clean the area around the carrier rollers and around the track rollers.
6. Lower the work tool onto a wood plank to prevent the work tool from touching the ground.

i07879193

Stopping the Engine

SMCS Code: 1000; 7000**NOTICE**

Stopping the engine immediately after it has been working under load can result in overheating and accelerated wear of engine components.

Refer to the following procedure to allow the engine to cool and to prevent excessive temperatures in the turbocharger housing, which could cause oil coking problems.

NOTICE

Never turn the battery disconnect switch to the OFF position while the engine is running. Serious damage to the electrical system may result.

1. Park the machine on level ground. Refer to Operation and Maintenance Manual, "Stopping the Machine" for the recommended procedure.
2. While the machine is stopped, run the engine for 5 minutes at low idle. Idling the engine allows hot areas of the engine to cool gradually.
3. Turn the engine start switch to the OFF position.

Note: If the "Regen Active" indicator is illuminated, do not shut off the engine. Refer to Operation and Maintenance Manual, "Monitoring System" for more information on indicators.

Engine Shutdown Switch

NOTICE

Perform a walk around inspection after actuation of a shutdown device.

Take necessary corrective action to resolve the cause of the shutdown.

Ensure that no additional damage has been done or could occur before returning to operation.

Turn the engine start switch to the OFF position. If the engine does not stop, perform the following procedure.

Note: Always use the engine start switch to stop the engine. Use the engine shutdown switch as an alternate method to stop the engine if the start switch fails.

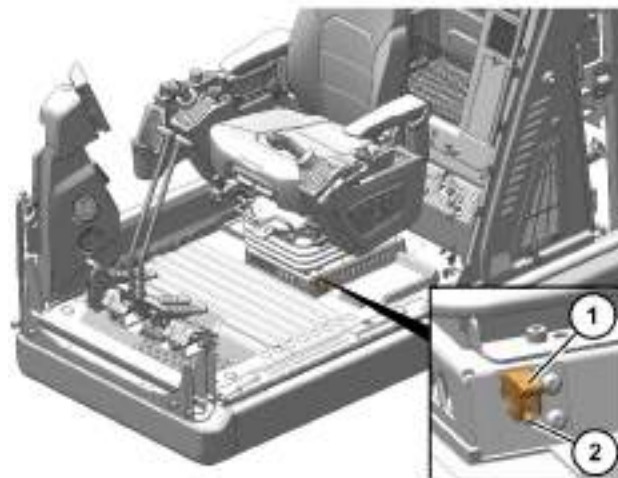


Illustration 432

g06181487

1. The engine shutdown switch is located below the left side of the operator seat.
2. Lift cover (1).
3. Push switch (2) upward. Pushing the switch upward should stop the engine and prevent the engine from being started again.
4. Return the switch to the original position. The engine will be enabled to start.

Note: Do not operate the machine again until the malfunction has been corrected.

5. Use the method that follows if the previous steps do not stop the engine.

Stop the Engine if an Electrical Malfunction Occurs

Turn the engine start switch to the OFF position. If the engine does not stop, perform the following procedure.

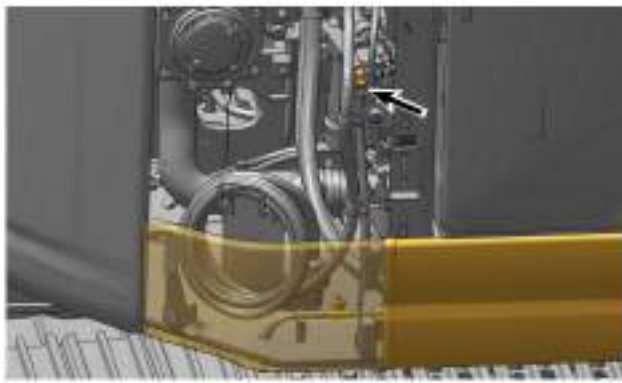


Illustration 433

g06467785

The fuel shutoff valve is located behind the right access door.

Shut off the fuel supply by turning the fuel shutoff valve clockwise. The engine will stop after consuming the fuel in the fuel line. The engine may continue to run for a few minutes.

Repair the engine before you restart the engine. The fuel system may need to be primed. See Operation and Maintenance Manual, "Fuel System - Prime" for instructions.

i07103299

Leaving the Machine

SMCS Code: 7000



Illustration 434

g06224270

1. Use the steps and the hand holds when you dismount. When you dismount, face the machine and use both hands.

2. Inspect the engine compartment for debris. Clean out any debris to avoid a fire hazard.
3. Remove all flammable debris from the front bottom guard through the access doors to reduce a fire hazard. Discard the debris properly.
4. Always turn the battery disconnect switch to the OFF position before leaving the machine.
5. If the machine will not be operated for a month or more, remove the battery disconnect switch key.
6. Lock all compartments and all vandalism covers (if equipped).

i07735116

Machine Storage and Specified Storage Period

SMCS Code: 7000

Machine Storage

The Safety Section of this Operation and Maintenance Manual contains storage information for fuels, lubricants, and ether (if equipped).

The Operation Section of this Operation and Maintenance Manual contains information for short-term storage of this machine, including engine shutdown, parking, and instructions for leaving the machine.

For detailed steps on long-term storage refer to Special Instruction, SEHS9031, "Storage Procedure for Caterpillar Products".

Specified Storage Period

The specified storage period of this machine is 1 year.

After the specified storage period has expired, consult your Cat dealer for inspect, repair, rebuild, install remanufactured, or install new components, and disposal options, and to establish a new specified storage period.

If a decision is made to remove the machine from service, refer to Decommissioning and Disposal for further information.

Transportation Information

i08163556

Shipping the Machine

SMCS Code: 7000; 7500

WARNING

Automatic Engine Speed Control (AEC) will increase engine speed automatically when you operate the control levers and/or travel pedals with AEC switch on.

When loading and unloading the machine from the truck or working in close quarters always turn AEC switch off to prevent any possibility of sudden movement of machine, which could result in serious injury or death.

Set the travel speed control switch to LOW before loading the machine. Never operate this switch when loading the machine on a trailer.

Investigate the travel route for overpass clearances. Make sure that there will be adequate clearance for the machine.

Remove ice, snow, or other slippery material from the loading dock and from the truck bed before you load the machine onto the transport machine. Removing ice, snow, or other slippery material will help to prevent the machine from slipping in transit.

Note: Obey all laws that govern the characteristics of a load (height, weight, width, and length). Observe all regulations that govern wide loads. Certain regions may require the removal of door hooks and cab bumpers, if equipped. Consult all local and regional regulations

Choose the flattest ground when you load the machine or when you unload the machine.

1. Before you load the machine, chock the trailer wheels or the rail car wheels.
2. When you use loading ramps, make sure that the loading ramps have adequate length, adequate width, adequate strength, and an adequate slope.
3. Maintain the slope of the loading ramps within 15 degrees of the ground.
4. Position the machine so that the machine can drive straight up the loading ramps. The final drives should be toward the rear of the machine. Do not operate the control levers while the machine is on the loading ramps.
5. When you drive over the loading ramp joint areas, maintain the balance point of the machine.

6. Lower the work tool to the bed or to the floor of the transport machine.
7. To prevent rolling of the machine or sudden movement of the machine, perform the following items:
 - Chock both tracks.
 - Install sufficient tie-downs at several locations.
 - Fasten wire cables.
8. If equipped, remove door hooks, cab bumpers, and fuel tank step as necessary. Refer to local regulations.

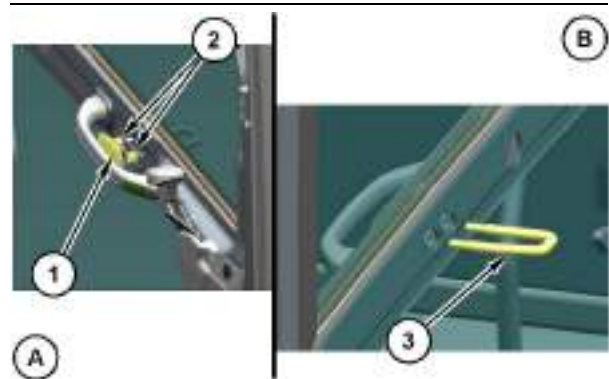


Illustration 435

g06516462

Typical example of door hook

- (A) Inside
(B) Outside
(1) Cover
(2) Nuts
(3) Door Hook

- a. Remove cover (1) and nuts (2) to remove door hook (3).

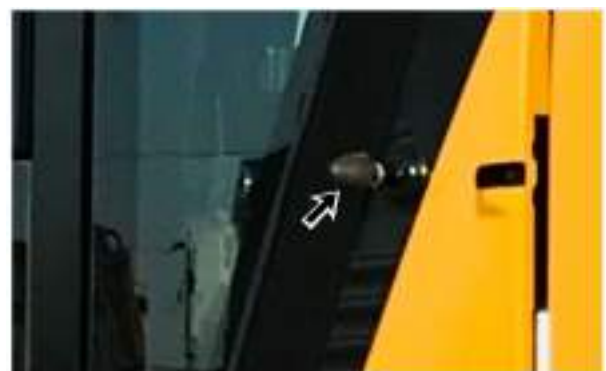


Illustration 436

g06516469

Typical example of cab bumper

- b. Remove any bumpers on your cab.

NOTICE

Do not allow the chrome surface of the bucket cylinder rod to touch any part of the trailer. Damage to the rod can occur from impact with the trailer during transport.

Note: Refer to Operation and Maintenance Manual, "Specifications".

Shipping a Machine that is not Completely Assembled

If the machine must be shipped when the boom, stick, or counterweight is not assembled on the machine, follow the instructions in Operation and Maintenance Manual, "Operation".

WARNING

The ROPS structural certification depends on the support of the boom, stick, and counterweight in the event of a machine tip over or a machine rollover incident.

When the machine needs to be moved without the boom, stick, or counterweight being installed, avoid any machine operations which could affect machine stability as a machine tip over or a machine rollover incident could result in serious injury or death.

The machine should be operated slowly on flat, stable ground or pavement by qualified operators.

i07539618

Securing the Machine

SMCS Code: 7000

WARNING

Do not transport the machine if there is a malfunction of the swing parking brake system.

The machine may swing during transportation if the swing parking brake system is not functioning properly which could result in injury or death.

Contact your Cat dealer for service.

Comply with any laws that govern the characteristics of a load (length, width, height, and weight).

1. Move the hydraulic lockout control to the LOCKED position.
2. Turn the engine start ring to the OFF position or press button to stop engine.

3. Turn the battery disconnect switch to OFF and remove the disconnect switch key.
4. Remove the ether starting aid cylinder. See Operation and Maintenance Manual, "Ether Starting Aid Cylinder - Replace" for the removal procedure.
5. Lock the door and the access covers. Attach any vandalism protection.

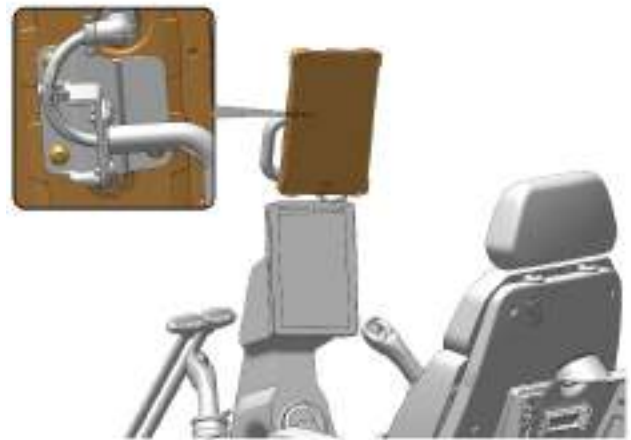


Illustration 437

g06181075

Note: Caterpillar strongly recommends removing the Cat Grade Control monitor (if equipped) before transporting the machine to protect the monitor from damage or theft.

6. Disconnect the wiring harness from the Cat Grade Control monitor. Remove the three screws that secure the monitor to the mounting bracket and remove the monitor. Remove the monitor from the cab and store in the monitor carrying case.
7. Cover the exhaust opening.

NOTICE

Do not allow the turbocharger to rotate while the engine is not operating. Damage to the turbocharger can result.

Note: Before you unload the excavator from the transport machine, remove the protective covering from the exhaust opening.

i07956081

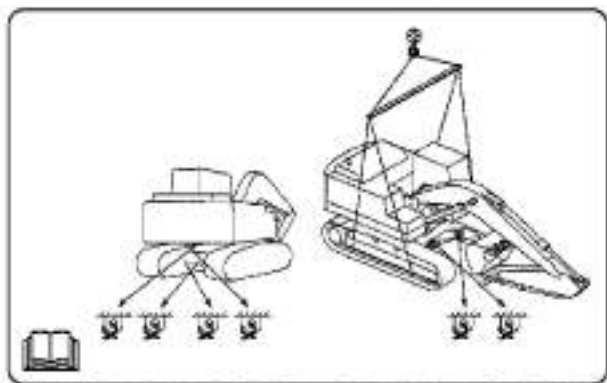


Illustration 438

g06289667

8. Chock the tracks and secure the machine with tie-downs. Make sure that you use the proper rated wire cable.

Use the front towing eyes on the lower frame, the rear towing eyes on the lower frame, and the rear towing eye that is on the upper frame.

Securely fasten all loose parts and all removed parts to the trailer or to the rail car.

When the engine is stopped, the swing parking brake is automatically applied. The swing brake prevents the upper structure from rotating.

NOTICE

In freezing weather, protect the cooling system with antifreeze, to the lowest outside expected temperature on the travel route. Or, drain the cooling system completely.

Lifting and Tying Down the Machine

SMCS Code: 7000; 7500

WARNING

Improper lifting and tie-down techniques can allow the load to shift or fail resulting in personal injury or property damage. Use only properly rated cables and slings with lift and tie down points provided on the machine. Keep the deck of the transport vehicle clean and use anti-slip mats on steel decks.

Follow the instructions in Operation and Maintenance Manual, "Lifting and Tying Down the Machine" for the proper technique for securing the machine. Refer to Operation and Maintenance Manual, "Specifications" for specific weight information.

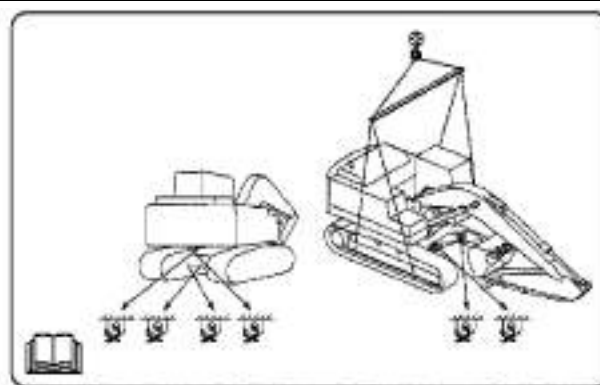


Illustration 439

g06289667

The lift and tie-down film is located near the base of the boom.

Lifting the machine



Illustration 440

g06184026

The machine center of gravity is located at the center of the swing gear.



Lifting Point – To lift the machine, attach the lifting devices to the lifting points.

The weight and the instructions that are given herein describe the machine as the machine is manufactured by Caterpillar.

Refer to the Operation and Maintenance, "Specifications" for specific weight information.

Note: Only lift objects from approved lifting points and with approved lifting devices

1. Use proper rated cables and slings for lifting. The crane should be positioned so that the machine is lifted parallel to the ground.
2. To prevent contact with the machine, lifting cables should have sufficient length.
3. Move the hydraulic lockout control to the LOCKED position.
4. Thread the cable between the first and second rollers at each end of the track.
5. Do not use the foot step as a lifting point.

6. If the full length roller guard is equipped, remove the guard.

7. Apply the proper protector to prevent machine/wire damage and slippage. Make sure that the rollers are not affected by the load.

Tying Down the Machine

There are two methods that can be used to tie down a machine. Local and/or regional regulations will determine which method to use.

Note: Obey all local and regional governmental regulations.

Frictional and Direct Lashing

When allowed, a combination of frictional lashing and direct lashing is the preferred method to tie down a machine.

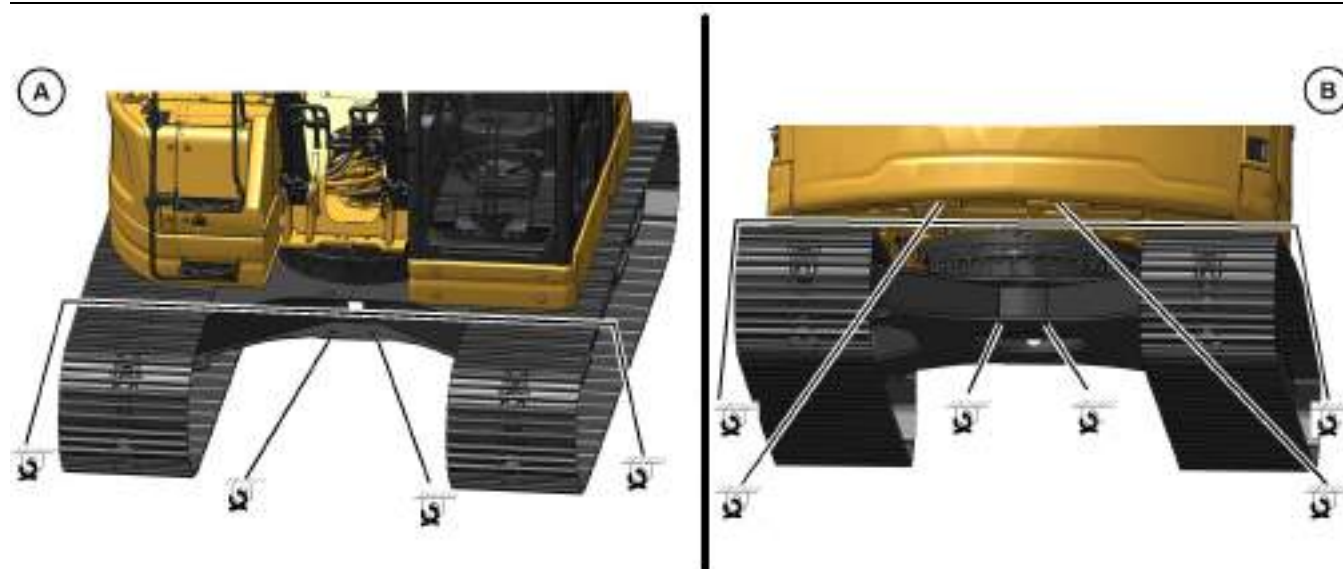


Illustration 441

g06496301

(A) Front of the machine

(B) Rear of the machine

Diagonal Lashing

In areas where frictional lashing is not allowed, diagonal lashing can be used as shown below.



Illustration 442

g06496296

(A) Front of the machine

(B) Rear of the machine

Tying Down the Machine



Tie Down Point – To tie down the machine, attach the tie-downs to the tie-down points.

The weight and the instructions that are given herein describe the machine as the machine is manufactured by Caterpillar.

Refer to the Operation and Maintenance, "Specifications" for specific weight information.

1. Use proper rated cables and shackles for tying down the machine.
2. Use the rear eyes and the front eyes that are provided on the lower frame to fasten tie-downs. Use corner protectors for sharp corners.
3. Move the hydraulic lockout control to the LOCKED position.
4. If there is a requirement of diagonal lashing for tying down, use the proper tie-down point on the lower frame. Set the lashing angle which is on the longitudinal axis of the machine and the cable, at 30 to 50 degrees.
5. Keep the transport vehicle surface clean (for example, trailer deck).
6. For steel deck transport vehicles use skid-inhibiting or anti-slip mats (for example, rubber mats) with a friction coefficient of at least 0.3.

Machines Equipped with Blade

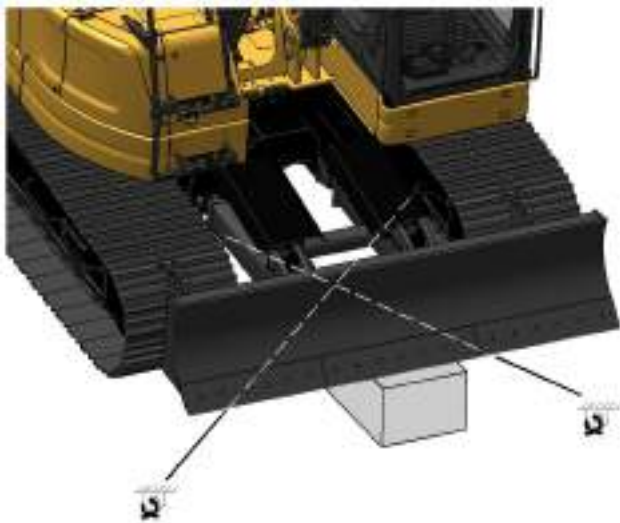


Illustration 443

g06493914

Note: The counterweight must not be positioned over the blade to properly tie down the upper structure under the counterweight.

1. Raise the blade and support the blade with proper blocking equipment.

Note: Support the blade high enough to avoid contacting the tie-downs. The height of blocking equipment requirement is approximately 450 mm (18 inch).

2. Use the proper tie-down point on the lower frame. Set the lashing angle which is on the longitudinal axis of the machine and the cable, at 30 to 50 degrees.

Lifting the Machine Segments

Bucket

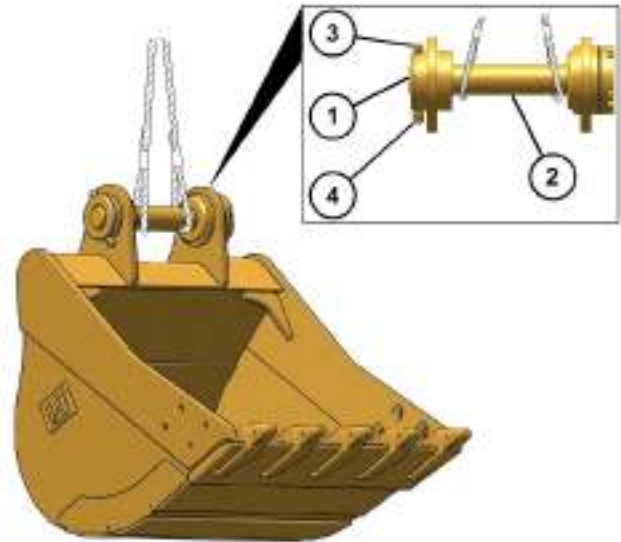


Illustration 444

g06184591

(1) Pin.(2) Sleeve.(3) Bolts.(4) Nuts.

Install pin (1) and install sleeve (2) in the brackets of the bucket. The previous illustration indicates the method to secure pin (1) with bolts (3) and nuts (4). Fasten two proper rated wire cables to pin (1).

Towing Information

i07348733

Towing the Machine

SMCS Code: 7000



Personal injury or death could result when towing a disabled machine incorrectly.

Block the machine to prevent movement before final drives are disengaged. The machine can roll free if it is not blocked. With final drives disengaged, the machine cannot be stopped or steered.

Follow the recommendations below, to properly perform the towing procedure.

Relieve the hydraulic tank and line pressure before any disassembly.

Even after the machine has been turned off, the hydraulic oil can still be hot enough to burn. Allow the hydraulic oil to cool before draining.

NOTICE

To tow the machine, both final drives must be disengaged.

Do not operate the travel motors with the final drives disengaged. Damage could result.

These towing instructions are for moving a disabled machine for a short distance at low speed. Move the machine at a speed of 2 km/h (1.2 mph) or less to a convenient location for repair. Always haul the machine if long distance moving is required.

Shields must be provided on both machines. This will protect the operator if the tow line or the tow bar breaks.

Do not allow an operator to be on the machine that is being towed.

Before you tow the machine, make sure that the tow line or the tow bar is in good condition. Do not use a wire rope that is kinked, twisted, or damaged. Make sure that the tow line or the tow bar has enough strength for the towing procedure that is involved. The strength of the tow line or of the tow bar should be at least 150 percent of the gross weight of the towed machine. This requirement is for a disabled machine that is stuck in the mud and for being towed on a grade.

Do not use a chain for pulling a disabled machine. A chain link can break. This may cause personal injury. Use a wire rope with ends that have loops or rings. Put an observer in a safe position to watch the pulling procedure. The observer can stop the procedure if the wire rope starts to break. Stop pulling whenever the towing machine moves without moving the towed machine.

During towing, do not allow anyone to step between the towing and the towed machines.

Do not allow the wire rope to be straddled while the machine is being towed.

Keep the tow line angle to a minimum. Do not exceed a 30 degree angle from the straight ahead position.

Avoid towing the machine on a slope.

Quick machine movement could overload the tow line or the tow bar. This could cause the tow line or the tow bar to break. Gradual, steady machine movement will be more effective.

Prior to releasing the brake of the final drive, firmly lock both tracks to prevent the machine from moving suddenly. When the machine is ready to be towed, release the brake of the final drive. Refer to Operation and Maintenance Manual, "Final Drive Sun Gear Removal".

Normally, the towing machine should be as large as the disabled machine. Make sure that the towing machine has enough brake capacity, enough weight, and enough power. The towing machine must be able to control both machines for the grade that is involved and for the distance that is involved.

You must provide sufficient control and sufficient braking when you are moving a disabled machine downhill. This may require a larger towing machine or additional machines that are connected to the rear of the disabled machine. This will prevent the machine from rolling away out of control.

All situation requirements cannot be listed. Minimal towing machine capacity is required on smooth, level surfaces. Maximum towing machine capacity is required on an incline or on a surface that is in poor condition.

Do not tow a loaded machine.

Consult your Cat dealer for the equipment that is necessary for towing a disabled machine.

Retrieval and Towing of Machine

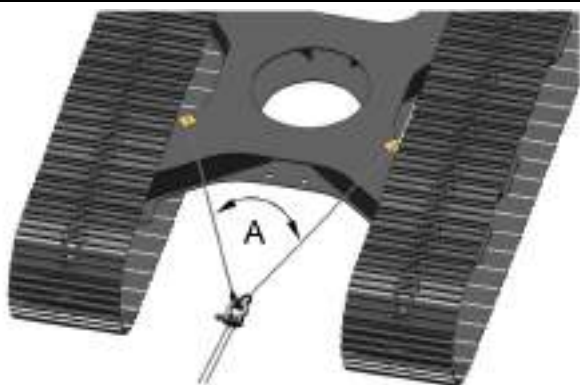


Illustration 445

g06289671

Note: Shackles must be used for towing the machine. The wire rope should be horizontal and straight to the track frame.

Install a properly rated wire rope to the lower frame of the towing machine and the lower frame of the towed machine. The permissible force for the lower frame is 100 percent of the gross weight of the towed machine.

Note: To prevent damage to the wire rope or the lower frame of the machines, use protective sleeves on the corners of the lower frame.

Retrieve the disabled machine carefully. The applied load for each wire rope should be equal. The angle (A) between each wire rope should be 60 degree maximum. Operate the machine at a low speed.

Lightweight Towing

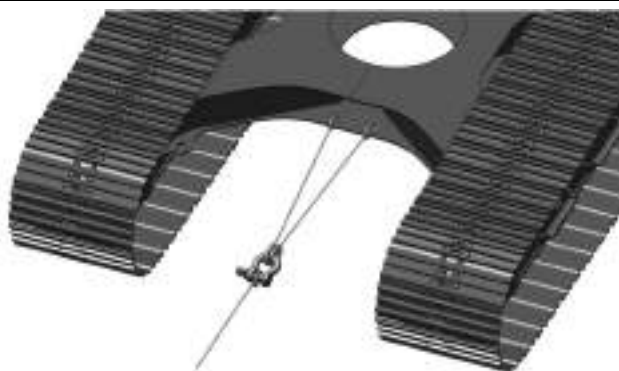


Illustration 446

g06186106

The maximum load for lightweight towing is 102900 N (75895 lb).

Shackles must be used for towing the machine. The wire rope should be horizontal and straight to the track frame.

Install a properly rated wire rope to the lower frame of the towing machine and the lower frame of the towed machine. Operate the machine at a low speed.

i06954175

Final Drive Sun Gear Removal

SMCS Code: 4050

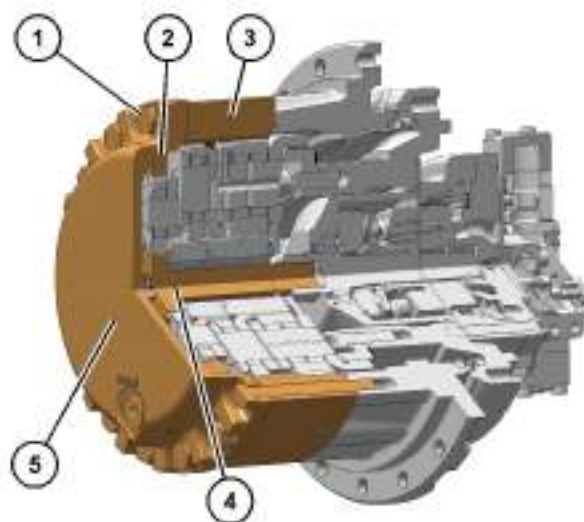


Illustration 447

g06188195

- (1) Bolt
- (2) Ring gear
- (3) Ring gear
- (4) Sun gear
- (5) Final drive cover

WARNING

Without the sun gear in place, the brakes are ineffective. Personal injury or death could result. Provide other means to hold or stop the machine.

1. Thoroughly clean the area around the final drive. Make sure that you also clean the track shoes that are positioned above the final drive.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on containing fluid spillage.

2. Drain the final drive oil into a suitable container. See Operation and Maintenance Manual, "Final Drive Oil - Change" for the procedure.

Operation Section
Final Drive Sun Gear Removal

3. Remove 14 of 16 cover bolts (1) from final drive cover (5). Do not leave a bolt in the top hole of the cover.
4. Insert an alignment dowel through the top hole of the cover and into the threads in the final drive housing. This is necessary to support ring gear (2) and ring gear (3) while you are removing the final drive cover.
5. Remove one track shoe to allow access to the face between final drive cover (5) and ring gear (2).
6. Loosen remaining two cover bolts (1).
7. Use a hammer and a wedge to separate final drive cover (5) and ring gear (2). Make sure that ring gear (2) and ring gear (3) stay in place.
8. Remove remaining two cover bolts (1) and final drive cover (5).
9. Remove sun gear (4) from final drive.
10. Install final drive cover (5) and 16 cover bolts (1).
11. Fill the final drive with new oil. See Operation and Maintenance Manual, "Final Drive Oil - Change" for the procedure.
12. Repeat Steps 1 through 11 for the other final drive.
13. Refer to the Service Manual for information on the installation of the final drive sun gear.

Engine Starting (Alternate Methods)

i07897369

Engine Starting with Jump Start Cables (If Equipped)

SMCS Code: 1000; 7000



Failure to properly service the batteries may cause personal injury.

Prevent sparks near the batteries. They could cause vapors to explode. Do not allow the jump start cable ends to contact each other or the machine.

Do not smoke when checking battery electrolyte levels.

Electrolyte is an acid and can cause personal injury if it contacts skin or eyes.

Always wear eye protection when starting a machine with jump start cables.

Improper jump start procedures can cause an explosion resulting in personal injury.

Always connect the battery positive (+) to battery positive (+) and the battery negative (-) to battery negative (-).

Jump start only with an energy source with the same voltage as the stalled machine.

Turn off all lights and accessories on the stalled machine. Otherwise, they will operate when the energy source is connected.

NOTICE

To prevent damage to engine bearings and to electrical circuits when you jump-start a machine, do not allow the stalled machine to touch the machine that is used as the electrical source.

Turn on (close) the battery disconnect switch prior to the boost connection to prevent damage to electrical components on the stalled machine.

Use only equal voltage for starting. Check the battery and starter voltage rating of your machine. Use only the same voltage for jump starting. Use of a welder or higher voltage will damage the electrical system.

Severely discharged maintenance free batteries do not fully recharge from the alternator after jump starting. The batteries must be charged to proper voltage with a battery charger. Many batteries thought to be unusable are still rechargeable.

Refer to Special Instruction, SEHS7633, "Battery Test Procedure" for complete testing and charging information. This publication is available from your Cat dealer.

When the auxiliary start receptacles are not available, use the following procedure.

1. Lower the equipment to the ground. Move all controls to the HOLD position. Move the hydraulic lockout control to the LOCKED position.
2. Turn the start switch on the stalled machine to the OFF position. Turn off all accessories.
3. Turn the battery disconnect switch on the stalled machine to the ON position.
4. Move the machine that is being used as an electrical source near the stalled machine so that the jump-start cables reach the stalled machine.
Do not allow the machines to contact each other.
5. Stop the engine of the machine that is being used as an electrical source. If you are using an auxiliary power source, turn off the charging system.



Illustration 448

g06466191

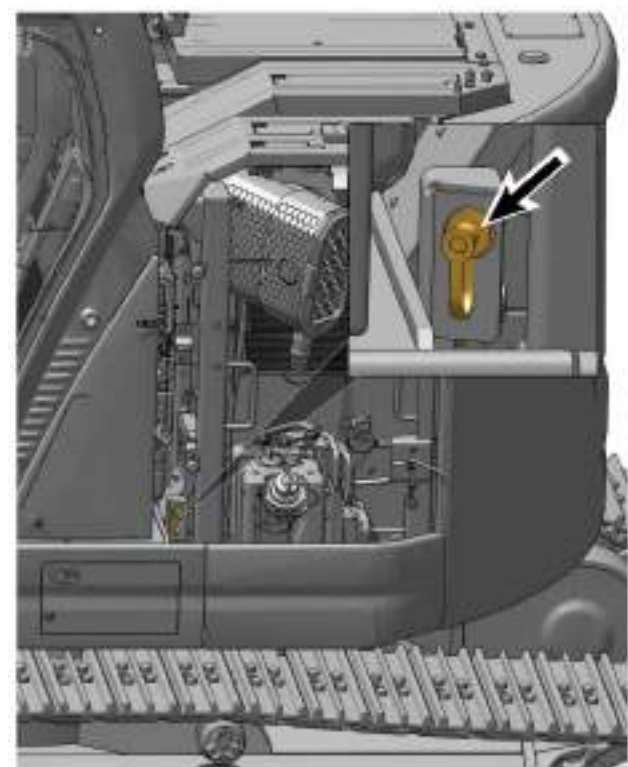


Illustration 449

g06472860

6. Ensure that battery caps on both machines are tight and correctly placed. Ensure that batteries in the stalled machine are not frozen. Make sure that the batteries have enough electrolyte.

Note: The positive terminal of the 24 V system of the source and the negative terminal of the 24 V system of the source must be identified correctly before the jumper cables are connected. The positive terminal of the 24 V system of the discharged battery must be identified correctly before the jumper cables are connected.

7. The positive ends of the jump-start cable are red. Connect one positive end of the jump-start cable to the remote battery jumper terminal of the discharged battery.
Do not allow the positive cable clamps to contact any metal except for the battery terminals.
8. Connect the other positive end of the jump-start cable to the positive cable terminal of the electrical source.
9. Connect one negative end of the jump-start cable to the negative cable terminal of the electrical source.
10. Finally, connect the other negative end of the jump-start cable to the frame of the stalled machine. Do not connect the jump-start cable to the battery post. Do not allow the jump-start cables to contact the battery cables, the fuel lines, the hydraulic lines, or any moving parts.
11. Start the engine of the machine that is being used as an electrical source or energize the charging system on the auxiliary power source.
12. Wait at least 2 minutes before you attempt to start the stalled machine. This will allow the batteries in the stalled machine to partially charge.
13. Attempt to start the stalled engine. See Operation and Maintenance Manual, "Engine Starting" for the correct starting procedure.
14. Immediately after you start the stalled engine, disconnect the jump-start cables in reverse order.

i07898244

Engine Starting with Auxiliary Start Receptacle (If Equipped)

SMCS Code: 1000; 7000



Illustration 450

g06466191

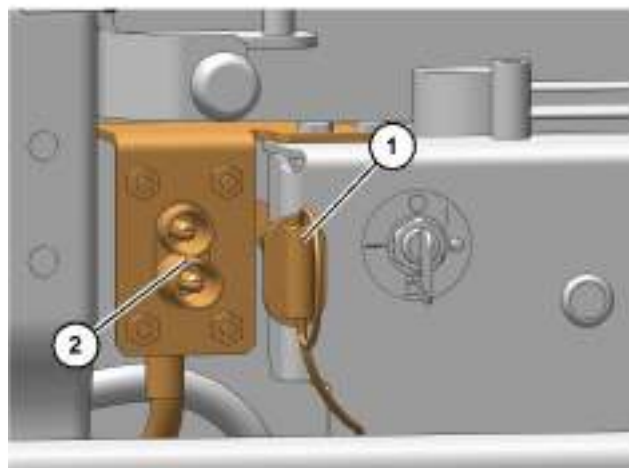


Illustration 451

g06181572

- (1) Cover
(2) Receptacle

Some Cat products may be equipped with an auxiliary start receptacle as a standard part. If your machine is not equipped with an auxiliary start receptacle, the machine can be equipped with an auxiliary start receptacle from parts service. This will ensure that a permanent receptacle is always available to jump-start the machine.

There are two cable assemblies that can be used to jump-start the stalled machine. You can jump-start the stalled machine from another machine that is equipped with an auxiliary start receptacle or with an auxiliary power pack. Your Cat dealer can provide the correct cable lengths for your application.

1. Determine the reason that the engine will not start.

Reference: Refer to Special Instruction, SEHS7633, "Battery Test Procedure" for more information.

2. Ensure that the travel control levers on the stalled machine are in the CENTER position. Engage the hydraulic lockout control. Engage the parking brake. Lower all work tools to the ground. Move all controls to HOLD.

3. Turn the engine start switch key on the stalled machine to the OFF position. Turn off all accessories.

4. Turn the battery disconnect switch on the stalled machine to ON.

5. Move the machine that is being used as a power source close to the stalled machine. The jump-start cables should reach the batteries on both machines. **DO NOT ALLOW THE MACHINES TO CONTACT EACH OTHER.**

6. Stop the engine on the machine that is being used as a power source. If you use an auxiliary power source, turn off the charging system.

7. Connect the appropriate jump-start cable to the auxiliary start receptacle on the stalled machine.

8. Connect the other end of the jump-start cable to the auxiliary start receptacle of the machine that is being used as a power source.

9. Start the engine on the machine that is being used as a power source or energize the charging system on the auxiliary power source.

10. Wait for a minimum of 2 minutes while the batteries in the stalled machine partially charge.

11. Attempt to start the stalled engine.

12. Immediately after the stalled engine starts, disconnect the jump-start cable from the power source.

13. Disconnect the other end of the jump-start cable from the stalled machine.

14. Conclude the failure analysis on the starting charging system of the stalled machine, as required. Check the machine while the engine is running and the charging system is in operation.

Maintenance Section

Maintenance Access

i07867691

Access Door and Cover Locations

SMCS Code: 726A-CH

Engine Hood

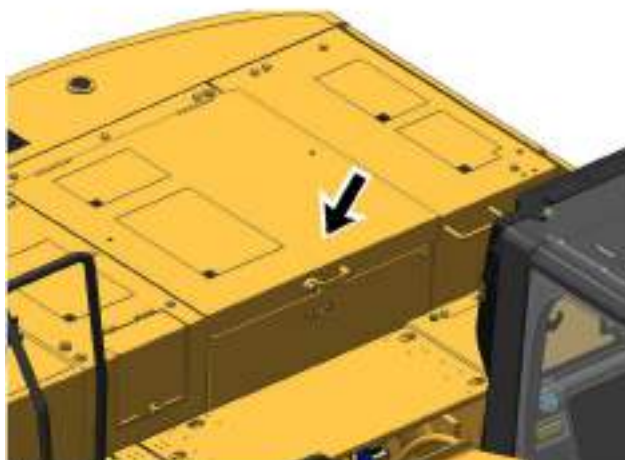


Illustration 452

g06225770

Allows access to engine and coolant tank.

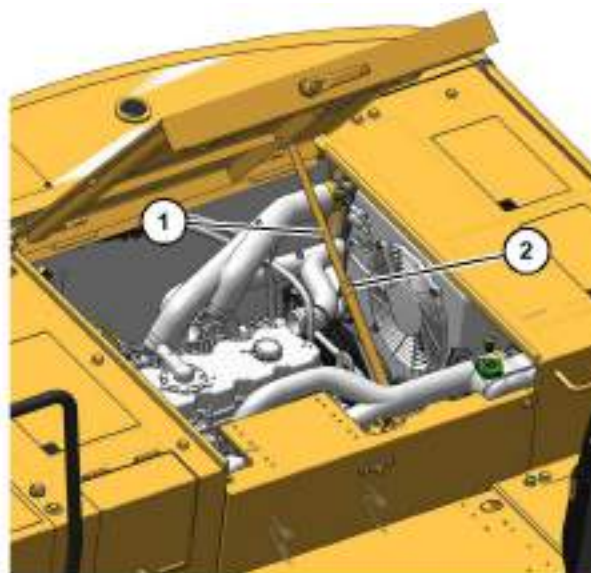


Illustration 453

g06225771

1. Open the engine hood.
2. Gas spring (1) will lock in place to hold the engine hood open.

WARNING

Operation of the Push Button Release for the Engine Hood

When closing the engine hood, only operate the push-button release by hand.

Failure to remove hands from the push-button release before closing the engine hood could result in personal injury.

Be sure to remove hands from the push-button release before completely closing the engine hood.

NOTICE

Do not add pressure to the engine hood when open.

WARNING

When closing the engine hood, Do Not operate the push-button release by foot.

Operation of the push-button release by foot could result in damage to the gas spring of the closing mechanism and/or personal injury.

Only operate the push-button release for closing the engine hood by hand.

3. To close the engine hood, support the engine hood with the door handle. Press the push-button release (2) to unlock the gas spring. Release the push button and slowly close the engine hood.

Left Rear Access Door



Illustration 454

g06367225

Allows access to disconnect switch, engine air filter, and window washer reservoir.

Right Side Access Door



Illustration 455

g06367434

Allows access to the engine oil filter, engine oil sampling port, and ground level dipstick. Additionally, the compartment houses the hydraulic pump, fuel filters, refueling pump, fuel tank drain valve, and hydraulic tank sight gauge.

Lubricant Viscosities and Refill Capacities

i07419350

Lubricant Viscosities (Fluids Recommendations)

SMCS Code: 7581

General Information for Lubricants

When you are operating the machine in temperatures below -20°C (-4°F), refer to Special Publication, SEBU5898, "Cold Weather Recommendations". This publication is available from your Cat dealer.

Refer to the "Lubricant Information" section in the latest revision of the Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for a list of Cat engine oils and for detailed information. This manual may be found on the web at Safety.Cat.com.

The footnotes are a key part of the tables. Read all footnotes that pertain to the machine compartment in question.

Selecting the Viscosity

To select the proper oil for each machine compartment, refer to the "Lubricant Viscosity for Ambient Temperature" table. Use the oil type AND oil viscosity for the specific compartment at the proper ambient temperature.

The proper oil viscosity grade is determined by the minimum ambient temperature (the air in the immediate vicinity of the machine). Measure the temperature when the machine is started and while the machine is operated. To determine the proper oil viscosity grade, refer to the "Min" column in the table. This information reflects the coldest ambient temperature condition for starting a cold machine and for operating a cold machine. Refer to the "Max" column in the table for operating the machine at the highest temperature that is anticipated. Unless specified otherwise in the "Lubricant Viscosities for Ambient Temperatures" tables, use the highest oil viscosity that is allowed for the ambient temperature.

Machines that are operated continuously should use oils that have the higher oil viscosity in the final drives and in the differentials. The oils that have the higher oil viscosity will maintain the highest possible oil film thickness. Refer to "General Information for Lubricants" article, "Lubricant Viscosities" tables, and any associated footnotes. Consult your Cat dealer if additional information is needed.

NOTICE

Not following the recommendations found in this manual can lead to reduced performance and compartment failure.

Engine Oil

Cat oils have been developed and tested to provide the full performance and life that has been designed and built into Cat engines.

Cat DEO-ULS or oils that meet the Cat ECF-3 specification, API CJ-4, and the newer API CK-4, are required for use in the applications listed below. Cat DEO-ULS and oils meeting Cat ECF-3 specification, API CJ-4, the newer API CK-4, and ACEA E9 oil categories have been developed with limited sulfated ash, phosphorus, and sulfur. These chemical limits are designed to maintain the expected aftertreatment devices life, performance, and service interval. If oils meeting the Cat ECF-3 specification, API CJ-4, the newer API CK-4 specifications are not available, oils meeting ACEA E9 may be used. ACEA E9 oils meet the chemical limits designed to maintain aftertreatment device life. ACEA E9 oils are validated using some but not all ECF-3 and API CJ-4 standard engine performance tests. Consult your oil supplier when considering use of an oil that is not Cat ECF-3, API CJ-4, or the newer API CK-4 qualified.

Failure to meet the listed requirements will damage aftertreatment-equipped engines and can negatively impact the performance of the aftertreatment devices. The Diesel Particulate Filter (DPF) if equipped, will plug sooner and require more frequent DPF ash service intervals.

Typical aftertreatment systems may include the following:

- Diesel Particulate Filters (DPF)
- Diesel Oxidation Catalysts (DOC)
- Selective Catalytic Reduction (SCR)
- Lean NOx Traps (LNT)

Other systems may apply.

Oils that are per API CI-4 or prior categories are not allowed. These oils have high ash and are not appropriate for use in engines with aftertreatment devices.

Table 27

Lubricant Viscosities for Ambient Temperatures						
Compartment or System	Oil Type and Performance Requirements	Oil Viscosities	°C		°F	
			Min	Max	Min	Max
Engine Crankcase for all Machines	Cat DEO-ULS Cold Weather	SAE 0W-40	-40	40	-40	104
	Cat DEO-ULS SYN	SAE 5W-40	-30	50	-22	122
	Cat DEO-ULS	SAE 10W-30	-18	40	0	104
		SAE 15W-40	-10	50	14	122
Pump Coupling (If Equipped)	Cat DEO-ULS	SAE 10W-30	-18	40	0	104

Hydraulic Systems

Refer to the “Lubricant Information” section in the latest revision of the Special Publication, SEBU6250, “Caterpillar Machine Fluids Recommendations” for detailed information. This manual may be found on the web at Safety.Cat.com.

The following are the preferred oils for use in most Cat machine hydraulic systems:

- Cat HYDO Advanced 10 SAE 10W
- Cat HYDO Advanced 20 SAE 20W
- Cat HYDO Advanced 30 SAE 30
- Cat BIO HYDO Advanced, Multigrade

Cat HYDO Advanced oils allow 6000 hours or higher oil drain intervals for most applications. S·O·S Services oil analysis is recommended when the oil drain interval is increased to 6000 hours or higher. In comparison, non-Cat commercial hydraulic oils (second choice oils) allow 2000 hours oil drain interval. It is recommended to follow the maintenance interval schedule for oil filter changes and for oil sampling that is stated in the Operation and Maintenance Manual for your particular machine. Consult your Cat dealer for details. When switching to Cat HYDO Advanced fluids, cross contamination with the previous oil should be kept to less than 10%.

Second choice oils are listed below.

- Cat MTO
- Cat DEO
- Cat DEO-ULS
- Cat TDTO
- Cat TDTO Cold Weather
- Cat TDTO-TMS
- Cat DEO-ULS Cold Weather

Note: Oil drain intervals of the oils listed above are less than those of Cat HYDO Advanced oils. The oil drain interval of these oils is typically 2000 hours and up to a maximum of 4000 hours. An exception is Cat TDTO Cold Weather oil which allows 6000 hours or higher oil drain interval. S·O·S Services oil analysis is required when the oils listed above are used in Cat hydraulic system components and hydrostatic transmissions.

Table 28

Lubricant Viscosities for Ambient Temperatures						
Compartment or System	Oil Type and Performance Requirements	Oil Viscosities	°C		°F	
			Min	Max	Min	Max
Hydraulic System	Cat HYDO Advanced 10 Cat TDTO	SAE 10W	-20	40	-4	104
	Cat HYDO Advanced 20 Cat TDTO	SAE 20W	-5	45	23	113
	Cat HYDO Advanced 30 Cat TDTO	SAE 30	10	50	50	122
	Cat BIO HYDO Advanced	"ISO 46" Multi-Grade	-30	50	-22	122
	Cat MTO Cat DEO-ULS Cat DEO	SAE10W-30	-20	40	-4	104
	Cat DEO-ULS Cat DEO	SAE15W-40	-15	50	5	122
	Cat TDTO-TMS	Multi-Grade	-15	50	5	122
	Cat DEO-ULS SYN	SAE 5W-40	-25	40	-13	104
	Cat DEO-ULS Cold Weather	SAE0W-40	-40	40	-40	104
	Cat TDTO Cold Weather	SAE 0W-20	-40	40	-40	104

For applications requiring the use of fire-resistant hydraulic fluids, Caterpillar recommends the use of EcoSafe FR-46. This product is a fully synthetic, non-aqueous hydraulic fluid. Water based and glycol-based hydraulic products are not recommended for use in Cat machine hydraulic systems. EcoSafe FR-46 is an ISO 46 multi-grade product. For more information refer to the product information provided by the manufacturer of EcoSafe hydraulic oil. Refer to your Cat dealer for availability.

Other Fluid Applications

Table 29

Excavators, Front Shovels, Mass Excavators, Demolition Excavators, and Track Material Handlers Lubricant Viscosities for Ambient Temperatures						
Compartment or System	Oil Type and Performance Requirements	Oil Viscosity Grade	°C		°F	
			Min	Max	Min	Max
Final Drives and Swing Drives	Cat TDTO Cold Weather	SAE 0W-20	-40	0	-40	32
	Cat TDTO	SAE 10W	-30	0	-22	32
		SAE 30 ⁽¹⁾	-30	35	-22	95
		SAE 50	-15	50	5	122
	Cat TDTO-TMS	Multi-Grade	-25	25	-13	77
Track Roller Frame Recoil Spring and Pivot Shaft Bearings	Cat TDTO Cold Weather	SAE 0W-20	-40	0	-40	32
	Cat TDTO	SAE 10W	-30	0	-22	32
		SAE 30 ⁽¹⁾	-20	25	-4	77

(continued)

(Table 29, contd)

Excavators, Front Shovels, Mass Excavators, Demolition Excavators, and Track Material Handlers Lubricant Viscosities for Ambient Temperatures						
Compartment or System	Oil Type and Performance Requirements	Oil Viscosity Grade	°C		°F	
			Min	Max	Min	Max
		SAE 50	0	50	32	122
	Cat TDTO-TMS	Multi-Grade	-25	25	-13	77
Track Idlers and Track Rollers	Cat DEO-ULS Cat DEO	SAE 15W-40 ⁽¹⁾	-10	50	14	122
	Cat DEO Cold Weather	SAE 0W-40	-40	40	-40	104
	Cat DEO-ULS SYN	SAE 5W-40	-35	40	-31	104
	Cat FDAO SYN	Multi-Grade	-30	50	-22	122

⁽¹⁾ Factory fill oil for standard configuration machines.

Special Lubricants

Grease

To use a non-Cat grease, the supplier must certify that the lubricant is compatible with Cat grease.

Each pin joint should be flushed with the new grease. Ensure that all old grease is removed. Failure to meet this requirement may lead to failure of a pin joint.

Table 30

Recommended Grease						
Compartment or System	Grease Type	NLGI Grade	°C		°F	
			Min	Max	Min	Max
External Lubrication Points	Cat Prime Application Grease	NLGI Grade 2	-20	140	-4	284
	Cat Extreme Application Grease	NLGI Grade 1	-20	140	-4	284
		NLGI Grade 2	-15	140	+5	284
	Cat Extreme Application Grease-Artic	NLGI Grade 0.5	-50	130	-58	266
	Cat Extreme Application Grease-Desert	NLGI Grade 2	-10	140	+14	284
	Cat Utility Grease	NLGI Grade 2	-20	140	-4	284
	Cat Ball Bearing Grease	NLGI Grade 2	-20	160	-4	320

Diesel Fuel Recommendations

Diesel fuel must meet Caterpillar Specification for Distillate Fuel and the latest revisions of "ASTM D975" and "EN 590" to ensure optimum engine performance. Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for the latest fuel information and for Cat fuel specification. This manual may be found on the Web at Safety.Cat.com.

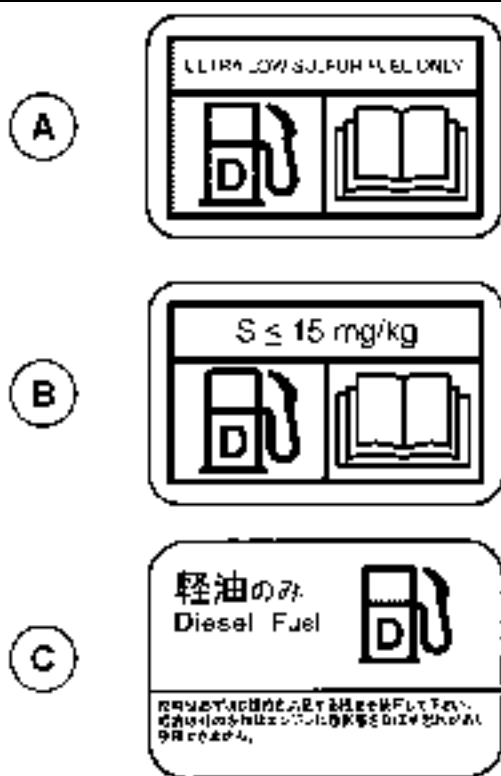


Illustration 456

g03218956

(A) North America film

(B) Europe, Africa, Middle East film

(C) Japan film

NOTICE

Ultra Low Sulfur Diesel (ULSD) fuel 0.0015 percent (≤ 15 ppm (mg/kg)) sulfur is required by regulation for use in engines certified to nonroad Tier 4 standards (U.S. EPA Tier 4 certified) and that are equipped with exhaust aftertreatment systems.

European ULSD 0.0010 percent (≤ 10 ppm (mg/kg)) sulfur fuel is required by regulation for use in engines certified to European Stage V type-approved nonroad engines. Additionally, the Cetane number should not be less than 45, and the bio-diesel content should not be greater than 20% volume/volume.

Misfueling with fuels of higher sulfur level can have the following negative effects:

- Reduce engine efficiency and durability.
- Increase the wear.
- Increase the corrosion.
- Increase the deposits.
- Lower fuel economy
- Shorten the time period between oil drain intervals (more frequent oil drain intervals).
- Increase overall operating costs.

Failures that result from the use of improper fuels are not Caterpillar factory defects. Therefore, the cost of repairs would not be covered by a Caterpillar warranty.

Caterpillar does not require the use of ULSD in non-road and machine applications that are not Tier 4/Stage V certified engines and are not equipped with aftertreatment devices. For Tier 4/Stage V certified engines, always follow operating instructions to ensure that the correct fuels are used.

Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more details about fuels, lubricants, and Tier 4/Stage V requirements. This manual may be found on the web at Safety.Cat.com.

Diesel Exhaust Fluid

General Information

Diesel Exhaust Fluid (DEF) is a liquid that is injected into the exhaust system of engines equipped with Selective Catalytic Reduction (SCR) systems. SCR reduces emissions of nitrogen oxides (NOx) in diesel engine exhaust.

Diesel Exhaust Fluid (DEF) is also known under other names including Aqueous Urea Solution (AUS) 32, AdBlue, or generically referred to as urea.

In engines equipped with SCR emissions reduction system, DEF is injected in controlled amounts into the engine exhaust stream. At the elevated exhaust temperature, urea in DEF is converted to ammonia. The ammonia chemically reacts with NOx in diesel exhaust in the presence of the SCR catalyst. The reaction converts NOx into harmless nitrogen (N₂) and water (H₂O).

DEF Recommendations

For use in Cat engines, DEF must meet all the requirements defined by "ISO 22241-1" Requirements.

Caterpillar recommends the use of DEF available through the Cat parts ordering system for use in Cat engines equipped with SCR systems.

- Shorten the time interval between aftertreatment device service intervals (cause the need for more frequent service intervals)
- Adversely impact the performance and life of aftertreatment devices (cause loss of performance)
- Reduce regeneration intervals of aftertreatment devices

In North America, commercial DEF that is API approved and meets all the requirements defined in "ISO 22241-1" may be used in Cat engines that are equipped with SCR systems.

Outside of North America, commercial DEF that meets all requirements defined in "ISO 22241-1" may be used in Cat engines that are equipped with SCR systems.

The supplier should provide documentation to prove that the DEF is compliant with the requirements of "ISO 22241-1".

NOTICE

Cat does not warrant the quality or performance of non-Cat fluids.

NOTICE

Do not use agriculture grade urea solutions. Do not use any fluids that do not meet "ISO 22241-1" Requirements in SCR emissions reduction systems. Use of these fluids can result in numerous problems including damage to SCR equipment and a reduction in NOx conversion efficiency.

DEF is a solution of solid urea that is dissolved in demineralized water to produce a final concentration of 32.5% urea. DEF concentration of 32.5% is optimal for use in SCR systems. DEF solution of 32.5% urea has the lowest attainable freeze point of -11.5° C (11.3° F). DEF concentrations that are higher or lower than 32.5% have higher freeze points. DEF dosing systems and "ISO 22241-1" specifications are designed for a solution that is approximately 32.5%.

Caterpillar offers a refractometer, Cat part number 360-0774, that can be used to measure DEF concentration. Follow the instructions provided with the instrument. Appropriate commercial portable refractometers can be used to determine urea concentration. Follow the instructions from the manufacturer.

DEF Guidelines

DEF solution is typically colorless and clear. Changes to color or clarity are indicators of quality issues. Quality of DEF can degrade when stored and handled inappropriately or if DEF is not protected from contamination. Details are provided below.

If quality issues are suspected, testing of DEF should focus on urea percentage, alkalinity as NH₃ and biuret content. DEF that does not pass all these tests or that is no longer clear should not be used.

Materials compatibility

DEF is corrosive. Due to the corrosion caused, DEF must be stored in tanks constructed of approved materials. Recommended storage materials:

Stainless Steels:

- 304 (S30400)
- 304L (S30403)
- 316 (S31600)
- 316L (S31603)

Alloys and metals:

- Chromium Nickel (CrNi)
- Chromium Nickel Molybdenum (CrNiMo)
- Titanium

Non-metallic materials:

- Polyethylene
- Polypropylene
- Polyisobutylene
- Teflon (PFA)
- Polyfluoroethylene (PFE)
- Polyvinylidene fluoride (PVDF)
- Polytetrafluoroethylene (PTFE)

Materials NOT compatible with DEF solutions include Aluminum, Magnesium, Zinc, Nickel coatings, Silver and Carbon steel, and Solders containing any of the above. Unexpected reactions may occur if DEF solutions come in contact with any non-compatible material or unknown materials.

Bulk storage

Follow all local regulations covering bulk storage tanks. Follow proper tank construction guidelines. Tank volume typically should be 110% of planned capacity. Appropriately vent indoor tanks. Plan for control of overflow of the tank. Heat tanks that dispense DEF in cold climates.

Bulk tank breathers should be fitted with filtration to keep airborne debris from entering the tank. Desiccant breathers should not be used because water will be absorbed, which potentially can alter DEF concentration.

Handling

Follow all local regulations covering transport and handling. DEF transport temperature is recommended to be -5° C (23° F) to 25° C (77° F). All transfer equipment and intermediate containers should be used exclusively for DEF. Containers should not be reused for any other fluids. Ensure that transfer equipment is made from DEF-compatible materials. Recommended material for hoses and other non-metallic transfer equipment includes:

- Nitrile Rubber (NBR)
- Fluoroelastomer (FKM)
- Ethylene Propylene Diene Monomer (EPDM)

The condition of hoses and other nonmetallics that are used with DEF should be monitored for signs of degradation. DEF leaks are easily recognizable by white urea crystals that accumulate at the site of the leak. Solid urea can be corrosive to galvanized or unalloyed steel, aluminum, copper, and brass. Leaks should be repaired immediately to avoid damage to surrounding hardware.

Cleanliness

Contaminants can degrade the quality and life of DEF. Filtering DEF is recommended when dispensed into the DEF tank. Filters should be compatible with DEF and should be used exclusively with DEF. Check with the filter supplier to confirm compatibility with DEF before using. Mesh-type filters using compatible metals, such as stainless steel, are recommended. Paper (cellulose) media and some synthetic filter media are not recommended because of degradation during use.

Care should be taken when dispensing DEF. Spills should be cleaned immediately. Machine or engine surfaces should be wiped clean and rinsed with water. Caution should be used when dispensing DEF near an engine that has recently been running. Spilling DEF onto hot components will cause harmful vapors.

Stability

NOTICE

Storing Diesel Exhaust Fluid in high heat areas is not recommended. Do not store DEF in high heat generating areas on the machine, such as the pump compartment or the engine compartment. The quality of the DEF can degrade when exposed to high temperatures.

DEF fluid is stable when stored and handled properly. The quality of DEF rapidly degrades when stored at high temperatures. The ideal storage temperature for DEF is between -9° C (15.8° F) and 25° C (77° F). DEF that is stored above 35° C (95° F) for longer than 1 month must be tested before use. Testing should evaluate Urea Percentage, Alkalinity as NH3 and Biuret content.

The length of storage of DEF is listed in the following table:

Table 31

Storage Temperature	Expected DEF Life
Below 25° C (77° F)	18 months
25° C (77° F) to 30° C (86° F)	12 months
30° C (86° F) to 35° C (95° F)	6 months
Above 35° C (95° F)	test quality before use

Refer to “ISO 22241” document series for more information about DEF quality control.

Note: Dispose of all fluids according to applicable regulations and mandates.

Fuel Additives

Cat Diesel Fuel Conditioner and Cat Fuel System Cleaner are available for use when needed. These products are applicable to diesel and biodiesel fuels. Consult your Cat dealer for availability.

Biodiesel

Biodiesel is a fuel that can be made from various renewable resources that include vegetable oils, animal fat, and waste cooking oil. Soybean oil and rapeseed oil are the primary vegetable oil sources. To use any of these oils or fats as fuel, the oils, or fats are chemically processed (esterified). The water and contaminants are removed.

U.S. distillate diesel fuel specification “ASTM D7467” includes up to B20 (20 percent) biodiesel. Any diesel fuel in the U.S. may contain up to B20 biodiesel fuel.

European distillate diesel fuel specification “EN16709:2015” includes up to B20 (20 percent) biodiesel. Any diesel fuel in Europe may contain up to B20.

Note: The diesel portion used in the biodiesel blend must be Ultra Low Sulfur Diesel (15 ppm sulfur or less, per “ASTM D975”). In Europe the diesel fuel portion used in the biodiesel blend must be sulfur free diesel (10 ppm sulfur or less, per “EN 590”). The final blend must have 15 ppm sulfur or less.

When biodiesel fuel is used, certain guidelines must be followed. Biodiesel fuel can influence the engine oil, aftertreatment devices, non-metallic, fuel system components, and others. Biodiesel fuel has limited storage life and has limited oxidation stability. Follow the guidelines and requirements for engines that are seasonally operated.

To reduce the risks associated with the use of biodiesel, the final biodiesel blend and the biodiesel fuel used must meet specific blending requirements.

All the guidelines and requirements are provided in the latest revision of Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations". This manual may be found on the web at Safety.Cat.com.

Coolant Information

The information provided in this "Coolant Recommendation" section should be used with the "Lubricants Information" provided in the latest revision of Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations". This manual may be found on the web at Safety.Cat.com.

The following two types of coolants may be used in Cat diesel engines:

Preferred – Cat ELC (Extended Life Coolant)

Acceptable – Cat DEAC (Diesel Engine Antifreeze/Coolant)

NOTICE

Never use water alone as a coolant. Water alone is corrosive at engine operating temperatures. In addition, water alone does not provide adequate protection against boiling or freezing.

Table 32

Recommendations for Finished Coolants for use in Cat engines				
Coolant Type	Recommendations	Product	Service hours ⁽¹⁾⁽²⁾	Required Maintenance ⁽³⁾
Cat ELC, Cat ELI, or commercial coolant that meets Cat EC-1	Preferred	Cat ELC	12000 hours or 6 years	Add Cat ELC Extender at 6000 service hours or one half of service life
		Cat ELI (water based) ⁽⁴⁾	12000 hours or 6 years	Add Cat ELC Extender at 6000 service hours or one half of service life
	Min requirements	Cat EC-1 specification and "ASTM D6210" and Organic Additive Technology (OAT) based on a combination of a monocarboxylic acid and a dicarboxylic acid. Free of phosphate, borate, and silicate. Tolyltriazole: minimum typical concentration of 900 ppm Nitrite: minimum typical concentration of 500 ppm in new coolants	6000 hours or 6 years	Add Extender at 3000 service hours or one half of service life
Cat DEAC, Cat SCA, conventional coolants, and commercial extended life coolants that do not meet EC-1	Acceptable	Cat DEAC	3000 hours or 3 years	SCA at maintenance intervals
		Cat SCA (water based) ⁽⁴⁾	3000 hours or 2 years	SCA at maintenance intervals

(continued)

Maintenance Section
Capacities (Refill)

(Table 32, contd)

Recommendations for Finished Coolants for use in Cat engines				
	Min requirements for fully formulated Heavy-Duty Commercial coolants	"ASTM D6210" and Nitrite (as NO ₂) concentration: Minimum of 1200 ppm (70 grains/US gal) and maximum of 2400 ppm (140 grains/US gal) Silicon concentration: minimum of 100 ppm and maximum of 275 ppm	3000 hours or 2 years	SCA at maintenance intervals
	Min requirements for SCA and water ⁽⁴⁾ ⁽⁵⁾	Commercial supplemental coolant additive and water having Nitrite (as NO ₂) concentration: Minimum of 1200 ppm (70 grains/US gal) and maximum of 2400 ppm (140 grains/US gal) Silicon concentration: minimum of 100 ppm and maximum of 275 ppm	3000 hours or 1 year	Per manufacturer recommendations

- (1) New Coolants at 50 volume percent diluted. Coolants that are prediluted at the coolant manufacturer must be diluted with water that meets Reagent 4 "ASTM D1193" requirements.
- (2) Maintain the in-service coolant at the given limits.
- (3) For appropriate maintenance procedures, refer to the details given in this Chapter. For applications that allow the use of Cat ELI in water, a minimum of 7.5 percent of Cat ELI is recommended. For applications that allow the use of SCA and water, a minimum of 6 percent to a maximum of 8 percent concentration of Cat SCA are recommended.
- (4) Water-based coolants are not allowed for use in machines that has NO_x reduction aftertreatment devices, in engines that has AATAC and in Marine engines that have SWAC
- (5) There are currently no industry standards to define the quality of water-based conventional coolants. To control the quality of SCA and water coolants, the commercial SCA additive package should pass ASTM D6210 when this package is used in a glycol-based coolant. Do not use a commercial SCA additive package that only meets the ASTM D3306 or equivalent specification when used in a glycol-based coolant.

i08019785

Capacities (Refill)

SMCS Code: 1000; 7000

Table 33

Approximate Capacities (Refill)			
Component or System	Liters	US gal	Recommended Type
Cooling System	25	6.6	Refer to Operation and Maintenance Manual, "Lubricant Viscosities".
Fuel Tank	313	82.7	
Engine Crankcase with Filter	15	4.0	
Hydraulic System ⁽¹⁾	114	30.1	
Swing Drive	5	1.3	
Each Final Drive	5	1.3	
DEF Tank	25.8	6.82	
	kg	lbs	
Swing Gear	14.9	32.8	Refer to Operation and Maintenance Manual, "Lubricant Viscosities".

(continued)

(Table 33, contd)

Approximate Capacities (Refill)			
Refrigerant ⁽²⁾	0.9	2	R-134a
	mL	oz	
Refrigerant Oil ⁽²⁾	240	8	Polyalkylene Glycol (PAG) Oil

⁽¹⁾ The amount of hydraulic fluid that is needed to refill the hydraulic system after performing Operation and Maintenance Manual, "Hydraulic System Oil - Change"

⁽²⁾ Refer to Service Manual, "Air Conditioning and Heating R-134a for All Caterpillar Machines" for additional information

i07445339

S·O·S Information

SMCS Code: 1000; 1348; 3080; 4050; 5050; 7000; 7542-008

S·O·S Services is a highly recommended process for Cat customers to use in order to minimize owning and operating cost. Customers provide oil samples, coolant samples, and other machine information. The dealer uses the data in order to provide the customer with recommendations for management of the equipment. In addition, S·O·S Services can help determine the cause of an existing product problem.

Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluid Recommendations" for detailed information concerning S·O·S Services.

The effectiveness of S·O·S Services is dependent on timely submission of the sample to the laboratory at recommended intervals.

Refer to the Operation and Maintenance Manual, "Maintenance Interval Schedule" for a specific sampling location and a service hour maintenance interval.

Consult your Cat dealer for complete information and assistance in establishing an S·O·S program for your equipment.

Maintenance Support

i07477696

Prepare the Machine for Maintenance

SMCS Code: 1000; 7000

Refer to the following procedure before you perform any maintenance to the machine.

 WARNING

Personal injury can result from hydraulic oil pressure and hot oil.

Hydraulic oil pressure can remain in the hydraulic system after the engine has been stopped. Serious injury can be caused if this pressure is not released before any service is done on the hydraulic system.

Make sure all of the attachments have been lowered, oil is cool before removing any components or lines. Remove the oil filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat® products.

Dispose of all fluids according to local regulations and mandates.

Note: Permit only one operator on the machine. Keep all other personnel away from the machine or in view of the operator.

1. Park the machine on a dry, level, solid surface that is free of any debris.

Note: The surface must be solid enough to support the weight of the machine and any tooling that is used to support the machine.

2. Engage the parking brake. Place wheel blocks in front and behind the wheels or tracks.
3. Lower all work tools to the ground.
4. Stop the engine.

5. Release the pressure in the hydraulic system. Refer to Operation and Maintenance Manual, "System Pressure Release" for more information.

Perform a visual inspection first. If the visual checks are completed but the problem has not been identified, perform operational checks. If the problem has not been identified, perform instrument tests. This procedure will help to identify system problems.

i07214904

Service Interval Chart

SMCS Code: 7000

The service interval chart is inside the battery compartment door on the left side of the machine.

Refer to the Operation and Maintenance Manual, "Maintenance Interval Schedule" for the correct maintenance intervals and procedures that are specific to your machine.

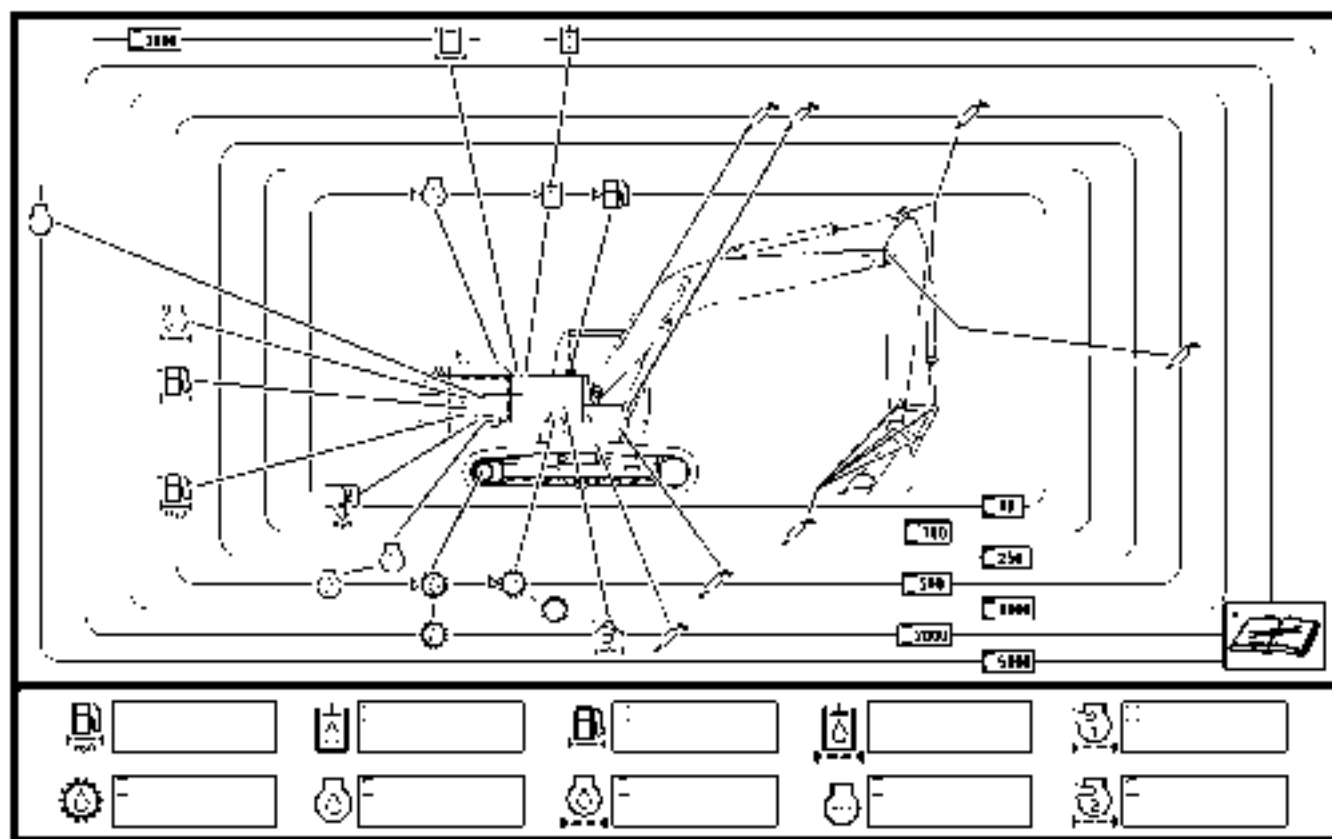


Illustration 457

g06255255



Fuel system water separator element – Replace the fuel system water separator element.



Fumes Disposal Filter Element – Replace the fumes disposal filter element.



Grease zerk – Lubricate the designated locations.



Hydraulic oil level – Check the hydraulic oil level.



Hydraulic oil – Change the hydraulic oil.



Hydraulic oil filter – Change the hydraulic oil filter.



Swing drive oil level – Check the swing drive oil level.



Swing drive oil – Change the swing drive oil.

i07956707

System Pressure Release

SMCS Code: 1250-553-PX; 1300-553-PX; 1350-553-PX; 5050-553-PX; 6700-553-PX; 7540-553-PX

WARNING

Personal injury or death can result from sudden machine movement.

Sudden movement of the machine can cause injury to persons on or near the machine.

To prevent injury or death, make sure that the area around the machine is clear of personnel and obstructions before operating the machine.

Coolant System

WARNING

Pressurized system: Hot coolant can cause serious burn. To open cap, stop engine, wait until radiator is cool. Then loosen cap slowly to relieve the pressure.

To relieve the pressure from the coolant system, turn off the machine. Allow the cooling system pressure cap to cool. Remove the cooling system pressure cap slowly to relieve pressure.

Hydraulic System

The release of hydraulic pressure in a hydraulic circuit is required before service is performed to that hydraulic circuit. Release the pressure in the following hydraulic circuits before any hydraulic lines are disconnected or removed from that hydraulic circuit.

- Boom hydraulic circuit
- Stick hydraulic circuit
- Bucket hydraulic circuit
- Swing hydraulic circuit
- Travel hydraulic circuit
- Attachment hydraulic circuits (if equipped)
- Pilot hydraulic circuit
- Return hydraulic circuit

Note: Refer to the Disassembly and Assembly Manual for additional information concerning service of the components of specific hydraulic circuits.

Release of Hydraulic Pressure from the Main Hydraulic System

WARNING

Personal injury can result from hydraulic oil pressure and hot oil.

Hydraulic oil pressure can remain in the hydraulic system after the engine has been stopped. Serious injury can be caused if this pressure is not released before any service is done on the hydraulic system.

Make sure all of the work tools have been lowered to the ground, and the oil is cool before removing any components or lines. Remove the oil filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat® products.

Dispose of all fluids according to local regulations and mandates.

Perform the following steps to release the hydraulic system pressure from the main hydraulic system.

Note: For additional safety, wrap hydraulic joint with material that could absorb/reduce any residual pressure of oil when released. Loosen the joint slowly, pause, and carefully check hydraulic joint for tensions indicating presence of pressure or spring force in lines or components.

1. Position the machine on level ground.



Illustration 458

g06185115

2. Fully retract the stick cylinder rod. Adjust the position of the bucket so that the bucket is parallel to the ground. Lower the boom until the work tool is flat on the ground. Refer to Illustration 458.

3. Release the system pressure from the implement and swing hydraulic circuits.

Note: Perform Step 3b through Step 3d immediately after the engine is shut off to insure adequate pilot system pressure is available to release the pressure in the hydraulic circuits.

- a. Shut off the engine.
- b. Turn the engine start switch to the ON position without starting the engine.

- c. Place the hydraulic activation control lever in the UNLOCKED position.

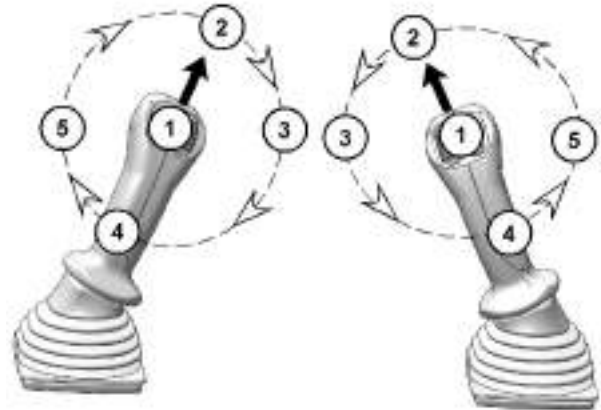


Illustration 459

g06184822

- d. Move both joysticks in a circular motion to the FULL STROKE positions multiple times until the pilot accumulator has been exhausted.

Note: Pilot pressure is required to relieve hydraulic system pressure.

- e. Place the hydraulic activation control lever in the LOCKED position.
- f. Start the engine to recharge the pilot accumulator.

Note: Do not activate any controls when recharging the pilot accumulator.

- g. Shut off the engine.
- h. Repeat Step 3b through Step 3g until the high-pressure lines have been released.

Note: Each time the accumulator is recharged, start the joysticks at different positions or rotate in the reverse direction. Doing so will ensure that the same circuit is not being relieved each time.

Note: You can also move only the joysticks or pedals of the hydraulic circuit that requires service to the full stroke positions after moving joysticks in a circular motion multiple times. This action will release the high pressure only in that single hydraulic circuit. This action will also release any pressure that might be present in the pilot hydraulic circuit.

Maintenance Section
System Pressure Release

4. Release hydraulic system pressure in the attachment circuits.

- a. Start the engine to charge pilot accumulator.
- b. Shut off the engine.

Note: Perform Step 4c through Step 4e immediately after the engine is shut off to insure adequate pilot system pressure is available to release the pressure in the hydraulic circuits.

- c. Turn the engine start switch to the ON position without starting the engine.
- d. Place the hydraulic activation control lever in the UNLOCKED position.
- e. Activate the switch or pedal for the attachment circuit.
- f. Place the hydraulic activation control lever in the LOCKED position.
- g. Start the engine to recharge pilot accumulator.

Note: Do not activate any controls when recharging pilot accumulator.

- h. Shut off the engine.
- i. Repeat Step 4c through Step 4f for each attachment circuit.

5. After releasing the hydraulic pressure in each of the desired hydraulic circuits, place the hydraulic activation control lever in the LOCKED position.

6. Turn the engine start switch to the OFF position.

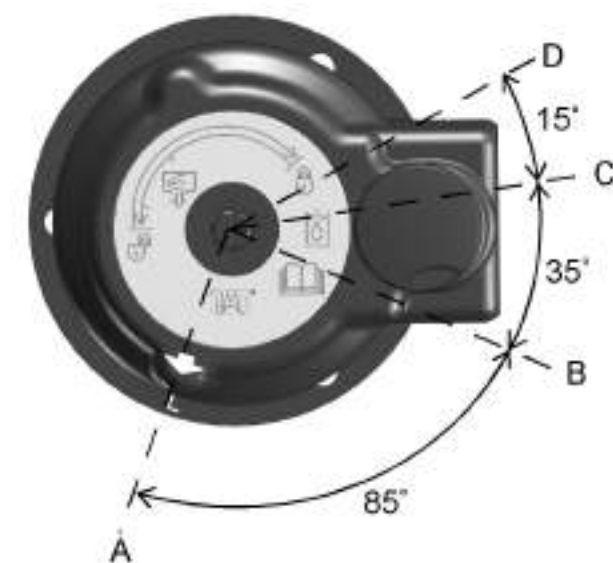


Illustration 460

g06184990

Hydraulic oil tank filler cap

- (A) LOCK position
- (B) PRESSURE RELEASE - START position
- (C) PRESSURE RELEASE - END position
- (D) OPEN position

7. Release the pressure that may be present in the return hydraulic circuit with the following procedure. Refer to Illustration 460 for filler cap positions.

- a. Turn the filler cap counterclockwise and move the arrow from position (A) to position (B).
- b. Release the pressure for a minimum of 45 seconds by moving the arrow from position (B) to position (C).
- c. Push down the filler cap and move the arrow from position (C) to position (D).

Note: The travel hydraulic circuit is open to the hydraulic tank. Pressure from the travel circuit is released by releasing pressure from the return circuit.

8. Release the pressure that may be present in the boom circuit to remove the risk of residual pressure in the line. Make sure that the engine start switch is in the OFF position and the pressure in the hydraulic tank has been released.

- a. Remove the hydraulic oil tank filler cap.
- b. Remove any covers to access the main control valve.

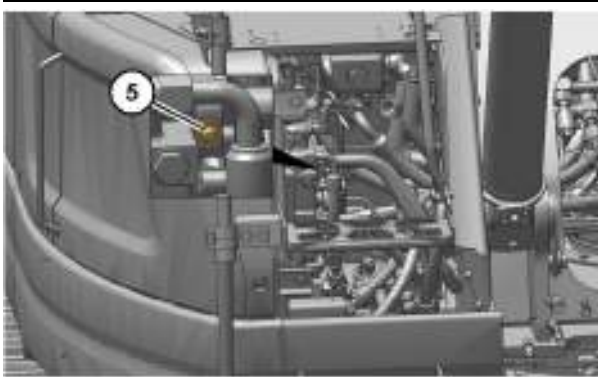


Illustration 461

g06494414

Main control valve

(5) Screw

- c. Use a clean hose of adequate length and size and connect to screw (5). Put the other end of the hose in the filler cap opening.
- d. Slowly loosen screw (5) by a maximum of 1/2 turn. Loosening the screw allows the hydraulic oil in the boom circuit to drain into the hydraulic tank.
- e. Tighten screw (5) to $13 \pm 2 \text{ N}\cdot\text{m}$ ($9 \pm 1 \text{ lb ft}$).

Note: Refer to the Operation and Maintenance Manual, Equipment Lowering with Engine Stopped for information on lowering the work tool with the engine off.

- f. Disconnect the hose from screw (5). Do not allow the oil that is contained in the hose to spill. Drain the oil into a suitable container.
9. The pressure in the multiple hydraulic circuits that require service is now released and lines and components can be disconnected or removed from those hydraulic circuits.

i07746333

Welding on Machines and Engines with Electronic Controls

SMCS Code: 1000; 7000

Do not weld on any protective structure. If it is necessary to repair a protective structure, contact your Cat dealer.

Proper welding procedures are necessary to avoid damage to the electronic controls and to the bearings. When possible, remove the component that must be welded from the machine or the engine and then weld the component. If you must weld near an electronic control on the machine or the engine, temporarily remove the electronic control to prevent heat related damage. The following steps should be followed to weld on a machine or an engine with electronic controls.

1. Turn off the engine. Place the engine start switch in the OFF position.
2. If equipped, turn the battery disconnect switch to the OFF position. If there is no battery disconnect switch, remove the negative battery cable at the battery.

NOTICE

Do NOT use electrical components (ECM or sensors) or electronic component grounding points for grounding the welder.

3. Clamp the ground cable from the welder to the component that will be welded. Place the clamp as close as possible to the weld. Make sure that the electrical path from the ground cable to the component does not go through any bearing. Use this procedure to reduce the possibility of damage to the following components:
 - Bearings of the drive train
 - Hydraulic components
 - Electrical components
 - Other components of the machine
4. Protect any wiring harnesses and components from the debris and the spatter which is created from welding.
5. Use standard welding procedures to weld the materials together.

i08292675

Maintenance Interval Schedule

SMCS Code: 7000

Ensure that all safety information, warnings, and instructions are read and understood before any operation or any maintenance procedures are performed.

The user is responsible for the performance of maintenance. All adjustments, the use of proper lubricants, fluids, filters, and the replacement of components due to normal wear and aging are included. Failure to adhere to proper maintenance intervals and procedures may result in diminished performance of the product and/or accelerated wear of components.

Use mileage, fuel consumption, service hours, or calendar time, **WHICH EVER OCCURS FIRST**, to determine the maintenance intervals. Products that operate in severe operating conditions may require more frequent maintenance. Refer to the maintenance procedure for any other exceptions that may change the maintenance intervals.

Note: The aftertreatment system can be expected to function properly for the useful life of the engine (emissions durability period), as defined by regulation. All prescribed maintenance requirements must be followed.

Note: Before each consecutive interval is performed, all maintenance from the previous interval must be performed.

The following guidelines should be followed if the service hours are not met:

Items listed between 10 and 100 service hours should be performed at least every 3 months.

Items listed between 250 and 500 service hours should be performed at least every 6 months.

Items listed between 1000 service hours and 2500 service hours should be performed at least every year.

When Required

" Air Conditioner/Cab Heater Filter (Recirculation) - Inspect/Replace"	298
" Battery Electrolyte Level - Check"	298
" Battery or Battery Cable - Inspect/Replace"	299
" Bucket Linkage - Inspect/Adjust"	303
" Bucket Tips - Inspect/Replace"	304
" Cab Air Filter (Fresh Air) - Clean/Replace"	310
" Camera - Clean"	311

" Condenser (Refrigerant) - Clean"	312
" DEF Filler Screen - Clean"	319
" Diesel Exhaust Fluid - Drain"	320
" Diesel Exhaust Fluid - Fill"	321
" Engine Air Filter Primary and/or Secondary Element - Replace"	325
" Ether Starting Aid Cylinder - Replace"	334
" Film (Product Identification) - Clean"	335
" Fuel System - Prime"	338
" Fuel Tank Strainer - Clean"	342
" Fuses - Replace"	344
" High Intensity Discharge Lamp (HID) - Replace"	348
" Oil Filter - Inspect"	362
" Radiator, Aftercooler and Oil Cooler Cores - Clean"	362
" Rollover Protective Structure (ROPS) - Inspect"	364
" Shovel Crane - Inspect"	365
" Shovel Crane - Lubricate"	368
" Track Adjustment - Adjust"	374
" Undercarriage - Check"	377
" Window Washer Reservoir - Fill"	377
" Window Wiper - Inspect/Replace"	378
" Windows - Clean"	378

Every 10 Service Hours or Daily for First 50 Hours

" Boom and Stick Linkage - Lubricate"	301
" Boom and Stick Linkage - Lubricate"	300
" Bucket Linkage - Lubricate"	304

Every 10 Service Hours or Daily

" Cooling System Coolant Level - Check"	316
" Engine Oil Level - Check"	329
" Fuel System Water Separator - Drain"	341
" Fuel Tank Water and Sediment - Drain"	342
" Hydraulic System Oil Level - Check"	357
" Indicators and Gauges - Test"	360

“ Seat Belt - Inspect”	364
“ Track Adjustment - Inspect”	375
“ Travel Alarm - Test”	376

Every 100 Service Hours

“ Bucket Linkage - Lubricate”	304
“ Oil Filter (Hydraulic Hammer) - Replace”	360

Every 250 Service Hours

“ Cooling System Coolant Sample - Obtain”	317
“ Engine Oil Sample - Obtain”	331
“ Final Drive Oil Sample - Obtain”	337

Initial 500 Hours (for New Systems, Refilled Systems, and Converted Systems)

“ Cooling System Coolant Sample - Obtain”	317

Initial 500 Service Hours

“ Final Drive Oil - Change”	336
“ Swing Drive Oil - Change”	369

Every 500 Service Hours

“ Boom and Stick Linkage - Lubricate”	300
“ Boom and Stick Linkage - Lubricate”	301
“ Engine Oil and Filter - Change”	331
“ Final Drive Oil Level - Check”	336
“ Hydraulic System Oil Sample - Obtain”	359
“ Swing Bearing - Lubricate”	369
“ Swing Drive Oil Level - Check”	371
“ Swing Drive Oil Sample - Obtain”	372

Every 1000 Service Hours

“ Battery - Clean”	298
“ Battery Hold-Down - Tighten”	299
“ Belt - Inspect/Adjust/Replace”	299
“ Fuel System Primary Filter (Water Separator) Element - Replace”	339
“ Fuel System Secondary Filter - Replace”	340

“ Swing Drive Oil - Change”	369

Every 2000 Service Hours

“ Final Drive Oil - Change”	336
“ Fuel Cap Filter - Replace”	338
“ Fumes Disposal Filter Element - Replace”	343
“ Swing Gear - Lubricate”	372

Every Year

“ Cooling System Coolant Sample - Obtain”	317

Every 3000 Service Hours

“ Hydraulic System Oil Filter (Return) - Replace”	355

Every 3 Years After Date of Installation or Every 5 Years After Date of Manufacture

“ Seat Belt - Replace”	365

Every 5000 Service Hours

“ Diesel Exhaust Fluid Filter - Replace”	322
“ Diesel Exhaust Fluid Injector - Replace”	323
“ Receiver Dryer (Refrigerant) - Replace”	363

Every 6000 Service Hours or 3 Years

“ Cooling System Coolant Extender (ELC) - Add”	315
“ Hydraulic System Oil - Change”	349

Every 10 000 Service Hours

“ DEF Manifold Filters - Replace”	320

Every 12 000 Service Hours or 6 Years

“ Cooling System Coolant (ELC) - Change”	313

i06954215

Air Conditioner/Cab Heater Filter (Recirculation) - Inspect/Replace

SMCS Code: 1054-040-A/C; 1054-510-A/C

NOTICE

An air recirculation filter element plugged with dust will result in decreased performance and service life to the air conditioner or cab heater.

To prevent decreased performance, clean the filter element, as required.

The air conditioner filter is on the lower left side of the cab behind the seat.

1. Slide the operator seat forward.

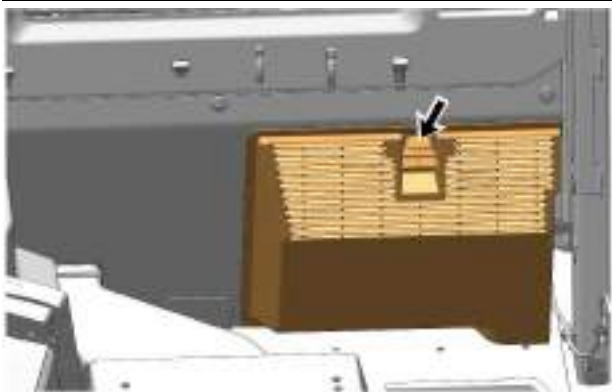


Illustration 462

g06181599

2. Release the cover latch.

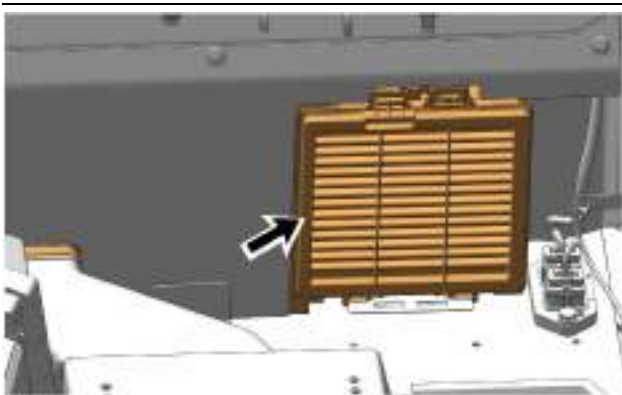


Illustration 463

g06181603

3. Slide the filter element upward.
4. Tap the air filter to remove the dirt. Do not use compressed air to clean the filter.

5. After you clean the filter element, inspect the filter element. If the filter element is damaged or badly contaminated, use a new filter element. Make sure that the filter element is dry.

6. Install the filter element.

7. Install the cover.

NOTICE

Failure to reinstall the filter element for the air conditioning system will contaminate and damage the system components.

i00934864

Battery - Clean

SMCS Code: 1401-070

Clean the battery surface with a clean cloth. Keep the terminals clean and keep the terminals coated with petroleum jelly. Install the post cover after you coat the terminal post with petroleum jelly.

i06019968

Battery Electrolyte Level - Check

SMCS Code: 1401-535-FLV; 1401; 1401-535

WARNING

All lead-acid batteries contain sulfuric acid which can burn the skin and clothing. Always wear a face shield and protective clothing when working on or near batteries.

Note: If the machine is operated in extreme temperatures, check the electrolyte level Every 500 Service Hours or 3 months.

When the engine is not run for long periods of time or when the engine is run for short periods, the batteries may not fully recharge. Ensure a full charge in order to help prevent the battery from freezing.

1. Clean the battery surface with a clean cloth. Clean the terminals and the cable clamps. Coat the clamps and the terminals with silicone lubricant or petroleum jelly. Install the post cover.
2. Inspect the electrolyte level in each battery cell. Maintain the electrolyte level to the bottom of the filler openings. Use distilled water. If distilled water is not available, use clean drinking water.

i00934872

Battery Hold-Down - Tighten

SMCS Code: 7257

Tighten the hold-downs for the battery in order to prevent the batteries from moving during machine operation.

i07592714

Battery or Battery Cable - Inspect/Replace

SMCS Code: 1401; 1401-561; 1401-040; 1401-510; 1402-040; 1402-510



WARNING

Personal injury can result from battery fumes or explosion.

Batteries give off flammable fumes that can explode. Electrolyte is an acid and can cause personal injury if it contacts the skin or eyes.

Prevent sparks near the batteries. Sparks could cause vapors to explode. Do not allow jumper cable ends to contact each other or the engine. Improper jumper cable connections can cause an explosion.

Always wear protective glasses when working with batteries.

1. Turn all the switches to the OFF position. Turn the engine start switch key to the OFF position.
2. Turn the battery disconnect switch to the OFF position. Remove the key.
3. Remove the battery hold-down.

Note: The machine may contain more than one set of batteries.

4. Disconnect the negative battery cable at the battery.
5. Disconnect the positive battery cable at the battery.
6. Disconnect the battery cable at the battery disconnect switch.
7. Inspect the battery terminals for corrosion. Clean the battery terminals and the surfaces of the batteries with a clean cloth.
8. Inspect the battery cables for wear or damage.

9. Make any necessary repairs. If necessary, replace the battery cables and/or the battery.

10. Connect the positive battery cable at the battery.

11. Connect the negative battery cable at the battery.

12. Coat the battery terminals with petroleum jelly to prevent corrosion and install the terminal covers.

13. Reinstall the battery hold-down. Tighten the hold-downs for the battery to prevent the batteries from moving during machine operation.

14. Connect the battery cable at the battery disconnect switch.

15. Install the key and turn the battery disconnect switch ON.

Recycle the Battery

Always recycle a battery. Never discard a battery.

Always return used batteries to one of the following locations:

- A battery supplier
- An authorized battery collection facility
- Recycling facility

i07041934

Belt - Inspect/Adjust/Replace

SMCS Code: 1357-040; 1357-510; 1357-025; 1397-025; 1397-040; 1397-510

Note: This engine is equipped with a belt tightener that automatically adjusts the belt to the correct tension.

1. Unlatch the engine hood and raise the engine hood.

i07531952

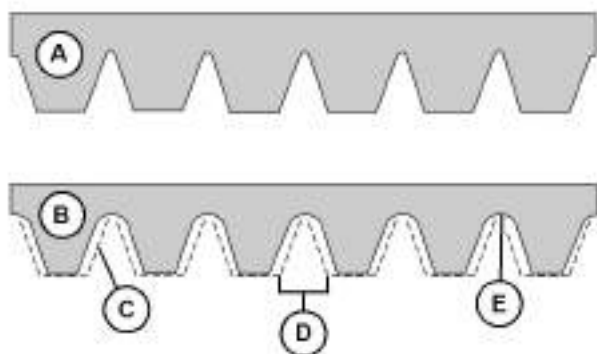


Illustration 464

g06206193

(A) New belt
 (B) Worn belt

2. Inspect the condition of the serpentine belt. Over time the belt ribs will lose material (C). The space between the ribs will increase (D). The loss of material will cause the pulley sheave to contact the belt valley. This will lead to belt slippage and accelerated wear (E). Replace the belt if the belt is worn or frayed.
3. If the belt requires replacement, perform Step 3a through Step 3f.
 - a. Remove the upper fan guard.



Illustration 465

g06206669

- b. Rotate the belt tensioner clockwise to remove the belt.
- c. Remove the belt.
- d. Install a new belt.
- e. Rotate the belt tensioner clockwise to install the belt.
- f. Install the upper fan guard.
- g. Lower the engine hood and latch the engine hood.

Boom and Stick Linkage - Lubricate (VA Boom (If Equipped))

SMCS Code: 6501-086; 6502-086

Note: Caterpillar recommends the use of 5% molybdenum grease for lubricating the boom, and stick linkage. Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more information on molybdenum grease.

Apply lubricant through all fittings after operation under water.

Wipe all fittings before you apply lubricant.



Illustration 466

g06183509

1. Apply lubricant through the fitting at the base of each boom cylinder.

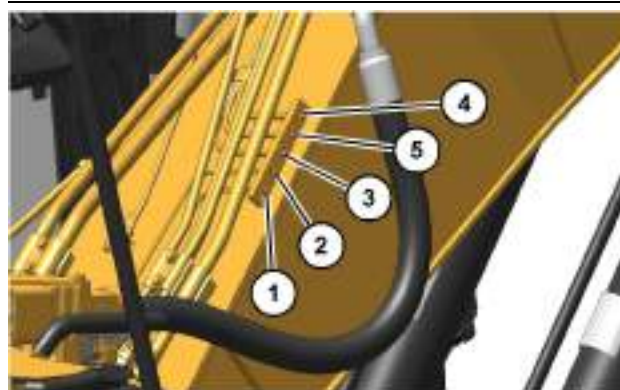


Illustration 467

g06183534

Note: Your machine may have the fittings mounted in a vertical position as shown in the illustration above, or your machine may have the fittings mounted in a horizontal position.

2. The fittings are at the base of the boom. The fittings can be serviced from the platform on the fuel tank. To lubricate the lower boom bearings, apply lubricant through fittings (1) and (2).
3. Apply lubricant through fitting (3) for the head end of the VA boom cylinder.
4. Apply lubricant through fittings (4) and (5) for the boom cylinder rod.

Note: To ensure proper lubrication of the lower boom bearings and of the boom cylinder rod end bearings, lubricant should be applied through fittings (1),(2),(4), and (5). Apply lubricant first when the boom is raised and any attachment is suspended. Then apply lubricant when the boom is lowered and the attachment is rested on the ground with a slight downward pressure.



Illustration 468

g06183854

Typical example

5. Apply lubricant through fitting (6). Fitting (6) is at the connection point of the boom and of the stick.

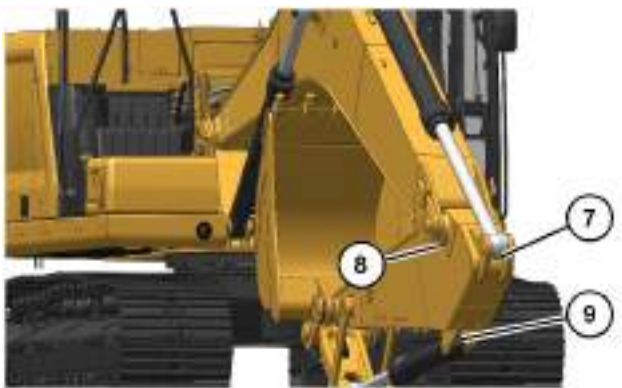


Illustration 469

g06183864

Typical example

6. Apply lubricant through fitting (7) on the stick cylinder rod. Apply lubricant through fitting (8) at the connection point of the boom and of the stick. Apply lubricant through fitting (9) at the bucket cylinder head end.

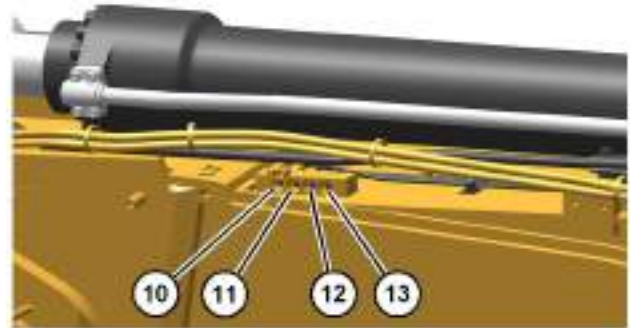


Illustration 470

g06192051

End of fore boom

7. Apply lubricant through fitting (10) and fitting (13) to lubricate the connection point between the stub boom and the fore boom.
8. Apply lubricant through fitting (11) to lubricate the stick cylinder head end.
9. Apply lubricant through fitting (12) to lubricate the rod end of the VA boom cylinder.

i07531958

Boom and Stick Linkage - Lubricate

SMCS Code: 6501-086; 6502-086

Note: Caterpillar recommends the use of 5% molybdenum grease for lubricating the boom, and stick linkage. Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more information on molybdenum grease.

Apply lubricant through all fittings after operation under water.

Wipe all fittings before you apply lubricant.

Maintenance Section
Boom and Stick Linkage - Lubricate

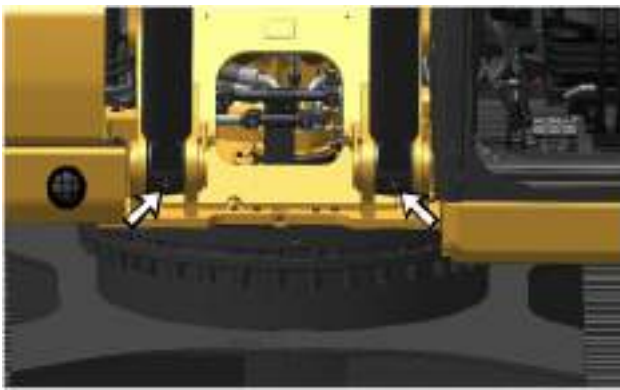


Illustration 471

g06183509

1. Apply lubricant through the fitting at the base of each boom cylinder.



Illustration 473

g06183854

5. Apply lubricant through fitting (6). Fitting (6) is at the connection point of the boom and of the stick.

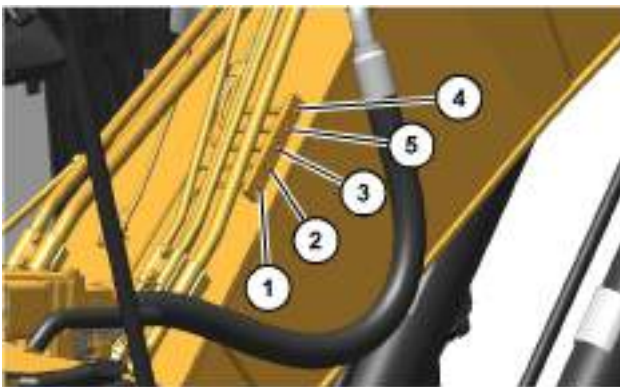


Illustration 472

g06183534

Note: Your machine may have the fittings mounted in a vertical position as shown in the illustration above, or your machine may have the fittings mounted in a horizontal position.

2. The fittings are at the base of the boom. The fittings can be serviced from the platform on the fuel tank. To lubricate the lower boom bearings, apply lubricant through fittings (1) and (2).
3. Apply lubricant through fittings (3) and (4) for the boom cylinder rod.
4. Apply lubricant through fitting (5) for the stick cylinder head.

Note: To ensure proper lubrication of the lower boom bearings and of the boom cylinder rod end bearings, lubricant should be applied through fittings (1), (2), (3), and (4). Apply lubricant first when the boom is raised and any attachment is suspended. Then apply lubricant when the boom is lowered and the attachment is rested on the ground with a slight downward pressure.

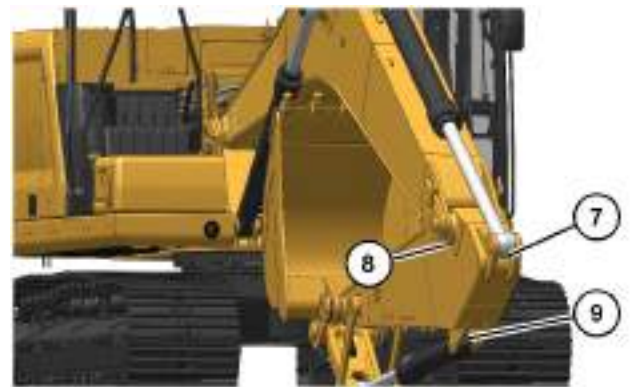


Illustration 474

g06183864

6. Apply lubricant through fitting (7) on the stick cylinder rod. Apply lubricant through fitting (8) at the connection point of the boom and of the stick. Apply lubricant through fitting (9) at the bucket cylinder head end.

i07578140

Bucket Linkage - Inspect/Adjust

SMCS Code: 6513-025; 6513-040

WARNING

Unexpected machine movement can cause injury or death.

To avoid possible machine movement, move the hydraulic lockout control to the LOCKED position and attach a Special Instruction, SEHS7332, "Do Not Operate" or similar warning tag to the hydraulic lockout control.

NOTICE

Improperly adjusted bucket clearance could cause galling on the contact surfaces of the bucket and stick, resulting in excessive noise and/or damaged O-ring seals.



Illustration 475

g06367039

Area for linkage adjustment

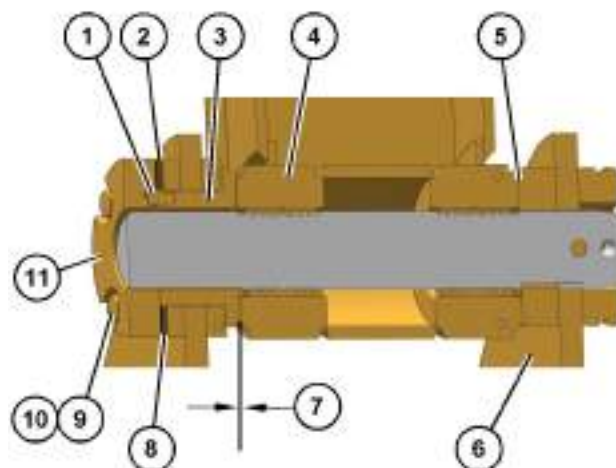


Illustration 476

g06185866

- (1) Pin
- (2) Shims
- (3) Flange
- (4) Stick boss
- (5) No gap
- (6) Bucket boss
- (7) Bucket clearance
- (8) Location
- (9) Bolts
- (10) Washers
- (11) Plate

The clearance of the bucket control linkage on this machine can be adjusted by shimming. If the gap between the bucket and the stick becomes excessive, adjust bucket clearance (7) to 0.5 to 1 mm (0.02 to 0.04 inch).

Two shims of different thickness are used at location (8). The thicknesses of the shims are 0.5 mm (0.02 inch) and 1.0 mm (0.04 inch).

1. Position the machine on a level surface and lower the bucket to the ground.
2. Slowly operate the swing control lever until stick boss (4) and the bucket boss (6) are in full face contact at no gap (5). This will help to determine the total clearance of the connection point of the stick and of the bucket.
3. Move the hydraulic lockout control to the LOCKED position. Stop the engine.
4. Measure bucket clearance (7), which is the existing total clearance.
5. Determine the number of shims that need to be removed from shims (2) by using the following calculation:

Maintenance Section

Bucket Linkage - Lubricate

Subtract 0.5 mm (0.02 inch) or 1.0 mm (0.04 inch) from bucket clearance (7).

6. Remove the appropriate number of shims at location (8) to meet the above thickness. Make sure that you use a minimum of three 0.5 mm (0.02 inch) shims. To remove the shims, remove bolts (9), washers (10), and plate (11).
7. After the correct number of shims has been removed and pin (1) is aligned with the pin hole, install plate (11), bolts (9), and washers (10). Tighten the bolts to 240 ± 40 N·m (175 ± 30 lb ft).
8. After installation, make sure that bucket clearance (7) is still correct.

i06970647

Bucket Linkage - Lubricate

SMCS Code: 6513-086

Note: Caterpillar recommends the use of 5% molybdenum grease for lubricating the bucket linkage. Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more information on grease.

Wipe all fittings before you apply lubricant.

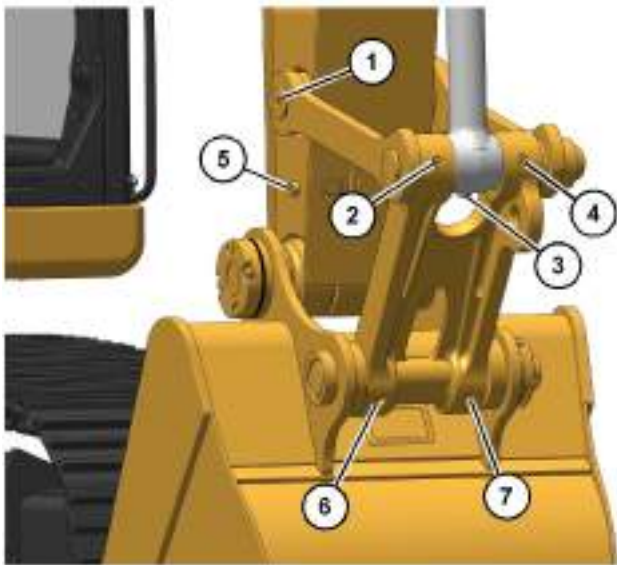


Illustration 477

g06183336

Note: Completely fill all cavities of the bucket control linkage with grease when you initially install a bucket.

1. Apply lubricant through fittings for the linkages (1), (2), (3), and (4).
2. Apply lubricant through fittings for the bucket (5), (6), and (7).

Note: Service the above fittings after you operate the bucket under water.

i08059817

Bucket Tips - Inspect/Replace

SMCS Code: 6805-510; 6805-040



Personal injury or death can result from bucket falling.

Block the bucket before changing bucket tips or side cutters.

K Series GET Drive-through System Bucket Tips

Note: To maximize the life of the bucket tip and the penetration of the bucket tip, the bucket tip can be rotated.



Illustration 478

g01055179

Acceptable wear



Illustration 479

g01055196

Replace this bucket tip.

Check the bucket tips for wear. If the bucket tip has a hole, replace the bucket tip.

Removal Procedure

WARNING

Retainer pin, when struck with force, can fly out and cause injury to nearby people.

Make sure the area is clear of people when driving retainer pins.

To avoid injury to your eyes, wear protective glasses when striking a retainer pin.



Illustration 480

g06528662

- (1) Bucket tip
- (2) Retainer
- (3) Adapter

Note: Retainers are often damaged during the removal process. Caterpillar recommends the installation of a new retainer when bucket tips are rotated or replaced.



Illustration 481

g01054386

Internal view

1. Use a hammer and a punch to drive out the retainer. The retainer can be removed from the top of the bucket tip or from the bottom of the bucket tip.
2. Remove the bucket tip from the adapter with a slight counterclockwise rotation.

Installation Procedure

1. Clean the adapter, if necessary.
2. Install the new bucket tip or the rotated bucket tip onto the adapter with a slight clockwise rotation.

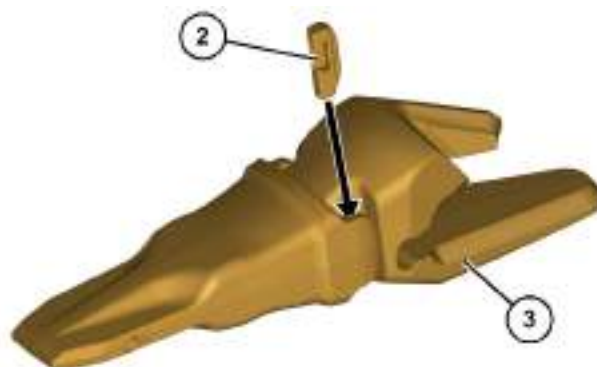


Illustration 482

g06528668

Proper location for installing the retainer

3. The retainer can be installed from the top of the bucket tip or from the bottom of the bucket tip. Use a hammer and a 1 inch X 1 inch X 8 inch steel bar stock to drive retainer (2) into adapter (3).

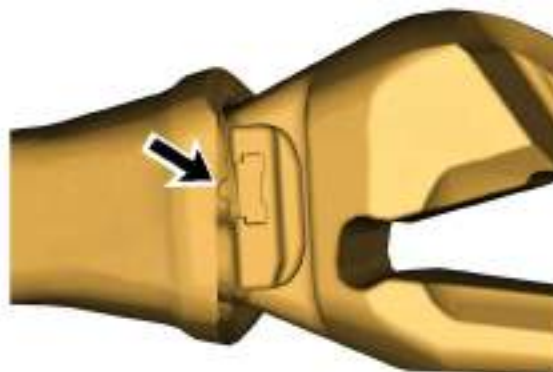


Illustration 483

g06528672

Internal View

The latch of the retainer is properly seated in the recess of the bucket tip.



Illustration 484

g06528674

A properly installed retainer does not extend beyond the ear of the bucket tip.

4. The retainer is properly seated if the retainer can be moved slightly by the technicians hand. If the retainer cannot be moved, adjust the retainer, as needed. The ends of the retainer should not extend beyond the ear of the bucket tip.

J Series GET Bucket Tips

WARNING

Block the bucket before changing the bucket teeth.

To prevent possible injury to the eyes, wear a protective face shield when striking the pin.

The pin, when struck, can fly out and cause injury to nearby personnel.

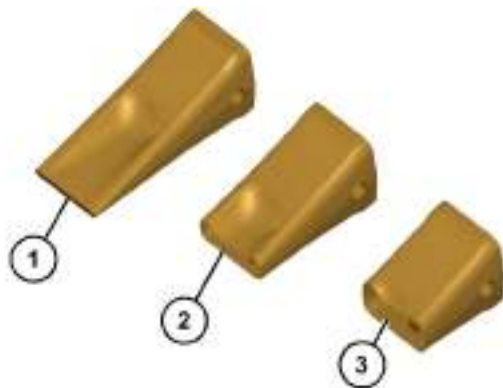


Illustration 485

g06528680

- (1) Usable tip
(2) Replaceable bucket tip
(3) Overworn tip

Check the bucket tips for wear. If the bucket tip has a hole, replace the bucket tip.

1. Remove the pin from the bucket tip. The pin can be removed by one of the following methods.

- Use a hammer and a punch from the retainer side of the bucket to drive out the pin.
- Use a Pin-Master. Follow Step 1a through Step 1c for the procedure.

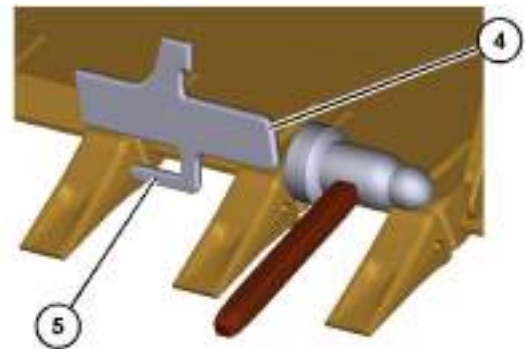


Illustration 486

g06214793

- (4) Back of Pin-Master
(5) Extractor

- Place the Pin-Master on the bucket tip.
- Align extractor (5) with the pin.
- Strike the Pin-Master at the back of the tool (4) and remove the pin.

Note: Discard the old pin and the retainer assembly. When you change tips, use a new pin and a new retainer assembly. Refer to the appropriate parts manual for your machine.

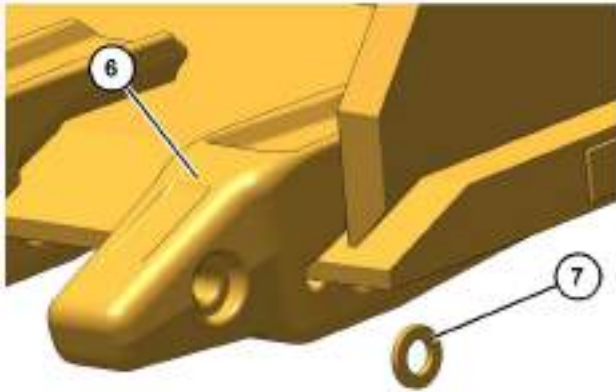


Illustration 487

g06214921

(6) Retainer assembly
(7) Adapter

2. Clean the adapter and the pin.

3. Fit retainer assembly (6) into the counterbore that is in the side of adapter (7). Make sure that the face of the retainer assembly with the marking "OUTSIDE" is visible.



Illustration 488

g06214795

4. Install the new bucket tip onto the adapter.

Note: The bucket tips can be rotated by 180 degrees to allow the tip to wear evenly. You may also move the tips from the outside teeth to the inside teeth. Check the tips often. If wear is present on the tips, rotate the tips. The outside teeth generate the most wear.

5. Drive the pin through the bucket tip. The pin can be installed by using one of the following methods:

- From the same side of the retainer, drive the pin through the bucket tip, the retainer assembly, and the adapter.
- Use a Pin-Master. Follow Step 5a through Step 5e for the procedure.

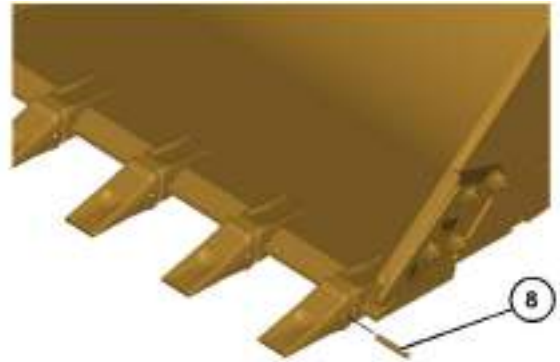


Illustration 489

g06214803

(8) Pin

a. Insert pin (8) through the bucket tip.

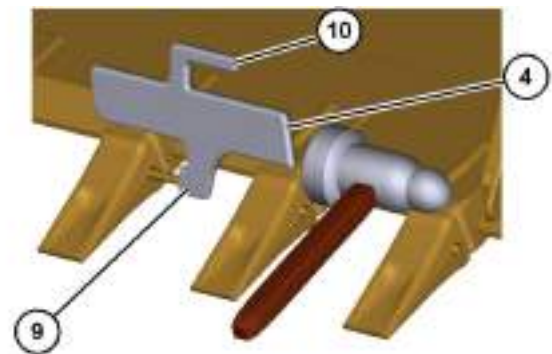


Illustration 490

g06214807

- Place the Pin-Master over the bucket tips so that the pin will fit into the counterbore of the pin holder (9).
- Strike the Pin-Master with a hammer at the back of the tool (4) to insert the pin.
- Slide pin holder (9) away from the pin and rotate the tool slightly to align pin setter (10) with the pin.



Illustration 491

g06214812

Final assembly of pin into bucket tip

- e. Strike the end of the tool until the pin is fully inserted.

Bucket Tips (Cat® Advansys) - If Equipped

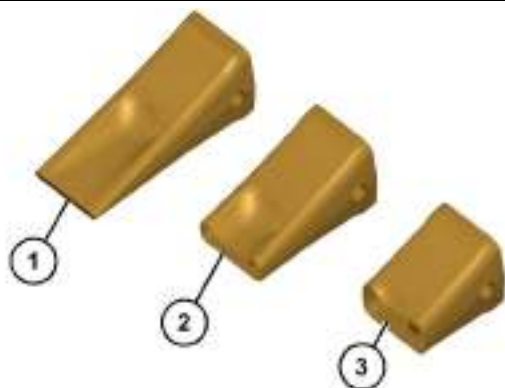


Illustration 492

g06528680

- (1) Usable tip
 (2) Replaceable bucket tip
 (3) Overworn tip

Check the bucket tips for wear. If the bucket tip has a hole, replace the bucket tip.

Removal

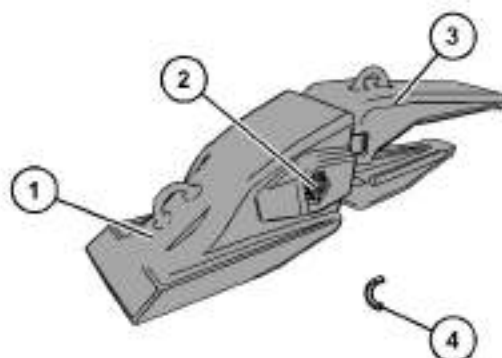


Illustration 493

g06528701

- (1) Bucket Tip
 (2) Retainer
 (3) Adapter
 (4) Compression Sleeve

1. Use a 1/2" ratchet and rotate the retainer (2) 180 degrees to the unlocked position.
2. Remove the bucket tip (1) from adapter (3).
3. Clean adapter (3).

Installation

1. Clean the adapter and the area around the latch, if necessary.
2. Install the new bucket tip (1) onto the adapter (3).

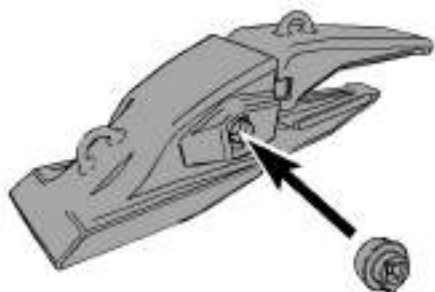


Illustration 494

g06528728

3. Use a 1/2" ratchet to rotate the retainer (2) 180 degrees to the locked position.

Side Cutters

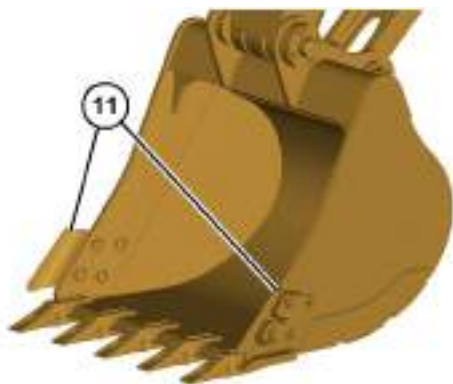


Illustration 495

g06214814

Bucket With Side Cutters

1. Remove the mounting bolts and the side cutters (11).
2. Clean the mounting surface of the side plate on the bucket and of the side cutter. Remove any burrs or protrusions on the mating surfaces.

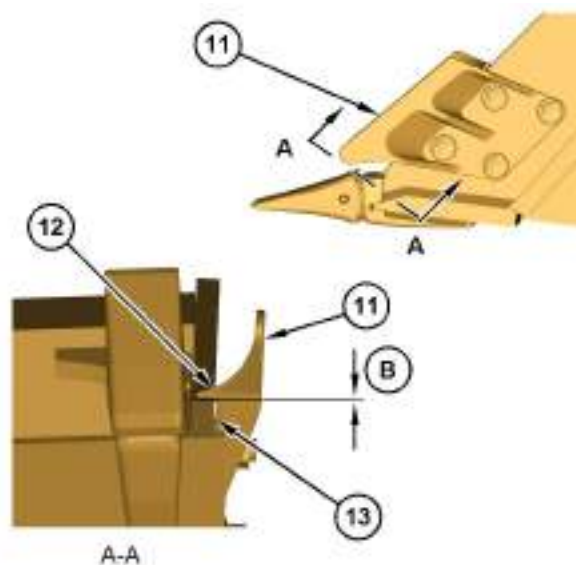


Illustration 496

g06214887

- (12) Shear ledge on a side cutter
(13) Side plate on a bucket
(B) 0.0 mm (0.0 inch)

Note: Some side cutters may be rotated for additional wear.

3. Install the side cutter.

Note: Certain bolts may require thread compound.

4. Hand tighten the bolts.
5. Make sure that there is not a gap between the side plate on the bucket and the shear ledge on the side cutter.
6. Torque the mounting bolts to the correct specification.

Side Protectors (If Equipped)

Inspect the wear of the side protector. When too much wear is present, replace the protector.

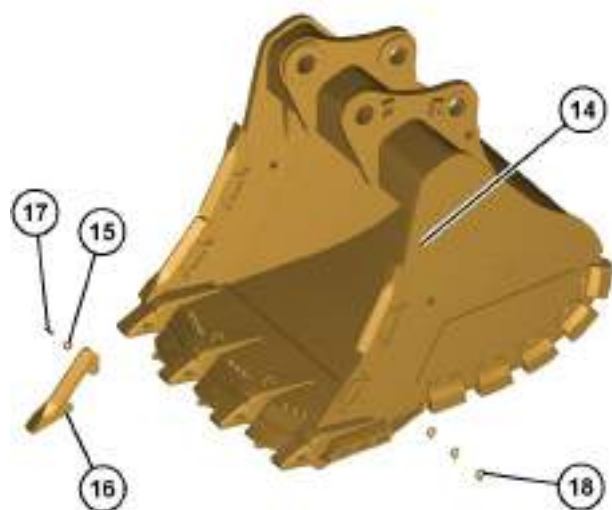


Illustration 497

g06219766

1. Hit pin (17) from the side of the bucket without the retainer to remove side protector (16) from side plate (14).
2. Clean side protector (16), pin (17), retainer (15), and side plate (14) before installation.

Note: Lateral clearance between the side plate and the side protector should not exceed 1 mm (0.04 inch). Shims (18) may be required to decrease the lateral clearance which will decrease movement. Install the shims between the side plate and the side protector on the opposite side of the retainer.

3. Put retainer (15) in side plate (14).
4. Align two pin holes of the new protector and the side plate. Hit the pin from the retainer side of the bucket.

Note: If the pin and/or the retainer are worn, replace the pin and/or the retainer.

i07092323

Cab Air Filter (Fresh Air) - Clean/Replace

SMCS Code: 7342-070; 7342-510

The cab air filter is on the left side of the cab.

1. Use the ignition key to open the access panel.

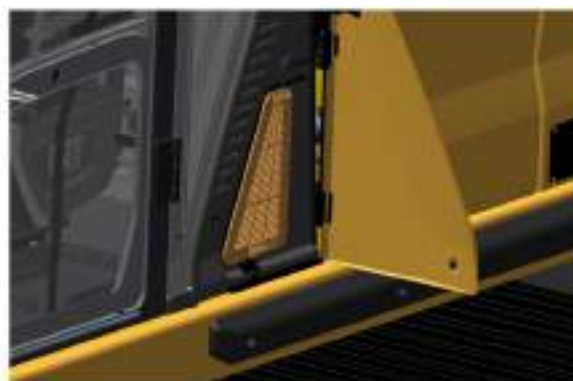


Illustration 499

g06182115

2. Remove air filter (1).
3. Tap the air filter to remove the dirt. Do not use compressed air to clean the filter.
4. After you clean the air filter, inspect the air filter. If the air filter is damaged or badly contaminated, use a new air filter.
5. Install the air filter.
6. Close and lock the access panel.

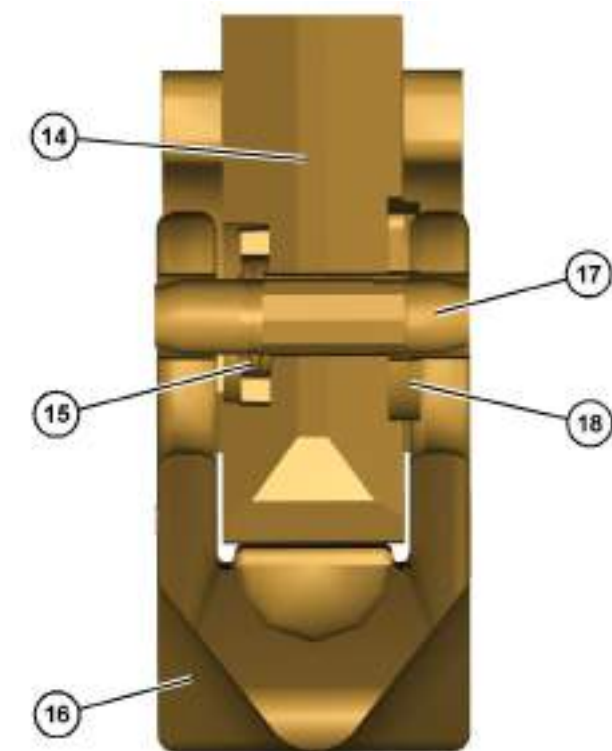


Illustration 498

g06219767

- (14) Side plate
- (15) Retainer
- (16) Side protector
- (17) Pin
- (18) Shim

i07579043

Camera - Clean

SMCS Code: 7348-070

WARNING

Failure to use an appropriate external ladder or an appropriate platform for direct access to the rear view camera could result in slipping and falling which could result in personal injury or death. Be sure to use an appropriate external ladder or an appropriate platform for direct access to the rear view camera.

The machine's counterweight and the engine hood are not approved as a maintenance platforms.

WARNING

Unexpected machine movement can cause injury or death.

In order to avoid possible machine movement, move the hydraulic lockout control to the LOCKED position and attach a Special Instruction, SEHS7332, "Do Not Operate" or similar warning tag to the hydraulic lockout control.

Note: When you access the camera for cleaning, be sure to observe safe procedures for access. Maintain a three-point contact and/or use a body harness.



Illustration 500

g06184579

The rear view camera is on top of the counterweight.

If necessary, use a damp cloth to clean the glass of the camera. The camera is sealed. The camera is not affected by a wash with high-pressure spray.

Note: Alternatively, cameras may be cleaned from ground level by using a wash with a high-pressure spray or a damp rag on a wand.



Illustration 501

g06368038

If equipped, clean the right side view camera.



Illustration 502

g06368039

If equipped, clean the left side view camera.



Illustration 503

g06263449

If equipped, clean the front view camera.

i07578541

Condenser (Refrigerant) - Clean

SMCS Code: 1805-070

NOTICE

If excessively dirty, clean condenser with a brush. To prevent damage or bending of the fins, do not use a stiff brush.

Repair the fins if found defective.



Illustration 504

g06367225

1. Open the access door on the left side of the machine. The condenser is located in front of the radiator.

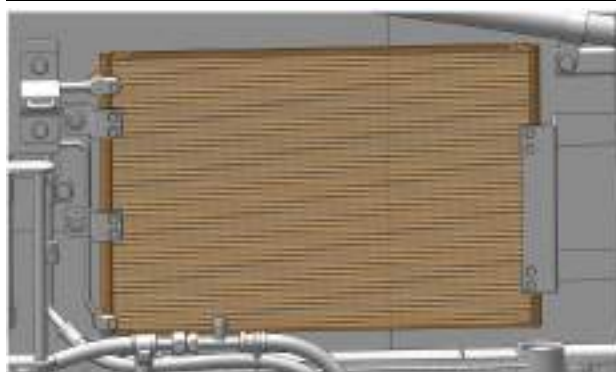


Illustration 505

g06183025

2. Inspect the condenser for debris. Clean the condenser, if necessary.
3. Use clean water to wash off all dust and dirt from the condenser.
4. Close the access door.

i07579047

Cooling System Coolant (ELC) - Change

SMCS Code: 1350-044

WARNING

Engine hood and engine hood parts can be hot while engine is running or immediately after engine shutdown. Hot parts or hot components can cause burns or personal injury. Do not allow these parts to contact your skin, when engine is running or immediately after engine shutdown. Use protective clothing or protective equipment to protect your skin.

WARNING

Personal injury can result from hot coolant, steam and alkali.

At operating temperature, engine coolant is hot and under pressure. The radiator and all lines to heaters or the engine contain hot coolant or steam. Any contact can cause severe burns.

Remove cooling system pressure cap slowly to relieve pressure only when engine is stopped and cooling system pressure cap is cool enough to touch with your bare hand.

Do not attempt to tighten hose connections when the coolant is hot, the hose can come off causing burns.

Cooling System Coolant Additive contains alkali. Avoid contact with skin and eyes.

NOTICE

Do not change the coolant until you read and understand the cooling system information in Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations".

Failure to do so could result in damage to the cooling system components.

NOTICE

Mixing ELC with other products will reduce the effectiveness of the coolant.

This could result in damage to cooling system components.

If Caterpillar products are not available and commercial products must be used, make sure they have passed the Caterpillar EC-1 specification for pre-mixed or concentrate coolants and Caterpillar Extender.

Note: This machine was filled at the factory with Cat Extended Life Coolant.

If the coolant in the machine is changed to Extended Life Coolant from another type of coolant, see Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations".

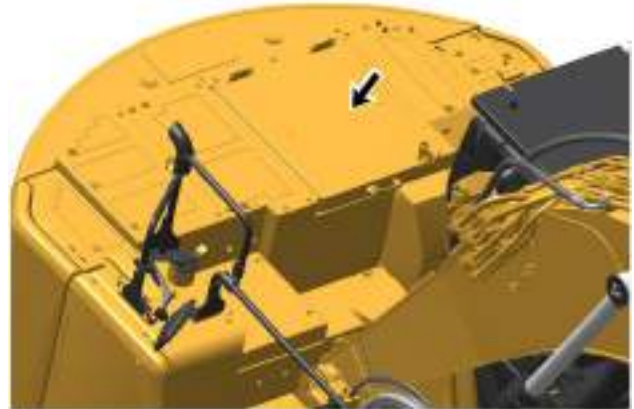


Illustration 506

g06367236

1. Unlatch the engine hood and raise the engine hood.

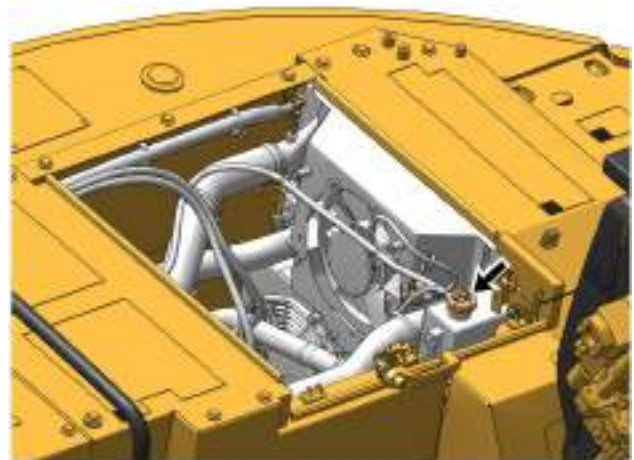


Illustration 507

g06367259

2. Slowly loosen the pressure cap that is on the coolant reservoir to release pressure from the cooling system.

Maintenance Section
Cooling System Coolant (ELC) - Change

3. Remove the pressure cap.
 4. Inspect the gasket on the pressure cap. If the gasket is damaged, replace the pressure cap.
-



Illustration 508

g06367225

5. Open the rear access door on the left side of the machine.
-



Illustration 509

g06367304

6. Open the drain valve and allow the coolant to drain into a suitable container. The drain valve is on the bottom of the radiator.

Note: Refer to Operation and Maintenance Manual, “General Hazard Information” for information that pertains to containing fluid spillage.

7. Flush the cooling system. Follow Step 7a through Step 7h to flush the cooling system.
 - a. Close the drain valve.
 - b. Fill the cooling system with clean water.
 - c. Install the pressure cap.
 - d. Start the engine and run the engine until the engine reaches operating temperature.
 - e. Stop the engine and allow the engine to cool.
 - f. Loosen the pressure cap slowly to relieve any pressure in the cooling system.
 - g. Open the drain valve that is on the bottom of the radiator and allow the coolant to drain into a suitable container.
 - h. Flush the radiator with clean water until the draining water is transparent.
8. Close the drain valve.
9. Add the Extended Life Coolant. Refer to the following topics:
 - Special Publication, SEBU6250, “Caterpillar Machine Fluids Recommendations”
 - Operation and Maintenance Manual, “Capacities (Refill)”
10. After the cooling system has been filled, perform the following procedures during initial start-up:
 - a. Start the engine without the filler cap.
 - b. Run the engine at low idle for 10 minutes.
 - c. Then, increase the engine speed to a high idle until the water temperature regulator is open and the coolant level is stabilized.
 - d. Maintain the coolant at the proper level as the water temperature regulator opens and air is purged from the system. Refer to Operation and Maintenance Manual, “Cooling System Coolant Level - Check”.
11. Install the cooling system pressure cap.
12. Stop the engine.

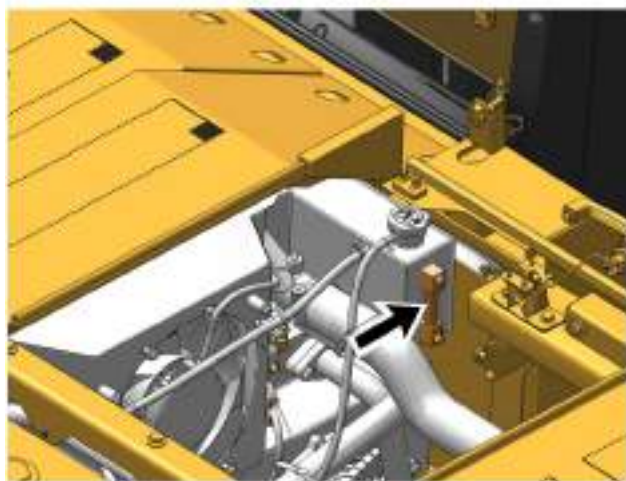


Illustration 510

g06368044

13. Check the coolant reservoir. Maintain the coolant level so that coolant is between the "ADD" and "FULL" lines. If more coolant is needed, see Operation and Maintenance Manual, "Cooling system Coolant Extender (ELC) - Add".
14. If more coolant is necessary, remove the pressure cap and add the appropriate coolant solution.
15. Install the pressure cap.
16. Close and latch the engine hood. Close the left access door.

i07578751

Cooling System Coolant Extender (ELC) - Add

SMCS Code: 1352; 1353; 1395

WARNING

Engine hood and engine hood parts can be hot while engine is running or immediately after engine shutdown. Hot parts or hot components can cause burns or personal injury. Do not allow these parts to contact your skin, when engine is running or immediately after engine shutdown. Use protective clothing or protective equipment to protect your skin.

WARNING

Personal injury can result from hot coolant, steam and alkali.

At operating temperature, engine coolant is hot and under pressure. The radiator and all lines to heaters or the engine contain hot coolant or steam. Any contact can cause severe burns.

Remove cooling system pressure cap slowly to relieve pressure only when engine is stopped and cooling system pressure cap is cool enough to touch with your bare hand.

Do not attempt to tighten hose connections when the coolant is hot, the hose can come off causing burns.

Cooling System Coolant Additive contains alkali. Avoid contact with skin and eyes.

Use Cat Extended Life Coolant (ELC) when you add coolant to the cooling system. See Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for all cooling system requirements.

Use a Coolant Conditioner Test Kit to check the concentration of the coolant.

NOTICE

Mixing ELC with other products will reduce the effectiveness of the coolant.

This could result in damage to cooling system components.

If Caterpillar products are not available and commercial products must be used, make sure they have passed the Caterpillar EC-1 specification for pre-mixed or concentrate coolants and Caterpillar Extender.

Note: This machine was filled at the factory with Cat Extended Life Coolant.

1. Park the machine on level ground.
2. Stop the engine.

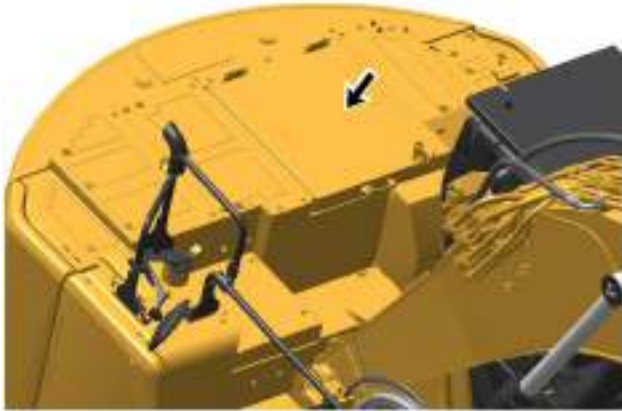


Illustration 511

g06367236

3. Unlatch the engine hood and raise the hood.

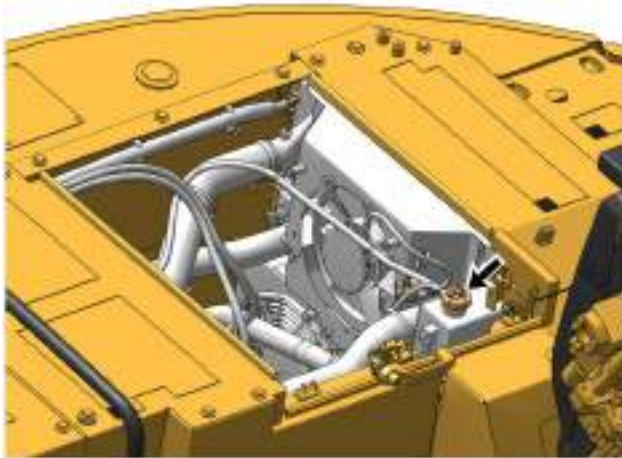


Illustration 512

g06367259

4. Make sure that the cooling system has cooled down. Loosen the cooling system pressure cap slowly to relieve system pressure. Remove the pressure cap.

Note: Refer to Operation and Maintenance Manual, “General Hazard Information” for information on containing fluid spillage.

5. You may need to drain some coolant from the radiator so that Cat Extender can be added to the cooling system.

Note: Always discard drained fluids according to local regulations.

6. Add Cat Extended Life Coolant (ELC) to the cooling system. Refer to the following topics for the proper amount of Cat Extender:

- Special Publication, SEBU6250, “Caterpillar Machine Fluids Recommendations”
- Operation and Maintenance Manual, “Capacities (Refill)”

7. Inspect the o-ring of the cooling system pressure cap. If the o-ring is damaged, replace the pressure cap.

8. Install the cooling system pressure cap.

9. Close and latch the engine hood.

i07578755

Cooling System Coolant Level - Check

SMCS Code: 1350-040; 1350-535-FLV; 1395-535-FLV

WARNING

Engine hood and engine hood parts can be hot while engine is running or immediately after engine shutdown. Hot parts or hot components can cause burns or personal injury. Do not allow these parts to contact your skin, when engine is running or immediately after engine shutdown. Use protective clothing or protective equipment to protect your skin.

WARNING

Personal injury can result from hot coolant, steam and alkali.

At operating temperature, engine coolant is hot and under pressure. The radiator and all lines to heaters or the engine contain hot coolant or steam. Any contact can cause severe burns.

Remove cooling system pressure cap slowly to relieve pressure only when engine is stopped and cooling system pressure cap is cool enough to touch with your bare hand.

Do not attempt to tighten hose connections when the coolant is hot, the hose can come off causing burns.

Cooling System Coolant Additive contains alkali. Avoid contact with skin and eyes.

1. Park the machine on level ground.
2. Stop the engine.
3. Unlatch the engine hood and raise the engine hood..

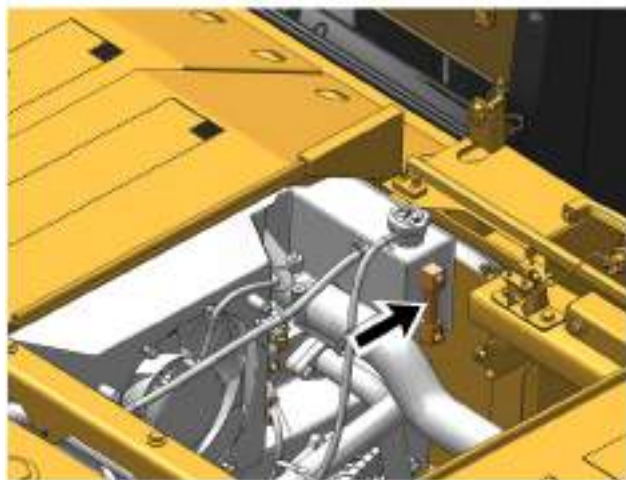


Illustration 513

g06368044

4. Maintain the coolant level so that coolant is between the "ADD" and "FULL" marks. If more coolant is needed, see Operation and Maintenance Manual, "Cooling system Coolant Extender (ELC) - Add".
5. Close and latch the engine hood.

i07942284

Cooling System Coolant Sample - Obtain

SMCS Code: 1395-008; 1395-554

The cooling system coolant should be sampled and monitored with regular frequency. The samples should be analyzed per the following guidelines:

- **Level 1 analysis: Every 250 hours**
- **Level 2 analysis: Every Year**

Note: It is not necessary to obtain a Coolant Sample (Level 1) if the cooling system is filled with Cat ELC (Extended Life Coolant). Cooling systems that are filled with Cat ELC only require Level 2 analysis.

Note: Obtain a Coolant Sample (Level 1) if the cooling system is filled with any other coolant instead of Cat ELC. This includes the following types of coolants.

- Commercial long life coolants that meet the Caterpillar Engine Coolant Specification -1 (Caterpillar EC-1)
- Cat Diesel Engine Antifreeze/Coolant (DEAC)
- Commercial heavy-duty coolant/antifreeze

Note: A level 1 analysis may indicate the need for a Level 2 analysis.

Note: A Level 2 analysis is required after 500 hours of operation for the following reasons:

- The cooling system is new
- The cooling system has been refilled
- The cooling system has been converted to a new coolant

NOTICE

Always use a designated pump for oil sampling, and use a separate designated pump for coolant sampling. Using the same pump for both types of samples may contaminate the samples that are being drawn. This contaminate may cause a false analysis and an incorrect interpretation that could lead to concerns by both dealers and customers.

Maintenance Section

Cooling System Coolant Sample - Obtain

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat® products.

Dispose of all fluids according to local regulations and mandates.



Illustration 514

g06367225

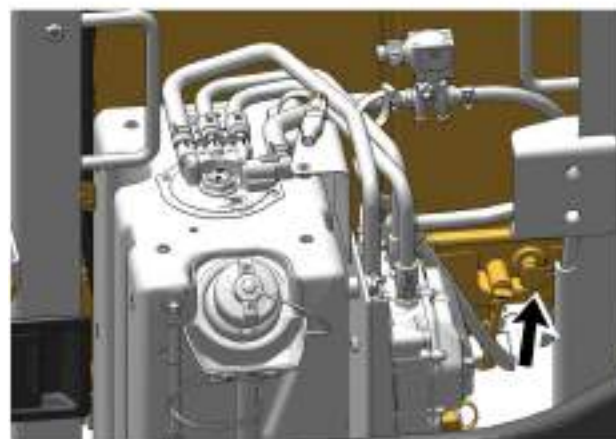


Illustration 515

g06368236

The coolant sampling port is on the radiator.

Obtain the sample of the coolant as close as possible to the recommended sampling interval. To receive the full effect of S·O·S analysis, a consistent trend of data must be established. To establish a pertinent history of data, perform consistent samplings that are evenly spaced. Supplies for collecting samples can be obtained from your Cat dealer.

Use the following guidelines for proper sampling of the coolant:

- Complete the information on the label for the sampling bottle before you begin to take the samples.
- Keep the unused sampling bottles stored in plastic bags.
- Obtain coolant samples directly from the coolant sample port. You should not obtain the samples from any other location.
- Keep the lids on empty sampling bottles until you are ready to collect the sample.
- Place the sample in the mailing tube immediately after obtaining the sample to avoid contamination.
- Never collect samples from expansion bottles.
- Never collect samples from the drain for a system.

Submit the sample for Level 1 analysis.

For additional information about coolant analysis, see Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" or consult your Cat dealer.

i07578767

DEF Filler Screen - Clean

SMCS Code: 108K-070-Z3

NOTICE

Ensure that the engine is stopped before any servicing or repair is performed.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Cat Dealer Service Tool Catalog" or refer to Special Publication, PECJ0003, "Cat Shop Supplies and Tools Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.

Dispose of all fluids according to local regulations and mandates.

The filler neck adapter filter screen in the diesel exhaust fluid tank will need to be cleaned or replaced if contaminated.



Illustration 516

g06367225

1. Open the rear access door on the left side of the machine.

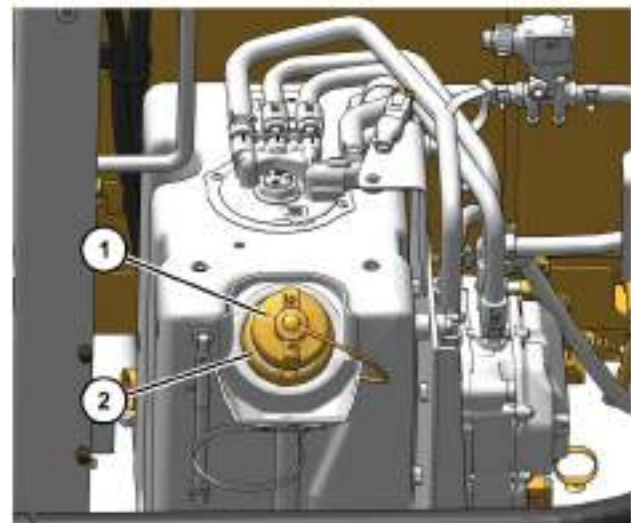


Illustration 517

g06367327

2. Remove fill cap (1).
3. Use a screwdriver or pick to press the tabs on the strainer. Pull the strainer upward from both sides of fill neck adapter (2).

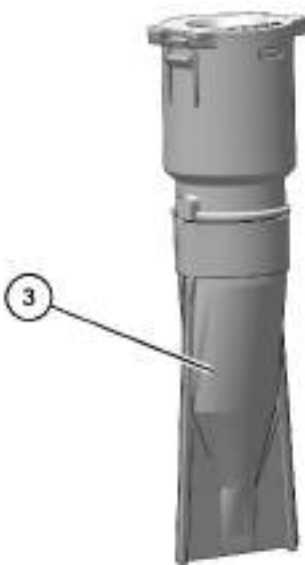


Illustration 518

g06183125

4. Use water or compressed air to clean out the filter screen (3). If there is any debris inside, dry and remove the debris by turning the screen upside down and dumping debris out. If the debris cannot be removed or if the filter screen is damaged, replace the filter screen.

DEF Manifold Filters - Replace

SMCS Code: 108K-510-FI

i06970250



Illustration 519

g06183110

Replace the manifold filter (1). Refer to Disassembly and Assembly, "Manifold (DEF Heater) - Remove and Install" for more information.

i07578777

Diesel Exhaust Fluid - Drain

SMCS Code: 108K-543

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the machine. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Dispose of all fluids according to local regulations and mandates.

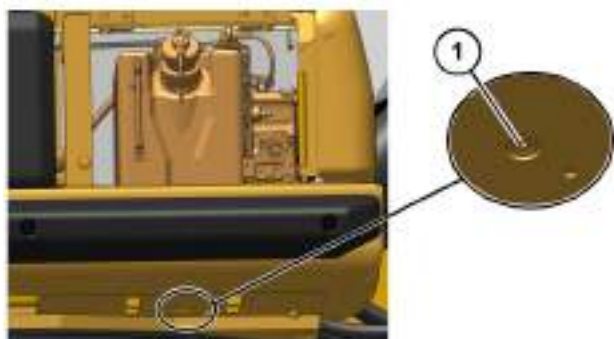


Illustration 520

g06183329

1. Remove drain plug (1).
2. Drain the diesel exhaust fluid into a suitable container.
3. Install and tighten the plug.

i07944942

Diesel Exhaust Fluid - Fill

SMCS Code: 108K-544

Note: Stop the engine and turn the engine start switch to the OFF position before filling the DEF tank. Failure to stop the engine may cause fault codes.

Refer to Operation and Maintenance Manual, "Selective Catalytic Reduction Warning System" for more information.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the machine. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Dispose of all fluids according to local regulations and mandates.

Reference: See Operation and Maintenance Manual, "Capacities (Refill)" for the capacity of the DEF tank for your machine.



Illustration 521

g06367225

The DEF tank is located on the left side of the machine inside the left access door.

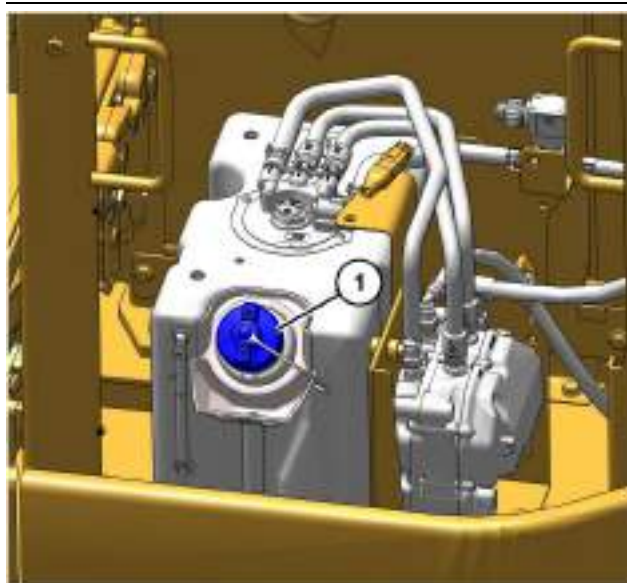


Illustration 522

g06490688



Illustration 523

g06306029

Blue DEF Tank Filler Cap

1. Clean the blue DEF tank filler cap and the surrounding area.
2. Remove the blue DEF tank filler cap.
3. Fill the tank with diesel exhaust fluid (DEF). DEF level gauge is located on the front side of DEF tank.

Note: Do not fill the DEF tank from a contaminated container or funnel.

Note: Do not over fill the tank. DEF can freeze and needs room for expansion.

4. Install the blue DEF tank filler cap.

Refer to Operation and Maintenance Manual, "Lubricant Viscosities" for more information on diesel exhaust fluid (DEF) guidelines.

i07899133

Diesel Exhaust Fluid Filter - Replace

SMCS Code: 108K-510-FI



Illustration 524

g06367225

1. Open the rear access door on the left side of the machine.



Illustration 525

g06367405

For clarity, the DEF assembly has been removed from the compartment.

2. Ensure that the area around the DEF filter is clean and free from dirt.

6. Turning on the power will automatically prime the DEF system.

i07942263

Diesel Exhaust Fluid Injector - Replace

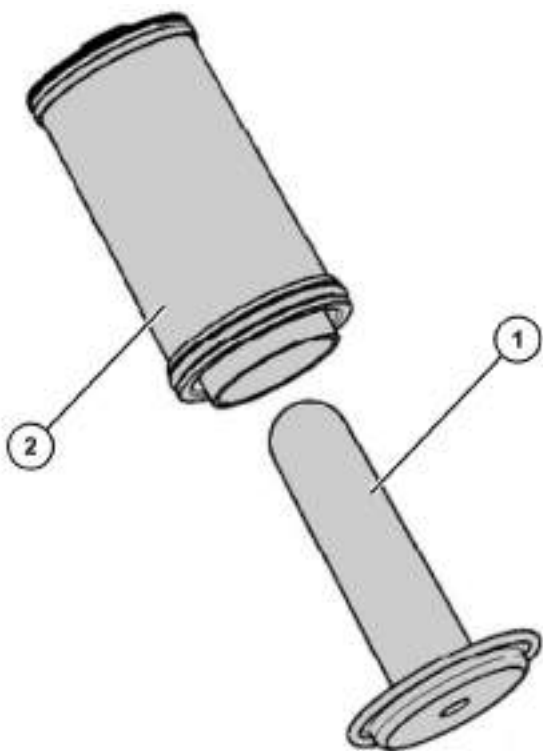
SMCS Code: 108I-510

Illustration 526

g06216533

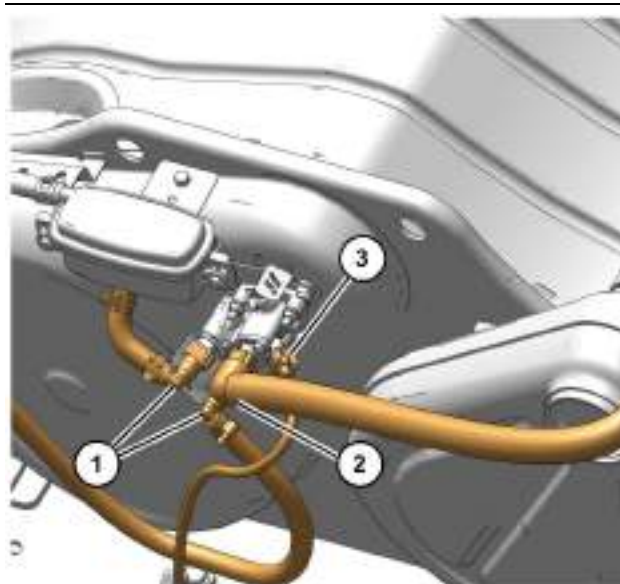


Illustration 528

g06226112

Typical example

- (1) Coolant lines
- (2) DEF line
- (3) Electrical connector

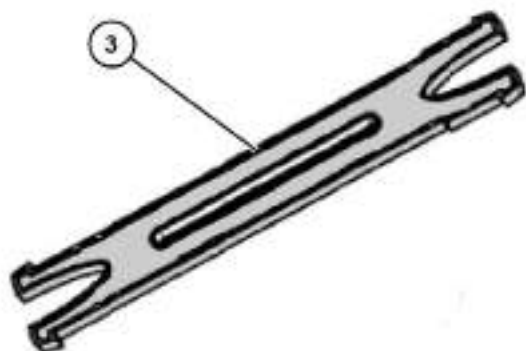


Illustration 527

g06216531

3. Unscrew the cap, remove expansion device (1) from DEF filter (2). Then, remove the DEF filter using special tool (3) that comes with the new filter. Discard the old filter and expansion device.
4. Install a new DEF filter assembly into the DEF pump housing.
5. Tighten the filter cap to $20 \pm 5 \text{ N}\cdot\text{m}$ ($15 \pm 4 \text{ lb ft}$).

Maintenance Section
Diesel Exhaust Fluid Injector - Replace

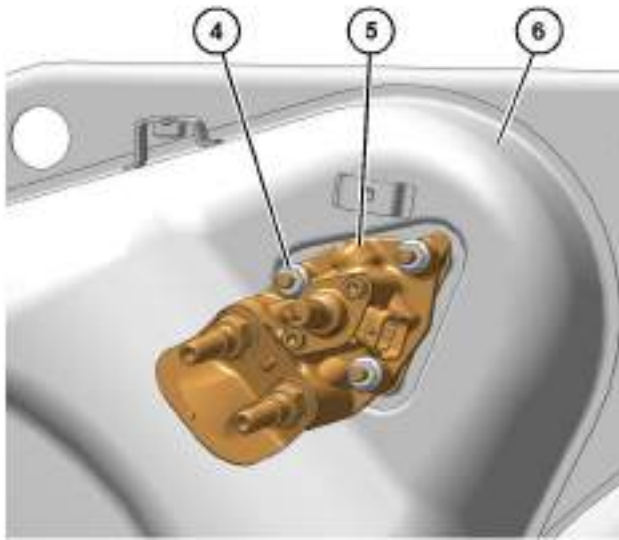


Illustration 529

g06226151

Typical example

- (4) Nuts
- (5) DEF injector
- (6) Clean Emission Module

1. Drain the coolant to remove coolant lines (1). Remove cooling lines (1) and remove Diesel Exhaust Fluid (DEF) line (2).
2. Remove electrical connector (3) from DEF injector (5) and install protection caps to DEF injector (5). Remove nuts (4) and washers (9) from DEF injector (5) and remove DEF injector from Clean Emission Module (CEM) (6).

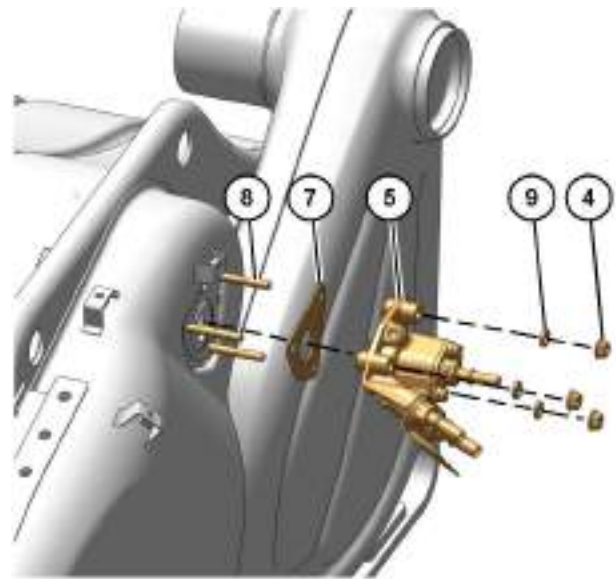


Illustration 530

g06226155

Typical example

- (4) Nuts
- (5) DEF injector
- (7) Gasket
- (8) Studs
- (9) Washers

3. Remove gasket (7) and remove studs (8). Discard the gasket and the studs.
4. Ensure that the sealing face of the CEM is clean and free from dirt.
5. Apply bostik pure nickel ant-seize compound to ends of the new studs (8). Install the coated ends of the new studs into the CEM, and tighten to a torque of 5 N·m (44 lb in).
6. Install new gasket (7), ensure that the metal side of the gasket is to the CEM. Install new DEF injector (5) to CEM (6).
7. Install washers (9) and apply bostik pure nickel ant-seize compound to the threads of studs (8).
8. Install nuts (4) and tighten the nuts to a torque of 5 N·m (44 lb in). Retighten the nuts to 5 N·m (44 lb in). Then, turn the nuts an additional 90 degrees.
9. Install electrical connector (3), DEF line (2), and coolant lines (1).
10. Fill cooling system to the correct level. Ensure that the correct specification of coolant is used.

If available, using the electronic service tool (ET) perform DEF Dosing System Verification test.

i07876897

Engine Air Filter Primary and/or Secondary Element - Replace

SMCS Code: 1054-510-PY; 1054-510-SE

Primary Air Filter Element - Replace

NOTICE

Service the air cleaner only with the engine stopped. Engine damage could result.

NOTICE

Service the engine air filter elements only when a message or a warning is displayed on the monitor display. Do not open the filter compartment unless service is indicated. Opening the filter compartment when not necessary to do so increases the chance of dirt contamination in engine air intake system components.

NOTICE

Short air filter life can result if the pre-cleaner system malfunctions. If air filter life is drastically reduced from typical for the operating conditions, consult your Cat dealer.

NOTICE

Do not use the air filter elements longer than 1 year.

The engine air cleaner assembly is located behind the front access door on the left side of the machine.

1. Park the machine on a level surface. Stop the engine.



Illustration 531

g06367225

2. Open the rear access on the left side of the machine

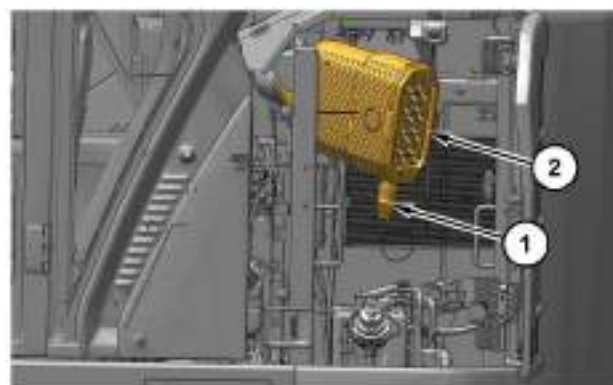


Illustration 532

g06466862

3. Squeeze outlet tube (1) to purge the dirt from the outlet tube.

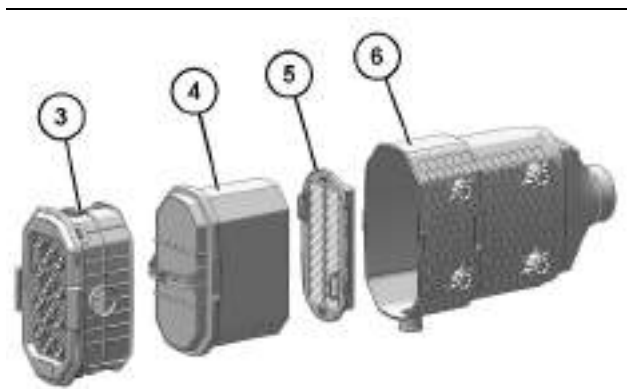


Illustration 533

g06222467

4. Release latches (2) that secure pre-cleaner (3) to engine air filter housing (6).
5. Remove pre-cleaner (3).
6. Clean inside the air filter housing where the pre-cleaner was removed.

NOTICE

Caterpillar does not recommend cleaning the primary air filter element. Caterpillar only recommends to replace the primary air filter element. Caterpillar does not cover costs for damage to engine components caused by cleaning the primary air filter element.

Observe the following guidelines if you attempt to clean the primary filter element:

Do not tap or strike the filter element in order to remove dust.

Do not wash the filter element.

Use low pressure compressed air in order to remove the dust from the filter element. Air pressure must not exceed 207 kPa (30 psi). Direct the air flow up the pleats and down the pleats from the inside of the filter element. Take extreme care in order to avoid damage to the pleats.

Do not clean the air filter element more than three times. The air filter element must be replaced if the filter has been in use for one year, regardless of the number of times the filter has been cleaned.

Do not use air filters with damaged pleats, gaskets, or seals. Dirt entering the engine will cause damage to engine components.

NOTICE

Do not clean the air filter elements by bumping or tapping. This could damage the seals. Do not use elements with damaged pleats, gaskets, or seals. Damaged elements will allow dirt to pass through. Engine damage could result.

7. Remove primary air filter element (4). Replace the filter element as necessary.

Note: Replace the primary filter if the filter has been in use for 1 year.

8. Clean inside the air filter assembly housing.

Note: Do not allow any dirt or debris to contact the secondary air filter element (5).

9. Inspect the seal area ensure that no foreign debris has fallen into the seal area. Clean the air cleaner interior to remove remaining dust or debris
10. Without removing secondary air filter element (5), inspect the filter element for damage. Replace if necessary or dirty. Refer to Secondary Air Filter Element - Replace.

11. Install the secondary air filter element.

12. Install the primary filter.

Note: Filters must be fully installed before the pre-cleaner can be attached. If the pre-cleaner cannot be fully latched, verify that the filter elements are properly seated.

13. Install the pre-cleaner and secure the latches that hold the pre-cleaner to the air filter housing.

14. Close the access door.

Secondary Air Filter Element - Replace

NOTICE

Always replace the secondary element. Do not attempt to reuse it by cleaning. Engine damage could result.

NOTICE

Do not use the air filter elements longer than 1 year.

NOTICE

Replace the secondary filter element when you service the primary element for the third time. If a clean primary element has been installed and the filter element indicator is still flashing, replace the secondary filter element. Also if the exhaust smoke remains black and a clean primary filter element has been installed, replace the secondary filter element.

1. Open the front access door on the left side of the machine.

2. Refer to the section "Primary Air Filter Element - Replace". Remove the pre-cleaner from the engine air filter housing. Remove the primary air filter element from the air filter housing.

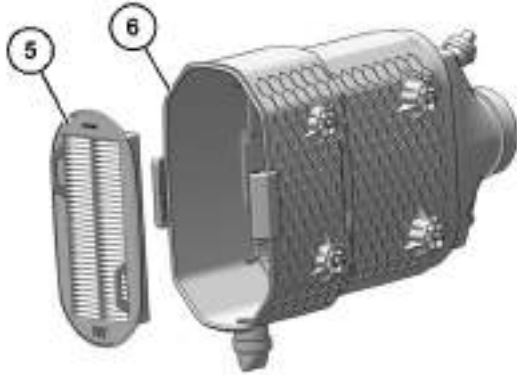


Illustration 534

g06183315

3. Secondary air filter element (5) is pressed into the rear portion of engine air filter housing (6). Pull forward on the secondary air filter element to remove the element from the engine air filter housing.
4. Cover the air inlet opening. Clean inside the air cleaner housing.
5. Clean all surfaces of the pre-cleaner cover and body.
6. Uncover the air inlet opening.
7. Carefully press the secondary air filter element into the rear portion of the engine air filter housing.

Note: Be certain that the new secondary air filter element is properly seated in the filter housing. Also, check to see that no damage to the filter element has occurred during installation.

8. Install the primary air filter element and the pre-cleaner.
9. Close the access door.

Engine Air Pre-Cleaner - Clean

Note: Do not attempt to clean the pre-cleaner by hitting the filter against another object. Damage to the filter is likely to occur.



Illustration 535

g06183310

After removing the pre-cleaner from the air filter housing, inspect the interior of the pre-cleaner through the ejection ports around the perimeter.

In general, dust and debris will clear automatically through normal pre-cleaner operation and no further service will be required.

If the ejection ports are blocked, or dust is packed between the pre-cleaner tubes, first try to clear any accumulation by vigorously shaking the pre-cleaner.

If the pre-cleaner is still blocked with dirt, the pre-cleaner may be separated by releasing the snap features holding the front cover to the pre-cleaner body.



Illustration 536

g06069263

1. Place the pre-cleaner assembly on a suitable work surface. The interior of the pre-cleaner may have accumulated debris. Protect your work surface to collect excess debris and to avoid scattering debris.

Maintenance Section
Engine Air Filter Primary and/or Secondary Element - Replace



Illustration 537

g06069266

2. Lift the locking tabs on one end of the cover away from the retainers. Move the locking tabs only far enough to clear the retention posts.

Note: Do not bend the locking tabs farther than necessary to release the tabs. Damage to the air cleaner can result. Do not use tools to force the snap features off the retainers.

3. Pull one end of the top cover away from the bottom half.
4. Hold one end of the cover sections apart and separate one of the locking tabs on the other end of the pre-cleaner.



Illustration 538

g06069264

5. Pull the top cover up and away from the bottom.
6. Clear any blockage by shaking the pre-cleaner components and/or brushing away accumulated debris.

Note: Do not use picks or other stiff implements to clear debris, you may damage the pre-cleaner components

Note: Do not attempt to remove the pre-cleaner tubes from the top cover or you will damage the air cleaner.

7. If the blockage is still not cleared, you may attempt to clear the debris by use of an air nozzle limited to 207 kPa (30 psi).

Alternately, each part of the pre-cleaner may be submerged in water to loosen mud or other debris that may have dried on the interior surface of the air cleaner.

Note: Never attempt to use a pressure washer or other high-pressure water sources to clean the pre-cleaner. Use of high-pressure water may damage the pre-cleaner tubes and reduce the pre-cleaner effectiveness.

8. After cleaning, reassemble the pre-cleaner by lining up the tubes on the pre-cleaner top with the tubes in the pre-cleaner bottom.
9. Allow the pre-cleaner top to rest on the pre-cleaner bottom and ensure that the four snap features are aligned.



Illustration 539

g06069247

10. If all the tabs are aligned, gently push the pre-cleaner top down into place. Ensure that all the snap features have engaged.

11. Before installing the pre-cleaner to the air filter housing, inspect the pre-cleaner gasket for damage. Replace if damaged.

i07578800

Engine Oil Level - Check

SMCS Code: 1000-535

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

NOTICE

Do not overfill the crankcase. Engine damage can result.

This machine is equipped with both an automated function for checking fluid levels and dipsticks. Refer to Operation and Maintenance Manual, "Monitoring System" regarding the automated system. If the machine is on an incline or the engine has been stopped only for a short time, all engine oil may not be in the crankcase. The fluid level cannot be properly checked by either method during these instances. Park the machine on level ground. The engine oil level can be checked after the engine has been stopped for at least 30 minutes. Do not check the oil level while the engine is running.

The machine is equipped with a ground level dipstick and a dipstick on top of the engine.

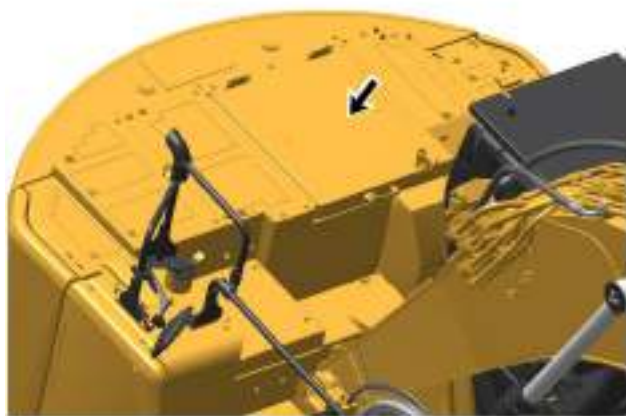


Illustration 540

g06367236

1. Open the access door on top of the machine.

2. Remove dipstick, wipe the oil off the dipstick, and reinsert the dipstick.

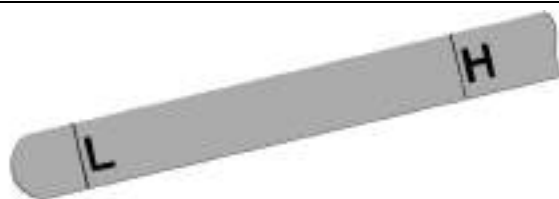


Illustration 541

g06183475

3. Remove the dipstick and check the dipstick. The oil level should be between the "L" mark and the "H" mark.

NOTICE

Operating your engine when the oil level is above the "H" mark could cause the crankshaft to dip into the oil. This could lead to excessively high oil temperatures which can reduce the lubricating characteristics of the oil, lead to bearing damage, and could result in loss of engine power.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on Containing Fluid Spillage.

4. Remove oil filler plug to add oil, if necessary. See Operation and Maintenance Manual, "Lubricant Viscosities".

Note: If the oil is deteriorated or badly contaminated, change the oil regardless of the maintenance interval.

5. Clean the oil filler plug. Install the oil filler plug.
6. Close the access door.

Ground Level Dipstick



Illustration 542

g06367434

To access the ground level dipstick, open the right access door.

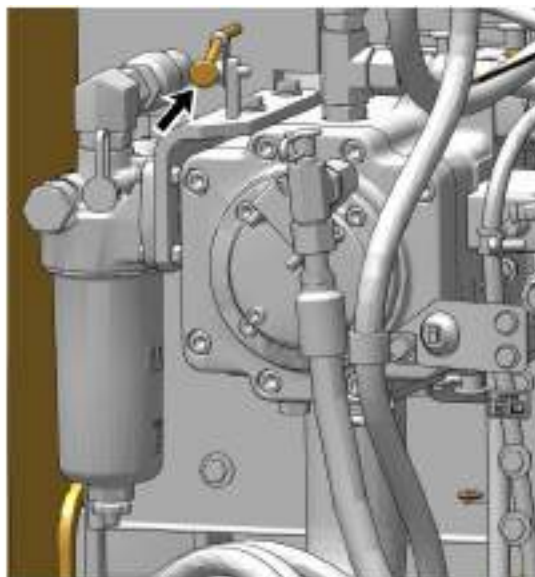


Illustration 543

g06367448

The ground level dipstick is located near the engine oil filter and main hydraulic pump.

i07578804

Engine Oil Sample - Obtain

SMCS Code: 1000-008; 1000; 1348-554-SM; 1348-008; 7542-008; 7542-554-OC; 7542-554-SM

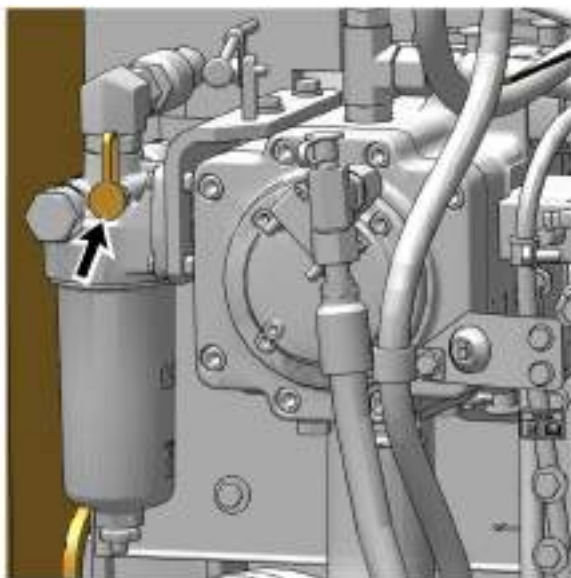


Illustration 544

g06367451

Obtain a sample of the engine oil from the engine oil sampling valve that is located on the engine oil filter housing. Refer to Special Publication, SEBU6250, "S-O-S Oil Analysis" for information that pertains to obtaining a sample of the engine oil. Refer to Special Publication, PEGJ0047, "How To Take A Good Oil Sample" for more information about obtaining a sample of the engine oil.

i07578808

Engine Oil and Filter - Change

SMCS Code: 1318-510

Selection of the Oil Change Interval

Procedure for Changing Engine Oil and Filter



WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

Note: If the sulfur content in the fuel is greater than 1.5 percent by weight, use an oil that has a TBN of 30 and reduce the oil change interval by one-half.

Note: Drain the crankcase while the oil is warm. This allows waste particles that are suspended in the oil to drain. As the oil cools, the waste particles will settle to the bottom of the crankcase. The particles will not be removed by draining the oil and the particles will recirculate in the engine lubrication system with the new oil.

1. Park the machine on a level surface. Stop the engine.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on Containing Fluid Spillage.



Illustration 545

g06183508

2. Open the crankcase drain valve. Allow the oil to drain into a suitable container.

Note: Discard any drained fluids according to local regulations.

3. Close the drain valve.



Illustration 546

g06367434

4. Open the access door at the right side of the machine.

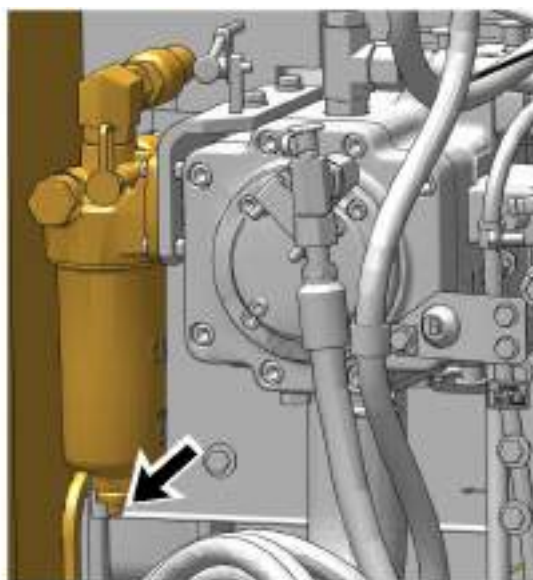


Illustration 547

g06367453

5. Loosen drain valve and allow the oil to drain out of the housing.

Note: If equipped with a fast fill system, the oil can be drained and filled using the fast fill coupler. Refer to "Fast Fill (If Equipped)" in this chapter.

6. After all the oil has been removed, tighten the drain.

7. Remove the oil filter housing. See Operation and Maintenance Manual, "Oil Filter - Inspect". Dispose of the used filter according to local regulations.



Illustration 548

g06183515

8. Remove the filter from the housing.
9. Clean the filter housing and the base.
10. Install the new filter element into the housing.
11. Apply a thin coat of engine oil to the gasket of the filter.
12. Install the engine oil filter by hand until the filter housing contacts the base.
13. Close the access door.

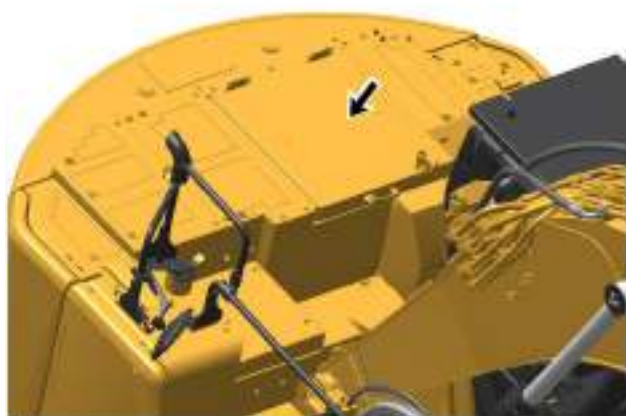


Illustration 549

g06367236

14. Unlatch the engine hood and raise the hood.
15. Remove oil filler cap . Fill the crankcase with new oil. See Operation and Maintenance Manual, "Capacities (Refill)". Clean the oil filler plug and install the oil filler plug.

NOTICE

Do not under fill or overfill engine crankcase with oil. Either condition can cause engine damage.

16. Start the engine and allow the oil to warm. Check the engine for leaks. Stop the engine.



Illustration 550

g06183475

17. Wait for 30 minutes to allow the oil to drain back into the crankcase. Check the oil level with dipstick (3). Maintain the oil between the "L" and "H" marks on the dipstick. If necessary, add oil.

18. Close the access door.

Fast Fill (If Equipped)

If your machine is equipped with a deluxe service center, you may drain and add the engine oil through the fast fill port.



Illustration 551

g06367434

1. Open the access door on the right side of the machine.

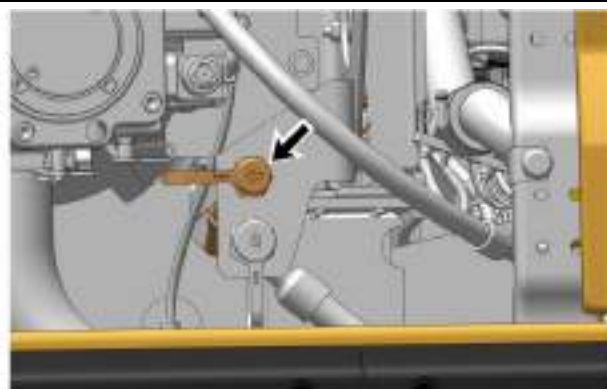


Illustration 552

g06183504

2. Remove the dust cover.
3. Attach a hose that is equipped with a nozzle.

Note: Make sure that the nozzle and the receiver are free from debris before attaching.

4. Drain the oil or add the oil, as needed.
5. Install the dust cover.

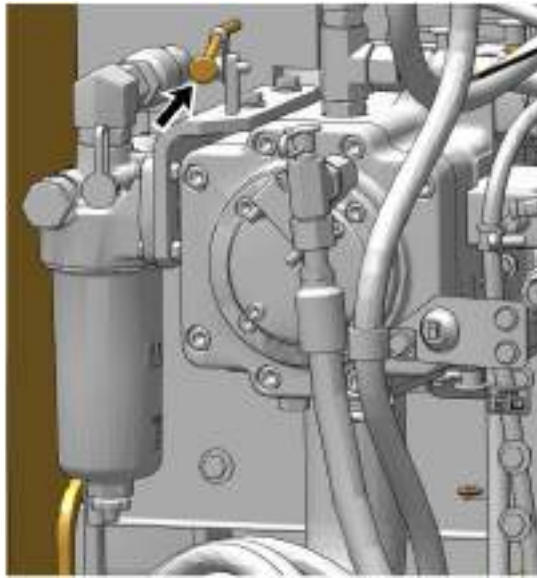


Illustration 553

g06367448

6. Verify that the correct amount of oil was added and add or remove oil as necessary. A ground level dipstick is located in the same compartment as the fast fill port.

i07578864

Ether Starting Aid Cylinder - Replace (If Equipped)

SMCS Code: 1456-510-CD

WARNING

Breathing ether vapors or repeated contact of ether with skin can cause personal injury. Personal injury may occur from failure to adhere to the following procedures.

Use ether only in well ventilated areas.

Do not smoke while changing ether cylinders.

Use ether with care to avoid fires.

Do not store replacement ether cylinders in living areas or in the operator's compartment.

Do not store ether cylinders in direct sunlight or at temperatures above 49 °C (120 °F).

Discard cylinders in a safe place. Do not puncture or burn cylinders.

Keep ether cylinders out of the reach of unauthorized personnel.

The ether cylinder is located inside the rear access door on the left side of the machine.

Refer to Operation and Maintenance, "Fire Prevention and Explosion Prevention" before you replace the ether cylinder.



Illustration 554

g06367225

1. Open the rear access door at the left side of the machine.

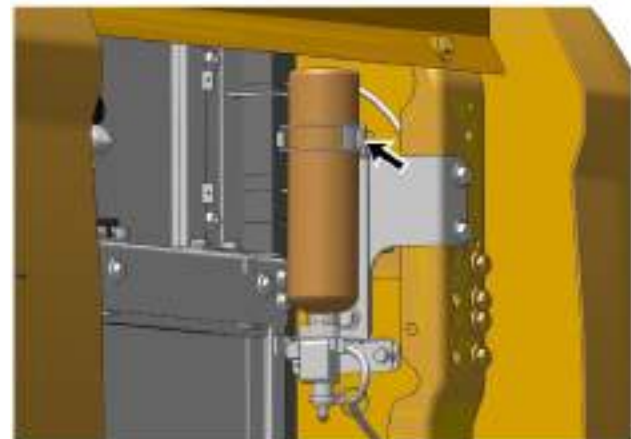


Illustration 555

g06211094

2. Loosen the cylinder retaining clamp.
3. Unscrew the empty ether starting aid cylinder and remove the empty ether starting aid cylinder.

i07786001

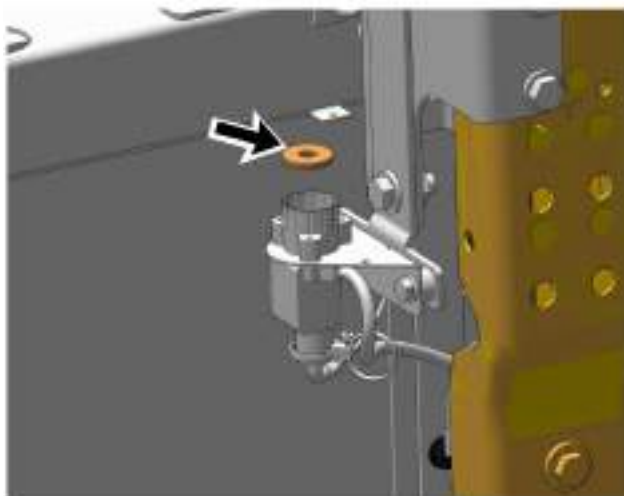


Illustration 556

g06211096

4. Remove the used gasket.

5. Install a new gasket.

Note: A new gasket and O-ring is provided with each new ether starting aid cylinder.

6. Install the new ether starting aid cylinder.

7. Tighten the ether starting aid cylinder hand tight.

8. Tighten the cylinder retaining clamp securely.

9. Close the access door.

Film (Product Identification) - Clean

SMCS Code: 7405-070; 7557-070



Illustration 557

g06435629

Cleaning of the Films

Make sure that all the product identification films are legible. Make sure that the recommended procedures are used to clean the product identification films. Ensure that all the product identification films are not damaged or missing. Clean the product identification films or replace the films.

Hand Washing

Use a wet solution with no abrasive material that contains no solvents and no alcohol. Use a wet solution with a "pH" value between 3 and 11. Use a soft brush, a rag, or a sponge to clean the product identification films. Avoid wearing down the surface of the product identification films with unnecessary scrubbing. Ensure that the surface of the product identification films is flushed with clean water and allow the product identification films to air dry.

Power Washing

Power washing or washing with pressure may be used to clean product identification films. However, aggressive washing can damage the product identification films.

Excessive pressure during power washing can damage the product identification films by forcing water underneath the product identification films. Water lessens the adhesion of the product identification film to the product, allowing the product identification film to lift or curl. These problems are magnified by wind. These problems are critical for the perforated film on windows.

To avoid lifting of the edge or other damage to the product identification films, follow these important steps:

- Use a spray nozzle with a wide spray pattern.
- A maximum pressure of 83 bar (1200 psi)
- A maximum water temperature of 50° C (120° F)
- Hold the nozzle perpendicular to the product identification film at a minimum distance of 305 mm (12 inch).
- Do not direct a stream of water at a sharp angle to the edge of the product identification film.

i06969803

Final Drive Oil - Change

SMCS Code: 4050-044-FLV

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

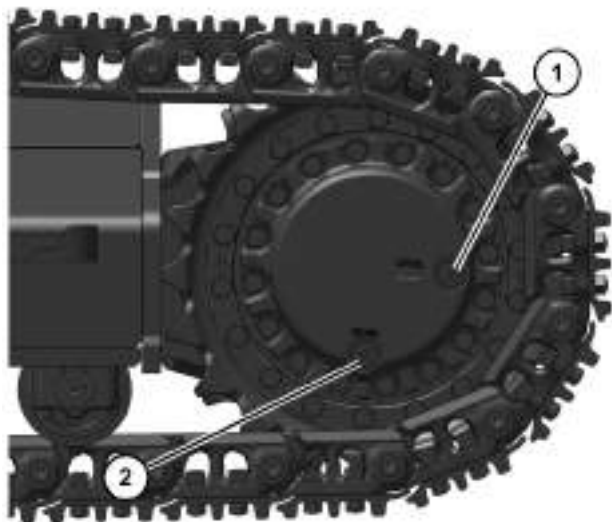


Illustration 558

g06182944

- (1) Oil level plug
(2) Oil drain plug

1. Position one final drive so that oil drain plug (2) is at the bottom.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on Containing Fluid Spillage.

2. Remove drain plug (2) and level plug (1). Allow the oil to drain into a suitable container.
3. Clean the plugs and inspect the O-ring seals. If wear or damage is evident, replace the drain plug, the level plug, and/or the O-ring seals.
4. Install drain plug (2).
5. Fill the final drive to the bottom of the opening on level plug (1). See Operation and Maintenance Manual, "Lubricant Viscosities" and Operation and Maintenance Manual, "Capacities (Refill)".

Note: If the oil fills slowly, the fill hole may be blocked by the planetary gear. Rotate the final drive to move the planetary gear away from the fill hole.

Note: Overfilling the final drive will cause the seals on the travel motor to allow hydraulic oil or water to enter the final drive. The final drive may become contaminated.

6. Install level plug (1).
7. Perform Step 1 to Step 6 on the other final drive. Use a different container for the oil so that the oil samples from the final drives will be separate.
8. Completely remove the oil that has spilled onto surfaces.
9. Start the machine and allow the final drives to run through several cycles.
10. Stop the machine. Check the oil level.
11. Check the drained oil for metal chips or for particles. If there are any chips or particles, consult your Cat dealer.
12. Properly dispose of the drained material. Obey local regulations for the disposal of the material.

i06969810

Final Drive Oil Level - Check

SMCS Code: 4050-535-FLV

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

i06969816

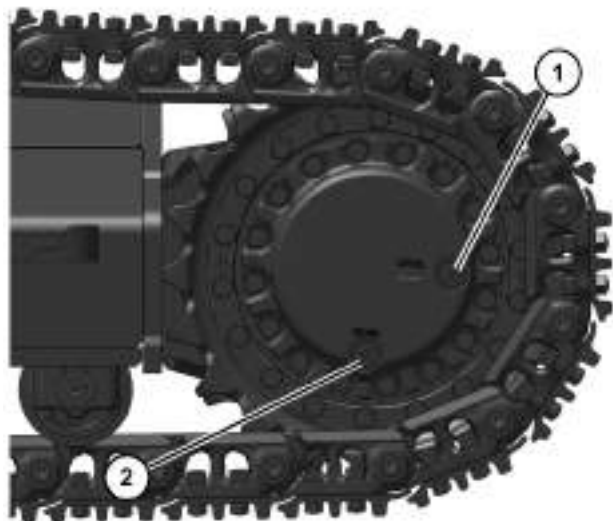


Illustration 559

g06182944

- (1) Oil level plug
(2) Oil drain plug

1. Position one final drive so that oil drain plug (2) is at the bottom.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on Containing Fluid Spillage.

2. Remove oil level plug (1).
3. Check the oil level. The oil should be near the bottom of the level plug opening.
4. Add oil through the level plug opening, if necessary. See Operation and Maintenance, "Lubricant Viscosities".

Note: If the oil fills slowly, the fill hole may be blocked by the planetary gear. Rotate the final drive to move the planetary gear away from the fill hole.

Note: Overfilling the final drive will cause the seals on the travel motor to allow hydraulic oil or water to enter the final drive. The final drive may become contaminated.

5. Clean oil level plug (1). Inspect the O-ring seal. Replace the O-ring seal if the O-ring seal is worn or damaged.
6. Install oil level plug (1).
7. Repeat the procedure for the other final drive.

Final Drive Oil Sample - Obtain

SMCS Code: 4011-008; 4050-SM; 4050-008; 7542-008

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

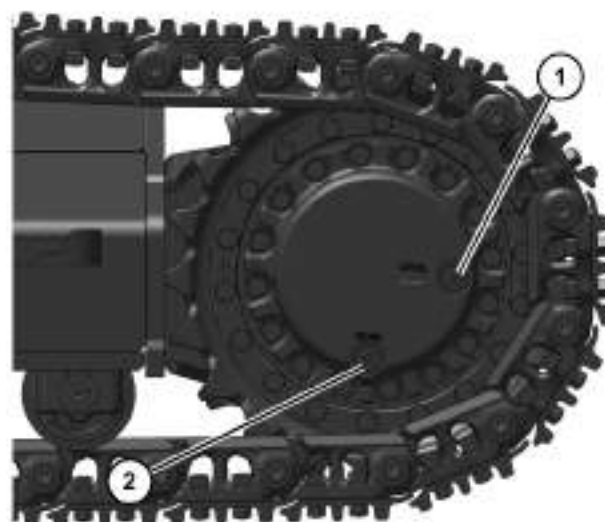


Illustration 560

g06182944

- (1) Oil level plug
(2) Oil drain plug

1. Position the final drive so that oil drain plug (2) is at the bottom.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on Containing Fluid Spillage.

2. Remove oil level plug (1).
3. Obtain a sample of the final drive oil through the hole for the oil level plug.
4. Install oil level plug (1).

Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" "S·O·S Oil Analysis" for more information on obtaining a sample of the final drive oil. For additional information about taking an oil sample, refer to Special Publication, PEGJ0047, "How To Take A Good Oil Sample".

i07088575

Fuel Cap Filter - Replace

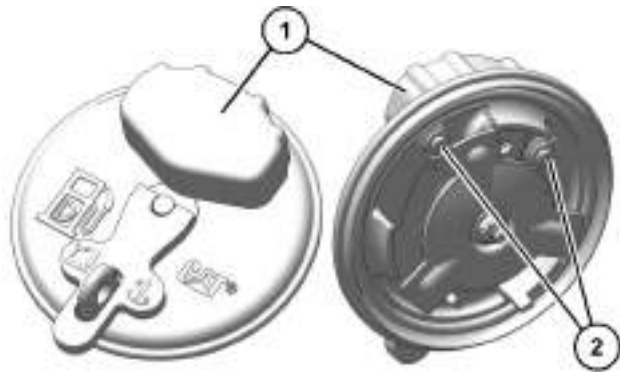
SMCS Code: 1261-510

Illustration 561

g06220524

1. Remove the fuel cap.
2. Remove filter element screws (2) from the underside of the fuel cap and remove filter element (1).
3. Install a clean fuel cap filter element.
4. Install the screws to secure the filter element to the fuel cap.
5. Install the fuel tank cap.

i06674757

Fuel System - Prime

SMCS Code: 1250-548

WARNING

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire. To help prevent possible injury, turn the start switch off when changing fuel filters or water separator elements. Clean up fuel spills immediately.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat® products.

Dispose of all fluids according to local regulations and mandates.

NOTICE

Do not loosen the fuel lines at the fuel manifold. The fittings may be damaged and/or a loss of priming pressure may occur when the fuel lines are loosened.

NOTICE

Do not allow dirt to enter the fuel system. Thoroughly clean the area around a fuel system component that will be disconnected. Fit a suitable cover over any disconnected fuel system components.

Prime the fuel system in order to fill the fuel filter, and prime the fuel system in order to purge trapped air. The fuel system should be primed under the following conditions:

- The fuel tank is running low.
- The machine has been stored.
- The fuel filter is being replaced.

1. Turn the engine start switch to the ON position. Leave the engine start switch in the ON position for 2 minutes.
2. Verify that the water separator is full of fuel.
3. If the water separator is not full of fuel, turn the engine start switch OFF and then turn the engine start switch ON. Turning the engine start switch off and on will cycle the fuel priming pump again.
4. When the water separator is full of fuel, attempt to start the engine. If the engine starts and the engine runs rough or the engine misfires, operate at low idle until the engine is running smoothly. If the engine cannot be started, or if the engine continues to misfire or smoke, repeat Step 1.

i08030834

Fuel System Primary Filter (Water Separator) Element - Replace

SMCS Code: 1263-510-FQ

WARNING

Personal injury or death may result from failure to adhere to the following procedures.

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire.

Clean up all leaked or spilled fuel. Do not smoke while working on the fuel system.

Turn the disconnect switch OFF or disconnect the battery when changing fuel filters.

NOTICE

Do not fill the fuel filters with fuel before installing the fuel filters. The fuel will not be filtered and could be contaminated. Contaminated fuel will cause accelerated wear to fuel system parts.

The primary filter/water separator is located behind the access door on the right side of the machine.



Illustration 562

g06367434



Illustration 563

g06515739

Typical Example

1. Open the rear access door on the right side of the machine.

Maintenance Section
Fuel System Secondary Filter - Replace

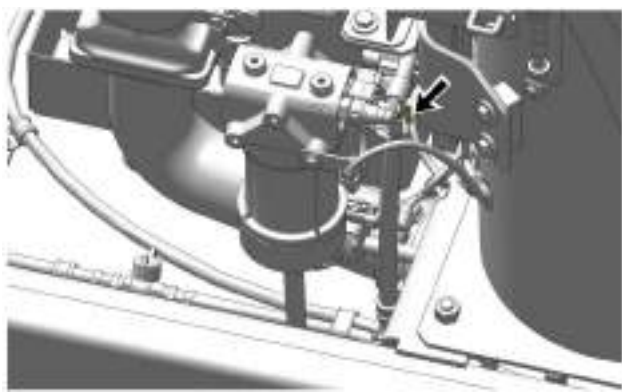


Illustration 564

g06497195

2. Close the fuel shutoff valve.

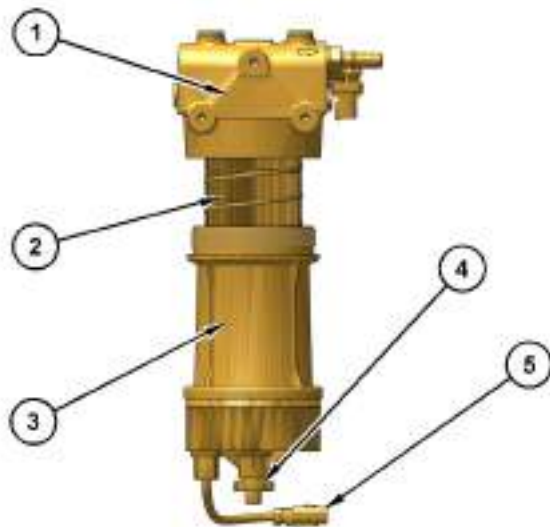


Illustration 565

g06515737

Typical example of primary filter water separator

- (1) Filter base
(2) Filter
(3) Filter housing
(4) Drain valve
(5) Sensor

3. Turn drain valve (4) counterclockwise to open. The drain valve is on the bottom of the water separator.

Note: Refer to Operation and Maintenance Manual, “General Hazard Information” for information that pertains to containing fluid spillage.

4. Drain the water and the sediment into a suitable container.

Note: Dispose of used fluids according to local regulations.

5. Close the drain valve (4).

6. Disconnect the water sensor (5) from the harness.

Note: Do not attempt to remove the sediment bowl from the housing. The sediment bowl is permanently attached to the housing. Attempting to remove the sediment bowl may damage the bowl.

7. Unscrew filter housing (3) and remove primary filter (2). A filter wrench may be used to loosen the filter housing. Properly discard the used filter.

8. Clean the mounting base (1).

9. Lubricate the seal of the new filter (2) with clean diesel fuel.

10. Install the new filter (2) into the housing.

11. Tighten the filter housing approximately 1/6 of a turn. Do not use tools to tighten the filter housing to the filter base.

12. Ensure that sensor (5) is in the correct position and connect to the wiring harness. If the sensor was removed from the bowl, install the sensor and tighten to $2.5 \pm 0.5 \text{ N}\cdot\text{m}$ ($22 \pm 4 \text{ lb in}$).

13. Open the fuel shutoff valve.

14. Close the access door.

i07880284

Fuel System Secondary Filter - Replace

SMCS Code: 1261-510



Personal injury or death can result from a fire.

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire.

Clean up all leaked or spilled fuel. Do not smoke while working on the fuel system.

Turn the disconnect switch OFF or disconnect the battery when changing fuel filters.

NOTICE

Do not fill fuel filters with fuel before installing them. Contaminated fuel will cause accelerated wear to fuel system parts.

NOTICE

Do not allow dirt to enter the fuel system. Thoroughly clean the area around a fuel system component that will be disconnected. Fit a suitable cover over any disconnected fuel system components.



Illustration 566

g06367434

1. Open access door on the right side of the machine.
2. Shut off the fuel supply. Refer to Fuel Tank Shutoff and Drain Control for additional information.



Illustration 567

g06467981

3. Loosen drain valve (2) and allow the fuel to drain out of the housing into a suitable container.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on containing fluid spillage.

4. After all the fuel has been removed, tighten the drain.

5. Remove the secondary fuel filter housing (1) from the base.
6. Remove the filter element from the housing.
7. Clean the filter housing and the base.
8. Install the new filter element into the housing.
9. Apply a thin coat of clean diesel fuel to the sealing surface of the new fuel filter.
10. Install the new filter and tighten to 50 +/- 5 N·m (36.9 +/- 4 ft lb).
11. Turn on the fuel supply.
12. Close the access door.

i07880475

Fuel System Water Separator - Drain

SMCS Code: 1263

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat® products.

Dispose of all fluids according to local regulations and mandates.



Illustration 568

g06367434

1. Open the access door on the right side of the machine.

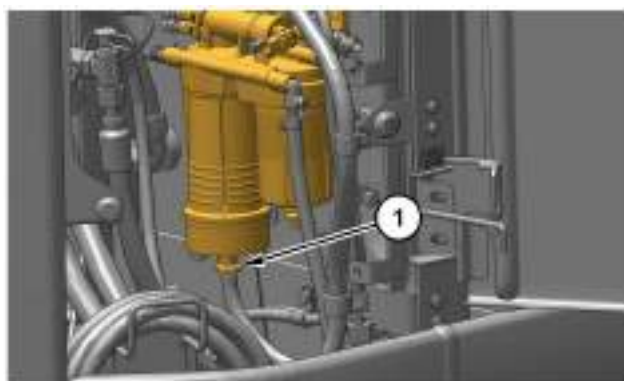


Illustration 569

g06467988

2. Open drain valve (1) on the bottom of the fuel/water separator element. Drain the water into a suitable container.
3. Close the drain valve when all the water has been drained.

Note: When water is not drained from the primary filter sufficiently, water will collect in the secondary fuel filter. Trapped water will eventually overflow. Draining water from the secondary fuel filter will prevent water damaging the fuel system. The procedure for the secondary filter is the same as the primary filter.

4. Close the access door.

i06969894

Fuel Tank Strainer - Clean

SMCS Code: 1273-070-STR

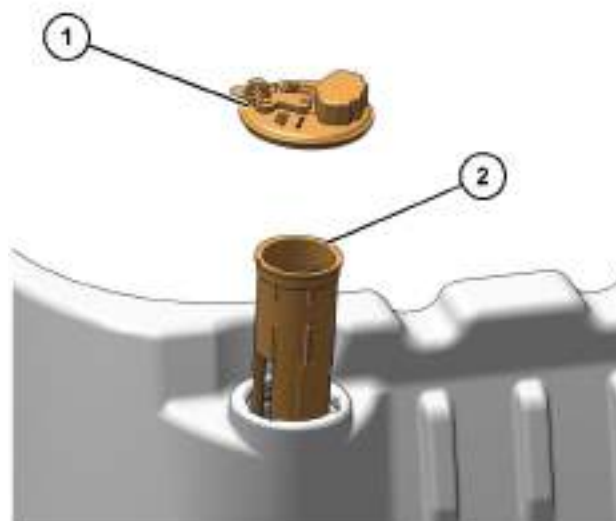


Illustration 570

g06183008

1. Remove fuel tank cap (1).
2. Remove strainer (2) from the filler opening.
3. Wash the strainer in a clean, nonflammable solvent.
4. Install the strainer into the filler opening.
5. Install the fuel tank cap.

i07578886

Fuel Tank Water and Sediment - Drain

SMCS Code: 1273-543

The drain valve for the fuel tank is located in the right compartment.



Illustration 571

g06367434

1. Open the right compartment door.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on containing fluid spillage.

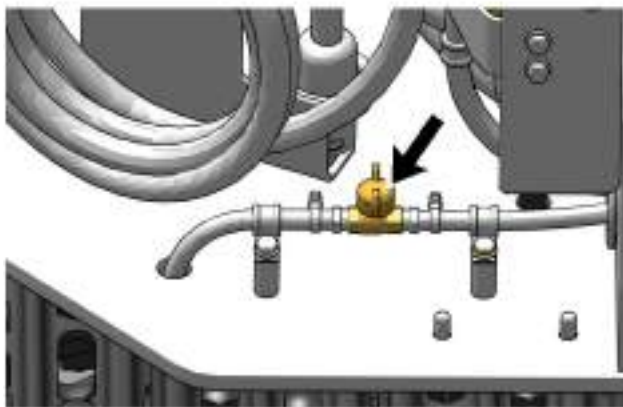


Illustration 572

g06367460

2. Open the drain valve by turning the valve counterclockwise. Allow the water and the sediment to drain into a suitable container.

Note: Dispose of drained fluids according to local regulations.

3. Close the drain valve by turning the valve clockwise.
4. Close the compartment door.

i07047559

Fumes Disposal Filter Element - Replace

SMCS Code: 1074



Illustration 573

g06209196

Typical example

Note: Perform the maintenance with the engine shut off.

1. Open the engine hood.
2. Remove the lid that holds the canister to the filter base assembly.
3. Remove the filter element. Dispose of the used element properly.
4. Install the new filter.
5. Install the lid.
6. Close the engine hood.

i07955970

Fuses - Replace

SMCS Code: 1417-510

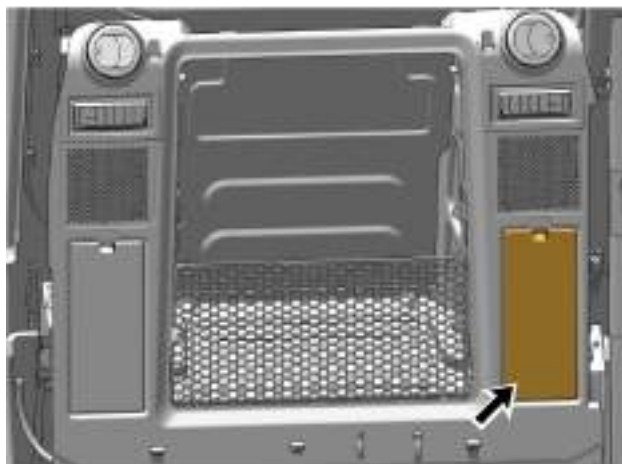


Illustration 574

g06181624

The fuse panel is on the left side of the interior storage box. Remove the cover to access the fuses.



Fuses – Fuses protect the electrical system from damage that is caused by overloaded circuits. Change a fuse if the element separates. If the element of a new fuse separates, check the circuit and/or repair the circuit.

NOTICE

Always replace fuses with the same type and capacity fuse that was removed. Otherwise, electrical damage could result.

NOTICE

If it is necessary to replace fuses frequently, an electrical problem may exist.

Contact your Cat dealer.

To replace a fuse, use the puller that is stored in the fuse panel.

The following list identifies the circuits that are protected by each fuse. The amperage for each fuse is included with each circuit.

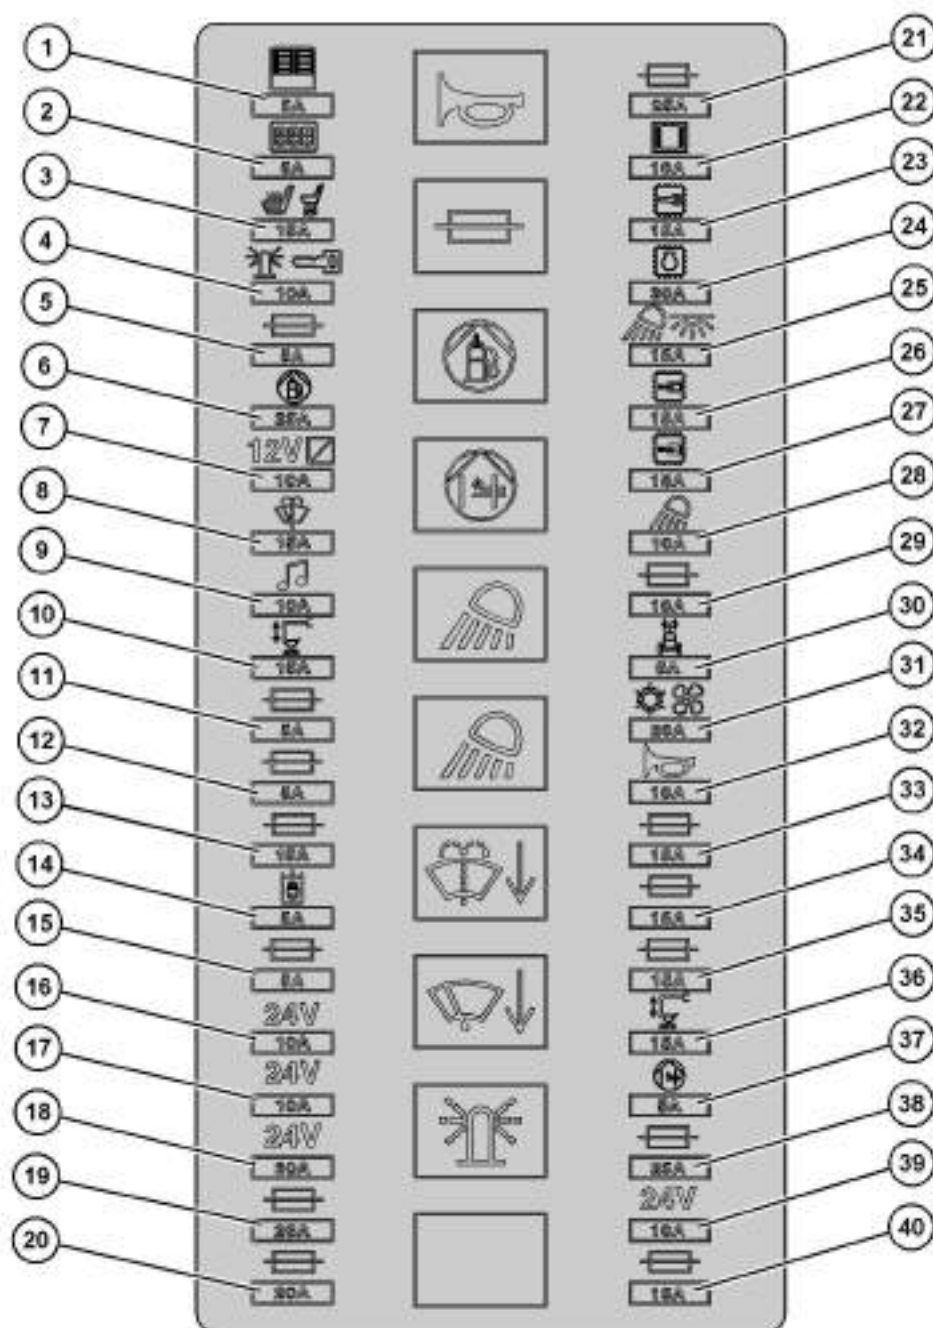


Illustration 575

q06223505

(1) Heater and Air Conditioner Control and Monitor – 5 Amp	(7) 12V Converter – 10 Amp
(2) Electronic Switch Control Panel – 5 Amp	(8) Window Wiper and Window Washer – 15 Amp
(3) Grip, Seat Heater, and Air Suspension Seat – 15 Amp	(9) Radio – 10 Amp
(4) Beacon/Caution Lamp – 10 Amp	(10) Cat Grade Control – 15 Amp
(5) Spare – 5 Amp	(11) Spare – 5 Amp
(6) Electric Refueling Pump – 25 Amp	(12) Spare – 5 Amp

- (13) **Spare** – 15 Amp
- (14) **Hydraulic Lock** – 5 Amp
- (15) **Spare** – 5 Amp
- (16) **Spare** – 10 Amp
- (17) **24V Auxiliary Circuit** – 10 Amp
- (18) **24V Auxiliary Circuit** – 30 Amp
- (19) **Spare** – 20 Amp
- (20) **Spare** – 10 Amp
- (21) **Spare** – 25 Amp
- (22) **Display and ET Connector** – 10 Amp
- (23) **Body Control Module** – 15 Amp
- (24) **Engine Electronic Control Module** – 30 Amp
- (25) **Dome Light** – 15 Amp
- (26) **Primary Electronic Control Module** – 15 Amp
- (27) **Secondary Electronic Control Module** – 15 Amp
- (28) **Boom Lamp** – 10 Amp
- (29) **Spare** – 10 Amp
- (30) **Product Link Module** – 5 Amp
- (31) **Air Conditioner and Heater Blower** – 20 Amp
- (32) **Horn** – 10 Amp
- (33) **Spare** – 15 Amp
- (34) **Spare** – 15 Amp
- (35) **12V Converter** – 10 Amp
- (36) **Cat Grade Control** – 15 Amp
- (37) **Fuel Lifting Pump** – 5 Amp
- (38) **Spare** – 25 Amp
- (39) **Auxiliary Circuit** – 10 Amp
- (40) **Spare** – 15 Amp

Relays

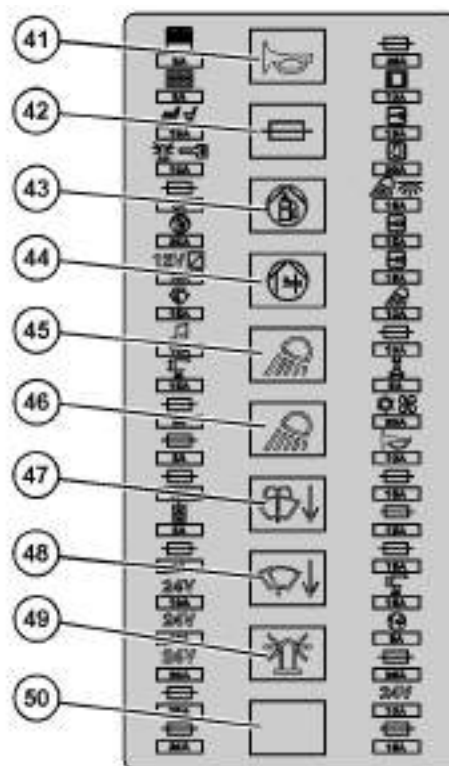


Illustration 576

g06223517

- (41) **Horn** – Relay
- (42) **DEF Pump** – Relay
- (43) **Priming Pump** – Relay
- (44) **Lifting Pump** – Relay
- (45) **Boom Light** – Relay
- (46) **Chassis Light and Cab Light** – Relay
- (47) **Lower Washer** – Relay
- (48) **Lower Wiper** – Relay
- (49) **Caution** – Relay
- (50) **Spare** – Relay

Power Fuse Module



Illustration 577

g06367225

The power fuse module is located behind the rear access door on the left side of the machine. Remove the cover to access the fuses.

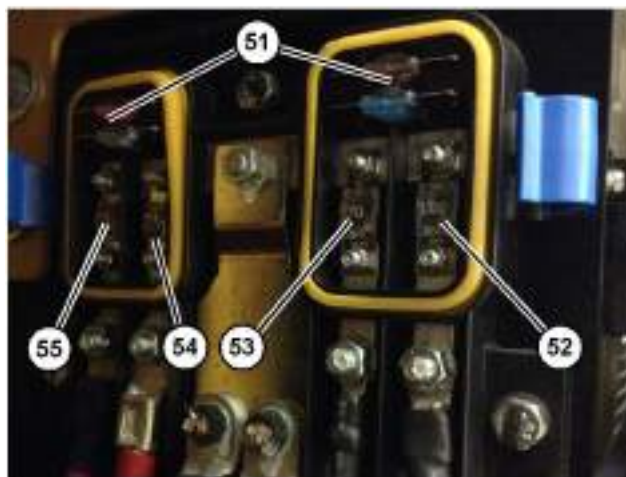


Illustration 578

g06225641

Typical Example



Spare (51) – The fuse module includes spare fuses which can be used if one of the installed fuses opens. One spare fuse is provided for each fuse in use.



Electric Cooling Fans 100 Amp (52)/(53) – This fuse is designed to protect the cooling fans.

Note: For machines with 11 electric fans, fuse (52) is 125 Amp.



Main Circuit 100 Amp (54) – This fuse is designed to protect the wires between the batteries and the fuses. If the wires are shorted to the machine body, this fuse would minimize the damage to the wires.



Alternator Circuit 150 Amp (55) – This fuse is designed to protect the alternator. If the batteries are installed with reversed polarity, the fuse would prevent the alternator from damaging the rectifier.

Secondary Power Fuse Module

Certain machines are equipped with a secondary power fuse module.



Illustration 579

g06367225

The secondary power fuse module is located behind the rear access door on the left side of the machine. Remove the cover to access the fuses.

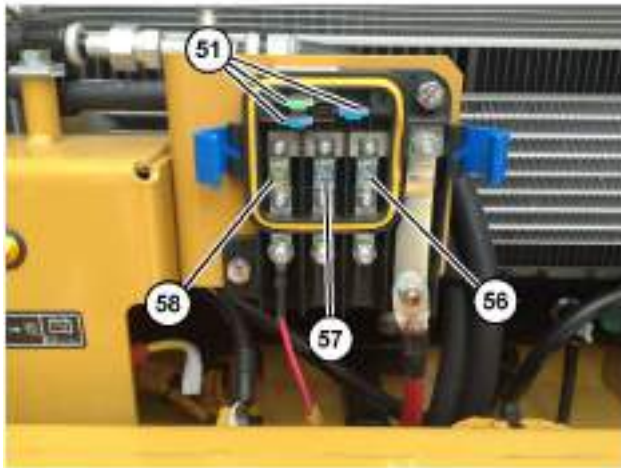


Illustration 580

g06308723

Typical Example



Spare (51) – The fuse module includes spare fuses which can be used if one of the installed fuses opens. One spare fuse is provided for each fuse in use.



Alternator Circuit 150 Amp (56) – This fuse is designed to protect the alternator. If the batteries are installed with reversed polarity, the fuse would prevent the alternator from damaging the rectifier.



Glow Plug Circuit 70 Amp (57) – This fuse is designed to protect the glow plugs.



Diesel Exhaust Fluid (DEF) Pump Circuit 40 Amp (58) – This fuse is designed to protect the DEF pump circuit.

i08067436

High Intensity Discharge Lamp (HID) - Replace (If Equipped)

SMCS Code: 1434-510

WARNING

HID lamps operate at very high voltages. To avoid electrical shock and personal injury, disconnect power before servicing HID lamps.

WARNING

HID bulbs become very hot during operation. Before servicing, remove power from lamp for at least five minutes to ensure lamp is cool.

NOTICE

Although HID bulb materials may change over time, HID bulbs produced at the time of the printing of this manual contain mercury. When disposing of this component, or any waste that contains mercury, please use caution and comply with any applicable laws.

1. Prepare the machine for maintenance. Refer to Operation and Maintenance Manual, "Prepare the Machine for Maintenance".
2. Remove the electrical power from the high intensity discharge lamp (HID). The electrical power must be removed from the HID lamp for at least 5 minutes, to ensure that the bulb is cool.
3. Disassemble the housing for the HID lamp to have access to the bulb.

Note: On some HID lamps, the bulb is a part of the lens assembly. The bulb is not removed separately from the lens assembly. Replace the entire lens assembly on these HID lamps.

4. Remove the bulb from the HID lamp.
5. Install the replacement bulb in the HID lamp.

If the bulb is a part of the lens assembly, install the replacement lens assembly in the HID lamp.

Note: To avoid failure to the bulb that is premature, avoid touching the bulb's surface with your bare hands. Clean any fingerprints from the bulb with alcohol prior to operation.

6. Reassemble the housing for the HID lamp. Ensure that any printing on the lens is oriented correctly for the HID lamp's mounting position on the machine.
7. Reattach the electrical power to the HID lamp.
8. Check the HID lamp for proper operation.

Note: Consult your Cat dealer for additional information on HID lamps.

i07837751

Hydraulic System Oil - Change

SMCS Code: 5056-044

Cat HYDO Advanced 10 Oil Change Interval

The standard Cat HYDO Advanced 10 oil change interval is every 6000 service hours or 3 years. But a 6000 service hour or 3-year maintenance interval for hydraulic oil (change) is strongly recommended with S·O·S monitoring of the hydraulic oil after 3000 service hours. The interval for S·O·S monitoring is every 500 hours. The Oil change is strongly recommended when the oil deterioration or contamination is detected. The maintenance interval for the hydraulic oil filter is not changed.

Hydraulic Hammer Use

The use of hydraulic hammers shortens the life of hydraulic oil. If a hydraulic hammer is used, the maintenance interval is shortened, refer to Table 34 for the intervals.

Table 34

Percentage of Hammer Use	Hydraulic System Oil - Change
50%	Every 1000 service hours
100%	Every 600 service hours

Procedure to Change the Hydraulic Oil

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat® products.

Dispose of all fluids according to local regulations and mandates.

1. Park the machine on level ground. Lower the bucket to the ground so that the stick is vertical.

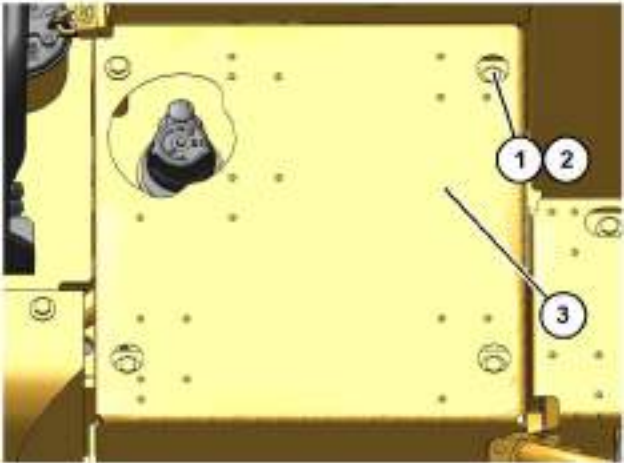


Illustration 581

g06368366

2. Remove four bolts (1) and washers (2). Remove cover (3) from the top of the hydraulic tank.

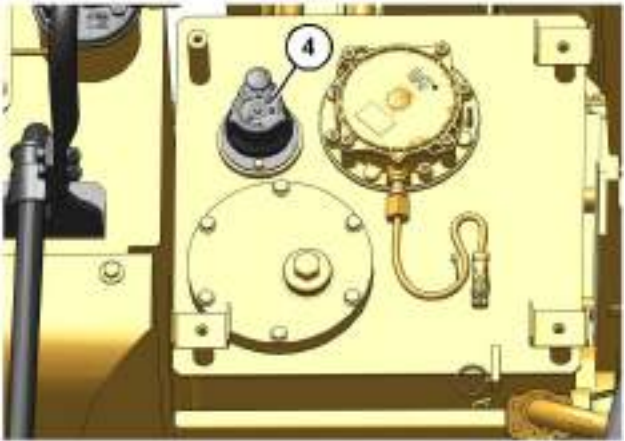


Illustration 582

g06367633

3. Clean the area thoroughly to keep dirt out of the screen cover and filler cap (4).

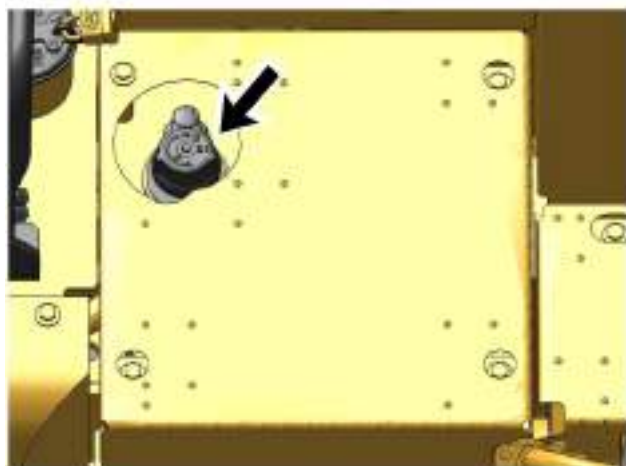


Illustration 583

g06368368

Hydraulic tank filler cap location



Pressurized system!

The hydraulic tank contains hot oil under pressure. To prevent burns from the sudden release of hot oil, relieve the tank pressure with the engine off. Relieve pressure by slowly turning the cap until the cap reaches the secondary stop.

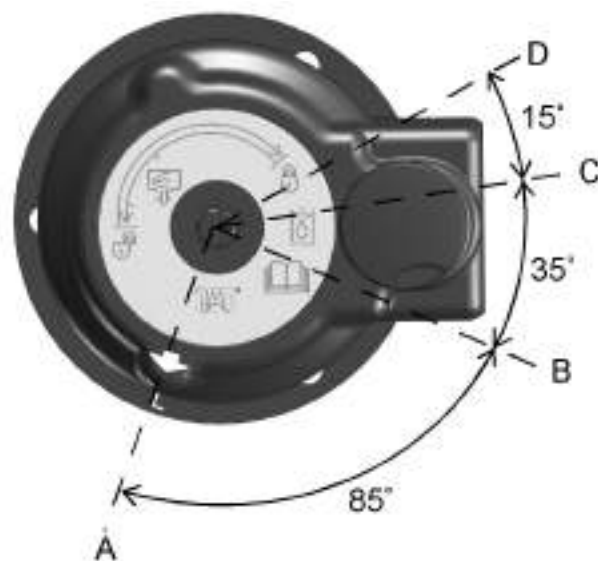


Illustration 584

g06184990

Filler cap

- (A) LOCK position
- (B) PRESSURE RELEASE - START position
- (C) PRESSURE RELEASE - END position
- (D) OPEN position

4. Release the pressure that may be present in the return hydraulic circuit with the following procedure. Refer to Illustration 584 for filler cap positions.
 - a. Turn the filler cap counterclockwise and move the arrow from position (A) to position (B).
 - b. Release the pressure for a minimum of 45 seconds by moving the arrow from position (B) to position (C).
 - c. Move the arrow from position (C) to position (D).
 - d. After the tank pressure is relieved, tighten the filler cap.



Illustration 585

g06367693

5. Remove the hydraulic tank access cover that is located under the upper structure. Removing the cover will allow access to the drain valve.

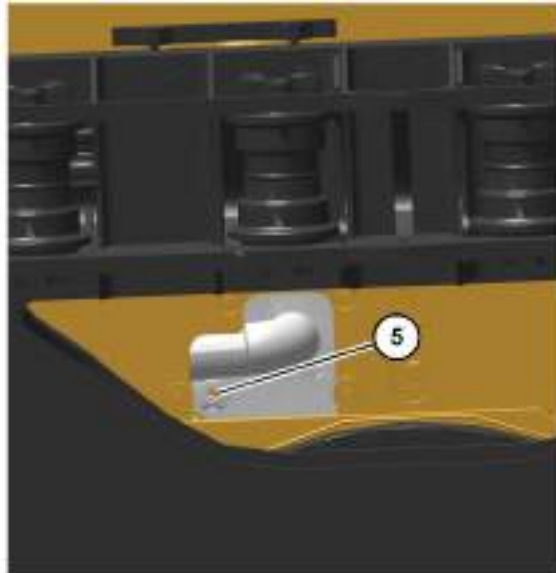


Illustration 586

g06367696

(5) Plug

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information that pertains to containing fluid spillage.

6. Remove plug (5).
7. Inspect the O-ring. Replace the O-ring if wear or damage is evident.

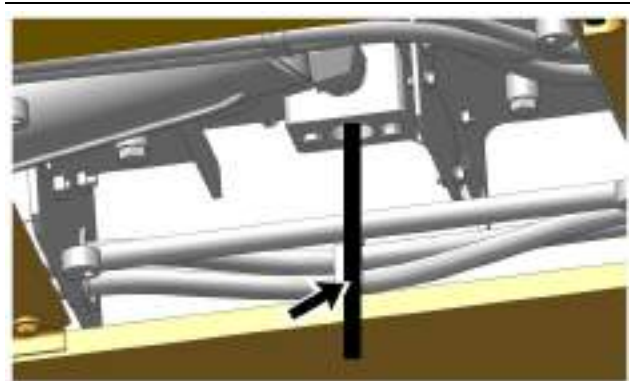


Illustration 587

g06182192

8. Use a bar to push the plunger up to allow the oil to drain.

9. Drain the oil into a suitable container.

Note: Dispose of used fluids according to local regulations.

10. After the oil has been drained, clean drain plug (5) and install. Tighten the plug to $68 \pm 7 \text{ N} \cdot \text{m}$ ($50 \pm 5 \text{ lb ft}$).
11. Open the access door on the right side of the machine.
12. Clean the pump, the hydraulic lines, and the hydraulic tank.

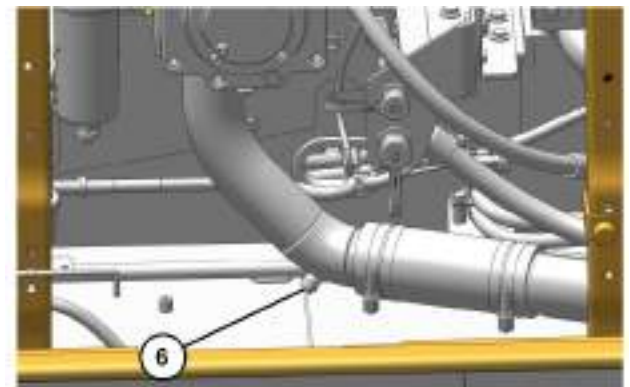


Illustration 588

g06182196

13. Remove plug (6) from the tube. Allow the oil to drain into a container.
14. Inspect the O-ring. Replace the O-ring if wear or damage is evident.
15. Clean the plug. Install the plug and the O-ring into the drain port.

Hydraulic Tank Screen - Clean

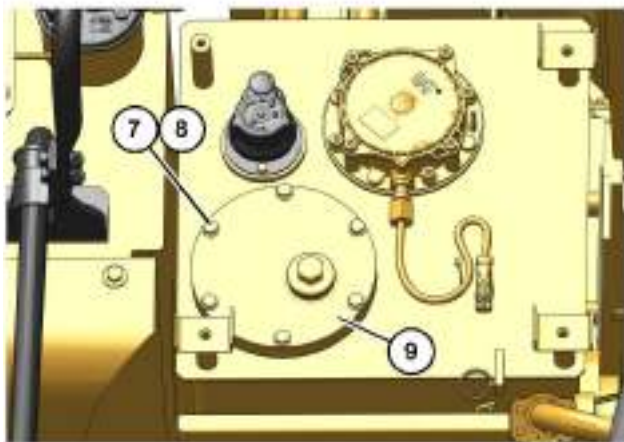


Illustration 589

g06367718

- (7) Bolts
- (8) Washers
- (9) Cover

1. Remove bolts (7), washers (8), and cover (9).

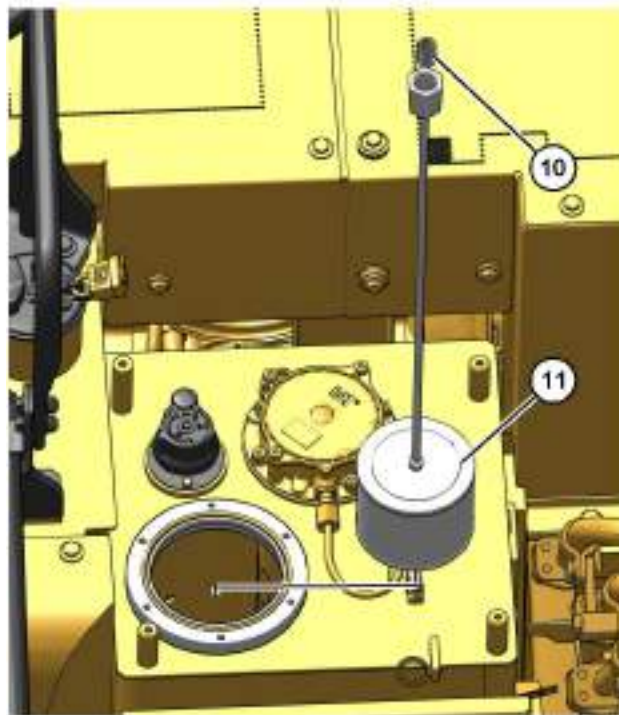


Illustration 590

g06367742

- (10) Spring
- (11) Screen

2. Remove spring (10) and screen (11).

Note: Do not allow spring (10) to fall back into the tank.

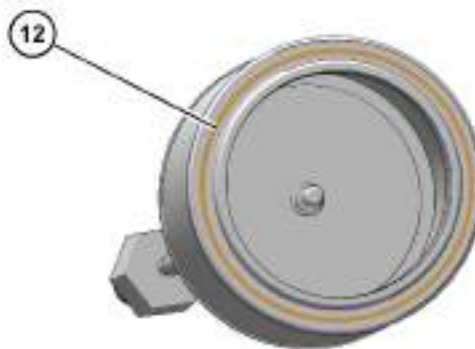


Illustration 591

g06182515

- (12) O-ring seal

3. Remove O-ring seal (12) from the screen.



Illustration 592

g06367748

(13) O-ring seal

4. Remove O-ring seal (13) from the tank.
5. Inspect O-ring seals (12) and (13). Replace the O-ring seals if wear or damage is evident.
6. Wash the screen in a clean nonflammable solvent. Allow the screen to dry. Inspect the screen. Replace the screen, if the screen is damaged.
7. Install O-ring seal (12) on screen (11).
8. Install screen (11) and spring (10). Then install cover (9), washers (8), and bolts (7).

Note: Make sure that the O-ring seals and the spring are properly positioned during installation.

Case Drain Filter - Clean

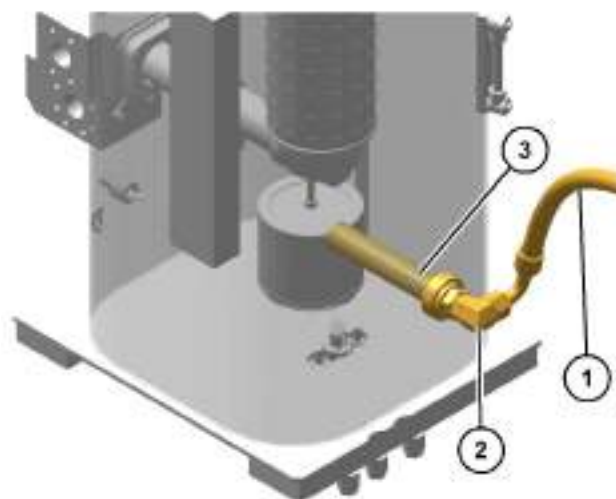


Illustration 593

g06367832

- (1) Hose
- (2) Tee
- (3) Case drain filter

1. Remove hose (1) from tee (2). Remove tee (2).
2. Remove case drain filter (3) from the hydraulic tank.
3. Wash the screen of the case drain filter in a clean nonflammable solvent. Allow the filter to dry. Inspect the filter. Replace the filter if the filter is damaged.
4. Inspect the O-ring seal on the filter. Replace the O-ring seal if wear or damage is evident.
5. Install the filter in the hydraulic tank. Tighten the filter to $175 \pm 26 \text{ N}\cdot\text{m}$ ($129 \pm 19 \text{ lb ft}$).
6. Install the tee onto the filter. Tighten the tee to $65 \pm 10 \text{ N}\cdot\text{m}$ ($48 \pm 7 \text{ lb ft}$).
7. Install the two hoses onto the tee.

Hydraulic System Oil - Fill

1. Fill the hydraulic system oil tank. Refer to Operation and Maintenance Manual, "Capacities (Refill)".
2. Inspect the O-ring seal on the filler cap for damage. Replace the O-ring, if necessary. Clean the filler cap. Install the filler cap.

Note: Make no attempt to start the engine until the pump has been filled with hydraulic oil. Serious damage to the hydraulic components can result.

Main Pump and Hydraulic System Air Purge

1. Access the hydraulic pump. The hydraulic pump is located behind the right access door.

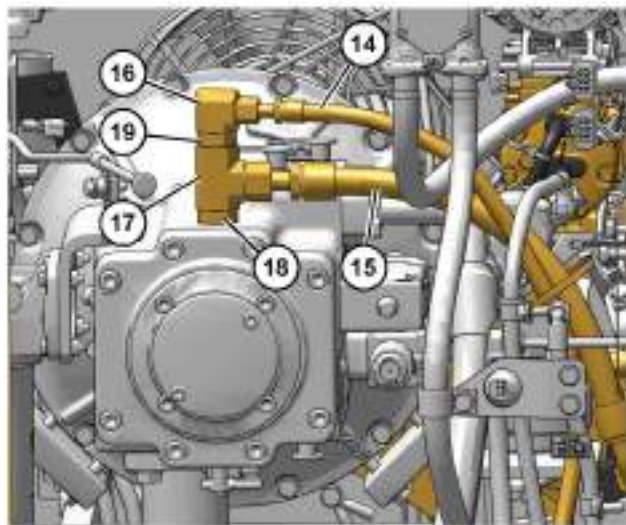


Illustration 594

g06367886

- (14) Hose
- (15) Hose
- (16) Elbow
- (17) Tee
- (18) Connector
- (19) Connector

2. While the engine is stopped, remove hose (14), hose (15), elbow (16), connector (19), tee (17), and connector (18) from the top of the pump. Add hydraulic oil through the opening.
3. Check the condition of the seals. If a seal is damaged, replace the seal.
4. After the pump has been filled with oil, install drain hose (14), hose (15), elbow (16), connector (19), tee (17), and connector (18) to the original locations.
5. Start the engine. When the engine is at low idle, raise the boom. Hold the boom in this position.
6. Stop the engine. Slowly lower the boom until the work tool is on the ground. The hydraulic tank will pressurize.
7. Slowly loosen hose (14), and hose (15) until hydraulic oil flows from the connection. Oil flowing from the connection indicates that the air has been released from the pump.
8. Tighten hose (14), and hose (15).

9. Start the engine. Operate the engine at idling speed for 5 minutes.



Illustration 595

g06368370

10. Operate the joysticks to circulate the hydraulic oil. Lower the bucket to the ground so that the stick is vertical to the ground. Stop the engine.
11. Check the hydraulic oil level.

Reference: For the correct procedure, refer to Operation and Maintenance Manual, "Hydraulic System Oil Level - Check".

12. Close the access door.
13. Close the engine hood and latch the engine hood.

Fast Fill

If your machine is equipped with a deluxe service center, you may drain the hydraulic oil through the fast fill port. You may also add the hydraulic oil through a fast fill port.



Illustration 596

g06367434

The return filter is a cartridge type filter. The amount of foreign material that enters the hydraulic system is reduced when the filter element is replaced.

Two different filters are available for the return filter. One filter is used for standard applications such as digging and normal use of a hammer. The second filter is used for an application such as demolishing a ceiling in a tunnel with a hammer.

Note: If the message display shows that the hydraulic return filter is plugged, turn off the machine. After you make sure that the warning has disappeared, start the machine and run the machine on level ground for approximately 10 minutes. If the warning still appears in the message display, inspect the filter and replace the filter, if necessary.

Hydraulic Hammer Use

The use of hydraulic hammers shortens the life of hydraulic oil. If a hydraulic hammer is used, the maintenance interval is shortened, refer to Table 35 for the intervals.

Table 35

Percentage of Hammer Use	Hydraulic System Oil Filter (Return) - Replace
50%	Every 500 service hours
100%	Every 250 service hours

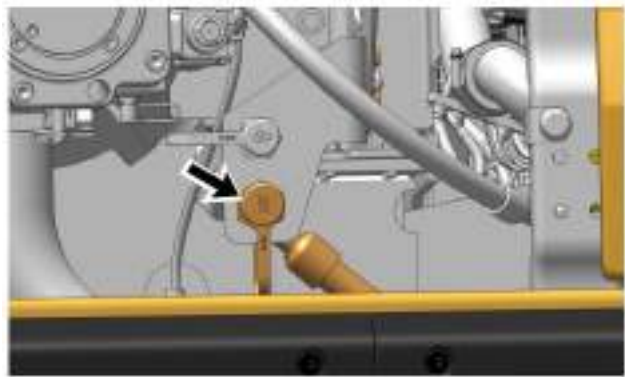


Illustration 597

g06182544

1. Remove the dust cover.
2. Attach the hose to the male coupling.
3. Drain the oil or add the oil, as needed.

i07837750

Hydraulic System Oil Filter (Return) - Replace

SMCS Code: 5068-510-RJ

**WARNING**

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

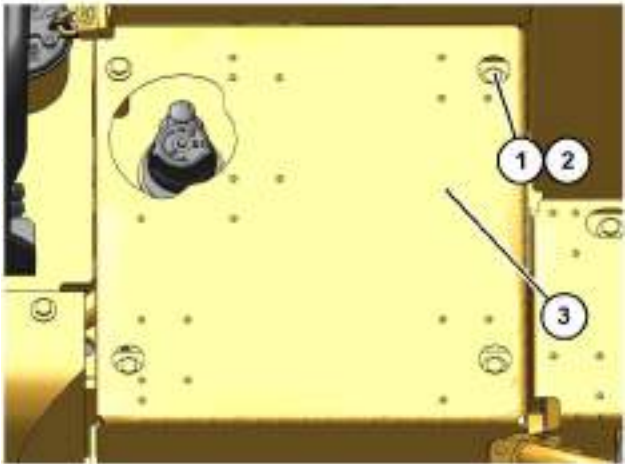


Illustration 598

g06368366

1. Remove four bolts (1) and washers (2). Remove cover (3) from the top of the hydraulic tank.

Maintenance Section
Hydraulic System Oil Filter (Return) - Replace

2. Clean the area thoroughly to keep dirt out of the return filter and filler cap.

WARNING

Pressurized system!

The hydraulic tank contains hot oil under pressure. To prevent burns from the sudden release of hot oil, relieve the tank pressure with the engine off. Relieve pressure by slowly turning the cap until the cap reaches the secondary stop.

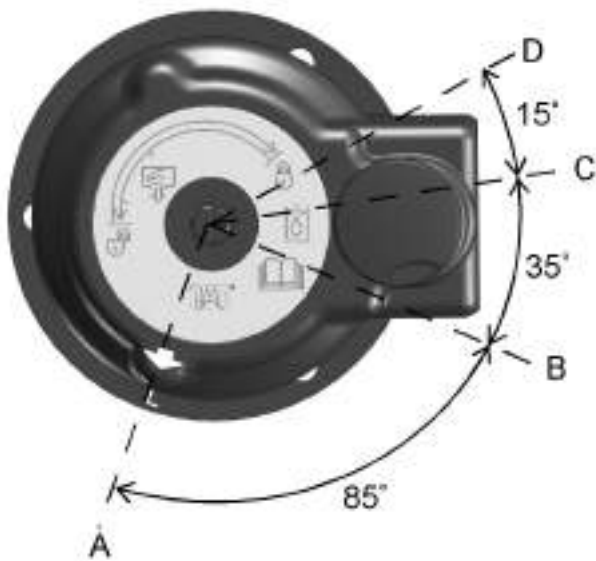


Illustration 599

g06184990

Filler cap

- (A) LOCK position
- (B) PRESSURE RELEASE - START position
- (C) PRESSURE RELEASE - END position
- (D) OPEN position

3. Release the pressure that may be present in the return hydraulic circuit with the following procedure. Refer to Illustration 599 for filler cap positions.
 - a. Turn the filler cap counterclockwise and move the arrow from position (A) to position (B).
 - b. Release the pressure for a minimum of 45 seconds by moving the arrow from position (B) to position (C).
 - c. Move the arrow from position (C) to position (D).
 - d. After the tank pressure is relieved, tighten the filler cap on the hydraulic tank to position (A).
4. Check the hydraulic system oil level.

Reference: For the correct procedure, refer to Operation and Maintenance Manual, "Hydraulic System Oil Level - Check".



Illustration 600

g06367893

5. Remove four bolts (4), disconnect the harness connector from the filter bypass switch, and remove cover assembly (5) from the tank. Inspect the O-ring on the cover for damage and replace as necessary.

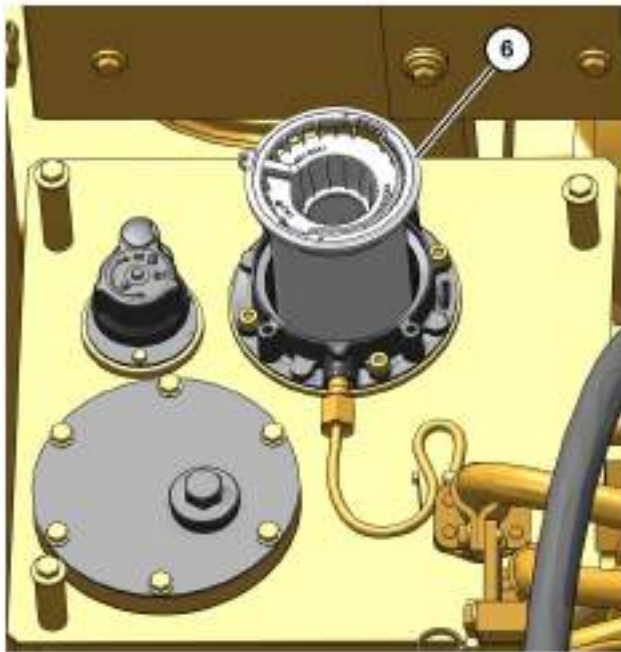


Illustration 601

g06367923

6. Remove filter element (6) and discard. Install a new element into the filter case.



Illustration 602

g06367893

7. Place cover assembly (5) into position in the tank. Install four bolts (4) and tighten to 30 ± 7 N·m (22 ± 5 lb ft). Install the harness connector on the filter bypass switch.

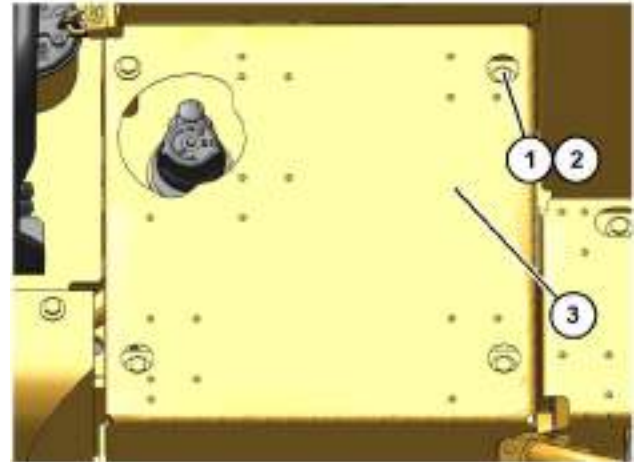


Illustration 603

g06368366

8. Position cover (3) in place on the top of the hydraulic tank. Install four bolts (1) and washers (2).

i07578961

Hydraulic System Oil Level - Check

SMCS Code: 5050-535

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

NOTICE

Never remove the fill/vent plug from the hydraulic tank if the oil is hot.

Air can enter the system and cause pump damage.

Maintenance Section
Hydraulic System Oil Level - Check



Illustration 604

g06368370

1. Park the machine on level ground. Lower the bucket to the ground with the stick in a vertical position, as shown.



Illustration 605

g06367434

2. Open the access door on the right side of the machine.

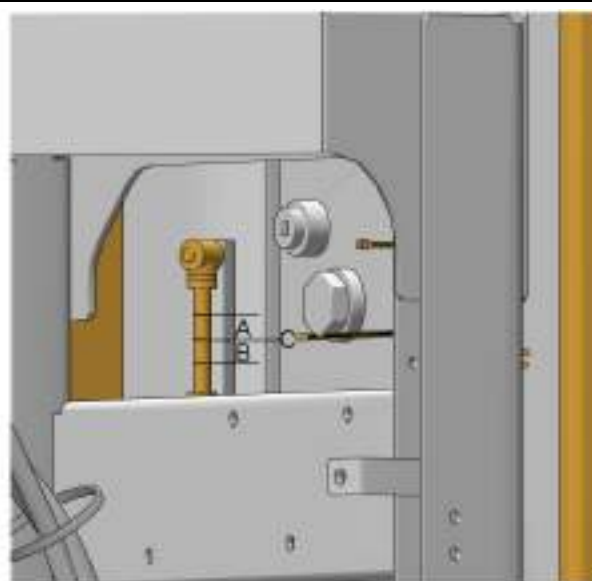


Illustration 606

g06367933

- (A) High temperature range
(B) Low temperature range
(C) Mid temperature range

3. If the hydraulic oil temperature is between 10° to 30° C (50° to 86° F), maintain the oil level in low temperature range (B). If the hydraulic oil temperature is between 50° to 80° C (122° to 187° F), maintain the oil level in high temperature range (A). If the hydraulic oil temperature is between 31° to 49° C (87° to 121° F), maintain the oil level in mid temperature range (C).

4. Close the access door.

Note: Perform Step 5 through Step 8 if the oil level is low.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information that pertains to Containing Fluid Spillage.



WARNING

Pressurized system!

The hydraulic tank contains hot oil under pressure. To prevent burns from the sudden release of hot oil, relieve the tank pressure with the engine off. Relieve pressure by slowly turning the cap until the cap reaches the secondary stop.

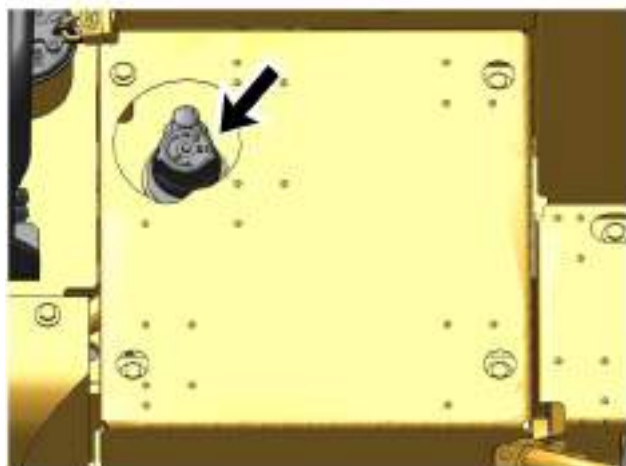


Illustration 607

g06368368

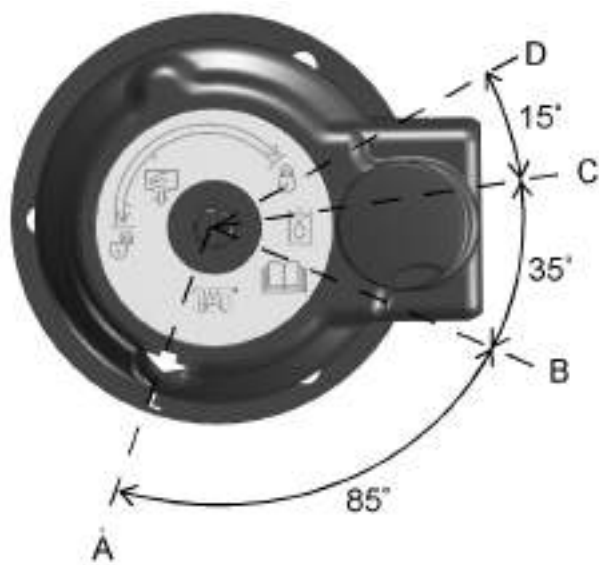


Illustration 608

g06184990

Filler cap

- (A) LOCK position
(B) PRESSURE RELEASE - START position
(C) PRESSURE RELEASE - END position
(D) OPEN position

5. Release the pressure that may be present in the return hydraulic circuit with the following procedure. Refer to Illustration 608 for filler cap positions.

- a. Turn the filler cap counterclockwise and move the arrow from position (A) to position (B).

- b. Release the pressure for a minimum of 45 seconds by moving the arrow from position (B) to position (C).
- c. Move the arrow from position (C) to position (D).
- d. After the tank pressure is relieved, remove the filler cap.

6. Add oil if necessary. See Operation and Maintenance, "Lubricant Viscosities"
7. Check the O-ring seal on the filler cap. Replace the O-ring seal if the seal is damaged.
8. Clean the filler cap and install on the tank. Tighten the filler cap on the hydraulic tank to position (A).

i07884562

Hydraulic System Oil Sample - Obtain

SMCS Code: 5050-008-OC; 5095-008; 5095-SM; 7542-008; 7542

Note: If Cat HYDO Advanced hydraulic oils are used, the hydraulic oil change interval is extended to 6000 hours. S-O-S services after 3,000 hours is strongly recommended. Consult your Cat dealer for details.

The hydraulic oil sampling valve is on top of the machine on the right side.

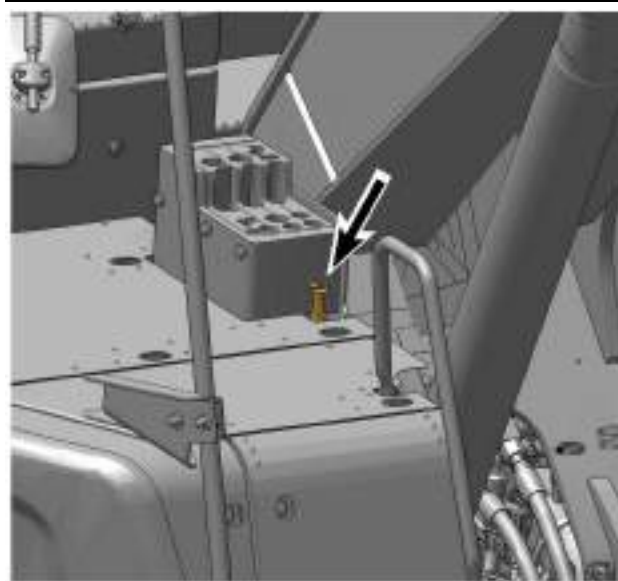


Illustration 609

g06469399

1. Remove cover.
2. Obtain a sample of the hydraulic oil from the hydraulic oil sampling valve.

3. Install cover.

Refer to Special Publication, SEBU6250, "S·O·S Oil Analysis" for information that pertains to obtaining a sample of the hydraulic oil. Refer to Special Publication, PEGJ0047, "How To Take A Good Oil Sample" for more information about obtaining a sample of the hydraulic oil.

i03753191

Indicators and Gauges - Test

SMCS Code: 7450-081; 7490-081

1. Look for broken lenses on the gauges, broken indicator lights, broken switches, and other broken components in the cab.
2. Start the engine.
3. Look for inoperative gauges.
4. Turn on all machine lights. Check for proper operation.
5. Move the machine forward. Release the travel levers and the travel pedals. The machine should stop.
6. Stop the engine.
7. Make any repairs that are required before operating the machine.

i07955410

Oil Filter (Hydraulic Hammer) - Replace

SMCS Code: 5068-510



WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

The use of hydraulic hammers shortens the life of hydraulic oil. If a hydraulic hammer is used, the maintenance interval is shortened, refer to Table 36 for the intervals.

Table 36

Percentage of Hammer Use	Oil Filter (Hydraulic Hammer) - Replace
50%	Every 250 service hours
100%	Every 100 service hours



Illustration 610

g06368370

1. Park the machine on level ground in the service position as shown.
2. Move the hydraulic lockout control to the UNLOCKED position.
3. Turn the engine start switch to the ON position.
4. Move the joysticks and the travel levers/pedals to the full stroke positions to relieve the pressure in the hydraulic lines.
5. Turn the engine start switch to the OFF position and return the lever for the hydraulic lockout control to the LOCKED position.



WARNING

Pressurized system!

The hydraulic tank contains hot oil under pressure. To prevent burns from the sudden release of hot oil, relieve the tank pressure with the engine off. Relieve pressure by slowly turning the cap until the cap reaches the secondary stop.

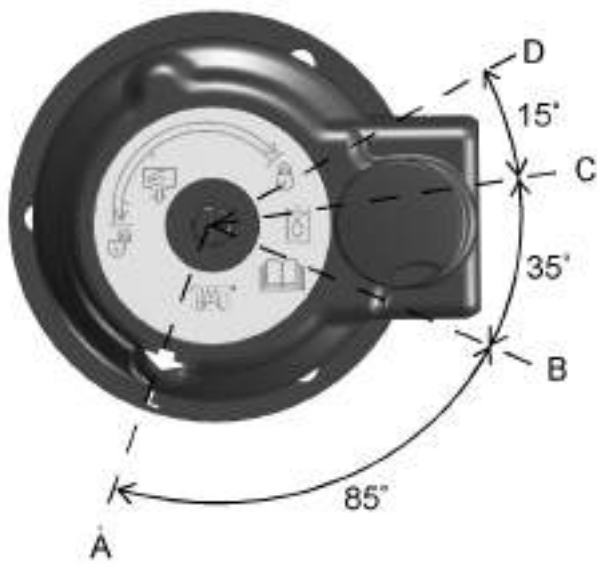


Illustration 611

g06184990

Filler cap

- (A) LOCK position
- (B) PRESSURE RELEASE - START position
- (C) PRESSURE RELEASE - END position
- (D) OPEN position

6. Release the pressure that may be present in the return hydraulic circuit with the following procedure. Refer to Illustration 611 for filler cap positions.
 - a. Turn the filler cap counterclockwise and move the arrow from position (A) to position (B).
 - b. Release the pressure for a minimum of 45 seconds by moving the arrow from position (B) to position (C).
 - c. Move the arrow from position (C) to position (D).
 - d. After the tank pressure is relieved, remove the filler cap.



Illustration 612

g06495688

7. The oil filter for the hammer is located behind the right front side cover.

Remove the cover to access the filter.

8. Position a suitable container to contain the oil.

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information on containing fluid spillage.

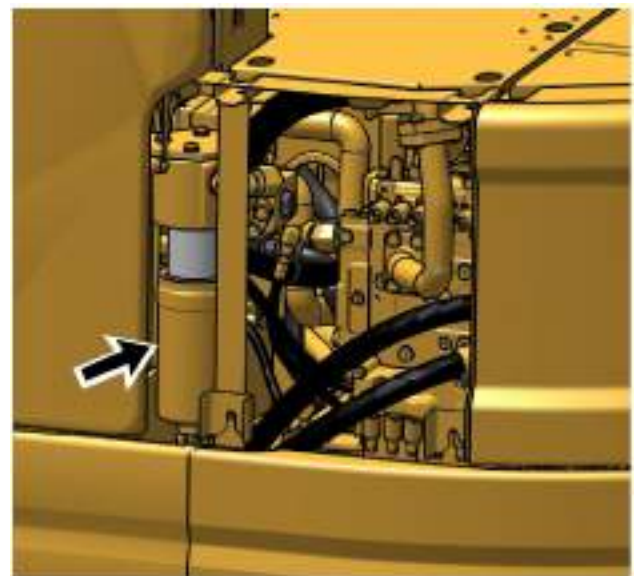


Illustration 613

g06495679

9. Loosen the filter housing and remove the housing and filter element.
10. Discard the filter element. The element cannot be reused.

Note: Dispose the filter element according to local regulations.

11. Remove the O-ring seal from the housing and clean the filter housing. Install a new O-ring seal on the housing.
12. Inspect the plug on the housing. If there are signs of leakage, replace the O-ring on the plug. Tighten the plug to 59 ± 5 N·m (44 ± 4 lb ft).
13. Install the new filter element.
14. Install the housing on the filter base. Tighten the housing to 98 ± 10 N·m (72 ± 7 lb ft).
15. Start the engine and operate the machine slowly for 10 to 15 minutes. Move each cylinder evenly through several cycles and operate the hammer.
16. Return the machine to the service position. Check the machine for oil leaks.
17. Stop the engine.
18. Check the hydraulic oil level.

Reference: For the correct procedure, refer to Operation and Maintenance Manual, "Hydraulic System Oil Level - Check".

i07349186

Oil Filter - Inspect

SMCS Code: 1308-507; 5068-507

Inspect a Used Filter for Debris



Illustration 614

The element is shown with debris.

g06224663

Use a filter cutter to cut the filter element open. Spread apart the pleats and inspect the element for metal and for other debris. An excessive amount of debris in the filter element can indicate a possible failure.

If metals are found in the filter element, a magnet can be used to differentiate between ferrous metals and nonferrous metals.

Ferrous metals can indicate wear from steel parts and on cast iron parts.

Nonferrous metals can indicate wear from the aluminum parts of the engine such as main bearings, rod bearings, or turbocharger bearings.

Small amounts of debris may be found in the filter element. This debris could be caused by friction and by normal wear. Consult your Cat dealer to arrange for further analysis if an excessive amount of debris is found.

Using an oil filter element that is not recommended by Caterpillar can result in severe engine damage to engine bearings, to the crankshaft, and to other parts. This can result in larger particles in unfiltered oil. The particles could enter the lubricating system and the particles could cause damage.

i07578981

Radiator, Aftercooler and Oil Cooler Cores - Clean

SMCS Code: 1063-070-KO; 1353-070-KO; 1374-070-KO

WARNING

Personal injury can result from air pressure.

Personal injury can result without following proper procedure. When using pressure air, wear a protective face shield and protective clothing.

Maximum air pressure at the nozzle must be less than 205 kPa (30 psi) for cleaning purposes.



Illustration 615

g06367225

1. Open the access door on the left side of the machine.

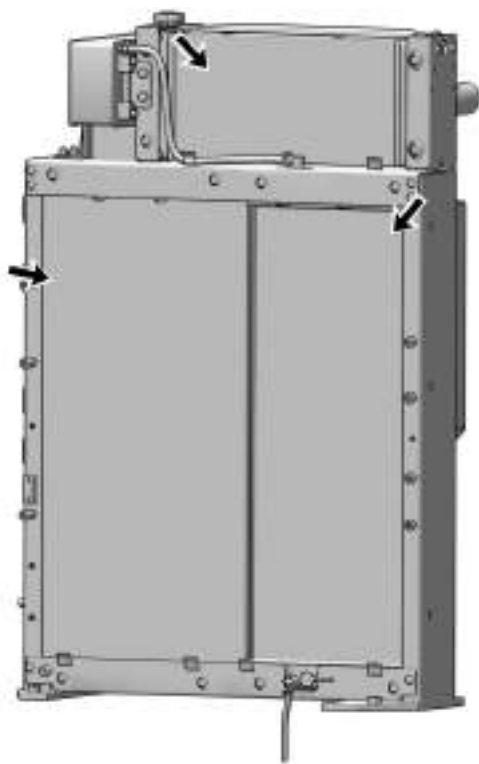


Illustration 616

g06367986

2. Remove dust and debris from all the core fins.

Compressed air is preferred, but high-pressure water or steam can be used to remove dust and general debris from a core.

See Special Publication, SEBD0518, "Know Your Cooling System" for more detailed information about cleaning core fins.

3. Close the access door on the left side of the machine.

i08192239

Receiver Dryer (Refrigerant) - Replace

SMCS Code: 7322-510; 7322-710

WARNING

Personal injury can result from contact with refrigerant.

Contact with refrigerant can cause frost bite. Keep face and hands away to help prevent injury.

Protective goggles must always be worn when refrigerant lines are opened, even if the gauges indicate the system is empty of refrigerant.

Always use precaution when a fitting is removed. Slowly loosen the fitting. If the system is still under pressure, release it slowly in a well ventilated area.

Personal injury or death can result from inhaling refrigerant through a lit cigarette.

Inhaling air conditioner refrigerant gas through a lit cigarette or other smoking method or inhaling fumes released from a flame contacting air conditioner refrigerant gas, can cause bodily harm or death.

Do not smoke when servicing air conditioners or wherever refrigerant gas may be present.

Use a certified recovery and recycling cart to properly remove the refrigerant from the air conditioning system.

NOTICE

If the refrigerant system has been open to the outside air (without being plugged) for more than 30 minutes, the receiver-dryer must be replaced. Moisture will enter an open refrigerant system and cause corrosion which will lead to component failure.

Prepare the machine for maintenance. Refer to Operation and Maintenance Manual, "Prepare the Machine for Maintenance".

Refer to Service Manual, "Air Conditioning and Heating R-134a for All Caterpillar Machines" for the proper procedure to change the receiver-dryer assembly and for the procedure to reclaim the refrigerant gas.

i07578985

Rollover Protective Structure (ROPS) - Inspect

SMCS Code: 7323-040; 7325-040



Illustration 617

g06184357

Consult your Cat dealer for repair of any cracks in the ROPS.

Inspect the ROPS for loose bolts or for damaged bolts. Replace any damaged bolts or missing bolts with original equipment parts only. Tighten the M24 bolt (1) to $425 \pm 50 \text{ N}\cdot\text{m}$ ($315 \pm 40 \text{ lb}\cdot\text{ft}$).

Note: Apply oil to all ROPS bolt threads before you install the bolts. Failure to apply oil to the bolt threads can result in improper bolt torque.

Do not straighten the ROPS. Do not repair the ROPS by welding reinforcement plates to the ROPS.

Consult your Cat dealer for inspection of any potential damage or repair of any damage to any operator protective structure. (Including ROPS, FOPS, TOPS, OPS, and OPG) Refer to Special Instruction, SEHS6929, "Inspection, Maintenance, and Repair of Operator Protective Structures (OPS) and Attachment Installation Guidelines for All Earthmoving Machinery"

i07103309

Seat Belt - Inspect

SMCS Code: 7327-040

Always inspect the condition of the seat belt and the condition of the seat belt mounting hardware before you operate the machine. Replace any parts that are damaged or worn before you operate the machine.



Illustration 618

g06224278

Typical example

Inspect buckle (2) for wear or for damage. If the buckle is worn or damaged, replace the seat belt.

Inspect seat belt (1) for webbing that is worn or frayed. Replace the seat belt if the webbing is worn or frayed.

Inspect all seat belt mounting hardware for wear or for damage. Replace any mounting hardware that is worn or damaged. Make sure that the mounting bolts are tight.

If your machine is equipped with a seat belt extension, also perform this inspection procedure for the seat belt extension.

Contact your Cat dealer for the replacement of the seat belt and the mounting hardware.

Note: The seat belt should be replaced within 3 years of the date of installation. A date of installation label is attached to the seat belt retractor and buckle. If the date of installation label is missing, replace belt within 3 years from the year of manufacture as indicated on belt webbing label, buckle housing, or installation tags (non-retractable belts).

i06970675

Seat Belt - Replace

SMCS Code: 7327-510

The seat belt should be replaced within 3 years of the date of installation. A date of installation label is attached to the seat belt retractor and buckle. If the date of installation label is missing, replace the belt within 3 years from the year of manufacture as indicated on the belt webbing label, buckle housing, or installation tags (non-retractable belts).

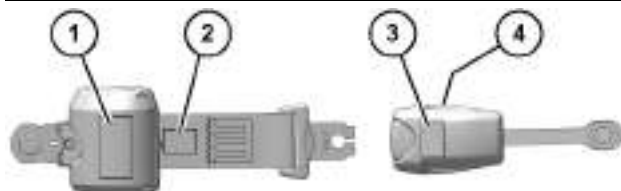


Illustration 619

g06183390

- (1) Date of installation (retractor)
- (2) Year of manufacture (tag) (fully extended web)
- (3) Date of installation (buckle)
- (4) Year of manufacture (underside) (buckle)

Consult your Cat dealer for the replacement of the seat belt and the mounting hardware.

Determine the age of a new seat belt before installing on seat. A manufacture label is on the belt webbing and imprinted on the belt buckle. Do not exceed the install by date on the label.

A complete seat belt system should be installed with new mounting hardware.

Date of installation labels should be marked and affixed to the seat belt retractor and buckle.

Note: Date of installation labels should be permanently marked by punch (retractable belt) or stamp (non-retractable belt).

If your machine is equipped with a seat belt extension, also perform this replacement procedure for the seat belt extension.

Shovel Crane - Inspect (If Equipped)

SMCS Code: 6500-040

i06991878

WARNING

Do not operate the shovel crane with a hook that has cracks or deformities. Failure to follow these instructions may cause the load to fall and result in injury or death. Replace the shovel crane hook if there are any signs of cracks or deformities.

1. Position the machine on a level surface and retract the bucket. Lower the bucket to the ground.
2. Move the hydraulic lockout control to the LOCKED position. Stop the engine.

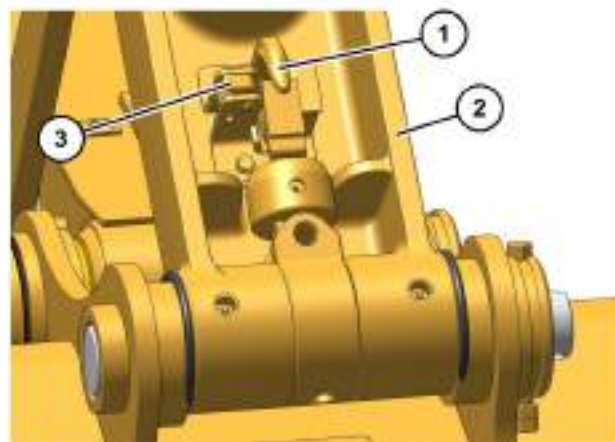


Illustration 620

g06191360

Type 2

- (1) Shovel crane hook
- (2) Bucket linkage
- (3) Latch assembly

3. Unlock shovel crane hook (1) from latch assembly (3) for inspection.
4. Inspect the shovel crane hook and the hook latch. Make any repairs before operation of the shovel crane.

Inspect Shovel Crane Hook

Ensure that the shovel crane is properly lubricated. Refer to this Operation and Maintenance Manual, "Shovel Crane - Lubricate" for the correct procedure.



Illustration 621

g06191406

Inspect for notable scratches, tears, or welded parts.

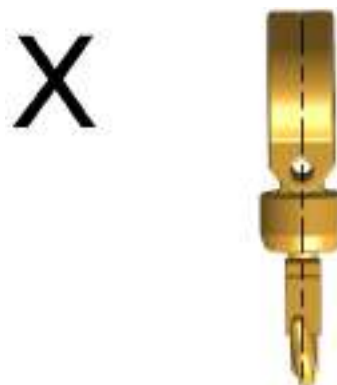


Illustration 624

g06191411

Inspect the tip of shovel crane hook and ensure that the tip is not bent to either side.



Illustration 622

g06191407

Visually inspect for corrosion and rust. If corrosion or rust is found, polish the area with a grinder and lubricate the hook with oil.

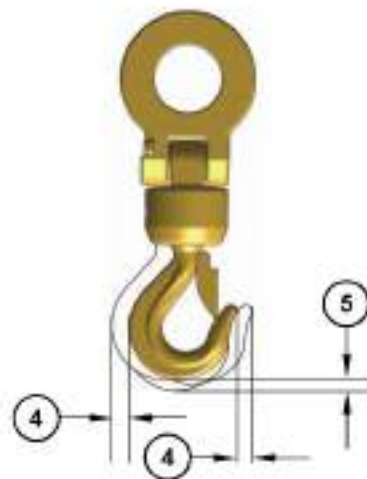


Illustration 625

g06191428

(4) Horizontal movement
(5) Vertical movement

Inspect the shovel crane hook for excessive movement. The horizontal movement (4) of the hook should not exceed 5 mm (0.2 inch). The vertical movement (5) of the hook should not exceed 4 mm (0.2 inch.) vertically .



Illustration 623

g06191409

Inspect the shovel crane swivel. The swivel should rotate smoothly and not rattle.

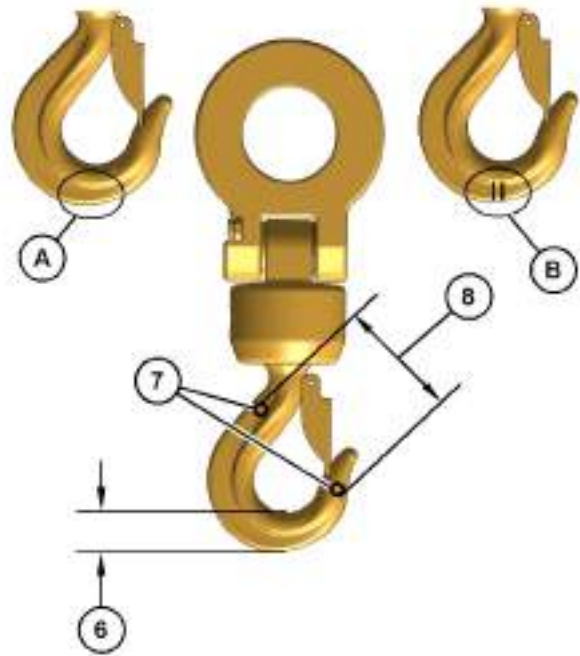


Illustration 626 g06191434
(6) Width
(7) Punch marks
(8) Length

There are two types of hooks:

Hook (A) – This type of hook will not have a mark to indicate the area intended to bear the weight of a suspended load.

Hook (B) – This type of hook will have a mark to indicate the area intended to bear the weight of a suspended load.

Measure the shovel crane hook to ensure that the specifications do not exceed the thresholds found in the table below.

Table 37

Disposal Reference Chart				
Hook Type	New Shovel Hook Specifications for Reference		Shovel Hook Specification Threshold	
	Length (8)	Width (6)	Length (8)	Width (6)
A	66 mm (2.60 inch)	31.8 mm (1.25 inch)	69.3 mm (2.73 inch)	30.2 mm (1.19 inch)
B	65 mm (2.55 inch)	31.8 mm (1.25 inch)	68.2 mm (2.69 inch)	30.2 mm (1.19 inch)

Note: Length (8) is the distance between punch marks (7).

Replace shovel crane hook for any of the following reasons:

- Deep scratches, tears, or welded parts
- Corrosion or rust that cannot be removed with a grinder
- Hook swivel does not rotate smoothly
- Tip of the hook is bent to either side
- Hook has excessive movement in the swivel
- Hook exceeds the specification thresholds found in the disposal reference chart.

Inspect the Shovel Crane Hook Latch



Illustration 627 g06191466
(C) Open
(D) Closed
(E) Operating range

Inspect the latch to ensure that the latch moves smoothly in operating range (E).

X



Illustration 628

g06191481

Inspect the latch for excessive play (F). Ensure that the spring is not broken and the latch does not rattle.

X



Illustration 629

g06191492

Inspect the latch to ensure that the latch closes completely and there is no gap between the latch and the hook. The latch should rest firmly on the tip of the hook.

X



Illustration 630

g06191696

Inspect the latch to ensure that the latch is not bent or deformed. The latch should be centered on the tip of the hook.

Replace shovel crane latch for any of the following reasons:

- Latch does not move smoothly within the operating range
- Latch has excessive movement or rattles
- Latch does not fully close
- Latch is bent or deformed

i06995214

Shovel Crane - Lubricate (If Equipped)

SMCS Code: 6500

Note: Caterpillar recommends the use of 5% molybdenum grease for lubricating the shovel crane linkage. Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more information on molybdenum grease.

Wipe all fittings before you apply lubricant.

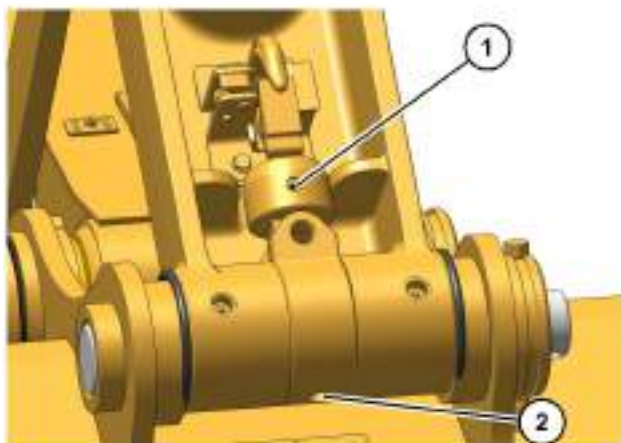


Illustration 631

g06191976

1. Apply lubricant through fittings (1) and (2). Continue to fill with grease until the grease is visible.

Note: Service the above fittings after you operate the shovel crane under water.

2. Check the hook for cracks and deformities. Replace the hook if necessary.

Note: Refer to this Operation and Maintenance Manual, "Shovel Crane - Inspect"

i06987212

Swing Bearing - Lubricate

SMCS Code: 7063-086

Note: Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more information on grease.

Note: Do not overgrease the swing bearings. Do not grease more than the recommended maintenance interval. Refer to Operation and Maintenance Manual, "Maintenance Interval Schedule" for more information.

Wipe the fittings before you lubricate the swing bearing.

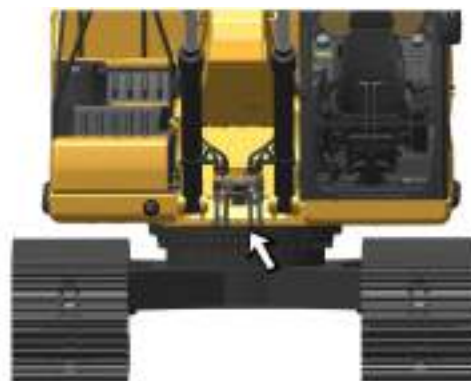


Illustration 632

g06210366

The swing bearing grease zerks are located at the front of the swing drive housing near the boom cylinders.

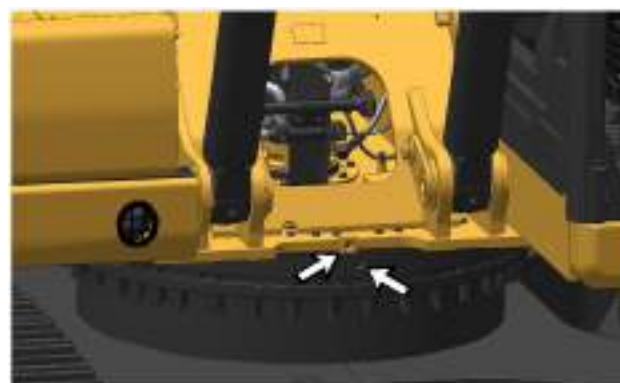


Illustration 633

g06188212

Apply lubricant through the fittings until the lubricant overflows the bearing seals.

i07578989

Swing Drive Oil - Change

SMCS Code: 5459-044



Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.



Illustration 634

g06368391

1. Remove the access cover that is located below the swing drives.

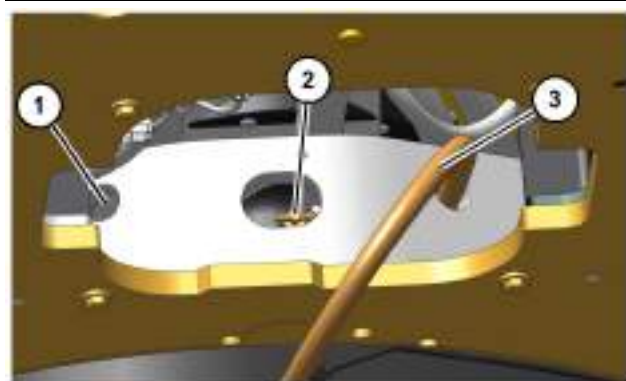


Illustration 635

g06192018

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information that pertains to Containing Fluid Spillage.

2. Remove drain hose (3) from holder (1) on the upper frame. Face the end of the hose toward the container.
3. Loosen drain valve (2). Drain the oil into a suitable container.

Note: Drained fluids should always be disposed of according to local regulations.

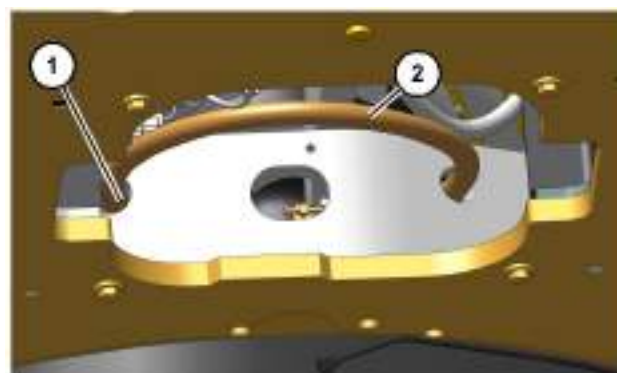


Illustration 636

g06192024

4. Tighten the drain valve. Return the drain hose to holder (1). Make sure that the end of the hose is facing upward.

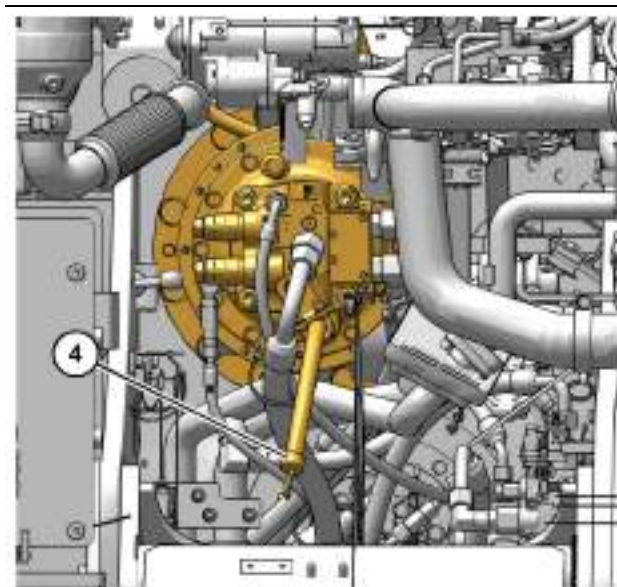


Illustration 637

g06368025

5. Remove dipstick (4).
6. Add the specified quantity of oil through the dipstick tube. See Operation and Maintenance, "Capacities (Refill)".



Illustration 638

g06188660

7. Maintain the oil level between the “ADD” and “FULL” marks on the dipstick.
8. Check the oil that has been drained for metal chips or metal particles. Consult your Cat dealer if any metal chips or metal particles are found.
9. Drained materials should always be disposed of according to local regulations.

i07578991

Swing Drive Oil Level - Check

SMCS Code: 5459-535-FLV

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.



Illustration 639

g06368028

The dipstick for the swing drive oil is on the swing drive at the rear base of the boom.

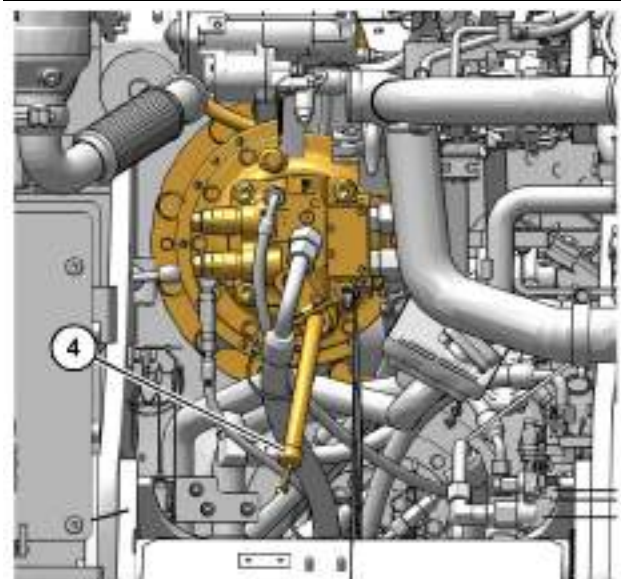


Illustration 640

g06368025

1. Remove the dipstick.



Illustration 641

g06188660

Note: Refer to Operation and Maintenance Manual, "General Hazard Information" for information that pertains to Containing Fluid Spillage.

2. Check the dipstick. Maintain the oil level between the "ADD" and "FULL" marks on the dipstick. Add oil through the dipstick tube, if necessary. Refer to Operation and Maintenance Manual, "Lubricant Viscosities" when you select an oil. If the oil level is above the "FULL" line, then remove oil from the system. Restore the oil to the correct level position.
3. Insert the dipstick.

i07579011

Swing Drive Oil Sample - Obtain

SMCS Code: 5459-554-OC; 5459-008; 5459-008-OC; 5459-OC; 7542-008



Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact skin.

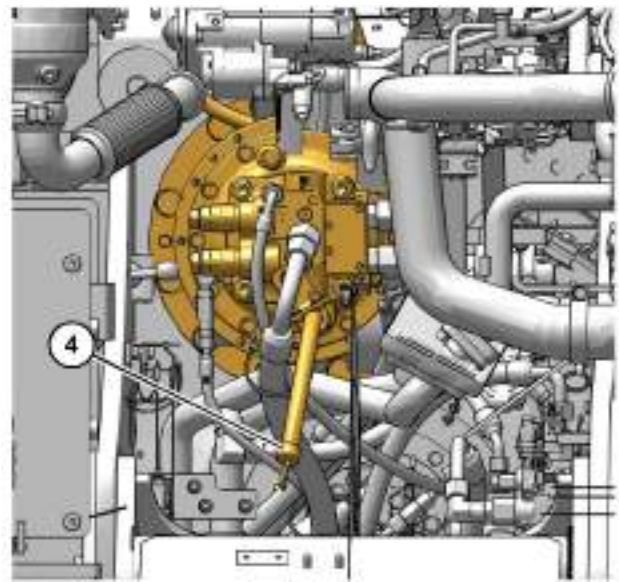


Illustration 642

g06368025

(4) Dip stick

Obtain an oil sample of the swing drive oil through the opening for the dipstick. Refer to Special Publication, SEBU6250, "S-O-S Oil Analysis" for information that pertains to obtaining an oil sample from the swing drive housing. Refer to Special Publication, PEGJ0047, "How To Take A Good Oil Sample" for more information about obtaining an oil sample from the swing drive housing.

i06988169

Swing Gear - Lubricate

SMCS Code: 7063-086

Note: Refer to Special Publication, SEBU6250, "Caterpillar Machine Fluids Recommendations" for more information on grease.

NOTICE

Improper lubrication can cause damage to machine components.

To avoid damage, make sure that the proper amount of grease is applied to the swing drive.

When the amount of grease in the compartment becomes too large, the agitation loss becomes large, thereby accelerating grease deterioration.

Grease deterioration can cause damage to the pinion gear of the swing drive and swing internal gear.

Not enough grease will result in poor gear lubrication.

Remove the inspection cover that is located near the boom base. Inspect the grease.

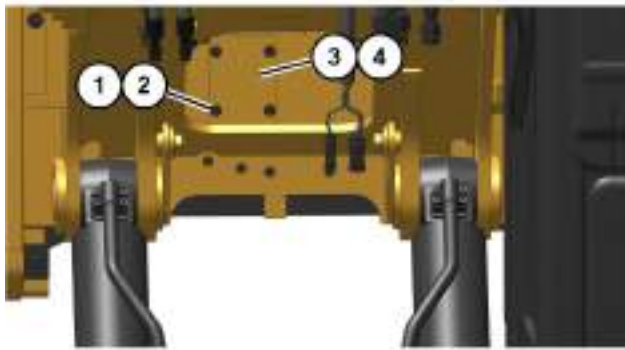


Illustration 643

g06188728

- (1) Bolts
- (2) Washers
- (3) Cover
- (4) Gasket

1. Remove bolts (1) and washers (2). Remove cover (3) and gasket (4).
2. Inspect gasket (4). Replace the gasket if damage is evident.

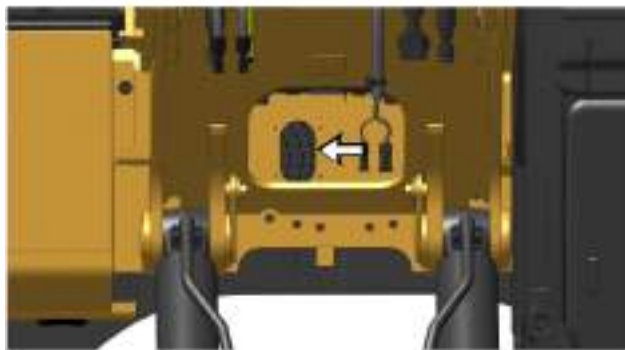


Illustration 644

g06188736

3. Check the level of grease. The level of grease is correct when:
 - Waves of grease are present from the rotating swing drive pinion.
 - The grease is evenly distributed on the floor of the pan.

Note: Smeared or waveless areas are evidence for a lack of grease.

Note: Add grease, as needed. Remove grease, as needed. Too much grease will result in the deterioration of the grease because of excessive movement of the grease. Too little grease will result in poor lubrication of the swing gear.

Refer to Operation and Maintenance Manual, "Capacities (Refill)" for the size of the pan.

4. Check for contamination and for discolored grease.

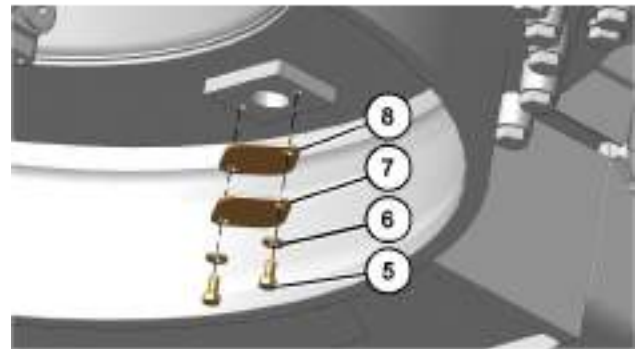


Illustration 645

g06188788

- (5) Bolts
- (6) Washers
- (7) Cover
- (8) Gasket

5. If the grease is contaminated or discolored with water, change the grease. Remove the covers from below the swing drive underneath the undercarriage frame.
6. Remove bolts (5), washers (6), cover (7), and gasket (8) to allow the water to drain. When you reinstall cover (7), inspect gasket (8). Replace the gasket if damage is evident.



Illustration 646

g06188791

7. Raise the boom and turn the upper structure by 1/4 turn. Lower the bucket to the ground.
8. Repeat Step 7 at every 1/4 turn in four places. Add grease, as needed.
9. Install gasket (4), cover (3), washers (2), and bolts (1).

i07579013

Track Adjustment - Adjust

SMCS Code: 4170-025

WARNING

Personal injury or death can result from grease under pressure.

Grease coming out of the relief valve under pressure can penetrate the body causing injury or death.

Do not watch the relief valve to see if grease is escaping. Watch the track or track adjustment cylinder to see if the track is being loosened.

Loosen the relief valve one turn only.

If track does not loosen, close the relief valve and contact your Caterpillar dealer.

NOTICE

Keeping the track properly adjusted will increase the service life of the track and drive components.

Note: The track tension must be adjusted according to the current operating conditions. Keep the track as slack as possible if the soil is heavy.

Measuring Track Tension

1. Operate the machine in the direction of the idlers.



Illustration 647

g06188816

2. Stop with one track pin directly over the front carrier roller. Park the machine and turn off the engine.



Illustration 648

g06208711

3. Place a straight edge on top of the track grousers between the front carrier roller and the idler. The straight edge should be long enough to reach from the front carrier roller to the idler.

Note: If your machine is equipped with three carrier rollers, place a straight edge on the tracks between the carrier rollers. The straight edge should be long enough to reach from one carrier roller to another carrier roller.

4. Measure the maximum amount of sag in the track. The sag is measured from the highest point of the track grouser to the bottom of the straight edge. A track that is properly adjusted will have a sag of 40.0 to 55.0 mm (1.57 to 2.17 inch).

5. If the track is too tight, or if the track is too loose, adjust the track tension according to the appropriate procedure below.

Adjusting Track Tension



Illustration 649

g06368030

Typical example

The track adjuster is located on the track frame.

Tightening the Track

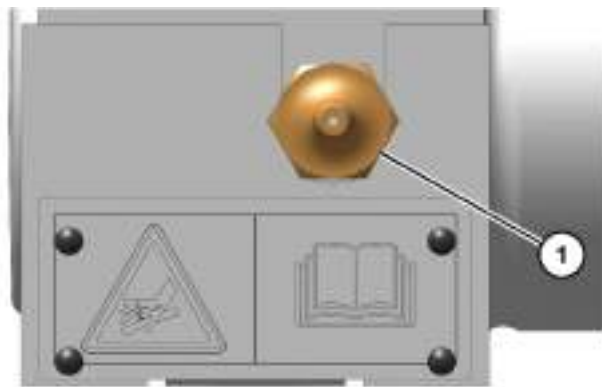


Illustration 650

g06188830

(1) Grease valve

Wipe the fitting before you add grease.

1. Add grease through grease valve (1) until the correct track tension is reached.
2. Operate the machine back and forth in order to equalize the pressure.

3. Check the amount of sag. Adjust the track, as needed.

Loosening the Track

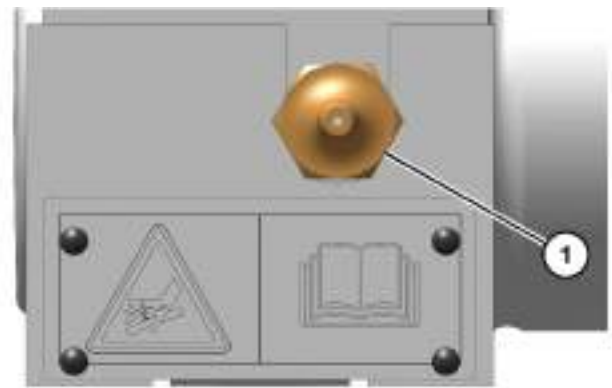


Illustration 651

g06188830

(1) Grease valve

1. Loosen grease valve (1) carefully until the track begins to loosen. One turn should be the maximum.
2. Tighten grease valve (1) to 34 ± 5 N·m (25 ± 4 lb ft) when the desired track tension is reached.
3. Operate the machine back and forth in order to equalize the pressure.
4. Check the amount of sag. Adjust the track, as needed.

i06969791

Track Adjustment - Inspect

SMCS Code: 4170-040



Illustration 652

g06182929

Check the track adjustment. Check the track for wear and for excessive dirt buildup.

If the track appears to be too tight or too loose, refer to Operation and Maintenance Manual, "Track Adjustment - Adjust".

i06954313

Travel Alarm - Test (If Equipped)

SMCS Code: 7429-081

Move the machine to test the travel alarm.

1. Start the engine. Move the hydraulic lockout control to the UNLOCKED position.
2. Raise the work tool to avoid any obstacles. Make sure that there is adequate overhead clearance.



Illustration 653

g06181402

3. Use the travel levers or the travel pedals to move the machine forward. The travel alarm should sound.
4. Release the travel levers and the travel pedals to stop the machine.
5. Use the travel levers and the travel pedals to move the machine backward. The travel alarm should sound.



Illustration 654

g06181631

6. Press the alarm mute button. The travel alarm should shut off.
7. Stop the machine. Lower the work tool to the ground. Move the hydraulic lockout control to the LOCKED position. Stop the engine.

i08233399

Undercarriage - Check

SMCS Code: 4150-535



Illustration 655

g06182923

1. Check the carrier rollers, the track rollers, and the idler wheels for possible leakage.
2. Check the surface of the track, the carrier rollers, the track rollers, the idler wheels, the track shoes, and the drive sprockets. Look for signs of wear and loose mounting bolts.
3. Listen for any abnormal noises while you are moving slowly in an open area.
4. If required, clean the undercarriage to keep excess material from building up and solidifying.
5. If abnormal wear exists or abnormal noises or leaks are found, consult your Cat® dealer.

i07579015

Window Washer Reservoir - Fill

SMCS Code: 7306-544-KE

NOTICE

When operating in freezing temperatures, use Caterpillar or any commercially available nonfreezing window washer solvent.



Illustration 656

g06367225

1. Open the access door on the left side of the machine.



Illustration 657

g06181644

2. Remove the filler cap.
3. Fill the window washer reservoir with washer fluid through the filler opening.
4. Install the filler cap.
5. Close the access door.

i01258249

Window Wiper - Inspect/Replace

SMCS Code: 7305-040; 7305-510

Inspect the condition of the wiper blades. Replace the wiper blades if the wiper blades are worn or damaged or if streaking occurs.

i07103291

Windows - Clean

SMCS Code: 7310-070; 7340-070

Clean the outside of the windows from the ground, unless handholds are available.



Illustration 658

g06224268

Typical example

Cleaning Methods

Aircraft Window Cleaner

Apply the cleaner with a soft cloth. Rub the window with moderate pressure until all the dirt is removed. Allow the cleaner to dry. Wipe off the cleaner with a clean soft cloth.

Soap and Water

Use a clean sponge or a soft cloth. Wash the windows with a mild soap or with a mild detergent. Also use plenty of lukewarm water. Rinse the windows thoroughly. Dry the windows with a moist chamois or with a moist cellulose sponge.

Stubborn Dirt and Grease

Wash the windows with a good grade of naphtha, of isopropyl alcohol, or of Butyl Cellosolve. Then, wash the windows with soap and with water.

Polycarbonate Windows (If equipped)

Special care is needed to clean polycarbonate windows.

Wash polycarbonate windows with mild soap and warm water that does not exceed 50° C (122° F). Use a soft sponge, or damp cloth. Never use a dry cloth or paper towels on polycarbonate windows. Rinse the windows with a sufficient amount of clean cold water.

Note: Naphtha or kerosene can be used to remove labels, films, paint, or marking pen from polycarbonate windows.

Note: Do not use abrasive, or highly alkaline cleaners. Do not use sharp instruments, such as squeegees or razor blades on polycarbonate windows. Do not clean polycarbonate windows in the hot sun or at elevated temperatures.

Warranty Section

Warranty Information

i06044323

Emissions Warranty Information

SMCS Code: 1000

The certifying engine manufacturer warrants to the ultimate purchaser and each subsequent purchaser that:

1. New non-road diesel engines and stationary diesel engines less than 10 liters per cylinder (including Tier 1 and Tier 2 marine engines < 37 kW, but excluding locomotive and other marine engines) operated and serviced in the United States and Canada, including all parts of their emission control systems ("emission related components"), are:

- a. Designed, built, and equipped so as to conform, at the time of sale, with applicable emission standards prescribed by the United States Environmental Protection Agency (EPA) by way of regulation.
- b. Free from defects in materials and workmanship in emission-related components that can cause the engine to fail to conform to applicable emission standards for the warranty period.

2. New non-road diesel engines (including Tier 1 and Tier 2 marine propulsion engines < 37 kW and Tier 1 through Tier 4 marine auxiliary engines < 37 kW, but excluding locomotive and other marine engines) operated and serviced in the state of California, including all parts of their emission control systems ("emission related components"), are:

- a. Designed, built, and equipped so as to conform, at the time of sale, to all applicable regulations adopted by the California Air Resources Board (ARB).
- b. Free from defects in materials and workmanship which cause the failure of an emission-related component to be identical in all material respects to the component as described in the engine manufacturer's application for certification for the warranty period.

3. New non-road diesel engines installed in construction machines conforming to the South Korean regulations for construction machines manufactured after January 1, 2015, and operated and serviced in South Korea, including all parts of their emission control systems ("emission related components"), are:

- a. Designed, built, and equipped so as to conform, at the time of sale, with applicable emission standards prescribed in the Enforcement Rule of the Clean Air Conservation Act promulgated by South Korea MOE.
- b. Free from defects in materials and workmanship in emission-related components that can cause the engine to fail to conform to applicable emission standards for the warranty period.

The aftertreatment system can be expected to function properly for the lifetime of the engine (emissions durability period) subject to prescribed maintenance requirements being followed.

A detailed explanation of the Emission Control Warranty that is applicable to new non-road and stationary diesel engines, including the components covered and the warranty period, is found in a supplemental Special Publication. Consult your authorized Cat dealer to determine if your engine is subject to an Emission Control Warranty and to obtain a copy of the applicable Special Publication.

Reference Information Section

Reference Materials

i08292374

Reference Material

SMCS Code: 1000; 7000

Additional literature regarding your product may be purchased from your local Cat dealer or by visiting publications.cat.com. Use the product name, sales model, and serial number to obtain the correct information for your product.

publications.cat.com

i08292382

Decommissioning and Disposal

SMCS Code: 1000; 7000

When the product is removed from service, local regulations for the product decommissioning will vary. Disposal of the product will vary with local regulations.

Improperly disposing of waste can threaten the environment. Obey all local regulations for the decommissioning and disposal of materials.

Utilize appropriate personal protective equipment when decommissioning and disposing product.

Consult the nearest Cat dealer for additional information. Including information for component remanufacturing and recycling options.

Index

A

Access Door and Cover Locations.....	278
Engine Hood	278
Left Rear Access Door.....	279
Right Side Access Door.....	279
Additional Messages	20
Air Conditioner/Cab Heater Filter (Recirculation) - Inspect/Replace	298
Air Conditioning and Heating Control.....	189
Operation	191
Selection Method	191
Alternate Exit	130
Rear Window with Lever (If Equipped).....	130
Rear Window with Ring Seal (If Equipped).....	130
Assist and E-Fence	40
Lifting operations with the machine	40
Operation Guidance	40

B

Battery - Clean.....	298
Battery Disconnect Switch	152
Battery Electrolyte Level - Check	298
Battery Hold-Down - Tighten	299
Battery or Battery Cable - Inspect/Replace... 299	
Recycle the Battery.....	299
Before Operation	39, 127
Before Starting Engine	35
Belt - Inspect/Adjust/Replace	299
Boom and Stick Linkage - Lubricate	301
Boom and Stick Linkage - Lubricate (VA Boom (If Equipped))	300
Boom, Stick and Bucket Operation	233
Digging.....	233
Lifting Objects	235
Machines that are Equipped with a Long Reach Configuration	236
Boom/Stick/Bucket Combinations.....	60
Bucket - Remove and Install	253
Installation Procedure.....	254
Removal Procedure	253
Bucket Linkage - Inspect/Adjust.....	303
Bucket Linkage - Lubricate.....	304
Bucket Tips - Inspect/Replace	304
Bucket Tips (Cat® Advansys) - If Equipped.....	308
J Series GET Bucket Tips.....	306

K Series GET Drive-through System Bucket

Tips	304
Side Cutters	309
Side Protectors (If Equipped)	309
Burn Prevention.....	29
Batteries.....	30
Coolant	29
Oils.....	30

C

Cab Air Filter (Fresh Air) - Clean/Replace	310
Cab Door	197
Camera.....	171
360 Visibility (If Equipped)	172
Rear View Camera	171
Side View Camera (If Equipped)	171
Camera - Clean	311
Capacities (Refill)	288
Condenser (Refrigerant) - Clean.....	312
Cooling System Coolant (ELC) - Change	313
Cooling System Coolant Extender (ELC) - Add	315
Cooling System Coolant Level - Check.....	316
Cooling System Coolant Sample - Obtain	317
Crushing Prevention and Cutting Prevention..	29

D

Daily Inspection	127
Daily Basis	128
First 100 Hours	127
Declaration of Conformity.....	126
Decommissioning and Disposal.....	380
DEF Filler Screen - Clean	319
DEF Manifold Filters - Replace	320
Demolition	44
Diesel Exhaust Fluid - Drain.....	320
Diesel Exhaust Fluid - Fill.....	321
Diesel Exhaust Fluid Filter - Replace	322
Diesel Exhaust Fluid Injector - Replace	323

E

Electrical Storm Injury Prevention	35
Emissions Certification Film	124–125
Emissions Warranty Information	379
Engine Air Filter Primary and/or Secondary Element - Replace	325

Engine Air Pre-Cleaner - Clean	327	Certified Engine Maintenance	6
Primary Air Filter Element - Replace	325	Literature Information	5
Secondary Air Filter Element - Replace	326	Machine Capacity	6
Engine and Machine Warm-Up	217	Maintenance	5
Hydraulic System	218	Operation	5
Improve Cold-Weather Performance	219	Product Identification Number	6
Engine Oil and Filter - Change	331	Safety	5
Fast Fill (If Equipped)	333	Freezing Conditions	263
Procedure for Changing Engine Oil and		Frozen Ground Conditions	221
Filter	331	Fuel Cap Filter - Replace	338
Selection of the Oil Change Interval	331	Fuel System - Prime	338
Engine Oil Level - Check	329	Fuel System Primary Filter (Water	
Ground Level Dipstick	330	Separator) Element - Replace	339
Engine Oil Sample - Obtain	331	Fuel System Secondary Filter - Replace	340
Engine Starting	39, 216	Fuel System Water Separator - Drain	341
Engine Starting (Alternate Methods)	275	Fuel Tank Shutoff and Drain Control	215
Engine Starting with Auxiliary Start		Fuel Tank Strainer - Clean	342
Receptacle (If Equipped)	277	Fuel Tank Water and Sediment - Drain	342
Engine Starting with Jump Start Cables (If		Fuel Transfer Pump (Refueling) (If	
Equipped)	275	Equipped)	185
Engine Stopping	44	Fumes Disposal Filter Element - Replace	343
Equipment Lowering with Engine Stopped	46, 222	Fuses - Replace	344
Machines Equipped with Boom Lowering		Power Fuse Module	347
Control Valves	222	Relays	346
Machines without a Boom Lowering Control		Secondary Power Fuse Module	347
Valve	223		
Pressure Release of Auxiliary Lines	224	G	
Ether Starting Aid Cylinder - Replace (If		General Hazard Information	26
Equipped)	334	Containing Fluid Spillage	28
		Dispose of Waste Properly	29
F		Fluid Penetration	27
Film (Product Identification) - Clean	335	Inhalation	28
Cleaning of the Films	335	Pressurized Air and Water	27
Final Drive Oil - Change	336	Trapped Pressure	27
Final Drive Oil Level - Check	336	General Information	51
Final Drive Oil Sample - Obtain	337	Guards	49
Final Drive Sun Gear Removal	273	Guards (Operator Protection)	
Fire Extinguisher Location	34	Other Guards (If Equipped)	50
Fire Prevention and Explosion Prevention	30	Rollover Protective Structure (ROPS), Falling	
Battery and Battery Cables	32	Object Protective Structure (FOPS) or Tip	
Ether	33	Over Protection Structure (TOPS)	49
Fire Extinguisher	33		
General	30	H	
Lines, Tubes, and Hoses	33	High Intensity Discharge Lamp (HID) -	
Regeneration	30	Replace (If Equipped)	348
Wiring	32	High Pressure Fuel Lines	35
Fire Safety	34	Hydraulic System Oil - Change	349
Foreword	5	Cat HYDO Advanced 10 Oil Change	
California Proposition 65 Warning	5	Interval	349
		Fast Fill	354

Hydraulic Hammer Use	349
Procedure to Change the Hydraulic Oil	349
Hydraulic System Oil Filter (Return) - Replace	355
Hydraulic Hammer Use	355
Return Filter Replacement Procedure	355
Hydraulic System Oil Level - Check	357
Hydraulic System Oil Sample - Obtain	359

I

Identification Information	121
Important Safety Information	2
Indicators and Gauges - Test	360

J

Joystick Controls	203
GC Machines	204
Standard Machines	206
Joystick Controls (Medium Pressure (If Equipped))	202
Rotating Tool Control	203
Joystick Controls (Tilt-Rotator System (TRS) (If Equipped))	207
Left Joystick Control Patterns	208
Right Joystick Control Patterns	208
Joystick Controls Alternate Patterns	214
Changing Machine Control Pattern (If Equipped)	214

L

Leaving the Machine	265
Lifting and Tying Down the Machine	268
Lifting the machine	269
Lifting the Machine Segments	271
Tying Down the Machine	269
Lifting Capacities	98
Reach Boom with 2920 mm (9 ft 7 in) Stick 4900 kg (10800 lb) Counterweight	103
Reach Boom with 2920 mm (9 ft 7 in) Stick 8300 kg (18300 lb) Counterweight	100
Symbols Found in the Lifting Capacity Charts	99
Variable Angle Boom (Maximum Reach) with 2920 mm (9 ft 7 in) Stick 4900 kg (10800 lb) Counterweight	115
Variable Angle Boom with 2920 mm (9 ft 7 in) Stick 4900 kg (10800 lb) Counterweight	109
Lifting Objects	44

Lubricant Viscosities (Fluids Recommendations)	280
Biodiesel	286
Coolant Information	287
Diesel Exhaust Fluid	284
Diesel Fuel Recommendations	283
Engine Oil	280
Fuel Additives	286
General Information for Lubricants	280
Hydraulic Systems	281
Other Fluid Applications	282
Selecting the Viscosity	280
Special Lubricants	283
Lubricant Viscosities and Refill Capacities ...	280

M

Machine Operation	130
Machine Security System	154
Activating Bluetooth Functionality	156
Armed	157
Components	155
Disarmed	158
Engine Start Switch Troubleshooting	170
General Information	154
Grace Period	158
Navigating the User Interface Touchscreen Display	158
Operation of Status Indicator	159
Operator Login	160
Pairing Your Device to the Machine	156
Reading the ID of a Key	157
System Overview	155
Machine Storage and Specified Storage Period	265
Machine Storage	265
Specified Storage Period	265
Maintenance Access	278
Maintenance Interval Schedule	296
Every 10 000 Service Hours	297
Every 10 Service Hours or Daily	296
Every 10 Service Hours or Daily for First 50 Hours	296
Every 100 Service Hours	297
Every 1000 Service Hours	297
Every 12 000 Service Hours or 6 Years	297
Every 2000 Service Hours	297
Every 250 Service Hours	297
Every 3 Years After Date of Installation or Every 5 Years After Date of Manufacture	297

Every 3000 Service Hours	297
Every 500 Service Hours	297
Every 5000 Service Hours	297
Every 6000 Service Hours or 3 Years	297
Every Year	297
Initial 500 Hours (for New Systems, Refilled Systems, and Converted Systems)	297
Initial 500 Service Hours	297
When Required	296
Maintenance Section	278
Maintenance Support	290
Mirror	192
Mirror Adjustment	193
Monitoring System	172
Application Menu	177
Electronic OMM	184
Function List Screen	185
General Information	173
Logging In	176
Machine Warnings	175
Navigation	176
Mounting and Dismounting	127
Alternate Exit	127
Machine Access System Specifications	127

O

Oil Filter - Inspect	362
Inspect a Used Filter for Debris	362
Oil Filter (Hydraulic Hammer) - Replace	360
Operating Technique Information	226
Coaching Tips	226
Grade and Assist Operating Tips	230
Operating Precaution	229
Restricted Operation	228
Smart Boom	232
Operating Techniques	226
Operation	41, 220
Critical Failures	41
Limiting Conditions and Criteria	41
Machine Operating Temperature Range	41
Machine Operation	43
Machine Operation when the Machine is not Completely Assembled	44
Operation Information	220
Lifting Objects	221
Operation Section	127
Operator Controls	140
12V Power Receptacle (25) & (26)	151
Blade Control (7) (If Equipped)	145

Cat Grade Control Monitor (6) (If Equipped)	145
Dome Light (27)	152
Engine Idle Shutdown	146
Engine Start Switch (9)	146
Hydraulic Lockout Control (1)	141
Joystick Controls (3)	142
Left Side Switch Panel (2)	142
Monitor (5)	145
Operator's Seat (10)	147
Right Side Switch Panel (8)	148
Service Port (26)	151
Tilt-Up Console (10A)	147
Travel Control (4)	142
USB/Aux Ports (24)	151
Operator Station	49

P

Parking	45, 263
Plate Locations and Film Locations	121
Electromagnetic Emissions	123
Engine Serial Number	124
Product Identification Number (PIN) Plate	121
Sound Certification Film	124
Prepare the Machine for Maintenance	290
Product Information Section	51
Product Link	153
Data Broadcasts	153
Operation in a Blast Site for Product Link Radios	154

Q

Quick Coupler Operation (Circuit for CW Coupler (If Equipped))	242
Coupling the Work Tool	243
Electric Switch Operation	243
General Operation	242
Uncoupling the Work Tool	245
Quick Coupler Operation (Hydraulic Pin Grabber Quick Coupler (If Equipped))	246
General Operation	246
Quick Coupler Operation	247

R

Radiator, Aftercooler and Oil Cooler Cores - Clean	362
Radio	186
Radio Function List	188

Radio Operation.....	188	Premium Level Seat (If Equipped)	134
Selection Method	188	Seat Belt	136
USB/AUX Operation	189	Extension of the Seat Belt	137
Receiver Dryer (Refrigerant) - Replace	363	Seat Belt Adjustment for Retractable Seat Belts	137
Reference Information Section	380	Seat Belt - Inspect	364
Reference Material	380	Seat Belt - Replace	365
Reference Materials	380	Securing the Machine.....	267
Regulatory Information (Japan)	51	Selective Catalytic Reduction Warning System.....	138
Industrial Safety and Health Act	55	Definitions	138
Operation of Construction Equipment and the Governing Laws and Regulations.....	52	Inducement Strategy for DEF Level	138
Qualifications for Machine Operation	51	Inducement Strategy for DEF Quality, Tampering, SCR System Fault, and Impeded EGR	139
Standard Certificate of Transfer	54	Service Interval Chart.....	290
Trailer Transportation	51	Shipping the Machine.....	266
Restricted Visibility	36	Shipping a Machine that is not Completely Assembled	267
Rollover Protective Structure (ROPS) - Inspect	364	Shovel Crane - Inspect (If Equipped)	365
Roof Hatch.....	197	Inspect Shovel Crane Hook.....	365
S		Inspect the Shovel Crane Hook Latch	367
S·O·S Information	289	Shovel Crane - Lubricate (If Equipped).....	368
Safety Messages.....	7	Shovel Crane Control (If Equipped)	199
Aerosol Starting Aid (11).....	17	Activating the Shovel Crane	200
Crushing Hazard (10)	16	Deactivating the Shovel Crane	202
Crushing Hazard (15)	18	Indicators and Warnings.....	202
Crushing Hazard (4)	12	Shovel Crane Operation.....	236
Crushing Hazard (6B).....	13	Slope Operation	45
Crushing Hazard (6D).....	14	SmartBoom Control (If Equipped).....	209
Crushing Hazard (6E).....	14	SmartBoom Operation (If Equipped).....	241
Crushing Injury (3)	11	Advantages.....	242
Do Not Lift Over Personnel (7)	15	Excavation and Loading	242
Do Not Operate (6A).....	12	Hammering	242
Do Not Weld or Drill on ROPS (8)	16	Sound Information and Vibration Information.....	46
Electrical Power Lines (6G)	15	Sound Level Information.....	46
Falling Object Guard Structure (18)	20	Sound Level Information for Machines in Eurasian Economic Union Countries.....	47
High-Pressure Cylinder (13).....	17	Sound Level Information for Machines in European Union Countries and in Countries that Adopt the “EU Directives”	47
High-Pressure Gas (14).....	18	Sources.....	49
Hot Surface (9)	16	“The European Union Physical Agents (Vibration) Directive 2002/44/EC”	47
Joystick Controls Alternate Patterns (6F)....	15	Specifications	56
Jump-Start Cables (12)	17	Application/Configuration Restrictions	56
Lifting Level Warning (1).....	11	Expected Life	56
Overload Warning Device (2)	11	Intended Use	56
Product Link (5)	12	Specification Data.....	57
Relieve Hydraulic Tank Pressure (17)	19	Working Ranges	58
Seat Belt (6C)	13		
Vapor Explosion (16) (If Equipped).....	19		
Safety Section	7		
Seat	131		
Comfort Level Seat (If Equipped)	131		
Deluxe Level Seat (If Equipped).....	132		

Stopping the Engine	264	Window Wiper - Inspect/Replace	378
Engine Shutdown Switch	264	Windows - Clean	378
Stop the Engine if an Electrical Malfunction		Cleaning Methods	378
Occurs	264	Polycarbonate Windows (If equipped)	378
Stopping the Machine	263	Work Tool Control (One-Way Flow) (If	
Sun Screen	196	Equipped)	210
Swing Bearing - Lubricate	369	Joystick	211
Swing Drive Oil - Change	369	Work Tool Pedal	211
Swing Drive Oil Level - Check	371	Work Tool Control (Two-Way Flow) (If	
Swing Drive Oil Sample - Obtain	372	Equipped)	212
Swing Gear - Lubricate	372	Joystick	212
System Pressure Release	292	Work Tool Pedal	213
Coolant System	292	Work Tool Operation (If Equipped)	256
Hydraulic System	292	Crusher Operation (If Equipped)	259
		Hammer Operation (If Equipped)	256
		Shear Operation (If Equipped)	258
		Work Tools	39
T			
Table of Contents	3		
Towing Information	272		
Towing the Machine	272		
Lightweight Towing	273		
Retrieval and Towing of Machine	273		
Track Adjustment - Adjust	374		
Adjusting Track Tension	375		
Measuring Track Tension	374		
Track Adjustment - Inspect	375		
Track Information	34		
Transportation Information	266		
Travel Alarm - Test (If Equipped)	376		
Travel Control (Straight Travel Pedal (If			
Equipped))	198		
Travel in Water and Mud	232		
Procedure for Removing the Machine from			
Water or Mud	232		
U			
Undercarriage - Check	377		
V			
VA Boom Controls (If Equipped)	208		
Visibility Information	36		
W			
Warranty Information	379		
Warranty Section	379		
Welding on Machines and Engines with			
Electronic Controls	295		
Window (Front)	195		
Window Washer Reservoir - Fill	377		

Product and Dealer Information

Note: For product identification plate locations, see the section “Product Identification Information” in the Operation and Maintenance Manual.

Delivery Date: _____

Product Information

Model: _____

Product Identification Number: _____

Engine Serial Number: _____

Transmission Serial Number: _____

Generator Serial Number: _____

Attachment Serial Numbers: _____

Attachment Information: _____

Customer Equipment Number: _____

Dealer Equipment Number: _____

Dealer Information

Name: _____ Branch: _____

Address: _____

	<u>Dealer Contact</u>	<u>Phone Number</u>	<u>Hours</u>
Sales:	_____	_____	_____
Parts:	_____	_____	_____
Service:	_____	_____	_____

